

R&S® SMW-K42/-K83

3GPP FDD incl. enhanced MS/BS tests, HSPA, HSPA+ User Manual



1175.6690.02 – 07



ROHDE & SCHWARZ

Test & Measurement

User Manual

This document describes the following software options:

- R&S®SMW-K42/-K83
1413.3784.xx, 1413.4580.xx

This manual describes firmware version FW 3.20.324.xx and later of the R&S®SMW200A.

© 2015 Rohde & Schwarz GmbH & Co. KG

Mühldorfstr. 15, 81671 München, Germany

Phone: +49 89 41 29 - 0

Fax: +49 89 41 29 12 164

Email: info@rohde-schwarz.com

Internet: www.rohde-schwarz.com

Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

The following abbreviations are used throughout this manual: R&S®SMW200A is abbreviated as R&S SMW, R&S®WinIQSIM2™ is abbreviated as R&S WinIQSIM2; the license types 02/03/07/11/13/16/12 are abbreviated as xx.

Contents

1	Preface.....	13
1.1	About this Manual.....	13
1.2	Documentation Overview.....	14
1.3	Conventions Used in the Documentation.....	16
1.3.1	Typographical Conventions.....	16
1.3.2	Conventions for Procedure Descriptions.....	16
1.3.3	Notes on Screenshots.....	16
2	Welcome to the 3GPP FDD Digital Standard.....	17
2.1	Accessing the 3GPP FDD Dialog.....	19
2.2	Scope.....	19
3	About the 3GPP FDD Options.....	20
3.1	Modulation System 3GPP FDD.....	21
3.1.1	Scrambling Code Generator.....	21
3.1.1.1	Downlink Scrambling Code Generator.....	21
3.1.1.2	Uplink Scrambling Code Generator.....	22
3.1.2	Scrambling Unit.....	24
3.1.3	Channelization Code Generator.....	25
3.1.4	Data Source.....	25
3.1.5	Slot and Frame Builder.....	25
3.1.6	Timing Offset.....	26
3.1.7	Demultiplexer.....	27
3.1.8	Power Control.....	27
3.1.9	Summation and Filtering.....	28
3.1.10	Multicode.....	28
3.1.11	Orthogonal Channel Noise (OCNS).....	29
3.1.11.1	Standard, HSDPA and HSDPA2 modes.....	29
3.1.11.2	3i OCNS mode.....	30
3.1.12	HARQ Feedback.....	32
3.1.12.1	Limitations.....	32
3.1.12.2	Setup.....	32
3.1.12.3	Timing.....	32

3.1.13	HS-SCCH less operation.....	34
3.1.13.1	HS-SCCH Type 2.....	34
3.1.13.2	HS-SCCH Type 2 Fixed Reference Channel: H-Set 7.....	35
3.1.14	Higher Order Modulation.....	35
3.1.14.1	64QAM in downlink.....	35
3.1.14.2	64QAM Fixed Reference Channel: H-Set 8.....	36
3.1.14.3	16QAM in uplink.....	36
3.1.14.4	16QAM Fixed Reference Channel: FRC 8.....	36
3.1.15	MIMO in HSPA+.....	36
3.1.15.1	D-TxAA Feedback signaling: PCI and CQI.....	37
3.1.15.2	MIMO downlink control channel support.....	38
3.1.15.3	Redundancy Version.....	39
3.1.15.4	HARQ Processes.....	39
3.1.15.5	MIMO uplink control channel support.....	40
3.1.15.6	CQI Reports: Type A and Type B.....	41
3.1.15.7	PCI reports.....	41
3.1.15.8	MIMO Fixed Reference Channels: H-Set 9 and H-Set 11.....	42
3.1.16	Dual Cell HSDPA (DC-HSDPA).....	42
3.1.16.1	DC-HSDPA Data Acknowledgement (non MIMO mode).....	43
	CQI reports: CQI1 and CQI2.....	45
3.1.16.2	DC-HSDPA + MIMO.....	45
3.1.16.3	Dual Cell HSDPA (DC-HSDPA) Fixed Reference Channel: H-Set 12.....	45
3.1.17	HS-DPCCH Extension for 4C-HSDPA and 8C-HSDPA.....	46
3.1.18	Dual Cell HSUPA (Dual Cell E-DCH).....	46
3.1.19	UE Capabilities.....	46
3.1.19.1	MIMO and 64QAM UE Capabilities.....	46
3.1.19.2	UL 16QAM UE Capabilities.....	47
3.1.19.3	MIMO and DC-HSDPA Operation UE Capabilities.....	47
3.1.19.4	Dual Cell E-DCH Operation UE Capabilities.....	47
3.1.20	Uplink discontinuous transmission (UL DTX).....	47
3.1.21	Uplink User Scheduling.....	49
3.2	Routing and enabling an external control signal.....	52
4	3GPP FDD Configuration and Settings.....	53

4.1	General Settings for 3GPP FDD Signals.....	54
4.2	Trigger Settings.....	56
4.3	Marker Settings.....	61
4.4	Clock Settings.....	64
4.5	Local and Global Connector Settings.....	65
4.6	Basestations and User Equipments Settings.....	66
4.6.1	Common Configuration Settings.....	67
4.6.2	General Power Settings.....	69
4.7	Test Setups/Models.....	72
4.8	Predefined Settings - Downlink.....	75
4.9	Additional User Equipment - Uplink.....	77
4.10	Base Station Settings.....	79
4.10.1	Common Settings.....	79
4.10.2	Orthogonal Channel Noise (OCNS) Settings.....	81
4.10.3	Channel Table.....	82
4.10.4	Channel Graph - BS.....	89
4.10.5	Code Domain Graph - BS.....	89
4.11	Compressed Mode.....	92
4.11.1	Compressed Mode General Settings.....	93
4.11.2	Compressed Mode Configuration Graph.....	95
4.11.2.1	Transmission Gaps.....	96
4.11.2.2	Compressed Ranges.....	97
4.11.2.3	Non-compressed ranges.....	97
4.12	HSDPA Settings - BS.....	98
4.12.1	Enhanced HSDPA Mode Settings.....	98
4.12.2	MIMO Configuration.....	100
4.13	HSDPA H-Set Mode Settings - BS.....	102
4.13.1	HSDPA H-Set General Setting.....	102
4.13.2	H-Set Configuration Common Settings.....	103
4.13.3	MIMO Settings.....	106
4.13.4	Global Settings.....	107
4.13.5	Coding Configuration.....	110
4.13.6	Signal Structure.....	113

4.13.7	HARQ Simulation.....	115
4.13.8	Error Insertion.....	116
4.13.9	Randomly Varying Modulation And Number Of Codes (Type 3i) Settings.....	117
4.14	Enhanced Settings for P-CPICH - BS1.....	119
4.15	Enhanced Settings for P-CCPCH - BS1.....	120
4.15.1	Channel Number and State.....	121
4.15.2	Channel Coding - Enhanced P-CCPCH BS1.....	121
4.16	Enhanced Settings for DPCHs - BS1.....	122
4.16.1	Channel Number and State.....	123
4.16.2	Channel Coding.....	124
4.16.3	Transport Channel - Enhanced DPCHs BS1.....	127
4.16.4	Error Insertion - Enhanced DPCHs BS1.....	130
4.16.5	Dynamic Power Control - Enhanced DPCHs BS1.....	132
4.17	S-CCPCH Settings - BS Channel Table.....	137
4.18	Config AICH/AP-AICH - BS Channel Table.....	138
4.19	DPCCH Settings - BS Channel Table.....	139
4.19.1	Common Slot Structure (DPCCH).....	139
4.19.2	TPC Settings.....	142
4.19.3	DPCCH Power Offset.....	144
4.20	Config E-AGCH - BS Channel Table.....	146
4.21	Config E-RGCH/E-HICH - BS Channel Table.....	148
4.22	Config F-DPCH - BS Channel Table.....	150
4.22.1	Common Settings.....	150
4.22.2	TPC Settings.....	150
4.23	Multi Channel Assistant - BS.....	154
4.24	User Equipment Configuration (UE).....	157
4.24.1	General and Common Settings.....	158
4.24.2	Code Domain Graph - UE.....	161
4.24.3	Channel Settings.....	162
4.25	UL-DTX/User Scheduling - UE.....	162
4.26	Dynamic Power Control - UE.....	167
4.27	Scheduling List.....	171
4.28	DPCCH Settings - UE.....	173

4.29	DPDCH Settings - UE.....	179
4.29.1	DPDCH Common Settings.....	180
4.29.2	Channel Table.....	182
4.30	HS-DPCCH Settings - UE.....	184
4.30.1	About HS-DPCCH.....	185
4.30.2	HS-DPCCH Common Settings.....	187
4.30.3	HS-DPCCH Scheduling Table (Release 8 and Later/Release 8 and Later RT).....	191
4.30.4	HS-DPCCH Settings for Normal Operation (Up to Release 7).....	200
4.30.5	MIMO Settings HS-DPCCH (Up to Release 7).....	202
4.31	E-DPCCH Settings - UE.....	206
4.32	HSUPA FRC Settings - UE.....	207
4.32.1	FRC General Settings.....	208
4.32.2	Coding And Physical Channels Settings.....	209
4.32.3	DTX Mode Settings.....	213
4.32.4	HARQ Simulation Settings.....	214
4.32.5	Bit and Block Error Insertion Settings.....	218
4.33	E-DPDCH Settings - UE.....	219
4.33.1	E-DPDCH Common Settings.....	220
4.33.2	Channel Table.....	221
4.34	E-DCH Scheduling - UE.....	223
4.35	Global Enhanced Channel Settings - UE1.....	226
4.35.1	Enhanced Channels State.....	227
4.35.2	Channel Coding.....	227
4.35.3	Transport Channel.....	231
4.35.4	Error Insertion.....	233
4.36	PRACH Settings - UE.....	235
4.36.1	Graphical Display.....	237
4.36.2	Preamble Settings.....	241
4.36.3	Message Part Settings.....	242
4.36.4	Channel Coding State.....	244
4.37	PCPCH Settings - UE.....	245
4.37.1	Graphical Display.....	247
4.37.2	Preamble Settings.....	250

4.37.3	Message Part Settings.....	252
4.37.4	Channel Coding Settings.....	255
4.38	Filtering, Clipping, ARB Settings.....	257
4.38.1	Filter Settings.....	257
4.38.2	Clipping Settings.....	259
4.38.3	ARB Settings.....	261
5	How to Work with the 3GPP FDD Option.....	262
5.1	Resolving Domain Conflicts.....	262
5.2	Using the DL-UL Timing Offset Settings.....	264
5.3	Configuring UL-DTX Transmission and Visualizing the Scheduling.....	265
5.4	Configuring and Visualizing the Uplink User Scheduling.....	267
5.5	How to Configure the HS-DPCCH Settings for 4C-HSDPA Tests.....	269
6	Application Sheets.....	271
6.1	Uplink Dual Cell HSDPA Test Signal Generation.....	271
6.1.1	Options and Equipment Required.....	271
6.1.2	Test Setup.....	271
6.1.3	Generating an uplink DC-HSDPA Test Signal (Non MIMO Mode).....	272
6.1.4	Generating an Uplink Test Signal for Simultaneous Dual Cell and MIMO Operation.....	273
7	Performing Base Stations Tests According to TS 25.141.....	275
7.1	Introduction.....	275
7.1.1	General Considerations.....	277
7.1.2	General Settings.....	279
7.1.3	Basestation Configuration.....	283
7.1.4	Apply.....	284
7.2	Receiver Tests.....	284
7.2.1	Overview.....	284
7.2.1.1	Basic Configuration.....	284
7.2.1.2	Test Setups - Receiver Tests.....	285
	Standard Test Setup - One Path.....	285
	Standard Test Setup - Two Paths.....	285
	Standard Test Setup - Diversity Measurements.....	286
7.2.1.3	Carrying Out a Receiver Test Measurement.....	286

7.2.1.4	General Wanted Signal Parameters.....	287
7.2.2	Receiver Characteristics.....	288
7.2.2.1	Test Case 7.2 - Reference Sensitivity Level.....	288
	Test Purpose and Test Settings - Test Case 7.2.....	289
7.2.2.2	Test Case 7.3 - Dynamic Range.....	290
	Test Purpose and Test Settings - Test Case 7.3.....	290
7.2.2.3	Test Case 7.4 - Adjacent Channel Selectivity.....	292
	Test Purpose and Test Settings - Test Case 7.4.....	293
7.2.2.4	Test Case 7.5 - Blocking Characteristics.....	295
	Test Purpose and Test Settings - Test Case 7.5.....	296
	Interferer Signal.....	298
	Blocking performance requirements.....	299
7.2.2.5	Test Case 7.6 - Intermodulation Characteristics.....	304
	Test Purpose and Test Settings - Test Case 7.6.....	304
7.2.2.6	Test Case 7.8 - Verification of Internal BER.....	307
	Test Purpose and Test Settings - Test Case 7.8.....	308
7.2.3	Performance Requirements.....	310
7.2.3.1	Test Case 8.2.1 - Demodulation of DCH in Static Propagation Conditions.....	310
	Test Purpose and Test Settings - Test Case 8.2.1.....	311
7.2.3.2	Test Case 8.3.1 - Demodulation of DCH in Multipath Fading Case 1 Conditions.....	313
	Test Purpose and Test Settings - Test Case 8.3.1.....	314
7.2.3.3	Test Case 8.3.2 - Demodulation of DCH in Multipath Fading Case 2 Conditions.....	316
7.2.3.4	Test Case 8.3.3 - Demodulation of DCH in Multipath Fading Case 3 Conditions.....	317
7.2.3.5	Test Case 8.3.4 - Demodulation of DCH in Multipath Fading Case 4 Conditions.....	317
7.2.3.6	Test Case 8.4 - Demodulation of DCH in Moving Propagation Conditions.....	319
7.2.3.7	Test Case 8.5 - Demodulation of DCH in Birth/Death Propagation Conditions.....	319
7.2.3.8	Test Case 8.6 - Verification of Internal BLER.....	320
	Test Purpose and Test Settings - Test Case 8.6.....	320
7.2.3.9	Test Case 8.8.1 - RACH Preamble Detection in Static Propagation Conditions.....	322
	Test Purpose and Test Settings - Test Case 8.8.1.....	323
7.2.3.10	Test Case 8.8.2 - RACH Preamble Detection in Multipath Fading Case 3.....	326
	Test Purpose and Test Settings - Test Case 8.8.2.....	327
7.2.3.11	Test Case 8.8.3 - RACH Demodulation of Message Part in Static Propagation Conditions.....	328

Test Purpose and Test Settings - Test Case 8.8.3.....	329
7.2.3.12 Test Case 8.8.4 - RACH Demodulation of Message Part in Multipath Fading Case 3	332
Test Purpose and Test Settings - Test Case 8.8.4.....	333
7.2.3.13 Test Case 8.9.1 - CPCH Access Preamble and Collision Detection Preamble Detection in Static Propagation Conditions.....	334
7.2.3.14 Test Case 8.9.2 - CPCH Access Preamble and Collision Detection Preamble Detection in Multipath Fading Case 3.....	334
7.2.3.15 Test Case 8.9.3 - Demodulation of CPCH Message in Static Propagation Conditions	334
7.2.3.16 Test Case 8.9.4 - Demodulation of CPCH Message in Multipath Fading Case 3.....	335
7.3 Transmitter Tests.....	335
7.3.1 Basic Configuration.....	335
7.3.2 Test Case 6.4.2 - Power Control Steps.....	336
7.3.2.1 Test Purpose and Test Settings - Test Case 6.4.2.....	337
7.3.2.2 Carrying Out the Test Case 6.4.2 Measurement.....	341
7.3.3 Test Case 6.6 - Transmit Intermodulation.....	342
7.3.3.1 Test Purpose and Test Settings - Test Case 6.6.....	343
7.3.3.2 Carrying Out a Test Case 6.6 Measurement.....	346
8 Remote-Control Commands.....	348
8.1 General Commands.....	349
8.2 Filter/Clipping Settings.....	355
8.3 Trigger Settings.....	359
8.4 Marker Settings.....	366
8.5 Clock Settings.....	369
8.6 Test Models and Predefined Settings.....	370
8.7 Setting Base Stations.....	375
8.8 Enhanced Channels of Base Station 1.....	423
8.8.1 General Settings.....	423
8.8.2 Channel Coding.....	424
8.8.3 Dynamic Power Control Settings.....	436
8.8.4 Error Insertion.....	440
8.9 User Equipment Settings.....	444
8.9.1 General Settings.....	444

8.9.2	Compressed Mode Settings.....	449
8.9.3	DPCCH Settings.....	451
8.9.4	HS-DPCCH Settings.....	458
8.9.4.1	Common Settings.....	458
8.9.4.2	Up to Release 7 Settings.....	460
8.9.4.3	Release 8 and Later (RT) Settings.....	468
8.9.5	DPDCH Settings.....	476
8.9.6	PCPCH Settings.....	480
8.9.7	PRACH Settings.....	491
8.9.8	HSUPA Settings.....	499
8.9.9	UL-DTX and Uplink Scheduling Settings.....	520
8.9.10	Dynamic Power Control Settings.....	525
8.10	Enhanced Channels of the User Equipment.....	529
8.11	Setting up Test Cases according to TS 25.141.....	542
A	Reference.....	564
	List of Commands.....	570
	Index.....	581

1 Preface

1.1 About this Manual

This user manual provides all the information **specific to the digital standard 3GPP FDD**.

All general instrument functions and settings common to all applications and operating modes are described in the main R&S SMW User Manual.

The main focus in this manual is on the provided settings and the tasks required to generate a signal. The following topics are included:

- **Welcome to the 3GPP FDD options R&S SMW-K42/-K83**
Introduction to and getting familiar with the option
- **About the 3GPP FDD and Basics**
Background information on basic terms and principles in the context of the signal generation
- **3GPP FDD Configuration and Settings**
A concise description of all functions and settings available to configure signal generation with their corresponding remote control commands
- **How to Generate a Signal with the 3GPP FDD Options**
The basic procedure to perform signal generation tasks and step-by-step instructions for more complex tasks or alternative methods
As well as detailed examples to guide you through typical signal generation scenarios and allow you to try out the application immediately
- **Application Examples**
Example signal generation scenarios in which the option is frequently used.
- **Test Case Wizard**
Description of the provided test cases for tests on Base Stations in Conformance with the 3G Standard 3GPP FDD
- **Remote Control Commands**
Remote commands required to configure and perform signal generation in a remote environment, sorted by tasks
(Commands required to set up the instrument or to perform common tasks on the instrument are provided in the main R&S SMW user manual)
Programming examples demonstrate the use of many commands and can usually be executed directly for test purposes
- **Annex**
Reference material, such as extensive lists
- **List of remote commands**
Alphabetical list of all remote commands described in the manual
- **Index**

1.2 Documentation Overview

The user documentation for the R&S SMW consists of the following parts:

- Getting Started printed manual
- Online Help system on the instrument, incl. Tutorials
- Documentation CD-ROM with:
 - Getting Started
 - Online help system (Web Help and *.chm) as a standalone help
 - User Manuals for base unit and options
 - Service manual
 - Data sheet and product brochure
 - Links to useful sites on the Rohde & Schwarz internet

Online Help

The Online Help is embedded in the software. It offers quick, context-sensitive access to the complete information needed for operation and programming. The online help contains help on operating the R&S SMW and all available options.

Getting Started

The Getting Started is delivered with the instrument in printed form and in PDF format on the documentation CD. It provides the information needed to set up and start working with the instrument. Basic operations and typical signal generation examples are described. Safety information is also included.

This manual is available in several languages. You can download these documents from the Rohde & Schwarz website, on the R&S SMW product page at <http://www.rohde-schwarz.com/product/SMW200A.html> > Downloads > Manuals.

User Manual

User manuals are provided for the base unit and each additional (software) option.

The User Manual for the base unit is a supplement to the Getting Started manual and provides basic information on operating the R&S SMW in general. In this manual, all instrument functions are described in detail. Furthermore, it provides a complete description of the remote control commands with programming examples. An introduction to remote control is provided, as well as information on maintenance, instrument interfaces and troubleshooting.

In the user manuals for the individual software options, the specific instrument functions of this option are described in detail. For additional information on default settings and parameters, refer to the data sheets. Basic information on operating the R&S SMW is not included in these user manuals.

The user manuals are available in PDF format - in printable form - on the Documentation CD-ROM delivered with the instrument.

All user manuals are also available for download from the Rohde & Schwarz website, on the R&S SMW product page at <http://www.rohde-schwarz.com/product/SMW200A.html> > Downloads > Manuals.

Service Manual

The service manual is available in PDF format on the CD delivered with the instrument. It describes how to check compliance with rated specifications, instrument function, repair, troubleshooting and fault elimination. It contains all information required for repairing the R&S SMW by replacing modules.

Release Notes

The release notes describe the installation of the firmware, new and modified functions, eliminated problems, and last minute changes to the documentation. The corresponding firmware version is indicated on the title page of the release notes.

The latest versions are available for download from the R&S SMW product page, at <http://www.rohde-schwarz.com/product/SMW200A.html> > Downloads > Firmware.

Web Help

The web help provides online access to the complete information on operating the R&S SMW and all available options, without downloading. The content of the Web Help corresponds to the user manuals for the latest product version.

The web help is available from the R&S SMW product page, at <http://www.rohde-schwarz.com/product/SMW200A.html> > Downloads > Web Help.

Tutorials

A set of tutorials is embedded in the software. The tutorials offer guided examples and demonstrations on operating the R&S SMW.

Application Notes

Application notes, application cards, white papers and educational notes are further publications that provide more comprehensive descriptions and background information.

A subset of application notes is provided on the documentation CD-ROM delivered with the instrument.

The latest versions are available for download from the Rohde & Schwarz website, at <http://www.rohde-schwarz.com/appnotes>.

1.3 Conventions Used in the Documentation

1.3.1 Typographical Conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
KEYS	Key names are written in capital letters.
File names, commands, program code	File names, commands, coding samples and screen output are distinguished by their font.
<i>Input</i>	Input to be entered by the user is displayed in italics.
Links	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

1.3.2 Conventions for Procedure Descriptions

When describing how to operate the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touchscreen is described. Any elements that can be activated by touching can also be clicked using an additionally connected mouse. The alternative procedure using the keys on the instrument or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the instrument or on a keyboard.

1.3.3 Notes on Screenshots

When describing the functions of the product, we use sample screenshots. These screenshots are meant to illustrate as much as possible of the provided functions and possible interdependencies between parameters. The shown values may not represent realistic test situations.

The screenshots usually show a fully equipped product, that is: with all options installed. Thus, some functions shown in the screenshots may not be available in your particular product configuration.

2 Welcome to the 3GPP FDD Digital Standard

The R&S SMW-K42/-K83 are firmware applications that add functionality to generate signals in accordance with the WCDMA standard 3GPP FDD.

WCDMA (Wideband CDMA) describes a group of mobile radio communication technologies, the details of which differ greatly. The R&S SMW supports the 3GPP FDD standard developed by the 3GPP ("3rd Generation Partnership Project") standardization committee.

The R&S SMW generates the 3GPP FDD signals in a combination of realtime mode (enhanced channels) and arbitrary waveform mode. Channel coding and simulation of bit and block errors can be activated for the enhanced channels of Release 99 and for H-Sets 1-5 generated in realtime. Channel coding can also be activated for HSDPA/HSPA+ H-Sets and all HSUPA/HSPA+ FRC channels which are generated in arbitrary wave mode. Data lists can also be used for the data and TPC fields. The enhanced state of realtime channels can be switched off to generate specific test scenarios. In arbitrary waveform mode, the signal is first calculated and then output.

The R&S SMW simulates 3GPP FDD at the physical channel level and also at the transport layer level for all channels for which channel coding can be activated.

3GPP FDD/HSDPA/HSUPA/HSPA+ key features

- Support of all physical channels of 3GPP FDD, HSDPA, HSUPA and HSPA+
- HSDPA H-Sets 1 to 12 with channel coding; user-definable H-Set configuration
- HSUPA fixed reference channels with channel coding and HARQ feedback simulation
- Realtime generation of P-CCPCH and up to three DPCHs in downlink
- One UE in realtime in uplink, up to 128 additional mobile stations via ARB
- External dynamic power control of a code channel possible
- Support of UL-DTX, DC-HSDPA, 4C-HSDPA and 8C-HSDPA

Functional overview of option R&S SMW-K42

The following list gives an overview of the functions provided by the option R&S SMW-K42 for generating a 3GPP FDD signal:

- Configuration of up to 4 base stations and 4 user equipment.
- Combination of realtime mode (enhanced channels) and arbitrary waveform mode
- All special channels and up to 512 channels on the downlink, except HSDPA, HSUPA and HSPA+
- Various test models and pre-defined settings for the uplink and the downlink
- Modulation 16QAM and 64QAM (downlink) for configuring high-speed channels in continuous mode (test model 5&6, HSDPA)
- Clipping for reducing the crest factor
- Misuse TPC" parameter for varying the original normal transmit power over time

- Simulation of up to 128 additional user equipment

The following functions are provided specifically for the receiver test:

- Realtime generation of up to 4 code channels with the option of using data lists for the data and TPC fields
- Channel coding of the reference measurement channels, AMR and BCH in real-time
- Feeding through of bit errors (to test a BER tester) and block errors (to test a BLER tester)
- Simulation of orthogonal channel noise (OCNS in accordance with TS 25.101)
- Presettings in accordance with 3GPP specifications
- HSDPA Downlink in continuous mode (test model 5&6 for TX tests)

Functional overview of the extension R&S SMW-K83

Enhanced MS/BS tests incl. HSDPA extends the 3GPP FDD signal generation with simulation of high speed channels in the downlink (HS-SCCH, HS-PDSCH) and the uplink (HS-DPCCH) and with dynamic power control in real time. HSDPA (high speed downlink packet access) mode enhances the 3GPP FDD standard by data channels with high data rates especially for multi media applications.

The following functions are provided for enhanced BS/MS tests including HSDPA:

- HSDPA uplink
- HSDPA downlink (packet mode and H-Set mode without CPC, 64QAM and MIMO)
- Dynamic Power Control
- Predefined and user-definable H-Sets
- Assistance in the setting of the appropriate sequence length for arbitrary waveform mode

HSUPA extends the 3GPP FDD signal generation with full HSUPA (high speed uplink packet access) support. Option K59 3GPP FDD HSPA+ extends the HSDPA and/or HSUPA signal generation with HSPA+ features in the downlink and uplink

The following functions are provided for HSUPA:

- HSUPA Downlink (RX measurements on 3GPP FDD UEs with correct timing)
- HSUPA Uplink (RX measurements on 3GPP FDD Node BS supporting HSUPA)
- HSUPA HARQ Feedback support

The following functions are provided for HSPA+:

- Downlink 64QAM with channel coding
- Uplink 16QAM (4PAM)
- Downlink MIMO
- Uplink ACK/PCI/CQI feedback for downlink MIMO and/or Dual Cell HSDPA
- CPC in downlink (HS-SCCH less operation, Enhanced F-DPCH) and uplink (UL-DTX, Uplink DPCCH slot format 4)
- Support for the generation of 3i OCNS and for randomly varying modulation and the number of HS-PDSCH channels in H-Set over time (type 3i enhanced performance requirements tests).

This user manual contains a description of the functionality that the application provides, including remote control operation.

All functions not discussed in this manual are the same as in the base unit and are described in the R&S SMW user manual. The latest version is available for download at the [product homepage](#).

Installation

You can find detailed installation instructions in the delivery of the option or in the R&S SMW Service Manual.

2.1 Accessing the 3GPP FDD Dialog

To open the dialog with 3GPP FDD settings

- In the block diagram of the R&S SMW, select "Baseband > 3GPP FDD".

A dialog box opens that display the provided general settings.

The signal generation is not started immediately. To start signal generation with the default settings, select "State > On".

2.2 Scope



Tasks (in manual or remote operation) that are also performed in the base unit in the same way are not described here.

In particular, this includes:

- Managing settings and data lists, i.e. storing and loading settings, creating and accessing data lists, accessing files in a particular directory, etc.
- Information on regular trigger, marker and clock signals as well as filter settings, if appropriate.
- General instrument configuration, such as checking the system configuration, configuring networks and remote operation
- Using the common status registers

For a description of such tasks, see the R&S SMW user manual.

3 About the 3GPP FDD Options

Some background knowledge on basic terms and principles used in the 3GPP FDD modulation system is provided here for better understanding of the required configuration settings.

The following table gives an overview of parameters of the modulation system 3GPP FDD.

Table 3-1: Parameters of the modulation system

Parameter	Value
Chip rate	3.84 Mcps
Channel types	<p>Downlink:</p> <ul style="list-style-type: none"> • Primary Common Pilot Channel (P-CPICH) • Secondary Common Pilot Channel (S-CPICH) • Primary Sync Channel (P-SCH) • Secondary Sync Channel (S-SCH) • Primary Common Control Phys. Channel (P-CCPCH) • Secondary Common Control Phys. Channel (S-CCPCH) • Page Indication Channel (PICH) • Acquisition Indication Channel (AICH) • Access Preamble Acquisition Indication Channel (AP-AICH) • Collision Detection Acquisition Indication Channel (CD-AICH) • Phys. Downlink Shared Channel (PDSCH) • Dedicated Physical Control Channel (DL-DPCCH) • Dedicated Phys. Channel (DPCH) • High Speed Shared Control Channel (HS-SCCH) • High Speed Physical Downlink Shared Channel (HS-PDSCH), Modulation QPSK, 16 QAM or 64QAM • HSUPA channels (E-AGCH, E-RGCH, E-HICH, F-DPCH) <p>Uplink:</p> <ul style="list-style-type: none"> • Phys. Random Access Channel (PRACH) • Phys. Common Packet Channel (PCPCH) • Dedicated Physical Control Channel (DPCCH) • Dedicated Physical Data Channel (DPDCH) • High Speed Dedicated Physical Control Channel (HS-DPCCH) • E-DCH Dedicated Physical Control Channel (E-DPCCH) • E-DCH dedicated physical data channel (E-DPDCH)
Symbol rates	<p>7.5 ksps, 15 ksps, 30 ksps to 960 ksps depending on the channel type (downlink)</p> <p>15 ksps, 30 ksps, 60 ksps to 1920 ksps depending on the channel type (uplink)</p>
Channel count	<p>In downlink 4 base stations each with up to 128 DPCHs and 11 special channels.</p> <p>In uplink 4 user equipment either with PRACH or PCPCH or a combination of DPCCH, up to 6 DPDCH, HS-DPCCH, E-DPCCH and up to 4 E-DPDCH channels.</p>
Frame structure	<p>Timeslot: 0.667 ms,</p> <p>Subframe: 3 timeslots = 2 ms</p> <p>Radio frame: 15 timeslots = 10 ms</p> <p>The frame structure in symbols depends on the symbol rate.</p>

Parameter	Value
Scrambling code	Downlink: 18 bit M sequence Uplink: 25 bit M sequence in long mode and 8 bit M sequence in short mode
Channelization code for most of the channel types	"Orthogonal Variable Spreading Factor Code (OVSF)" square matrix of dimension chip rate/symbol rate

3.1 Modulation System 3GPP FDD

The following block diagram shows the components of the 3GPP FDD transmission system.

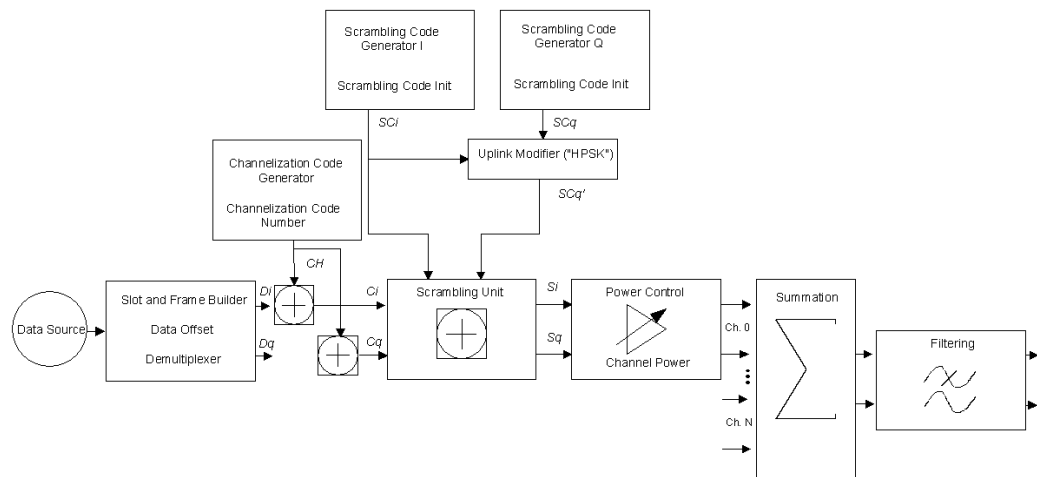


Fig. 3-1: Components of the 3GPP FDD transmission system

3.1.1 Scrambling Code Generator

The scrambling code generator (previously called long code generator) is used to scramble the chip sequence as a function of the transmitter.


Depending on the link direction and mode (long or short), the structure and initialization regulation of the generator are different.

3.1.1.1 Downlink Scrambling Code Generator

This generator consists of a pair of shift registers from which the binary sequences for inphase and orthogonal component of the scrambling code are determined. The [figure 3-2](#) shows that the I component is produced as EXOR operation of the LSB outputs, whereas the register contents are first masked and read out for the Q component and then EXORed.

Table 3-2: Generator polynomials of the downlink scrambling code generators

Shift register 1	$x^{18}+x^7+1$
Shift register 2	$x^{18}+x^{10}+x^7+x^5+1$

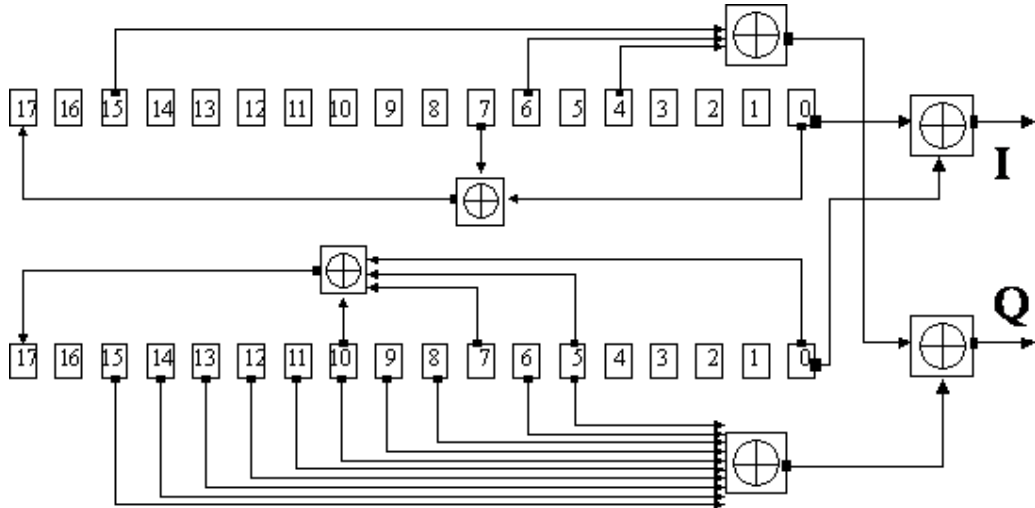**Fig. 3-2: Structure of downlink scrambling code generator**

The shift registers are initialized by loading shift register 1 with "0...01" and shift register 2 completely with "1". In addition, shift register 1 is wound forward by n cycles, n being the scrambling code number or Scrambling Code (SC) for short.

After a cycle time of one radio frame the generators are reset, i.e. the above initialization is carried out again.

3.1.1.2 Uplink Scrambling Code Generator

In the uplink, a differentiation is made between two SC modes. The long SC, on the one hand, can be used for all types of channel. The short SC, on the other hand, can be used as an alternative to the long SC for all channels except PRACH and PCPCH.

Uplink long scrambling code

Principally, the code generator of the long SC in the uplink is of the same structure as the SC in the downlink. However, the generator polynomials of the shift registers and the type of initialization are different.

Table 3-3: Generator polynomials of the uplink long scrambling code generator

Shift register 1	$x^{25}+x^3+1$
Shift register 2	$x^{25}+x^3+x^2+x+1$

The shift registers are initialized by allocating 1 to shift register 1 bit number 24 and the binary form of the scrambling code number n to bits 23 to 0. Shift register 2 is completely loaded with "1".

The read-out positions for the Q component are defined such that they correspond to an IQ offset of 16.777.232 cycles.

After a cycle time of one radio frame the generators are reset, i.e. the above initialization is carried out again.

Uplink short scrambling code

The code generator of the short SC in the uplink consists of a total of 3 coupled shift registers.

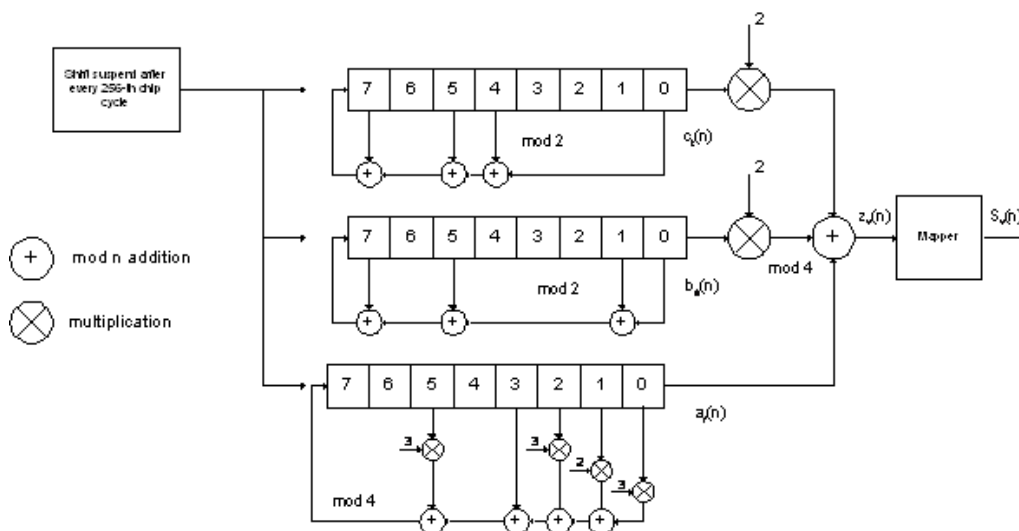


Fig. 3-3: Structure of uplink short scrambling code generator

Table 3-4: Generator polynomials of uplink short scrambling code generator

Shift register 1 (binary)	$x^8 + x^7 + x^5 + x^4 + 1$
Shift register 2 (binary)	$x^8 + x^7 + x^5 + x + 1$
Shift register 3 (quaternary)	$x^8 + x^5 + 3x^3 + x^2 + 2x + 1$

The output sequences of the two binary shift registers are weighted with factor 2 and added to the output sequence of the quaternary shift register (Modulo 4 addition). The resulting quaternary output sequence is mapped into the binary complex level by the mapper block.

For initialization of the three 8-bit shift registers (in a modified way) the binary form of the 24-bit short SC number n is used, for details see 3GPP TS 25 213, Spreading and Modulation.

Table 3-5: Mapping of the quaternary output sequence into the binary IQ level

$z_v(n)$	$S_v(n)$
0	$+1 + j1$
1	$-1 + j1$

$zv(n)$	$Sv(n)$
2	$-1 - j1$
3	$+1 - j1$

Preamble scrambling code generator

When generating the preambles of the PRACH and PCPCH a special SC is used. It is based on the Long SC described under a), however only the I component is taken and subsequently a pointer ($e^{j(Pl/4 + Pl/4 * k)}$, $k=0$ to 4095) modulated upon it.

Modification of the long and short scrambling code output sequence

The scrambling code sequence of the Q component is modified as standard to reduce the crest factor of the signal. Zero-crossings can thus be avoided for every second cycle. (This method is often called "HPSK").

For details see 3GPP TS 25 213, Spreading and Modulation. The R&S SMW makes use of a decimation factor of 2.

3.1.2 Scrambling Unit

In the scrambling unit, the output of the scrambling code generator is linked with spread symbols. If the input signal and the scrambling code signal are interpreted as complex signal ($C_i, C_q, SC_i, SC_q' \in \{-1, +1\}$), the output signal is a complex multiplication of the two signals:

$$S_i + j S_q = (C_i + j C_q) * (SC_i + j SC_q')$$

and the following equations apply

$$S_i = C_i SC_i - C_q SC_q'$$

$$S_q = C_i SC_q' + C_q SC_i$$

The signal thus obtained can be interpreted as a QPSK signal with the following constellation diagram:

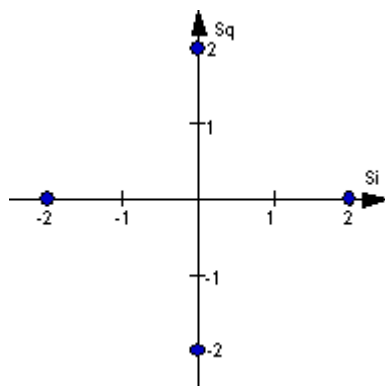


Fig. 3-4: Constellation diagram of a channel with 0 dB power



There are auxiliary conditions for some types of channels that may result in different constellation diagrams. If, for instance, symbols of the SCH are coded, a BPSK constellation is obtained without the scrambling unit.

Furthermore, with HSDPA and HSPA+, the higher order modulations 4PAM, 16QAM and 64QAM were introduced.

3.1.3 Channelization Code Generator

The channelization code generator cyclically outputs a channel-specific bit pattern. The length of the cycle corresponds to the period of the source symbol to be spread, i.e. the number of bits corresponds to the spread factor. The spreading sequence for the I and Q branch is identical (real value). Spreading is a simple EXOR operation.

Two different channelization code generators are used depending on the type of channel:

Channelization code generator for all channels except SCH

Due to this channelization code the channel separation takes place in the sum signal. The channelization code number is the line of an orthogonal spreading matrix which is generated according to an iterative scheme ("OVSF").

Channelization code generator SCH

This generator replaces the one described above if the synchronization code symbol of the SCH channels is spread.

The spreading matrix is replaced by a method that forms the spreading sequence from a Hadamard sequence and a statistical sequence. For details see 3GPP TS 25 213.

3.1.4 Data Source

The data and TPC fields of the enhanced channels (realtime channels) can be filled from data lists containing data defined by the user. This allows user information from the physical layer or from higher layers such as the transport layer to be introduced into the signal generation process.

The choice of data sources is crucially important for the signal characteristics. The constellation diagram and the crest factor in particular are modeled to a great extent by a suitable choice of data.

3.1.5 Slot and Frame Builder

The bits from the data source are first entered into a frame structure. The frames are made up of three hierarchical levels:

Table 3-6: Hierarchical structure of 3GPP FDD frames

Hierarchy	Length in ms	Remarks
Timeslot	0,667	
Subframe	2 ms	One subframe consists of 3 timeslots.
Radio frame	10	<p>After a radio frame, pilot symbols are repeated. One radio frame consists of 15 timeslots.</p> <p>A frame is also the length of a scrambling code cycle. Frames are the basic unit.</p> <p>The sequence length is stated in radio frames.</p>

The configuration of the timeslots depends on the channel type and symbol rate. The following components are distinguished:

- **Pilot sequence**
The pilot sequence characterizes the timeslot position within the radio frame and also depends on the symbol rate, transmit diversity and the pilot length parameter. Channel types DPCH, S-CCPCH, DL-DPCCH, DPCCH, PRACH and PCPCH have a pilot sequence.
The pilot sequence cannot be changed by the user.
- **Synchronization code symbol**
The synchronization code symbol is the only symbol of the SCH.
- **TPC symbol**
This symbol is used to control the transmit power. It is used in DPCH, DL-DPCCH and DPCCH.
A bit pattern for the sequence of TPC symbols can be indicated as a channel-specific pattern.
- **Data symbols**
These symbols carry the user information and are fed from the data source. They are used in DPCH, P-CCPCH, S-CCPCH, PDSCH, E-AGCH, E-RGCH, E-HICH, DPDCH, PRACH, PCPCH, HS-PDSCH and E-DPDCH.
- **Signature**
The signature is used in PRACH and PCPCH. 16 fixed bit patterns are defined of which the user may select one.
- **TFCI**
The "Transport Format Combination Indicator" is used in DPCH/DPCCH if the state is set to On. In this case, a code sequence with the length of 30 is defined using this value and distributed among 15 subsequent timeslots. In PRACH and PCPCH, the TFCI field is provided as standard.
- **FBI**
Feedback indication bits are only used in DPCCH and PCPCH.

3.1.6 Timing Offset

The symbol stream can be shifted in time relative to the other channels. For this purpose a timing offset can be entered into the channel table, stating the range of shifting in multiples of 256 chips. Since the generator does not generate infinite symbol streams like a real-time system, this offset is implemented as a rotation.

Example:

DPCH 30 kbps, 1 timeslot, timing offset = 2;

$2 \times 256 \text{ chips} = 512 \text{ chip offset}$;

4 data symbols shifting at a symbol rate of 30 kbps (1 symbol corresponds to 3.84 Mcps / 30 kbps = 128 chips).

previously:

11	11	11	11	00	01	10	11	00	10	01	11	11	01	00	01	10	11	01	00
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

afterwards:

10	11	01	00	11	11	11	11	00	01	10	11	00	10	01	11	11	01	00	01
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

The use of the timing offset usually causes a reduction of the crest factor of the total signal, since it is not always the same spreading chips (channelization chips) CH and scramble chips SC_i/SC_q that are applied to the pilot sequences of the channels.

3.1.7 Demultiplexer

In the downlink, the symbol stream is divided into two bit streams D_i and D_q prior to processing in the spreading unit. For example, if QPSK modulation is used for a channel, the symbol stream is divided by allocating bits 1, 3, 5, to $2n-1$ to the in-phase bit stream D_i , and bits 2, 4, 6, $2n$ to the quadrature bit stream D_q .

For the above example with timing offset:

$D_i = 1\ 1\ 0\ 0\ 1\ 1\ 1\ 1\ 0\ 0\ 1\ 1\ 0\ 1\ 0\ 1\ 1\ 0\ 0\ 0$

$D_q = 0\ 1\ 1\ 0\ 1\ 1\ 1\ 1\ 0\ 1\ 0\ 1\ 0\ 0\ 1\ 1\ 1\ 1\ 0\ 1$

(left-hand bit is always the first one in the time sequence)

In the uplink, independent data are used for the two paths.

PRACH/PCPCH:	Preamble : signature parallel to I and Q
	Message part : data to I, pilot, TPC and TFCI to Q
DPCCH/E-DPCCH:	all bits to I, Q always unused
DPDCH/HS-DPCCH/E-DPDCH:	all bits are always to I or Q (dependent on channel number), the other path is unused.

3.1.8 Power Control

After spreading and scrambling, a channel-specific power factor p is applied to the signal. A value of -6 dB therefore results in half the level (or $\frac{1}{4}$ power) and the following diagram (DPCH):

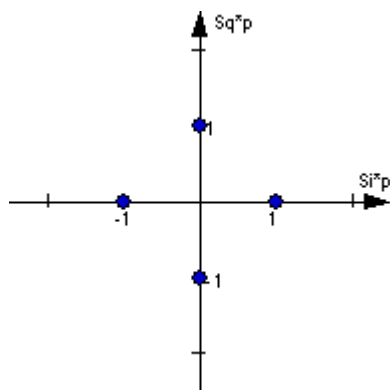


Fig. 3-5: Constellation diagram of a channel with -6 dB power

3.1.9 Summation and Filtering

After application of the channel power, the components of the individual channels are summed up.

The constellation diagram of the sum signal is obtained by superposition of the diagrams of the individual channels. If the signal consists of two channels with a power of -6 dB and -12 dB and each channel contains independent source data (DPCH), the following constellation diagram is obtained:

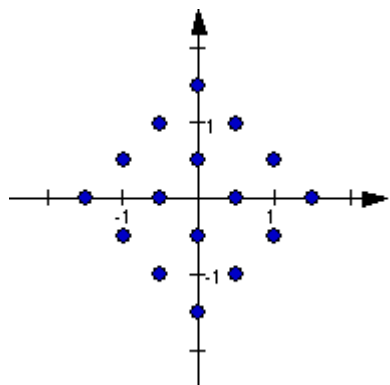


Fig. 3-6: Constellation diagram of a 3GPP W-CDMA signal with two DPCH channels

3.1.10 Multicode

3GPP FDD supports multicode transmission for downlink-dedicated physical channels (DPCH).

This form of transmission is used for channels intended for the same receiver, i.e. those receivers that belong to a radio link. The first channel of this group is used as a master channel.

Shared parts (pilot, TPC and TCFI) are spread for all channels using the spreading code of the master channel.



Instead of changing the spreading code within a slot several times, the master code rather than the shared parts can be sent at higher power. The other channels then have to be blanked out correspondingly.

3.1.11 Orthogonal Channel Noise (OCNS)

With Orthogonal Channel Noise, a practical downlink signal is generated to test the maximum input levels of user equipment in accordance with standard specifications. This simulates the data and control signals of the other orthogonal channels in the downlink. 3GPP TS 25.101 contains a precise definition of the required appearance of the OCNS signal.

Four different OCNS scenarios are defined in the standard; one "standard" scenario, two scenarios for HSDPA test cases and one scenario for type 3i enhanced performance requirements tests according to 3GPP TS34.121-1 ("other user's channels").

When activating OCNS and depending on the selected OCNS mode, different channel groups with different presetting are assigned as in the following tables. These channels cannot be edited in the channel table.

3.1.11.1 Standard, HSDPA and HSDPA2 modes

For the "Standard", "HSDPA" and "HSDPA2" modes, the OCNS channels are all normal DPCHs. The symbol rate is set at 30 kps and the pilot length to 8 bits.

The powers of the OCNS channel outputs are relative. In the R&S SMW, the power of the OCNS component is automatically set so that OCNS channels supplement the remaining channels in base station 1 to make a total power of 0 dB (linear 1).

It is not possible to adapt the OCNS power if the linear power of the remaining channels is >1, this will produce an error message. The OCNS channels are then given the maximum power (all -80 dB).

The "Total Power" display is updated after automatic calculation of the output; it is not possible to use "Adjust Total Power" to make the setting.

Table 3-7: Defined settings for the OCNS signal in base station 1 in Standard mode

Chan. code	Timing offset (x256Tchip)	Level setting (dB)	Channel type	Symbol rate	Pilot length
2	86	-1	DPCH	30 kps	8 bit
11	134	-3	DPCH	30 kps	8 bit
17	52	-3	DPCH	30 kps	8 bit
23	45	-5	DPCH	30 kps	8 bit
31	143	-2	DPCH	30 kps	8 bit
38	112	-4	DPCH	30 kps	8 bit
47	59	-8	DPCH	30 kps	8 bit
55	23	-7	DPCH	30 kps	8 bit

Chan. code	Timing offset (x256Tchip)	Level setting (dB)	Channel type	Symbol rate	Pilot length
62	1	-4	DPCH	30 ksps	8 bit
69	88	-6	DPCH	30 ksps	8 bit
78	30	-5	DPCH	30 ksps	8 bit
85	18	-9	DPCH	30 ksps	8 bit
94	30	-10	DPCH	30 ksps	8 bit
125	61	-8	DPCH	30 ksps	8 bit
113	128	-6	DPCH	30 ksps	8 bit
119	143	0	DPCH	30 ksps	8 bit

Table 3-8: Defined settings for the OCNS signal in base station 1 in HSDPA mode

Channelization code at SF=128	Relative Level setting (dB)	Channel type	Symbol rate	Pilot length
122	0	DPCH	30 ksps	8 bit
123	-2	DPCH	30 ksps	8 bit
124	-2	DPCH	30 ksps	8 bit
125	-4	DPCH	30 ksps	8 bit
126	-1	DPCH	30 ksps	8 bit
127	-3	DPCH	30 ksps	8 bit

Table 3-9: Defined settings for the OCNS signal in base station 1 in HSDPA2 mode

Channelization code at SF=128	Relative Level setting (dB)	Channel type	Symbol rate	Pilot length
4	0	DPCH	30 ksps	8 bit
5	-2	DPCH	30 ksps	8 bit
6	-4	DPCH	30 ksps	8 bit
7	-1	DPCH	30 ksps	8 bit

3.1.11.2 3i OCNS mode

(requires option R&S SMW-K83)

In the "3i" OCNS mode, 16 DPCH channels are inserted in the BS 1 channel according to 3GPP TS34.121-1, chapter E.5E.

According to 3GPP TS34.121-1, table E.5E.1.3, the channelization code of each of these channels changes randomly on a symbol-by-symbol basis between two possible values.

23	DPCH (OCNS)		10	30	2	-1.70	PN 9
24					108		
25	DPCH (OCNS)		10	30	3	-2.70	PN 9
26					103		
27	DPCH (OCNS)		10	30	5	-3.50	PN 9
28					109		

The power control sequence modeling according to 3GPP TS34.121-1, chapter E.5E.3 is applied to these channels; the power relationship between these channels is according to 3GPP TS34.121-1, table E.5E.1.3 only during the very first slot, and can deviate in the subsequent slots up to a certain range, but the total power of these channels is maintained constant (by normalization).



If the "3i" OCNS mode is activated (and the "3GPP FDD > State > On"), the OCNS channels are automatically leveled in order to have a total power of 0 dB for all channels of BS 1.

Table 3-10: Defined settings for the OCNS signal in base station 1 in 3i mode

Slot format	Symbol Rate, kbps	First Ch. Code of the channel	Second Ch. Code of the channel	Relative Power, dB (prior to the 0 dB adjustment)
10	30	2	108	-1.7
10	30	3	103	-2.7
10	30	5	109	-3.5
10	30	6	118	-0.8
10	30	90	4	-6.2
10	30	94	123	-4.6
10	30	96	111	-2.3
10	30	98	106	-4.1
10	30	99	100	-3.1
10	30	101	113	-5.1
12	60	52	44	0.0
10	30	110	124	-4.6
10	30	114	115	-4.8
10	30	116	126	-4.8
12	60	60	46	-1.1
10	30	125	95	-4.1



Refer to [chapter 4.13.9, "Randomly Varying Modulation And Number Of Codes \(Type 3i\) Settings"](#), on page 117 for description of the further settings required for the 3i Enhanced Performance Requirements tests according to 3GPP TS34.121-1.

3.1.12 HARQ Feedback

The HARQ Feedback functionality extends the basic 3GPP FDD option in order to meet the requirements defined in 3GPP TS 25.141, chapter 8.12 and 8.13.

This allows the user to dynamically control the transmission of the HSUPA fixed reference channels (FRC 1-7), the HSPA+ fixed reference channel (FPC 8) and the user defined fixed reference channels. An ACK from the base station leads to the transmission of a new packet while a NACK forces the instrument to retransmit the packet with a new channel coding configuration (i.e. new redundancy version RV) of the concerned HARQ process.

3.1.12.1 Limitations

Although an arbitrary data source can be selected, the same user data is used for all HARQ processes and for all retransmissions.

Example:

If FRC4 is configured and the data source is set to PN9, then the first 5076 bits of the PN9 are used as input for all four HARQ processes, regardless of which retransmission is performed. Note that the bitstream after channel coding of course is different for different retransmissions due to different redundancy versions.

Furthermore, "DTX-Mode" and "Bit-Error-Insertion/Block-Error-Insertion" are not available in this mode.

3.1.12.2 Setup

If an instrument with fading simulation is available, no more test equipment is needed in order to fulfill the test setup described in 3GPP TS 25.141, Annex B.3.4.

As the instrument has no RF input available, the HARQ feedback from the base station is expected as a TTL signal. The instrument provides two input connectors for this signal, the LEVATT connector on the external AUX I/O BNC adapter board R&S SMx-Z5 and the USER 1 connector on the instrument. Use the parameter [Connector \(HARQ\)](#) to enable the currently used in each baseband.

A high level (TTL) is interpreted as an ACK, while a low level corresponds to a NACK. Use the parameter [ACK Definition \(HARQ\)](#) to re-define it.

3.1.12.3 Timing

In general, the ACK/NACK feedback from the base station should be available at the selected instruments connector (LEVATT or the USER 1) with the same timing the E-

HICH is transmitted. The instrument will read out this port at time T_{SMx} after the start of the HARQ process the feedback is related to (see figure 3-7). The user is able to adjust this time via the parameter **Additional User Delay** parameter. The signal should be constant on this instrument's input for 0.5 ms before and after the defined point in time.

As it probably takes some time for the base station to be synchronized to the signal transmitted from the instrument, the ACK/NACK feedback should be NACK during this period, in order to force the instrument to retransmit the packets, until the first packet is read out correctly from the base station.

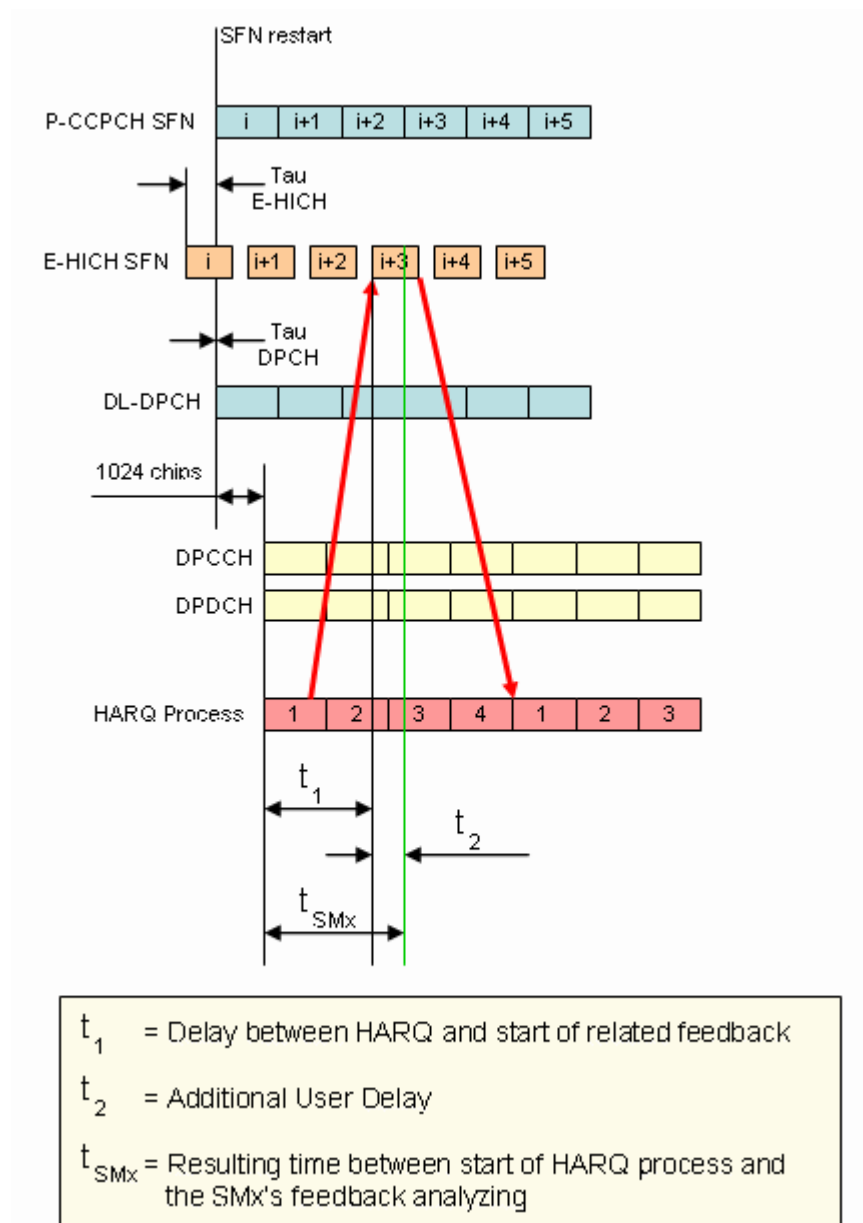


Fig. 3-7: Timing diagram for TTI 10ms, $\tau_{dpch} = 0$, $\tau_{E-HICH} = -7\text{slots}$

3.1.13 HS-SCCH less operation

HS-SCCH less operation is a special HSDPA mode of operation which reduces the HS-SCCH overhead and reduces UE battery consumption. It changes the conventional structure of HSDPA data reception. In HSDPA as defined from 3GPP release 5 onwards, UE is supposed to read continuously HS-SCCH where data allocations are being signaled. The UE is being addressed via a UE specific identity (16 bit H-RNTI / HSDPA Radio Network Temporary Identifier) on HS-SCCH. As soon as the UE detects relevant control information on HS-SCCH it switches to the associated HS-PDSCH resources and receives the data packet.

This scheme is fundamentally changed in HS-SCCH less operation and HS-SCCH less operation is optimized for services with relatively small packets, e.g. VoIP.

In HS-SCCH less operation mode, the base station can decide for each packet again whether to apply HS-SCCH less operation or not, i.e. conventional operation is always possible.

The first transmission of a data packet on HS-DSCH is done without an associated HS-SCCH. The first transmission always uses QPSK and redundancy version $X_{rv} = 0$. Only four pre-defined transport formats can be used so the UE can blindly detect the correct format. The four possible transport formats are configured by higher layers. Only predefined channelization codes can be used for this operation mode and are configured per UE by higher layers: the parameter HS-PDSCH code index provides the index of the first HS-PDSCH code to use. For each of the transport formats, it is configured whether one or two channelization codes are required.

In order to allow detection of the packets on HS-DSCH, the HS-DSCH CRC (Cyclic Redundancy Check) becomes UE specific based on the 16 bit HRNTI. This is called CRC attachment method 2 (CRC attachment method 1 is conventional as of 3GPP release 5).

In case of successful reception of the packet, the UE will send an ACK on HS-DPCCH. If the packet was not received correctly, the UE will send nothing.

If the packet is not received in the initial transmission, the base station may retransmit it. The number of retransmissions is limited to two in HS-SCCH less operation.

In contrast to the initial transmission, the retransmissions are using HS-SCCH signaling. However, the coding of the HS-SCCH deviates from release 5, since the bits on HS-SCCH are re-interpreted. This is called HS-SCCH type 2. The conventional HS-SCCH as of 3GPP release 5 is called HS-SCCH type 1.

3.1.13.1 HS-SCCH Type 2

The table below gives a comparison of the HS-SCCH Type 1 (normal operation) and HS-SCCH Type 2 (Less Operation) formats.

Table 3-11: Comparison of HS-SCCH Type 1 and Type 2

HS-SCCH Type 1 (normal operation)	HS-SCCH Type 2 (less operation)
Channelization code set information (7 bits)	Channelization code set information (7 bits)
Modulation scheme information (1 bit)	Modulation scheme information (1 bit)
Transport block size information (6 bits)	Special Information type (6 bits)
HARQ process information (3 bits)	Special Information (7 bits)
Redundancy and constellation version (3 bits)	UE identity (16 bits)
New data indicator (1 bit)	
UE identity (16 bits)	

The Special Information type on HS-SCCH type 2 must be set to 111110 to indicate HS-SCCH less operation. The 7 bits Special information then contains:

- 2 bit transport block size information (one of the four possible transport block sizes as configured by higher layers)
- 3 bit pointer to the previous transmission of the same transport block (to allow soft combining with the initial transmission)
- 1 bit indicator for the second or third transmission
- 1 bit reserved.

QPSK is also used for the retransmissions. The redundancy version X_{rv} for the second and third transmissions shall be equal to 3 and 4, respectively.

For the retransmissions, also HS-DSCH CRC attachment method 2 is used.

ACK or NACK are reported by the UE for the retransmitted packets.

3.1.13.2 HS-SCCH Type 2 Fixed Reference Channel: H-Set 7

In order to support HS-SCCH Type 2 (Less Operation) testing, a fixed reference channel has been introduced. H-Set 7 is specified as reference test channel for HSDPA test cases.

The H-Set 7 consists of one HS-PDSCH and its parameterization and coding chain is based on 1 code with QPSK modulation and one HARQ process.

3.1.14 Higher Order Modulation

3.1.14.1 64QAM in downlink

With the possibility to use 64QAM in downlink, HSPA+ can achieve downlink data rates of 21 Mbps. This theoretical peak data rate (physical channel bit rate) with 64QAM is calculated as follow:

$$\text{Peak data rate (64QAM)} = 15 [\text{codes}] * 2880 \text{ bits} / 2 \text{ ms [subframe]} = 21.6 \text{ MBps}$$

3.1.14.2 64QAM Fixed Reference Channel: H-Set 8

In order to support 64QAM testing, a fixed reference channel has been introduced. H-Set 8 is specified as reference test channel for HSPA+ test cases.

The H-Set 8 parameterization and coding chain is based on 15 codes with 64QAM modulation. Six Hybrid ARQ processes are used, and HS-DSCH is continuously transmitted.

3.1.14.3 16QAM in uplink

With the possibility to use 16QAM on E-DCH (Enhanced Dedicated Channel) in uplink, HSPA+ can achieve uplink peak data rates of 11.5 Mbps. A new uplink UE category 7 has been introduced which supports 16QAM in addition to BPSK.

Uplink transmission in HSPA+ is based on IQ multiplexing of E-DPDCH (Enhanced Dedicated Physical Data Channel) physical channels as in HSUPA of 3GPP release 6. In fact, the 16QAM constellation is made up of two orthogonal 4PAM (pulse amplitude modulation) constellations. In case of 4PAM modulation, a set of two consecutive binary symbols n_k, n_{k+1} is converted to a real valued sequence following the mapping described in the table below.

Table 3-12: Mapping of E-DPDCH with 4PAM modulation

n_k, n_{k+1}	00	01	10	11
Mapped real value	0.4472	1.3416	-0.4477	-1.3416

This results in the following symbol mapping:



An E-DPDCH may use BPSK or 4PAM modulation symbols.

3.1.14.4 16QAM Fixed Reference Channel: FRC 8

To support 16QAM (4PAM) testing in the uplink, a E-DPDCH fixed reference channel (FRC 8) has been introduced.

The FRC 8 parameterization and channel coding is based on four Physical Channel Codes (2xSF2 and 2xSF4) with overall symbol rate of $2 \times 960 + 2 \times 1920$ ksps, 4PAM modulation and E-DCH TTI of 2 ms. Eight Hybrid ARQ processes are used.

3.1.15 MIMO in HSPA+

HSPA+ uses full MIMO approach including spatial multiplexing. The approach is called D-TxAA (Double Transmit Antenna Array). It is only applicable for the High Speed Downlink Shared Channel, the HS-DSCH.

The figure below shows the basic principle of the 2x2 approach. The figure is taken from 3GPP TS 25.214.

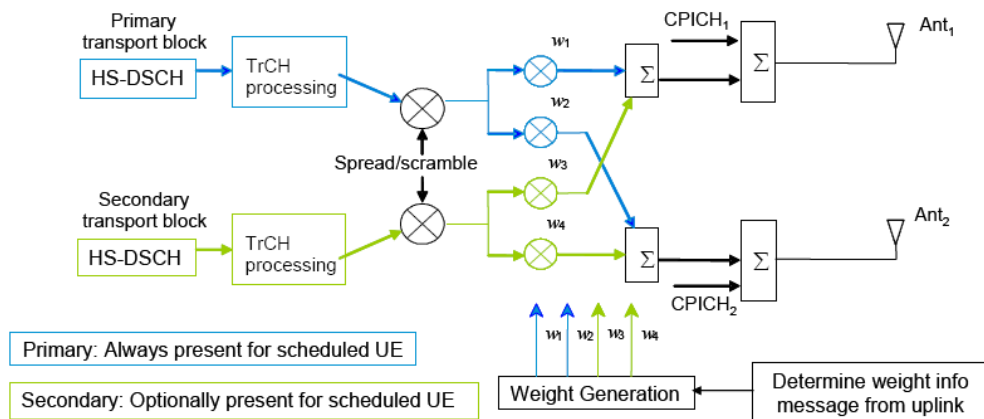


Fig. 3-8: MIMO for HSPA+

With D-TxAA, two independent data streams (transport blocks) can be transmitted simultaneously over the radio channel over the same WCDMA channelization codes. Each transport block is processed and channel coded separately. After spreading and scrambling, **precoding** based on weight factors is applied to optimize the signal for transmission over the mobile radio channel.

Four precoding weights w_1 - w_4 are available. The first stream is multiplied with w_1 and w_2 , the second stream is multiplied with w_3 and w_4 . The weights can take the following values:

$$w_3 = w_1 = 1/\sqrt{2},$$

$$w_4 = -w_2,$$

$$w_2 \in \left\{ \frac{1+j}{2}, \frac{1-j}{2}, \frac{-1+j}{2}, \frac{-1-j}{2} \right\}$$

Precoding weight w_1 is always fixed, and only w_2 can be selected by the base station. Weights w_3 and w_4 are automatically derived from w_1 and w_2 , because they have to be orthogonal.

3.1.15.1 D-TxAA Feedback signaling: PCI and CQI

D-TxAA requires a **feedback signaling** from the UE to assist the base station in taking the right decision in terms of modulation and coding scheme and precoding weight selection. The UE has to determine the preferred primary precoding vector for transport block 1 consisting of w_1 and w_2 . Since w_1 is fixed, the feedback message only consists of a proposed value for w_2 . This feedback is called **precoding control information (PCI)**. The UE also recommends whether one or two streams can be supported in the current channel situation. In case dual stream transmission is possible, the secondary precoding vector consisting of weights w_3 and w_4 is inferred in the base station, because it has to be orthogonal to the first precoding vector with w_1 and w_2 .

Thus, the UE does not have to report it explicitly. The UE also indicates the optimum modulation and coding scheme for each stream. This report is called **channel quality indicator (CQI)**.

Based on the composite PCI/CQI reports, the base station scheduler decides whether to schedule one or two data streams to the UE and what packet sizes (transport block sizes) and modulation schemes to use for each stream.

3.1.15.2 MIMO downlink control channel support

In order to support MIMO operation, changes to the HSDPA downlink control channel have become necessary, i.e. the HS-SCCH.

There is a new **HS-SCCH Type 3** for MIMO operation defined. The table below gives a comparison of the HS-SCCH Type 1 and Type 3 formats.

HS-SCCH Type 1	HS-SCCH Type 3	MIMO
(normal operation)	One transport block	Two transports blocks
Channelization code set information (7 bits)	Channelization code set information (7 bits)	Channelization code set information (7 bits)
Modulation scheme information (1 bit)	Modulation scheme and number of transport blocks information (3 bits)	Modulation scheme and number of transport blocks information (3 bits)
Transport block size information (6 bits)	Precoding weight information (2 bits)	Precoding weight information for primary transport block (2 bits)
HARQ process information (3 bits)	Transport block size information (6 bits)	Transport block size information for primary transport block (6 bits)
Redundancy and constellation version (3 bits)	HARQ process information (4 bits)	Transport block size information for secondary transport block (6 bits)
New data indicator (1 bit)	Redundancy and constellation version (2 bits)	HARQ process information (4 bits)
UE identity (16 bits)	UE identity (16 bits)	Redundancy and constellation version for primary transport block (2 bits)
		Redundancy and constellation version for secondary transport block (2 bits)
		UE identity (16 bits)

The "Precoding weight info for the primary transport block" contains the information on weight factor w_2 as described above. Weight factors w_1 , w_3 , and w_4 are derived accordingly. The number of transport blocks transmitted and the modulation scheme information are jointly coded as shown in [table 3-13](#).

Table 3-13: Interpretation of "Modulation scheme and number of transport blocks info" sent on HS-SCCH

Modulation scheme + number of transport blocks info (3 bits)	Modulation for primary transport block	Modulation for secondary transport block	Number of transport blocks
111	16QAM	16QAM	2
110	16QAM	QPSK	2
101	64QAM	n/a	1
	64QAM	QPSK	2
100	16QAM	n.a.	1

Modulation scheme + number of transport blocks info (3 bits)	Modulation for primary transport block	Modulation for secondary transport block	Number of transport blocks
011	QPSK	QPSK	2
010	64QAM	64QAM	2
001	64QAM	16QAM	2
000	QPSK	n.a.	1

3.1.15.3 Redundancy Version

Redundancy versions for the primary transport block and for the secondary transport block are signaled. Four redundancy version values are possible (unlike HSDPA in 3GPP release 5 where eight values for the redundancy version could be signaled).

3.1.15.4 HARQ Processes

Also the signaling of the HARQ processes differs from HSDPA in 3GPP release 5. In 3GPP release 5, up to eight HARQ processes can be signaled. A minimum of six HARQ processes needs to be configured to achieve continuous data transmission. Similarly, in MIMO with dual stream transmission, a minimum of twelve HARQ processes would be needed to achieve continuous data transmission.

Each HARQ process has independent acknowledgements and retransmissions. In theory, HARQ processes on both streams could run completely independently from one another. This would however increase the signaling overhead quite significantly (to 8 bits), since each possible combination of HARQ processes would need to be addressed.

To save signaling overhead, a restriction is introduced: HARQ processes are only signaled for the primary transport block within 4 bits, the HARQ process for the secondary transport block is derived from that according to a fixed rule; according to 3GPP TS 25.212. Thus, there is a one-to-one mapping between the HARQ process used for the primary transport block and the HARQ process used for the secondary transport block. The relation is shown in the table below for the example of 12 HARQ processes configured.

Table 3-14: Combinations of HARQ process numbers for dual stream transmission (12 HARQ processes configured)

HARQ process number on primary stream	0	1	2	3	4	5	6	7	8	9	10	11
HARQ process number on secondary stream	6	7	8	9	10	11	0	1	2	3	4	5



Only an even number of HARQ processes is allowed to be configured with MIMO operation.

3.1.15.5 MIMO uplink control channel support

Also the uplink control channel for HSDPA operation is affected by MIMO, i.e. the HS-DPCCH (High Speed Dedicated Physical Control Channel). In addition to CQI reporting as already defined from 3GPP release 5 onwards, PCI reporting for precoding feedback is introduced. Channel coding is done separately for the composite precoding control indication (PCI) / channel quality indication (CQI) and for HARQ-ACK (acknowledgement or negative acknowledgement information). The figure below shows the principle.

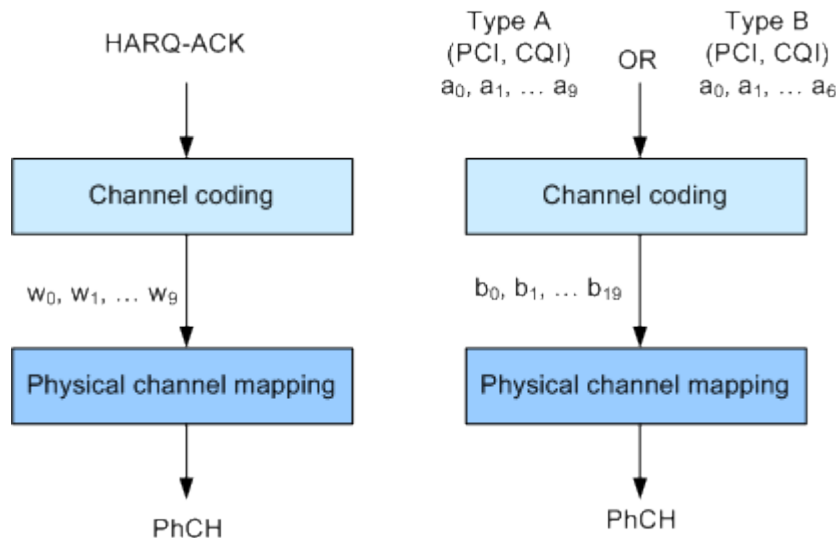


Fig. 3-9: Channel coding for HS-DPCCH (MIMO mode)

The 10 bits of the HARQ-ACK messages are interpreted according to 3GPP TS 25.212 (see table below). ACK/NACK information is provided for the primary and for the secondary transport block.

Table 3-15: Interpretation of HARQ-ACK in MIMO operation (non DC-HSDPA case)

HARQ-ACK message to be transmitted		w ₀	w ₁	w ₂	w ₃	w ₄	w ₅	w ₆	w ₇	w ₈	w ₉
HARQ-ACK in response to a single scheduled transport block											
ACK		1	1	1	1	1	1	1	1	1	1
NACK		0	0	0	0	0	0	0	0	0	0
HARQ-ACK in response to two scheduled transport blocks											
Response to primary transport block	Response to secondary transport block										
ACK	ACK	1	0	1	0	1	1	1	1	0	1
ACK	NACK	1	1	0	1	0	1	0	1	1	1
NACK	ACK	0	1	1	1	1	0	1	0	1	1
NACK	NACK	1	0	0	1	0	0	1	0	0	0
PRE/POST indication											

PRE		0	0	1	0	0	1	0	0	1	0
POST		0	1	0	0	1	0	0	1	0	0

3.1.15.6 CQI Reports: Type A and Type B

In MIMO case, two types of CQI reports shall be supported:

- **Type A CQI reports** can indicate the supported transport format(s) for the number of transport block(s) that the UE prefers. Single and dual stream transmissions are supported.
- **Type B CQI reports** are used for single stream transmission according to what has been defined from 3GPP release 5 onwards.

For type A CQI reports, the UE selects the appropriate CQI1 and CQI2 values for each transport block in dual stream transmission, or the appropriate CQIS value in single stream transmission, and then creates the CQI value to report on HS-DPCCH as follows:

$$CQI = \begin{cases} 15 * CQI_1 + CQI_2 + 31 & \text{when 2 transport blocks are preferred by the UE} \\ CQIs & \text{when 1 transport block is preferred by the UE} \end{cases}$$

For dual stream transmission, new CQI tables are specified in 3GPP TS25.214 for correct interpretation of transport formats based on CQI1 and CQI2.

3.1.15.7 PCI reports

The PCI value to report in the uplink is created in the UE according to the preferred precoding weight w_2 according to the table below.

Table 3-16: Mapping of preferred precoding weight to PCI values

w_2^{pref}	$\frac{1+j}{2}$	$\frac{1-j}{2}$	$\frac{-1+j}{2}$	$\frac{-1-j}{2}$
PCI value	0	1	2	3

The PCI value shall be transmitted together with the CQI value as a composite PCI/CQI value. The figure below shows how the composite PCI/CQI report is created.

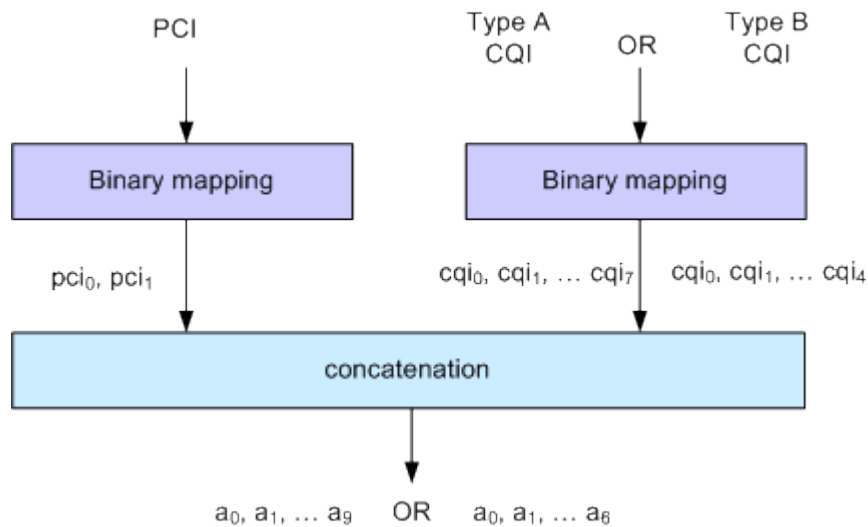


Fig. 3-10: Composite PCI/CQI information (MIMO mode)

3.1.15.8 MIMO Fixed Reference Channels: H-Set 9 and H-Set 11

In order to support MIMO testing, two fixed reference channels have been introduced. H-Set 9 and H-Set 11 are specified as reference test channel for HSPA+ test cases.

The H-Set 9 parameterization and coding chain is based on 15 codes with two different modulations, 16QAM and QPSK, for the primary and secondary transport blocks respectively. Six HARQ processes are used, and HS-DSCH is continuously transmitted.

The H-Set 11 parameterization and coding chain is also based on 15 codes and uses two different modulations, six HARQ processes and HS-DSCH is continuously transmitted. The modulation schemes specified for the H-Set 11 are however **64QAM** and **16QAM** for the primary and secondary transport blocks respectively.

3.1.16 Dual Cell HSDPA (DC-HSDPA)

Within 3GPP Release 7 the peak user throughput was significantly enhanced (MIMO, Higher Order Modulation). In order to fulfill the desire for even better and more consistent user experience across the cell the deployment of a second HSDPA carrier creates an opportunity for network resource pooling as a way to enhance the user experience, in particular when the radio conditions are such that existing techniques (e.g. MIMO) can not be used.

In DC-HSDPA operation the UE is configured with secondary serving HS-DSCH cell. With one HS-SCCH in each of the two cells scheduling flexibility to have different transport formats depending on CQI feedback on each carrier is maintained.

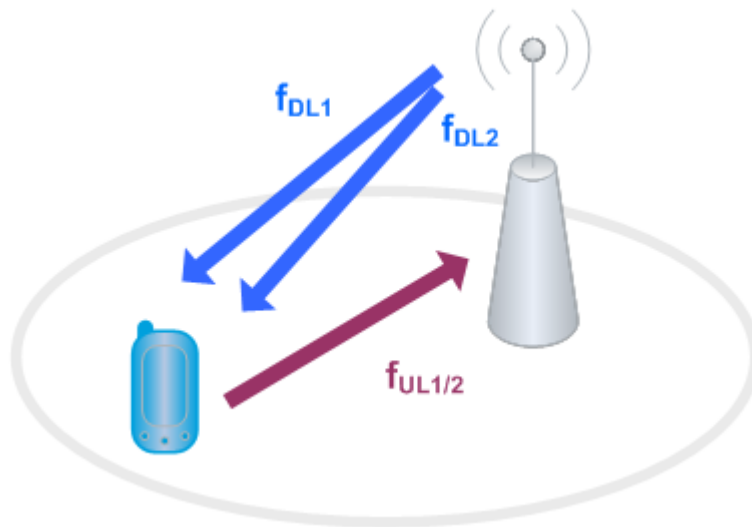


Fig. 3-11: Dual Cell HSDPA Operation

The following restrictions apply in case of DC-HSDPA operation:

- The dual cell transmission only applies to HSDPA physical channels
- The two cells belong to the same Node-B
- In Release 8 it is required that the two cells are on adjacent carriers; from Release 9 onwards the paired cells can operate on two different frequency bands.
- The two cells may use MIMO to serve UEs configured for dual cell operation

3.1.16.1 DC-HSDPA Data Acknowledgement (non MIMO mode)

When the UE is configured to work in DC-HSDPA non MIMO mode, the coding of the HS-DPCCH is performed according to the general coding flow, i.e. parallel coding of the HARQ-ACK and the CQI is performed. The figure below shows the principle.

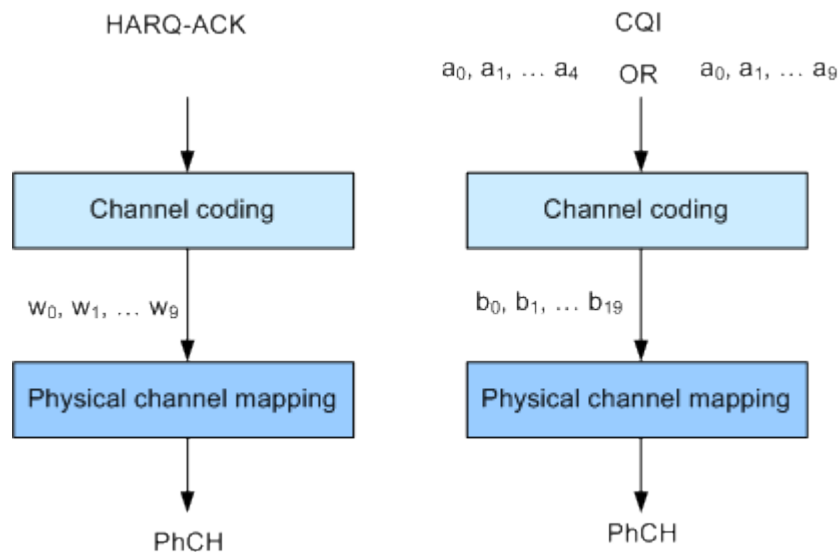


Fig. 3-12: Channel coding for HS-DPCCH (non MIMO mode)

The 10 bits of the HARQ-ACK messages are interpreted according to 3GPP TS 25.212 (see the table below). ACK/NACK information is provided for the transport block of the serving and secondary serving HS-DSCH cells.

Table 3-17: Interpretation of HARQ-ACK in DC-HSDPA non MIMO operation

HARQ-ACK message to be transmitted	w ₀	w ₁	w ₂	w ₃	w ₄	w ₅	w ₆	w ₇	w ₈	w ₉
HARQ-ACK in response to a single scheduled transport block, detected on the serving HS-DSCH cell										
ACK	1	1	1	1	1	1	1	1	1	1
NACK	0	0	0	0	0	0	0	0	0	0
HARQ-ACK in response to a single scheduled transport block, detected on the secondary serving HS-DSCH cell										
ACK	1	1	1	1	1	0	0	0	0	0
NACK	0	0	0	0	0	1	1	1	1	1
HARQ-ACK in response to a single scheduled transport block, detected on each of the serving and secondary serving HS-DSCH cells										
Response to transport block from serving HS-DSCH cell	Response to transport block from secondary serving HS-DSCH cell									
ACK	ACK	1	0	1	0	1	0	1	0	1
ACK	NACK	1	1	0	0	1	1	0	0	1
NACK	ACK	0	0	1	1	0	0	1	1	0
NACK	NACK	0	1	0	1	0	1	0	1	0
PRE/POST indication										

PRE		0	0	1	0	0	1	0	0	1	0
POST		0	1	0	0	1	0	0	1	0	0

CQI reports: CQI1 and CQI2

Two individual CQI reports CQI1 and CQI2 are concatenated to form the composite channel quality information. CQI1 corresponds to the serving HS-DSCH cell and CQI2 to the secondary serving cell respectively. The figure below show how the CQI report is constructed.

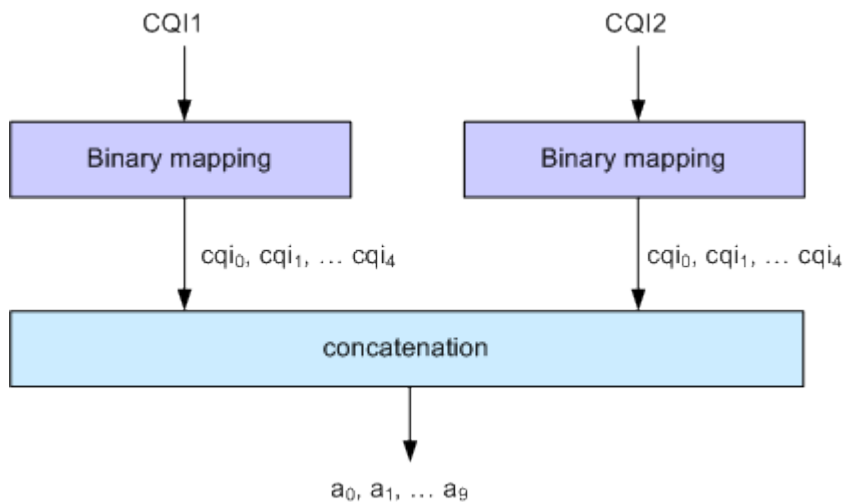


Fig. 3-13: Composite CQI information (DC-HSDPA operation, non MIMO mode)

3.1.16.2 DC-HSDPA + MIMO

Channel coding is done separately for the composite PCI/CQI and for HARQ-ACK information.

The principle is shown on figure [figure 3-9](#).

The composite PCI/CQI report is created as illustrated on figure [figure 3-10](#).

The HARQ-ACK message is coded to 10 bits according to 3GPP TS 25.212. The standard defines the HARQ-ACK coding for the feedback of the serving and secondary serving HS-DSCH cells for normal and dual stream transmission.

3.1.16.3 Dual Cell HSDPA (DC-HSDPA) Fixed Reference Channel: H-Set 12

In order to support DC-HSDPA testing, a fixed reference channel has been introduced. H-Set 12 is specified as reference test channel for HSDPA test cases.

The H-Set 12 parameterization and coding chain is based on 1 code with QPSK modulation. Six Hybrid ARQ processes are used, and HS-DSCH is continuously transmitted.

3.1.17 HS-DPCCH Extension for 4C-HSDPA and 8C-HSDPA

The 3GPP Release 11 extends the dual cell HSDPA (DC-HSDPA) transmission up to 8 cells HSDPA (8C-HSDPA). This extension basically enables the simultaneous scheduling of HSDPA transmission over 4 or 8 cells, one serving and up to three respectively up to seven secondary serving cells. The transmission on the serving cells are independent and are dynamically activated and deactivated.

For each of the cells, MIMO can be enabled. The channel coding of the feedback data transmitted via the HS-DPCCH is based on the same principle as in MIMO single cell transmission.

For detailed description on the channel coding, refer to the 3GPP specification TS 25.212.

The related instrument settings are described in [chapter 4.30, "HS-DPCCH Settings - UE"](#), on page 184.

3.1.18 Dual Cell HSUPA (Dual Cell E-DCH)

The Dual Cell HSUPA employs carrier aggregation in the uplink. The DC-HSUPA operation is available only in combination with the DC-HSDPA. This operation uses two independent carriers, each assigned to one of the DC-HSDPA "cells".

3.1.19 UE Capabilities

MIMO, 64QAM and DC-HSDPA operation in downlink as well as 16QAM in uplink are UE capability, i.e. not all UEs will have to support them.

Several UE categories have been introduced to provide:

- DL MIMO support and support of 64QAM in addition to 16QAM and QPSK in downlink
- 16QAM support in uplink
- Support of dual cell operation and MIMO

The R&S SMW supports all UE categories.

3.1.19.1 MIMO and 64QAM UE Capabilities

According to 3GPP TS25.306 V8.4.0, the following release 8 HS-DSCH categories with MIMO and 64QAM support are defined:

- Categories 13 and 14:
 - Support of 64QAM
 - No support of MIMO
 - Maximum data rate of category 14 is 21 Mbps
- Categories 15 and 16:
 - Support of MIMO with modulation schemes QPSK and 16QAM
 - No support of 64QAM
 - Maximum data rate of category 16 is 27.6 Mbps

- Categories 17 and 18:
Support of MIMO with modulation schemes QPSK and 16QAM
Support of 64QAM and MIMO, but not simultaneously
Maximum data rate of category 18 is 27.6 Mbps when MIMO is used and 21 Mbps when 64QAM is used
- Categories 19 and 20:
Simultaneous support of MIMO and all modulation schemes (QPSK, 16QAM and 64QAM)
Maximum data rate of category 20 is 42.1 Mbps

3.1.19.2 UL 16QAM UE Capabilities

According to 3GPP TS25.306 V9.5.0, the following release 8 E-DCH categories with 16QAM uplink support are defined:

- Category 7 and 9:
Support of 16QAM in addition to BPSK

3.1.19.3 MIMO and DC-HSDPA Operation UE Capabilities

According to 3GPP TS25.306 V9.0.0, the following release 9 HS-DSCH categories with MIMO and dual cell operation support are defined:

- Categories 21, 22, 23 and 24:
Support of QPSK, 16QAM and for categories 23 and 24 also 64QAM
Support of dual cell operation, but without MIMO
- Categories 25, 26, 27 and 28:
Support of QPSK, 16QAM and for categories 27 and 28 also 64QAM
Simultaneous support of MIMO and dual cell operation

3.1.19.4 Dual Cell E-DCH Operation UE Capabilities

According to 3GPP TS25.306 V9.5.0, the following release 9 E-DCH categories with Dual Cell E-DCH support are defined:

- Category 8:
Supports only QPSK in Dual Cell E-DCH operation
- Category 9:
Supports QPSK and 16QAM in Dual Cell E-DCH operation

3.1.20 Uplink discontinuous transmission (UL DTX)

Uplink discontinuous transmission (UL DTX) is one of the features of the Continuous Packet Connectivity (CPC) provided to reduce the uplink control channel overhead. UL DTX allows the UE to stop transmission of uplink DPCCH in case there is no transmission activity on E-DCH or HS-DPCCH. This is sometimes also called uplink DPCCH gating.

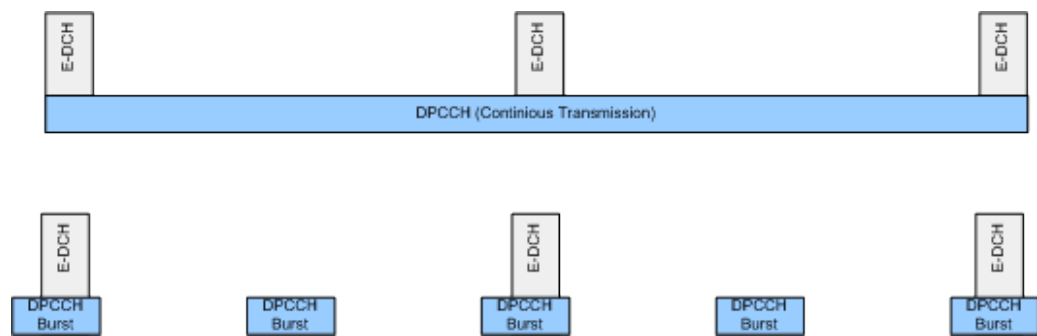


Fig. 3-14: Principle of UL-DTX

Uplink DPCCH is not transmitted continuously any more, but it is transmitted from time to time according to a known activity pattern (UE-DTX cycle). This regular activity is needed in order to maintain synchronization and power control loop. Gating is only active if there is no uplink data transmission on E-DCH or HS-DPCCH transmission ongoing. In case E-DCH or HS-DPCCH is used, the uplink DPCCH is transmitted in parallel.

The 3GPP specifications defines two patterns that can be applied to adapt the DTX cycle to the traffic conditions, the UE-DTX cycle 1 and the UE-DTX cycle 2 (see also [chapter 5.3, "Configuring UL-DTX Transmission and Visualizing the Scheduling"](#), on page 265). The UE-DTX cycle 1 is applied depending on the duration of E-DCH inactivity; the UE-DTX cycle 2 has less frequent DPCCH transmission instants and is applied whenever there is no uplink data transmission. The switching from UE-DTX cycle 1 to UE-DTX cycle 2 is determined by a configurable period of inactivity.

The transmission of control signaling on the HS-DPCCH is not affected by the UL-DTX pattern. With enabled UL-DTX, the HARQ-ACK messages and the CQI reporting remains unchanged and the UE transmits acknowledgment according to the HARQ-ACK pattern, regardless of the UL-DTX cycle. Transmission of control signals does not cause switching from UE-DTX cycle 2 to UE-DTX cycle 1.

A preamble and postamble are added to the DPCCH burst for synchronisation reasons. The length of the uplink DPCCH preamble and postamble depend whether the DPCCH burst transmission is caused by user-data transmission on the E-DCH or control signaling on the HS-DPCCH.

- for the E-DCH transmission
During the UE-DTX cycle 1, the DPCCH transmission starts two slots prior to the start of E-DPDCH and terminates one slot after it. For the UE-DTX cycle 2, an extended preamble of up to 15 slots is applied.
- for the HS-DPCCH transmission
The preamble length depends whether an HARQ-ACK or CQI report is transmitted. Two slots are applied for the HARQ-ACK case (unless an HARQ preamble PRE is transmitted) and three in case of CQI reporting. For the latter case, an extended preamble may be applied too.
The DPCCH transmission terminates at the end of the first full DPCCH slot after the end of the HARQ-ACK/CQI field.

An instrument equipped with the required options provided an UL-DTX functionality, that is fully compliant with 3GPP TS 25.214. All dependencies from E-DCH transmis-

sions, HARQ-ACK transmissions or CQI transmissions on the DPCCH are respected. The corresponding settings are described in [chapter 4.25, "UL-DTX/User Scheduling - UE"](#), on page 162.



Use the [Scheduling List](#) to display the UL-DTX burst pattern and transmissions of E-DCH and HS-DPCCH, as well as the impact on the UL-DPCCH transmissions or the configured uplink user scheduling.

Refer to [chapter 5.3, "Configuring UL-DTX Transmission and Visualizing the Scheduling"](#), on page 265 for an example on how to use the UL-DTX function.

3.1.21 Uplink User Scheduling

The R&S SMW supports uplink user scheduling in Baseband A/B.

The uplink user scheduling is a function that enables you to flexible configure the scheduling of the uplink transmission. The instrument provides an interfaces for loading of externally created XML-like files with predefined file structure. The corresponding settings are described in [chapter 4.25, "UL-DTX/User Scheduling - UE"](#), on page 162

Inter-dependencies

- The UL-DTX and the User Scheduling functions excludes each other and cannot be activated simultaneously.
- The uplink scheduling information is processed in real time and this feature can be enabled together with the "Dynamic Power Control". All UE1 channels can be power controlled.
- With enabled "User Scheduling", the value of the parameter [Power Reference](#) is fixed to "First DPCCH".
- Activated "User Scheduling" limits the number of E-DPDCH physical channel configurations. The "Overall Symbol Rates = 2x960 ksps, 2x1920 ksps and 2x960 + 2x1920 ksps" are not allowed. ¹⁾
- The features uplink user scheduling and the internal E-DCH channel coding excludes each other. ²⁾
- A PRACH preamble cannot be directly scheduled in the user scheduling file, because the user scheduling is enabled in the "DPCCH+DPDCH" mode. ³⁾



Some possible workaround approaches

- 1) To generate a signal with "Overall Symbol Rates = 2x960 ksps, 2x1920 ksps and 2x960 + 2x1920 ksps", enable two Baseband blocks to generate the corresponding "I only" and "Q only" channels and combine the outputs of the two Basebands. The resulting composite signal comprises the physical channel configuration according to the specifications.
- 2) If channel coded data in the E-DCH is required, consider the use of pre-channel-coded data lists as data source for the physical E-DPDCH channel.
- 3) Enable a PRACH preamble for UE2, configure the required user scheduling for UE1 and "delay" the beginning of the UE1 transmission (use the commands with parameters `slot="0"` and `action="DPCCH_OFF"`, `"DPDCH_OFF"` and `"EDCH_OFF"`)

File Structure

Files with user scheduling information use the predefined file extension `*.3g_sch` and follow a predefined file structure. To explain the file structure, the following simple scheduling example is used:

```
<?xml version="1.0"?>
<SMxScheduling>
<head type="3GPP FDD" subtype="Uplink User Scheduling" Version="1" />
  <!-- Comment -->
  <command slot="0" action="DPCCH_OFF" />
  <command slot="15" action="DPCCH_ON" />
</SMxScheduling>
```

The highlighted lines are mandatory and must not be changed. The user scheduling is performed with the `<command>` tag. The [table 3-18](#) describes the tag structure. All parameters of this tag are mandatory.

Table 3-18: Structure of tag `<command>`

Parameter name	Value Range	Description
<code><slot></code>	0 to 3749	Value range deviates in the following cases: <ul style="list-style-type: none"> • for <code><action="EDCH_TTIS"></code> the <code><slot></code> must be a multiple of 15 (changes in the E-DCH TTI size are allowed only at the beginning of a 3GPP frame) • for <code><action="REPEAT"></code> the <code><slot></code> must be a multiple of 15 and within the value range 15 to 3750.
<code><action></code>	DPCCH_OFF	Disables DPCCH transmission starting from the beginning of the specified slot
	DPCCH_ON *	Enables DPCCH transmission starting from the beginning of the specified slot
	DPDCH_OFF	Disables DPDCH transmission starting from the beginning of the specified slot

Parameter name	Value Range	Description
	DPDCH_ON *	Enables DPDCH transmission starting from the beginning of the specified slot. The DPDCH must be activated with the corresponding settings in the instrument's user interface, see State (DPDCH) .
	EDCH_OFF	Disables E-DCH transmission (i.e. the transmission in the E-DPCCH and E-DPDCH physical channels) starting from the beginning of the specified slot.
	EDCH_ON *	Enables E-DCH transmission starting from the beginning of the specified slot. The E-DPCCH and/or the E-DPDCH must be activated in the instrument's user interface, see State (E-DPCCH) and State (E-DPDCH) . This <action> affects only the currently active channels (E-DPCCH and/or E-DPDCH).
	EDCH_TTIS	Determines the TTI size of all E-DCH transmissions starting from the beginning of the specified slot.
	EDCH_ETFCI	Determines the E-TFCI (Transport Block Size Index) of all subsequent E-DCH transmissions. The change of the E-TFCI applies always at the beginning of the next E-DCH TTI, i.e. the E-TFCI cannot be changed during an ongoing E-DCH TTI.
	DYNPC_OFF	Disables the dynamic power control starting from the beginning of the specified slot.
	DYNPC_ON **	Enables the dynamic power control starting from the beginning of the specified slot, i.e. the instrument applies changes in the channel transmit powers starting from the specified slot. The dynamic power control must be activated with the corresponding settings in the instrument's user interface, see Dynamic Power Control State .
	REPEAT	Performs a loop in the action's sequence and repeats all prior defined actions starting from the beginning of the specified slot. The repetition periodicity of the user scheduling is determined by the <slot> value. If <action="REPEAT"> is omitted, the instrument follows the defined user scheduling sequence once. Note: The <action="REPEAT"> causes a repetition of the scheduling commands, but not necessarily guarantee an identical signal. For example, long data lists are not restarted and the effects of former dynamic power control commands still persist, even after the sequence is looped.
ttis	2 10	For <action="EDCH_TTIS">, determines the TTI size (2 ms or 10 ms)
etfci	0 to 127	For <action="EDCH_ETFCI">, determines the E-TFCI

*) The instrument schedules DPCCH/DPDCH/E-DCH transmissions by default, unless an <action="DPCCH_OFF">, <action="DPDCH_OFF"> and/or <action="EDCH_OFF"> is scheduled.

**) If dynamic power control is activated in the user interface, the instrument applies the power control by default, unless an <action="DYNPC_OFF"> is scheduled.

**Scheduling Example**

Refer to [chapter 5.4, "Configuring and Visualizing the Uplink User Scheduling"](#), on page 267 for an example on how to use the user scheduling function.

3.2 Routing and enabling an external control signal



The R&S SMW uses a flexible signal to connector mapping concept. In the default instrument state, the local T/M 3 and the globally shared USER 6 connector are not configured as inputs of the external control signal.

To route and enable an external control signal, perform the following *general steps*:

- Define the connector type, "Global" or "Local", the external control signal is expected at.
- Use the [Local and Global Connector Settings](#) and define:
 - "Connector > Direction > Input".
 - "Connector > Signal > Feedback" to route and map the corresponding signal.
- Connect the control line to the configured connector.

In this firmware version, the "Global" connector is disabled.

4 3GPP FDD Configuration and Settings

- To access the 3GPP FDD settings, select "Baseband > 3GPP FDD".

Overview of the realtime functions that are disabled in Baseband C/D

You can access the 3GPP FDD settings in each of the baseband blocks. Consider, however, that the following realtime functions are not available in "Baseband C/D":

- UL and DL Dynamic Power Control, see [Dynamic Power Control - Enhanced DPCHs BS1](#) and [Dynamic Power Control - UE](#)
- User Scheduling, see [UL-DTX/User Scheduling - UE](#)
- Real Time HS-DPCCH, see [Compatibility Mode \(HS-DPCCH\)](#)
- HARQ Feedback, see [HARQ Simulation Settings](#)
- the HSDPA H-Set Advanced mode is permanently active, see [Advanced Mode \(requires ARB\)](#)



The 3GPP FDD dialog is extremely comprehensive. To simplify the description and the orientation through this documentation, the headings of the following section follow a common naming convention:

`<DialogName/TabName>< - ><SourceDialog>`

This common structure is intended to identify your current location in the dialog.


The remote commands required to define these settings are described in [chapter 8](#), "Remote-Control Commands", on page 348.

• General Settings for 3GPP FDD Signals	54
• Trigger Settings	56
• Marker Settings	61
• Clock Settings	64
• Local and Global Connector Settings	65
• Basestations and User Equipments Settings	66
• Test Setups/Models	72
• Predefined Settings - Downlink	75
• Additional User Equipment - Uplink	77
• Base Station Settings	79
• Compressed Mode	92
• HSDPA Settings - BS	98
• HSDPA H-Set Mode Settings - BS	102
• Enhanced Settings for P-CPICH - BS1	119
• Enhanced Settings for P-CCPCH - BS1	120
• Enhanced Settings for DPCHs - BS1	122
• S-CCPCH Settings - BS Channel Table	137
• Config AICH/AP-AICH - BS Channel Table	138
• DPCCH Settings - BS Channel Table	139
• Config E-AGCH - BS Channel Table	146
• Config E-RGCH/E-HICH - BS Channel Table	148
• Config F-DPCH - BS Channel Table	150

• Multi Channel Assistant - BS.....	154
• User Equipment Configuration (UE).....	157
• UL-DTX/User Scheduling - UE.....	162
• Dynamic Power Control - UE.....	167
• Scheduling List.....	171
• DPCCH Settings - UE.....	173
• DPDCH Settings - UE.....	179
• HS-DPCCH Settings - UE.....	184
• E-DPCCH Settings - UE.....	206
• HSUPA FRC Settings - UE.....	207
• E-DPDCH Settings - UE.....	219
• E-DCH Scheduling - UE.....	223
• Global Enhanced Channel Settings - UE1.....	226
• PRACH Settings - UE.....	235
• PCPCH Settings - UE.....	245
• Filtering, Clipping, ARB Settings.....	257

4.1 General Settings for 3GPP FDD Signals

- To access the dialog for setting the 3GPP FDD digital standard, select "Baseband > 3GPP FDD".

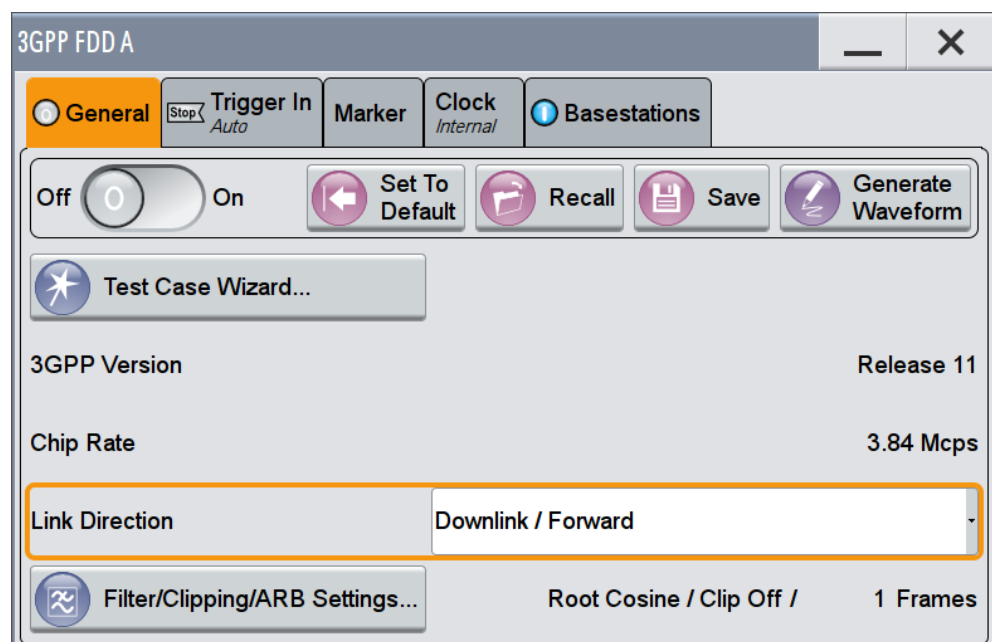

This tab comprises the standard general settings, valid for the signal in both transmission directions.

State

Activates the standard and deactivates all the other digital standards and digital modulation modes in the same path.

The instrument generates the 3GPP FDD signal as a combination of realtime mode (enhanced channels) and arbitrary waveform mode (all the other channels). The following is a more detailed list of the channels generated in **realtime**:

- *Downlink channels*: P-CCPCH and up to three DPCHs of base station 1 as well as H-Sets 1 to 5.
- *Uplink channels*: DPCCH and one DPDCH of user equipment 1.
Depending on the actual configurations, other channels of user equipment 1 may also be generated in realtime.

Generated in **arbitrary waveform mode** and added to the realtime signal are: PRACH and PCPCH channels and the channels of the other user equipments.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:STATe` on page 351

Set to default

Calls the default settings. Test Model 1 (64 channels) is preset.

The parameter "State" is not affected.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:PRESet` on page 349

Save/Recall

Accesses the "Save/Recall" dialog, i.e. the standard instrument function for storing and recalling the complete dialog related settings in a file. The provided navigation possibilities in the dialog are self-explanatory.

The file name and the directory it is stored in are user-definable; the file extension is however predefined.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:SETTing:CATalog?` on page 350

`[:SOURce<hw>] :BB:W3GPp:SETTing:LOAD` on page 350

`[:SOURce<hw>] :BB:W3GPp:SETTing:STORe` on page 351

`[:SOURce<hw>] :BB:W3GPp:SETTing:DELeTe` on page 350

Generate Waveform

With enabled signal generation, triggers the instrument to store the current settings as an ARB signal in a waveform file. Waveform files can be further processed by the ARB and/or as a multi carrier or a multi segment signal.

The file name and the directory it is stored in are user-definable; the predefined file extension for waveform files is *.wv.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:WAVEform:CREate` on page 352

Test Case Wizard

Access configuration dialog with a selection of predefined settings according to Test Cases in TS 25.141.

The provided test cases are described in [chapter 7.1, "Introduction"](#), on page 275.

Remote command:

n.a.

3GPP Version

Displays the current implemented version of the 3GPP FDD standard.

The default settings and parameters provided are oriented towards the specifications of the version displayed.

Remote command:

[:SOURce] :BB:W3GPp:GPP3:VERSion? on page 352

Chip Rate

Displays the system chip rate. This is fixed at 3.84 Mcps.

To vary the output chip rate, use the parameters in the "Filter/Clipping/ARB Settings" dialog (see [chapter 4.38, "Filtering, Clipping, ARB Settings"](#), on page 257).

Remote command:

[:SOURce<hw>] :BB:W3GPp:CRATe? on page 356

Link Direction

Selects the transmission direction. Further provided settings are in accordance with this selection.

"Downlink/
Forward Link" The transmission direction selected is base station to user equipment. The signal corresponds to that of a base station.

"Uplink/
Reverse Link" The transmission direction selected is user equipment to base station. The signal corresponds to that of user equipment.

Remote command:

[:SOURce<hw>] :BB:W3GPp:LINK on page 354

Offline Signal Generation > On

This indication appears in "Baseband C/D" to inform you that the signal generation is performed in offline.

A subset of realtime functions are not available in "Baseband C/D", see ["Overview of the realtime functions that are disabled in Baseband C/D"](#) on page 53.

Filtering/Clipping/ARB Settings

Access a dialog for setting baseband filtering, clipping and the sequence length of the arbitrary waveform component. An indication of the key parameters values is provided.

See [chapter 4.38, "Filtering, Clipping, ARB Settings"](#), on page 257 for detailed description.

Remote command:

n.a.

4.2 Trigger Settings


This tab provides an access to the settings necessary to select and configure the trigger, like trigger source, mode, trigger delay, trigger suppression, as well as to arm or trigger an internal trigger manually. The current signal generation status is displayed in the header of the tab together with information on the enabled trigger mode. As in the

"Marker" and "Clock" tabs, this tab provides also an access to the settings of the related connectors.



This section focus on the available settings.

For information on how this settings affect the signal, refer to chapter "Basics" in the R&S SMW User Manual.

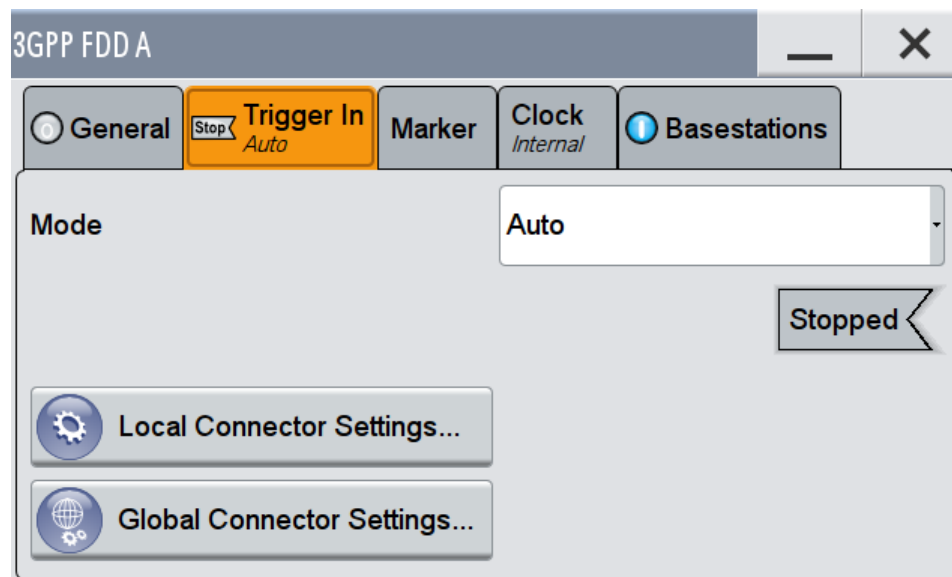

Routing and Enabling a Trigger

The provided trigger signals are not dedicated to a particular connector but can be mapped to one or more globally shared USER or local T/M/(C) connectors.

Use the [Local and Global Connector Settings](#) to configure the signal mapping as well as the polarity, the trigger threshold and the input impedance of the input connectors.

To route and enable a trigger signal, perform the following *general steps*:

- Define the signal source and the effect of a trigger event, i.e. select the "Trigger In > Mode" and "Trigger In > Source"
- Define the connector, USER or T/M/(C), the selected signal is provided at, i.e. configure the [Local and Global Connector Settings](#).

Trigger Settings Common to All Basebands

To enable simultaneous signal generation in all basebands, the R&S SMW couples the trigger settings in the available basebands in any instrument's configuration involving signal routing with signal addition (e.g. MIMO configuration, routing and summing of basebands and/or streams).

The icon indicates that common trigger settings are applied.

You can access and configure the common trigger source and trigger mode settings in any of the basebands. An arm or a restart trigger event applies to all basebands, too.

You can still apply different delay to each of the triggers individually.

Trigger Mode ← Trigger Settings Common to All Basebands

Selects trigger mode, i.e. determines the effect of a trigger event on the signal generation.

For more information, refer to chapter "Basics" in the R&S SMW user manual.

- "Auto"
The signal is generated continuously.
- "Retrigger"
The signal is generated continuously. A trigger event (internal or external) causes a restart.
- "Armed_Auto"
The signal is generated only when a trigger event occurs. Then the signal is generated continuously.
An "Arm" stops the signal generation. A subsequent trigger event (internal with or external) causes a restart.
- "Armed_Retrigger"
The signal is generated only when a trigger event occurs. Then the signal is generated continuously. Every subsequent trigger event causes a restart.
An "Arm" stops signal generation. A subsequent trigger event (internal with or external) causes a restart.
- "Single"
The signal is generated only when a trigger event occurs. Then the signal is generated once to the length specified at "Signal Duration".
Every subsequent trigger event (internal or external) causes a restart.

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp\[:TRIGger\]:SEQuence](#) on page 365

Signal Duration Unit ← Trigger Settings Common to All Basebands

Defines the unit for describing the length of the signal sequence to be output in the "Single" trigger mode.

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:TRIGger:SLUNit](#) on page 363

Trigger Signal Duration ← Trigger Settings Common to All Basebands

Enters the length of the signal sequence to be output in the "Single" trigger mode.

Use this parameter to deliberately output part of the signal, an exact sequence of the signal, or a defined number of repetitions of the signal.

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:TRIGger:SLENgth](#) on page 362

Running/Stopped ← Trigger Settings Common to All Basebands

For enabled modulation, displays the status of signal generation for all trigger modes.

- "Running"
The signal is generated; a trigger was (internally or externally) initiated in triggered mode.
- "Stopped"

The signal is not generated and the instrument waits for a trigger event.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:TRIGger:RMODe?` on page 362

Arm ← Trigger Settings Common to All Basebands

Stops the signal generation until subsequent trigger event occurs.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:TRIGger:ARM:EXECute` on page 360

Execute Trigger ← Trigger Settings Common to All Basebands

For internal trigger source, executes trigger manually.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:TRIGger:EXECute` on page 360

Trigger Source ← Trigger Settings Common to All Basebands

The following sources of the trigger signal are available:

- "Internal"
The trigger event is executed manually by the "Execute Trigger".
- "Internal (Baseband A/B)"
The trigger event is provided by the trigger signal from the other basebands.
- "External Global Trigger 1 / 2"
The trigger event is the active edge of an external trigger signal provided and configured at the global USER connectors.
- "External Global Clock 1 / 2"
The trigger event is the active edge of an external global clock signal provided and configured at the global USER connectors.
- "External Local Trigger"
The trigger event is the active edge of an external trigger signal provided and configured at the local T/M/(C) connector.
With coupled trigger settings, the signal has to be provided at the T/M/C 1/2/3 connectors.
- "External Local Clock"
The trigger event is the active edge of an external local clock signal provided and configured at the local T/M/C connector.
With coupled trigger settings, the signal has to be provided at the T/M/C 1 connector.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:TRIGger:SOURce` on page 363


Sync. Output to External Trigger ← Trigger Settings Common to All Basebands

For an external trigger signal, enables/disables the output of a signal synchronous to the external trigger event.

"On"

Corresponds to the default state of this parameter.


The signal calculation starts simultaneously with the external trigger event but because of the instrument's processing time the first samples are cut off and no signal is output. After elapsing of the internal processing time, the output signal is synchronous to the trigger event.

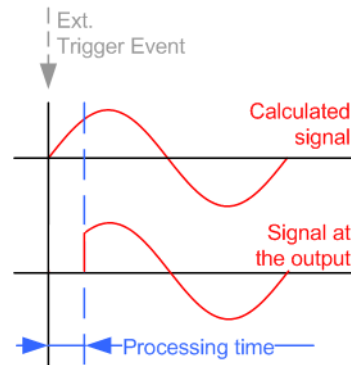

"Off"

The signal output begins after elapsing of the processing time and starts with sample 0, i.e. the complete signal is output.

This mode is recommended for triggering of short signal sequences with signal duration comparable with the processing time of the instrument.

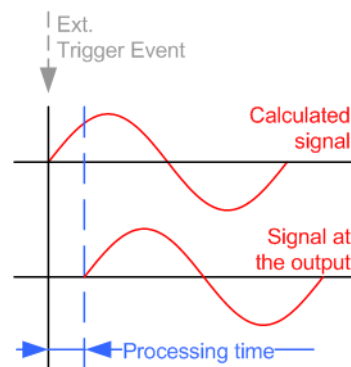

Remote command:

`[:SOURce<hw>] :BB:W3GPp:TRIGger:EXTeRnal:SYNChronize:OUTPut`
on page 360

External Trigger Inhibit ← Trigger Settings Common to All Basebands

For external trigger signal or trigger signal from the other path, sets the duration a new trigger event subsequent to triggering is suppressed. In "Retrigger" mode for example, a new trigger event will not cause a restart of the signal generation until the specified inhibit duration does not expire.

For more information, see chapter "Basics" in the R&S SMW User Manual.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:TRIGger[:EXTeRnal]:INHibit` on page 365
`[:SOURce<hw>] :BB:W3GPp:TRIGger:OBASeband:INHibit` on page 361

Trigger Delay

Delays the trigger event of the signal from:

- the external trigger source
- the other path
- the other basebands (internal trigger), if common trigger settings are used.

Use this setting to:

- synchronize the instrument with the device under test (DUT) or other external devices
- postpone the signal generation start in the basebands compared to each other

For more information, see chapter "Basics on ..." in the R&S SMW User Manual.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:TRIGger [:EXTeRnal] :DELay` on page 364

`[:SOURce<hw>] :BB:W3GPp:TRIGger:OBASeband:DELay` on page 361


4.3 Marker Settings

This tab provides an access to the settings necessary to select and configure the marker output signal, like the marker mode or marker delay settings.



This section focus on the available settings.

For information on how this settings affect the signal, refer to chapter "Basics" in the R&S SMW User Manual.

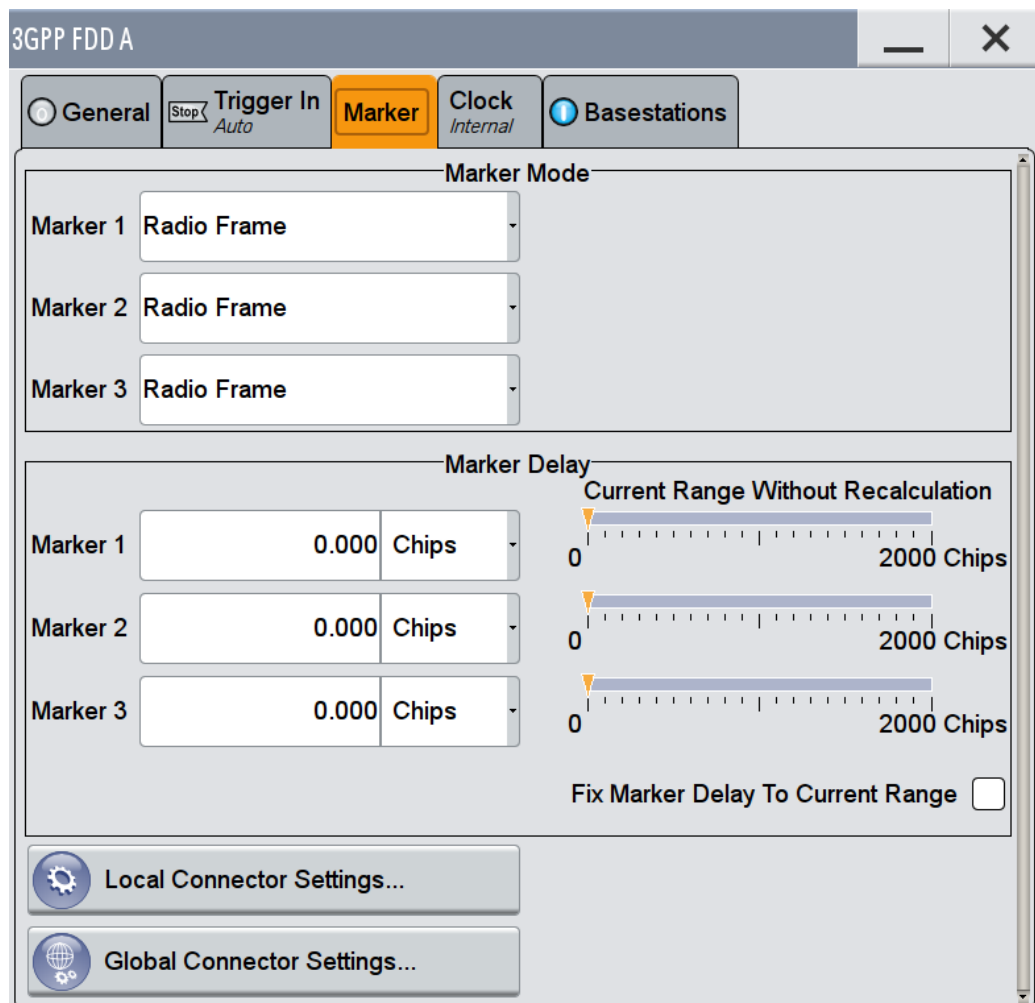

Routing and Enabling a Marker

The provided marker signals are not dedicated to a particular connector but can be mapped to one or more globally shared USER or local T/M/(C) connectors.

To route and enable a marker signal, perform the following *general steps*:

- Define the shape of the generated marker, i.e. select the "Marker > Mode"
- Define the connector, USER or T/M/(C), the selected signal is output at, i.e. configure the [Local and Global Connector Settings](#).

Marker Mode

Marker configuration for up to 3 marker channels. The settings are used to select the marker mode defining the shape and periodicity of the markers. The contents of the dialog change with the selected marker mode; the settings are self-explanatory.

"Slot" A marker signal is generated at the start of each slot (every 2560 chips or 0.667 ms).

"Radio Frame" A marker signal is generated at the start of each frame (every 38400 chips or 10 ms).

"Chip Sequence Period (ARB)"

A marker signal is generated at the start of every arbitrary waveform sequence (depending on the setting for the arbitrary waveform sequence length). If the signal does not contain an arbitrary waveform component, a radio frame trigger is generated.

"System Frame Number (SFN) Restart"

A marker signal is generated at the start of every SFN period (every 4096 frames).

"ON/OFF Ratio"

A regular marker signal that is defined by an ON/OFF ratio is generated. A period lasts one ON and OFF cycle.



The ON time and OFF time are each expressed as a number of chips and are set in an input field which opens when ON/OFF ratio is selected.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:TRIGger:OUTPut<ch>:ONTime` on page 368

`[:SOURCE<hw>] :BB:W3GPp:TRIGger:OUTPut<ch>:OFFTime` on page 368

"User"

A marker signal is generated at the beginning of every user-defined "Period".

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:TRIGger:OUTPut<ch>:PERiod` on page 369

"Multi Gated"

An internally used marker signal.

Marker 2 and Marker 3 are automatically set to this value in the following configuration:

- "Link Direction > Uplink"
- "User Equipment > UE1 > On"
- "User Equipment > UL-DTX/User Scheduling > State > On"
- "UL-DTX/User Scheduling > Mode > User Scheduling"

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:TRIGger:OUTPut<ch>:MODE` on page 368

Marker x Delay

Defines the delay between the marker signal at the marker outputs relative to the signal generation start.

"Marker x"

For the corresponding marker, sets the delay as a number of symbols.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:TRIGger:OUTPut<ch>:DELay` on page 366

"Current Range without Recalculation"

Displays the dynamic range within which the delay of the marker signals can be set without restarting the marker and the signal.

Move the setting mark to define the delay.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:TRIGger:OUTPut<ch>:DELay:MAXimum?`

on page 367

`[:SOURce<hw>] :BB:W3GPp:TRIGger:OUTPut<ch>:DELay:MINimum?`

on page 367

"Fix marker delay to current range"

Restricts the marker delay setting range to the dynamic range.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:TRIGger:OUTPut:DELay:FIXed` on page 366


4.4 Clock Settings

This tab provides an access to the settings necessary to select and configure the clock signal, like the clock source and clock mode.



This section focus on the available settings.

For information on how this settings affect the signal, refer to chapter "Basics" in the R&S SMW User Manual.

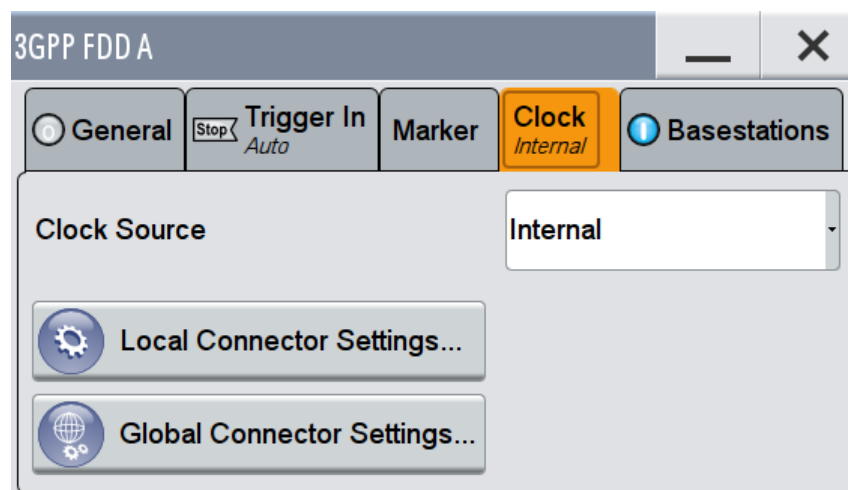



Defining the Clock

The provided clock signals are not dedicated to a particular connector but can be mapped to one or more globally shared USER and the two local T/M/C connectors.

Use the [Local and Global Connector Settings](#) to configure the signal mapping as well as the polarity, the trigger threshold and the input impedance of the input connectors.

To route and enable a trigger signal, perform the following *general steps*:

- Define the signal source, i.e. select the "Clock > Source"
- Define the connector, USER or T/M/C, the selected signal is provided at, i.e. configure the [Local and Global Connector Settings](#).

Clock Source

Selects the clock source.

- "Internal"
The instrument uses its internal clock reference.
- "External Global Clock 1/2"
The instrument expects an external clock reference at the global USER connector, as configured in the "Global Connector Settings" dialog.
- "External Local Clock"
The instrument expects an external clock reference at the local T/M/C connector.

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:CLOCK:SOURce](#) on page 370

Clock Mode

Enters the type of externally supplied clock.

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:CLOCK:MODE](#) on page 369

Chip Clock Multiplier

Enters the multiplication factor for clock type "Multiple".

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:CLOCK:MULTiplier](#) on page 369

Measured External Clock

Provided for permanent monitoring of the enabled and externally supplied clock signal.

Remote command:

[CLOCK:INPut:FREQuency?](#)

4.5 Local and Global Connector Settings


Each of the "Trigger In", "Marker" and "Clock" dialogs as well as the "Trigger Marker Clock" dialog provides a quick access to the related local and global connector settings.

For more information, refer to the description R&S SMW User Manual, section "Local and Global Connectors".


4.6 Basestations and User Equipments Settings

Depending on the selected link direction, the last tab comprises either the "Basestation" or the "User Equipment" common settings.

- "Link Direction > Downlink"

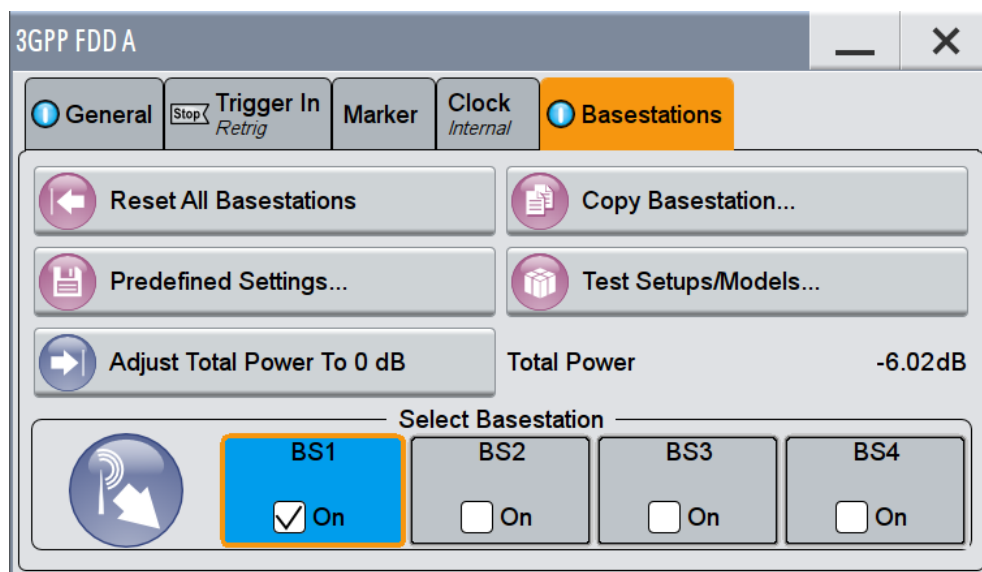

- "Link Direction > Uplink"

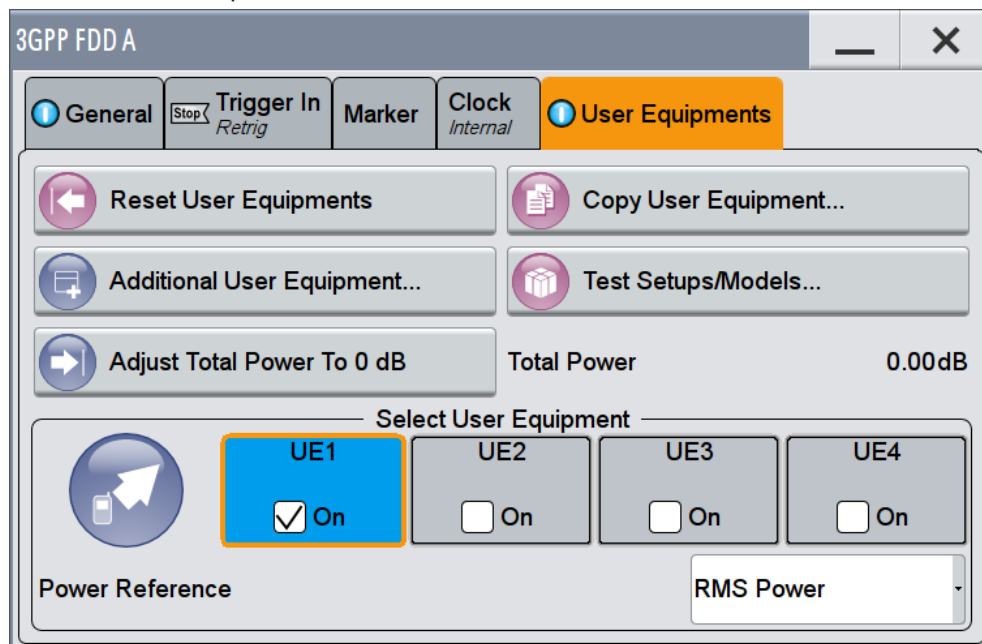

This section describes the configuration settings common for both tabs, like OCNS settings or power configuration.

4.6.1 Common Configuration Settings

The "Configure Basestations / User Equipments" tabs cover the general parameters for configuring the respective transmission direction.

Reset all Base Stations

Resets all base stations to the predefined settings. The preset value for each parameter is specified in the description of the remote-control commands.

Table 4-1: Overview of the base station predefined settings

Parameter	Value
State	Off
State (all channels)	Off
Scrambling Code	0
Slot Format DPCH	8
Symbol Rate DPCH	30 ksps
Channelization Code (all channels)	0
Data Source (all channels)	PN9
Timing Offset (all channels)	0
Multi Code State (all channels)	Off

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation:PRESet` on page 352

Reset User Equipment

Resets all user equipment to the predefined settings. The preset value for each parameter is specified in the description of the remote-control commands.

Table 4-2: Overview of the user equipment predefined settings

Parameter	Value
State	Off
Mode	DPCCH + DPDCH
Scrambling Code (hex)	0
DPCCH Settings	
Power	0 dB
DPDCH Settings	
DPDCH State	On
HS-DPCCH, E-DPCCH and E-DPDCH State	Off

Parameter	Value
Channel Power	0 dB
Overall Symbol Rate	60 ksp/s

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation:PRESet` on page 446

Copy Basestation/Copy User Equipment...

Copies the settings of a base station or user equipment to a second base or user equipment. A dialog opens for creating the destination station.

Downlink / Forward link direction

Uplink / Reverse link direction

"Copy from Source"

Selects the base station or user equipment whose settings are to be copied.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:COPY:SOURce` on page 354

"To Destination"

Selects the base station or user equipment whose settings are to be overwritten.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:COPY:DESTination` on page 353

"Channelization Code Offset (Base Station only)"

Enters the offset to be applied when copying the base station to the channelization codes of the destination base station. The minimum value is 0 (channelization codes are identical), the maximum value is 511.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:COPY:COFFset` on page 352

"Accept" Starts the copy process.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:COPY:EXECute` on page 353

Test Setups/Models

Provides an access to the test models defined in the 3GPP standard and further test setups, see [chapter 4.7, "Test Setups/Models"](#), on page 72.

Remote command:

n.a.

Predefined Settings

Access a dialog for setting predefined configurations, see [chapter 4.8, "Predefined Settings - Downlink"](#), on page 75.

Remote command:

n.a.

Additional User Equipment

Access a dialog for simulating up to 128 additional user equipments, see [chapter 4.9, "Additional User Equipment - Uplink"](#), on page 77.

Remote command:

n.a.

Select Basestation/User Equipment

Selects the base station or user equipment by pressing the accompanying block.

A dialog for editing the selected basestation or user equipment opens (see [chapter 4.10, "Base Station Settings"](#), on page 79 and [chapter 4.24, "User Equipment Configuration \(UE\)"](#), on page 157).

To activate a base station or user equipment, enable its state.

Remote command:

(the base station or user equipment is selected by the keyword index
BSTation<[1] | 2 | 3 | 4> or MSTation<i>)

[:SOURce<hw>] :BB:W3GPp:BSTation<st>:STATe on page 422

[:SOURce<hw>] :BB:W3GPp:MSTation<st>:STATe on page 448

4.6.2 General Power Settings

The power settings are enabled for "3GPP FDD > State = On".

Adjust Total Power to 0dB

Sets the power of the enabled channels so that the total power of all the active channels is 0 dB. This will not change the power ratio among the individual channels.

Remote command:

[:SOURce<hw>] :BB:W3GPp:POWer:ADJust on page 354

Total Power

Displays the total power of the active channels.

The total power is calculated from the power ratio of the powered up code channels with modulation on. If the value is not equal to 0 dB, the individual code channels (whilst still retaining the power ratios) are internally adapted so that the "Total Power" for achieving the set output level is 0 dB.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:POWer [:TOTal] ?` on page 355

Power Reference

Determines the power reference for the leveling of the output signal in uplink direction.

Parameter	Power leveling performed during	Power in "Level" display equal to	"Mode" of the first active UE
"RMS Power"	Complete signal	Output signal's mean power	<ul style="list-style-type: none"> • PRACH Standard • PRACH Preamble Only • DPCCH+DPDCH and UL-DTX Off • PCPCH Standard • PCPCH Preamble Only
"First DPCCH" "First E-DCH" "First HARQ-ACK" "First PCI/CQI"	First slot in which a DPCCH, an E-DCH, a HARQ-ACK or a PCI/CQI is transmitted in the first active UE	Output signal's mean power during the first active DPCCH Note: if there are other UEs or channels active during the reference slot, the total power is used as a reference, not only the DPCCH power. This mode is required if the UL-DTX is enabled, due to the long signal parts of inactivity.	<ul style="list-style-type: none"> • DPCCH+DPDCH and UL-DTX On • DPCCH+DPDCH and UL-DTX Off
"PRACH Message Part"	PRACH Message Part of the first active UE	Output signal's mean power during the PRACH Message Part	PRACH Standard
"Last PRACH Preamble"	Last PRACH preamble of the first active UE	Output signal's mean power during the last PRACH preamble	<ul style="list-style-type: none"> • PRACH Standard • PRACH Preamble Only

Example:

- "RF Level" = -10 dBm (value displayed in the status bar of the instrument)
- DPCCH is activated
- E-DPCCH and one E-DPDCH are activated in the first subframe of each frame

The [figure 4-1](#) displays the power versus time for "Power Reference = First DPCCH": the signal level in the first subframe is -10 dBm; the RMS power of the signal is -13.3 dBm.

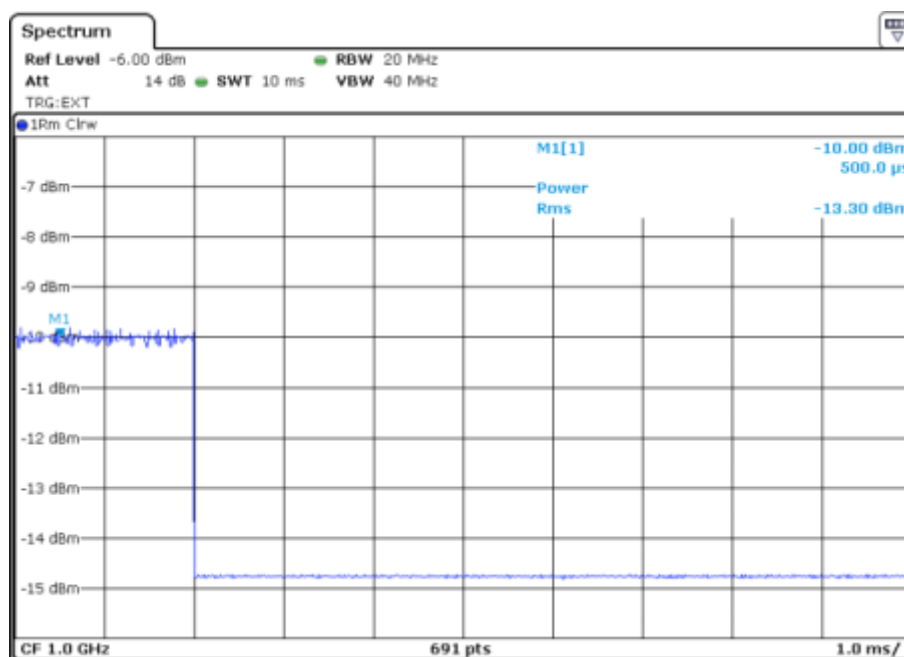


Fig. 4-1: Example: Power Reference = First DPCCH

The figure 4-2 displays the power versus time for "Power Reference = RMS": the RMS power of the signal is -10 dBm; the signal level in the first subframe is -6.7 dBm

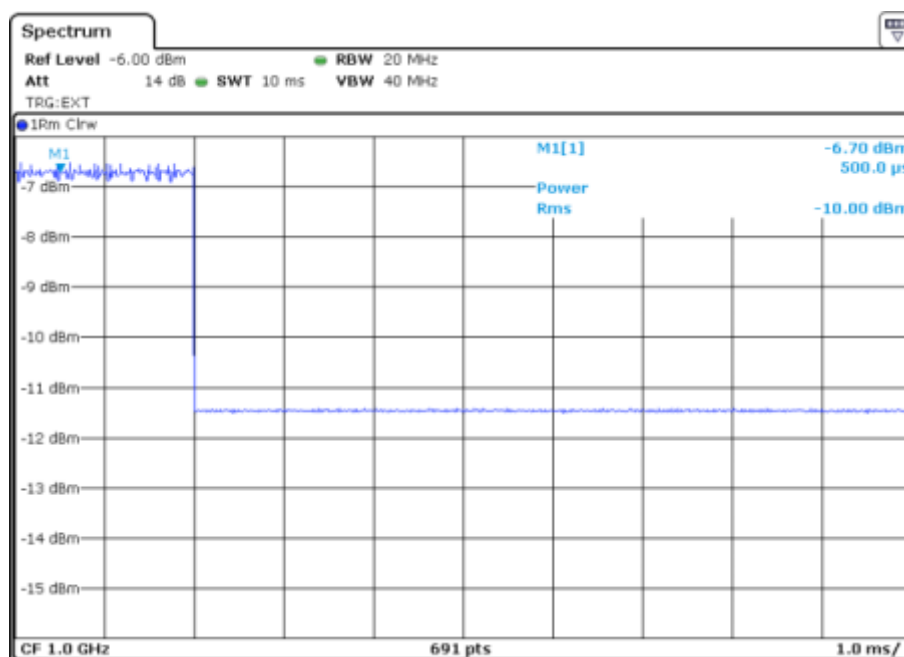


Fig. 4-2: Example: Level Reference = RMS

Remote command:

[:SOURce<hw>] :BB:W3GPp:LREference on page 449


4.7 Test Setups/Models

- To access the dialog, select "3GPP FFD > Basestation/User Equipment > Test Setup/Models"

The dialog offers various test models, depending on the selected transmission direction. The presetting is defined in the 3GPP standard TS 25.141.

Test Models Downlink

Access a list of test models in accordance with the 3GPP standard TS 25.141.

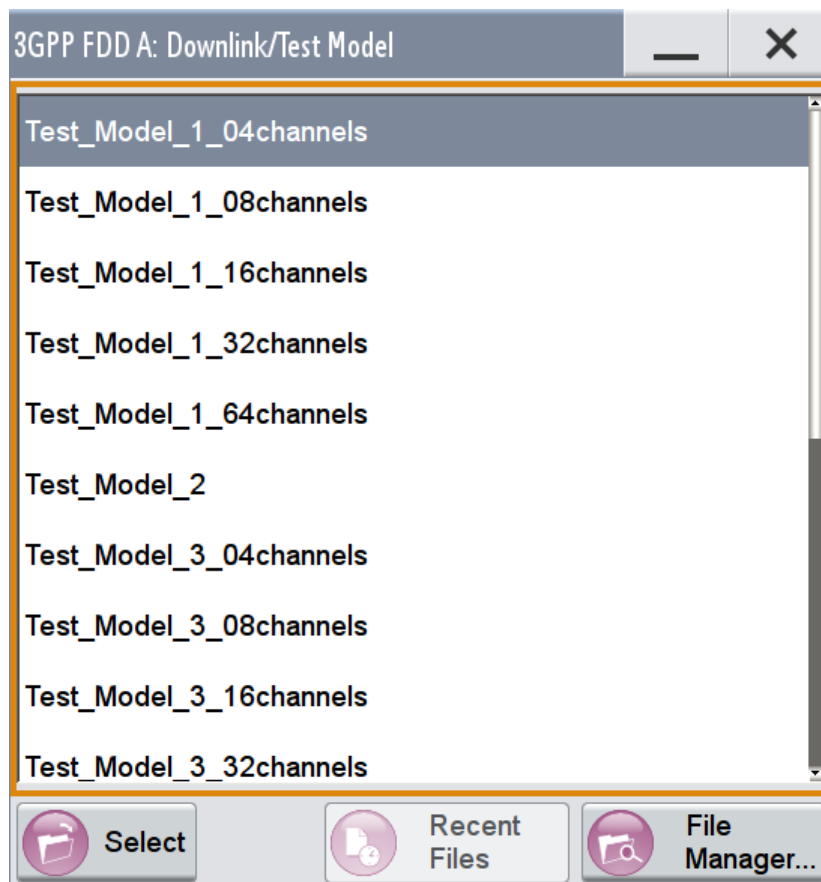

Selecting a test model for an active base station immediately generates the selected signal configuration.

The [table 4-3](#) gives an overview of the available test models.

Table 4-3: Test Models Downlink

Test Model	Description
"Test Model 1 (4/8 channels)"	Test models for Home BS <ul style="list-style-type: none"> • Spectrum emission mask • ACLR • Spurious emissions • Transmit intermodulation • Modulation accuracy • Peak code domain error
"Test Model 1 (16/32/64 channels)"	<ul style="list-style-type: none"> • Spectrum emission mask • ACLR • Spurious emissions • Transmit intermodulation • Modulation accuracy • Peak code domain error
"Test Model 2"	Output power dynamics
"Test Model 3 (4/8 channels)"	Peak code domain error test models for Home BS
"Test Model 3 (16/32 channels)"	Peak code domain error
"Test Model 4"	Error Vector Magnitude, optional P-CPICH is not active
"Test Model 4 (CPICH)"	Error Vector Magnitude, optional P-CPICH is active.
"Test Model 5 (4 HS-PDSCH + 4 DPCH)"	Error Vector Magnitude test models for Home BS at base stations that support high speed physical downlink shared channels with 16 QAM
"Test Model 5 (8 HS-PDSCH + 30 DPCH)" "Test Model 5 (4 HS-PDSCH + 14 DPCH)" "Test Model 5 (2 HS-PDSCH + 6 DPCH)"	Error Vector Magnitude at base stations that support high speed physical downlink shared channels with 16 QAM
"Test Model 6_04_4channels"	Relative Code Domain Error test models for Home BS only applicable for 64QAM modulated codes.
"Test Model 6_30_8channels"	Relative Code Domain Error only applicable for 64QAM modulated codes.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:SETTing:TMODeL:BSTation:CATalog?`
on page 374


`[:SOURCE<hw>] :BB:W3GPp:SETTing:TMODeL:BSTation` on page 373

Test Models Uplink

Access the predefined test signals.

The 3GPP has not defined any test models for the Uplink transmission direction. This implementation however, provides a list of useful test signals and enables you to quickly generate an uplink signal.

This instrument generates the Uplink test models in the enhanced state of user equipment 1. An exception are the test models for the E-DPCCH and E-DPDCH, these channels are not calculated in realtime. The sequence length is not changed.

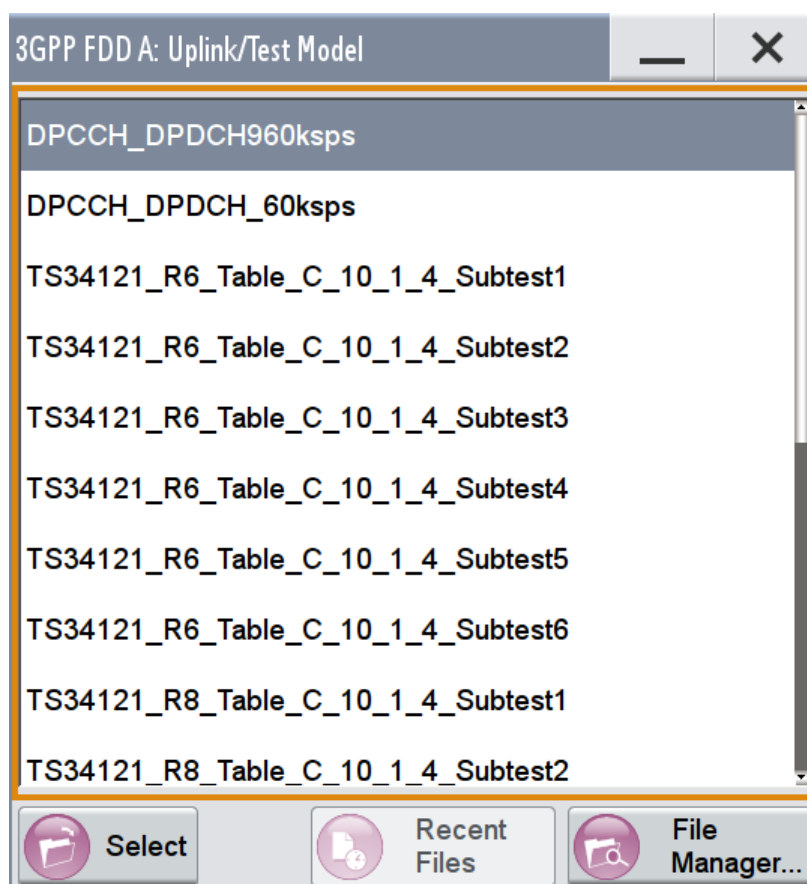

The following table lists some examples of configurations available for selection.

Table 4-4: Test Models Uplink

Test Model	Description
"DPCCH + DPDCH 60 kps"	User equipment 1 is activated in DPCCH + DPDCH mode. 60 kps is selected as the overall symbol rate. All the other settings correspond to the preset setting.
"DPCCH + DPDCH 960 kps"	User equipment 1 is activated in DPCCH + DPDCH mode. 960 kps is selected as the overall symbol rate. All the other settings correspond to the preset setting.
"TS34121_R6_Table_C_10_1_4_Subset1 .. 6"	Uplink test model according to 3GPP TS 34.121 Release 6, Table C.10.1.4.
"TS34121_R8_Table_C_10_1_4_Subset1 .. 4"	Uplink test models for transmitter characteristics tests with HS-DPCCH according to 3GPP TS 34.121 Release 8, Table C.10.1.4.

Test Model	Description
"TS34121_R8_Table_C_11_1_3_Subset1 .. 5"	Uplink test models for transmitter characteristics tests with HS-DPCCH and E-DCH according to 3GPP TS 34.121 Release 8, Table C.11.1.3.
"TS34121_R8_Table_C_11_1_4_Subset1"	Uplink test model for transmitter characteristics tests with HS-DPCCH and E-DCH with 16QAM according to 3GPP TS 34.121 Release 8, Table C.11.1.4.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:SETTing:TMODe1:MSTation:CATalog?`

on page 375

`[:SOURce<hw>] :BB:W3GPp:SETTing:TMODe1:MSTation` on page 374

4.8 Predefined Settings - Downlink

With the "Predefined Settings" function, it is possible to create highly complex scenarios with just a few modifications. This function is of use if, say, just the envelope of the signal is of interest.

1. To access this dialog, enable "3GPP FDD > Link Direction > Downlink"

2. Select "Basestation > Predefined Settings"

3GPP FDD A: Predefined Settings

Use Channels needed for Sync of Mobile (UE):
P-CPICH,P-SCH,S-SCH,PCCPCH ☐

Use S-CCPCH ☐

Symbol Rate S-CCPCH 30 ksps

Number Of DPCH 10

Symbol Rate DPCH 30 ksps

Crest Factor Minimum

☒ Accept

The channel table of base station 1 is filled (preset) with the set parameters. The sequence length of the generated signal is 1 frame.

Use Channels

Selects if P-CPICH, P-SCH, S-SCH and PCCPCH are used in the scenario or not. These "special channels" are required by user equipment for synchronization.

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:PPARameter:SCHannels](#) on page 373

Use S-CCPCH

Selects if S-CCPCH is used in the scenario or not.

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:PPARameter:SCCPch:STATe](#) on page 373

Symbol Rate S-CCPCH

Sets the symbol rate of S-CCPCH.

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:PPARameter:SCCPch:SRATe](#) on page 372

Number of DPCH

Sets the number of activated DPCHs.

The maximum number is the ratio of the chip rate and the symbol rate (maximum 512 at the lowest symbol rate of 7.5 ksps).

Remote command:

`[:SOURce<hw>] :BB:W3GPp:PPARameter:DPCH:COUNT` on page 372

Symbol Rate DPCH

Sets the symbol rate of all DPCHs.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:PPARameter:DPCH:SRATe` on page 372

Crest Factor

Selects desired range for the crest factor of the test scenario. The crest factor of the signal is kept in the desired range by automatically setting appropriate channelization codes and timing offsets.

"Minimum"	The crest factor is minimized. The channelization codes are distributed uniformly over the code domain. The timing offsets are increased by 3 per channel.
"Average"	An average crest factor is set. The channelization codes are distributed uniformly over the code domain. The timing offsets are all set to 0.
"Worst"	The crest factor is set to an unfavorable value (i.e. maximum). The channelization codes are assigned in ascending order. The timing offsets are all set to 0.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:PPARameter:CRESt` on page 371

Accept

Presets the channel table of basestation 1 with the parameters defined in the Predefined Settings menu. Scrambling Code 0 is automatically selected (as defined in the 3GPP test models).

Remote command:

`[:SOURce<hw>] :BB:W3GPp:PPARameter:EXECute` on page 372

4.9 Additional User Equipment - Uplink

1. To access this dialog, enable "3GPP FDD > Link Direction > Uplink"

- In the "User Equipment" tab , select "Additional User Equipment"

3GPP FDD A: Add UE (Based On UE4)

State ☒ On

Number of additional UE

Scrambling Code Step

Power Offset dB

Time Delay Step Chips

The dialog allows you to simulate up to 128 additional user equipment and thus to generate a signal that corresponds to the received signal for a base station with high capacity utilization.

The fourth user equipment (UE4) serves as a template for all other stations.

The following parameters are the only ones modified for the additional user equipment:

- Scrambling code (different for all stations)
- Power (different to UE4, but identical among themselves)

State

Enables/disables all additional user equipment.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ADDITIONal:STATe` on page 446

Number of Additional UE

Sets the number of additional user equipment. As many as 128 additional user equipments can be simulated.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ADDITIONal:COUNt` on page 444

Scrambling Code Step

Enters the step width for increasing the scrambling code of the additional user equipment. The start value is the scrambling code of UE4.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ADDITIONal:SCODE:STEP` on page 445

Power Offset

Sets the power offset of the active channels of the additional user equipment to the power outputs of the active channels of UE4.

The resultant power must fall within the range 0 dB to - 80 dB. If the value is above or below this range, it is limited automatically.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation:ADDITIONal:POWer:OFFSet`
on page 445

Time Delay Step

Enters the step width for the time delay of the additional user equipment to one another. The start value returns the time delay of UE4. Entry is made in chips and can be a maximum of 1 frame.

The time delay allows user equipment to be simulated even if the arrival of their signals is not synchronized at the base station.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation:ADDITIONal:TDElay:STEP` on page 446

4.10 Base Station Settings


Base stations can be configured independently of one another. Base station 1 (BS1) also includes enhanced channels (Enhanced Channels, Realtime).

1. To access the base station settings, select "3GPP FDD > Link Direction > Down-link / Forward".
2. Select "Basestation > BS 1/2/3/4".

The "Basestation" dialog provides the parameters for configuring the general settings of the base station, specific base station related settings, as well as the channel table with graphical display of the structure of the currently selected channel.

4.10.1 Common Settings

- Select "Common".

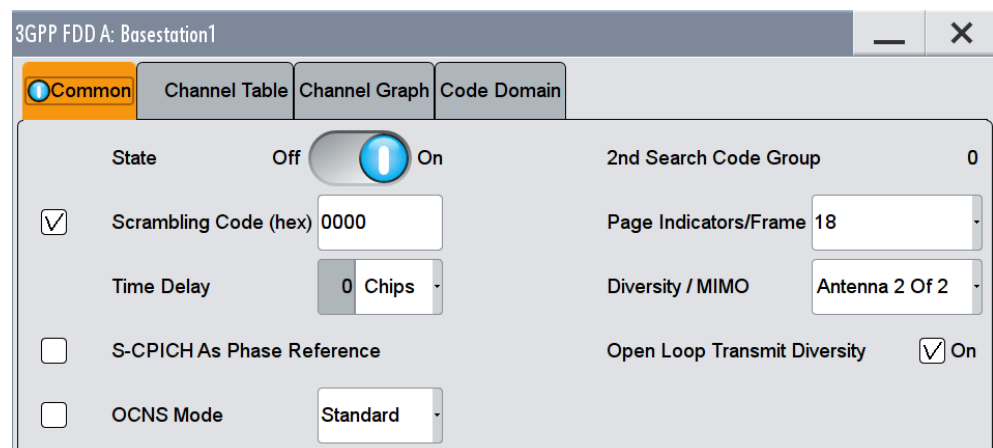

This tab comprises the general parameters required for configuring the basestation.

State

Activates or deactivates the selected base station.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:STATe` on page 422

2nd Search Code Group

Displays the 2nd search code group.

This parameter is specified in the table defined by the 3GPP standard "Allocation of SSCs for secondary SCH". This table assigns a specific spreading code to the synchronization code symbol for every slot in the frame. The value is calculated from the scrambling code.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:SSCG?` on page 421

Scrambling Code

Activates the scrambling code and sets the base station identification.

This value is also the initial value of the scrambling code generator (see [chapter 3.1.1, "Scrambling Code Generator"](#), on page 21).

The scrambling code can be deactivated for test purposes.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:SCODE:STATe` on page 421

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:SCODE` on page 421

Page Indicators/Frame

Enters the number of page indicators (PI) per frame in the page indicator channel (PICH).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:PINDicator:COUNT` on page 420

Time Delay

(This feature is enabled for BS 2...4 only.)

Sets the time delay of the signal of the selected base station compared to the signal of base station 1.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:TDElay` on page 422

Diversity / MIMO

Selects the antenna and the antenna configuration to be simulated.

The R&S SMW supports two antenna configurations: a single-antenna system and a two-antenna system. Thus, an instrument equipped with two paths can simulate simultaneously the signals of both antennas of one two-antenna system. Moreover, for this two-antenna system, transmit diversity can be additionally activated or deactivated.

To simulate transmit diversity, a two-antenna system has to be selected and "Open Loop Transmit Diversity" has to be activated.

To configure HS-PDSCH MIMO channels, a two-antenna system has to be selected.

"Single Antenna"

The signal of single-antenna system is calculated and applied.

"Antenna 1 of 2"

Calculates and applies the output signal for antenna 1 of a two-antenna system.

"Antenna 2 of 2"

Calculates and applies the output signal for antenna 2 of a two-antenna system.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:TDIVersity` on page 422

S-CPICH as Phase Reference

Activates or deactivates the use of S-CPICH as reference phase.

If activated the phase of S-CPICH and the phase of all DPCHs is 180 degrees offset from the phase of P-CPICH.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:SCPich:PREference [:STATe]`
on page 421

Open Loop Transmit Diversity

(Enabled for two-antenna system only)

Activates/deactivates open loop transmit diversity. The antenna whose signal is to be simulated is selected with the parameter "Diversity/MIMO".

Various forms of transmit diversity are described in the 3GPP standard. Different coding is used to divide the signal between the two antennas. As a result, the receiver can decode the traffic signal from the two input signals and is less liable to fading and other interferences.

A fixed diversity scheme is assigned to each channel type:

- TSTD (time switched transmit diversity for SCH) for P-SCH, S-SCH
- STTD (space time block coding transmit antenna diversity) for all other channels, except HS-PDSCH MIMO.

The HS-PDSCH MIMO channels are precoded as described in [chapter 3.1.15, "MIMO in HSPA+"](#), on page 36.

These two schemes are described in detail in TS 25.211.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:TDIVersity` on page 422

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:OLTDiversity` on page 420

4.10.2 Orthogonal Channel Noise (OCNS) Settings

With Orthogonal Channel Noise, a practical downlink signal is generated to test the maximum input levels of user equipment in accordance with standard specifications.

This simulates the data and control signals of the other orthogonal channels in the downlink. 3GPP TS 25.101 contains a precise definition of the required appearance of the OCNS signal.

This section describes the provided settings. For detailed information, see [chapter 3.1.11, "Orthogonal Channel Noise \(OCNS\)"](#), on page 29.

OCNS On

Activates OCNS channels according to the definition in the 3GPP standard, in BS 1.

Different OCNS scenarios are defined in the 3GPP standard. Set the scenario by means of the parameter [OCNS Mode](#).

When activating OCNS and depending on the selected OCNS mode, different channel groups with different presetting are assigned, see tables in [chapter 3.1.11, "Orthogonal Channel Noise \(OCNS\)"](#), on page 29. These channels cannot be edited in the channel table.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation:OCNS:STATE` on page 375

OCNS Mode

Chooses the scenario for activating OCNS channels.

Four different OCNS scenarios are defined in the standard; one "standard" scenario, two scenarios for HSDPA test cases and one scenario for type 3i enhanced performance requirements tests according to 3GPP TS34.121-1 ("other user's channels"). For an overview of the provided scenarios and their settings, refer to [chapter 3.1.11, "Orthogonal Channel Noise \(OCNS\)"](#), on page 29.

Note: If the "3i" OCNS mode is activated (and the "3GPP FDD > State > On"), the OCNS channels are automatically leveled in order to have a total power of 0 dB for all channels of BS 1.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation:OCNS:MODE` on page 376

OCNS Seed

In "OCNS mode > 3i", sets the seed for both the random processes, the power control simulation process and the process controlling the switch over of the channelization codes.

Remote command:


`[:SOURCE<hw>] :BB:W3GPp:BSTation:OCNS:SEED` on page 376

4.10.3 Channel Table

The channel table allows you to configure the individual channel parameters. The structure of the currently selected channel is displayed graphically in the table header.

1. To access the basestation channel table, select "3GPP FDD > Link Direction > Downlink / Forward".
2. Select "Basestation > BS 1/2/3/4".

3. Select "Channel Table".

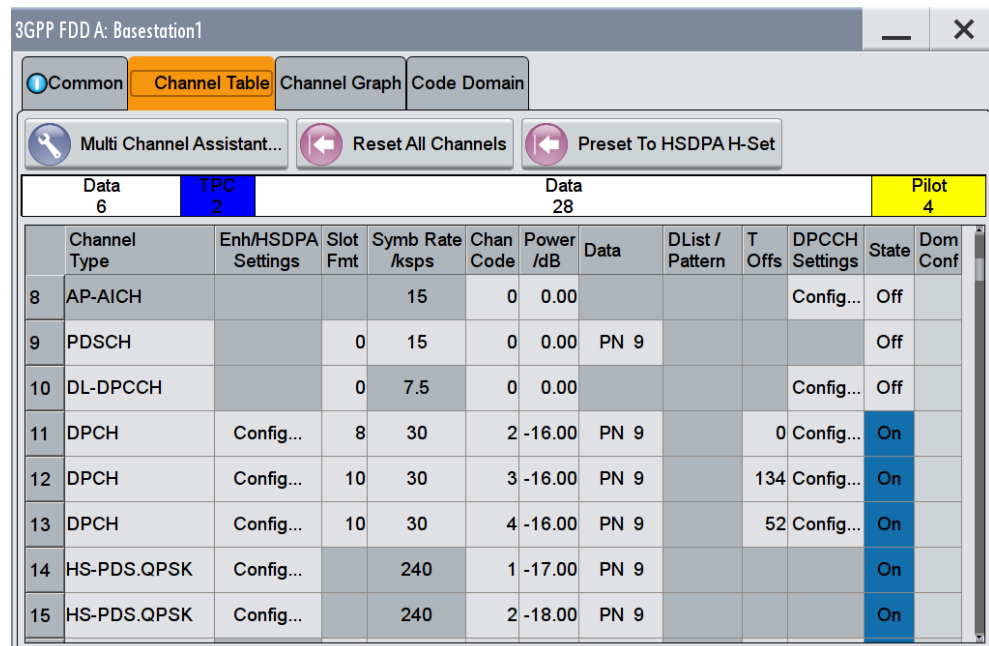

3GPP FDD A: Basestation1												
Common Channel Table Channel Graph Code Domain												
Multi Channel Assistant... Reset All Channels Preset To HSDPA H-Set												
Data 6		TPC 2		Data 28							Pilot 4	
	Channel Type	Enh/HSDPA Settings	Slot Fmt	Symb Rate /ksps	Chan Code	Power /dB	Data	DList / Pattern	T Offs	DPCCH Settings	State	Dom Conf
8	AP-AICH			15	0	0.00				Config...	Off	
9	PDSCH		0	15	0	0.00	PN 9				Off	
10	DL-DPCCH		0	7.5	0	0.00				Config...	Off	
11	DPCH	Config...	8	30	2	-16.00	PN 9		0	Config...	On	
12	DPCH	Config...	10	30	3	-16.00	PN 9		134	Config...	On	
13	DPCH	Config...	10	30	4	-16.00	PN 9		52	Config...	On	
14	HS-PDS.QPSK	Config...		240	1	-17.00	PN 9				On	
15	HS-PDS.QPSK	Config...		240	2	-18.00	PN 9				On	

The channel table contains a list of all channels available for a base station, and the associated parameters required for configuring the channel.

139 channels are available for each base station. Channels 0 to 10 are assigned to the special channels, with the allocation of channels 0 to 8 being fixed. Channels 9 and 10 can be assigned a PDSCH, a DL-DPCCH, an HS-SCCH, an E-AGCH, an E-RGCH, or an E-HICH.

Code channels 11 to 138 can either be assigned a DPCH, an HS-SCCH, an HS-PDSCH (QPSK), an HS-PDSCH (16QAM), an HS-PDSCH (64QAM), an HS-PDSCH (MIMO), an E-AGCH, an E-RGCH, an E-HICH, or an F-DPCH (see also [table 1-1](#)). This makes it possible to simulate the signal of a base station that supports high-speed channels.

Channels 4 and 11 to 13 of base station 1 can be generated in realtime (enhanced channels) and are highlighted in color. User-definable channel coding can be activated for these channels. Bit and block errors can be simulated and data can be added to the data and TPC fields from data lists either at the physical level or in the transport layer.

At the physical level, a downlink DPCH consists of the DPDCH (Dedicated Physical Data Channel) and the DPCCH (Dedicated Physical Control Channel); the channel characteristics are defined by the symbol rate. The DPDCH transports the user data that is fed directly into the data field.

The DPCCH transports the control fields, i.e. TFCI (Transport Format Combination Indicator), TPC (Transmit Power Control) and Pilot field. DPDCH is grouped with DPCCH using time division multiplexing in accordance with 3GPP TS 25.211 (see [figure 4-3](#)). The formation of a downlink reference measurement channel is described in [chapter 4.16, "Enhanced Settings for DPCHs - BS1"](#), on page 122.

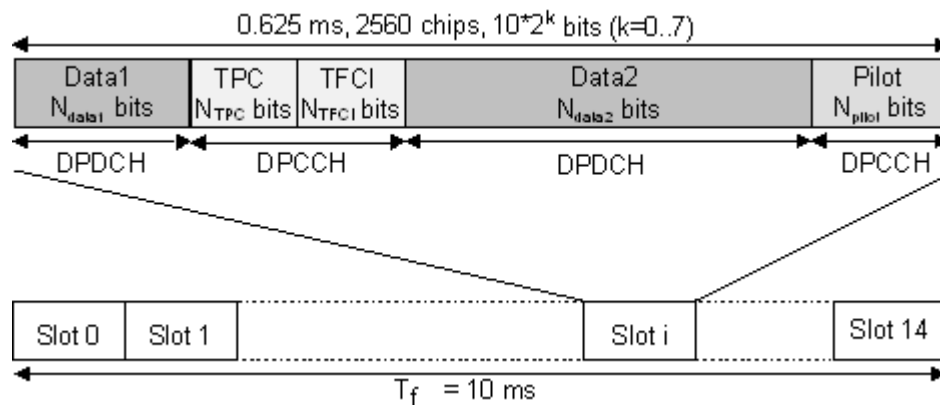


Fig. 4-3: Structure of a downlink DPCH in the time domain

Multi Channel Assistant

Accesses a dialog for configuring several DPCH channels simultaneously, see [chapter 4.23, "Multi Channel Assistant - BS"](#), on page 154.

Remote command:
n.a.

Reset All Channels

Loads the default settings for the channel table.

Remote command:
`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel:PRESet` on page 377

Preset HSDPA H-Set

(This feature is available for BS 1 only.)

Calls the default settings of the channel table for the HSDPA H-Set mode.

Channels 12 to 17 are preset for HSDPA H-Set 1.

Remote command:
`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel:HSDPa:HSET:PRESet`
on page 376

Channel Number

Displays the consecutive channel numbers from 0 to 138.

All the rows are always displayed, even if the channels are inactive. They are switched on and off by the "On/Off" button in the "State" column.

Remote command:
n.a.
(selected via the suffix to the keyword `:CHANnel<n>`)

Channel Type

Selects channel type.

The channel type is fixed for channel numbers 0...8; for the remaining channel numbers, the choice lays between the relevant standard channels and the high-speed channels.

The first 11 channels are reserved for special channels.

Remote command:

[:SOURce<hw>] :BB:W3GPp:BStation<st>:CHANnel<ch0>:TYPE on page 409

Enhanced Settings / HSDPA Settings

(Enhanced Settings are available for BS1 only.)

Accesses the dialog for configuring the enhanced channels of BS1 or the dialog for configuring the high-speed channels for all base stations.

- **Enhanced Settings**

The channel state, "Enhanced On/Off", is displayed in different colors.

Enhanced channels are generated in realtime. Channel coding in accordance with the 'Reference Measurement Channels' definition in TS25.101, TS25.104 and TS25.141 can be activated. Any other user-defined coding can also be configured and stored.

If data lists are used as the data sources for data fields and TPC fields, it is possible to load external data, for example, user information from a higher layer, to the instrument. For example, this allows externally generated data with user information to be applied, or TPC lists to be used to generate longer, non-repetitive power profiles.

To test the BER/BLER testers (e.g. integrated in the base station), it is possible to feed through artificial bit errors to all the data sources (and block errors to the CRC checksum).

The enhanced settings dialog is different for the P-CCPCH and the DPCHs (see [chapter 4.16, "Enhanced Settings for DPCHs - BS1"](#), on page 122 and [chapter 4.15, "Enhanced Settings for P-CCPCH - BS1"](#), on page 120).

- **HSDPA Settings**

The available settings and indications of the HSDPA settings dialog depend on the selected high-speed channel type HS-SCCH, HS-PDSCH (QPSK), HS-PDSCH (QAM) or HS-PDSCH (MIMO).

See [chapter 4.12, "HSDPA Settings - BS"](#), on page 98.

Remote command:

n.a.

Slot Format

Enters the slot formats for the selected channel.

The range of values depends on the channel selected. For DPCH channels, for example, the slot formats are 0 to 16.

For F-DPCH channels, the slot Formats 1 to 9 are enabled only for instruments equipped with additional option R&S SMW-K83. The difference between the F-DPCH slot formats is the position of the 2 bits TPC field.

A slot format defines the complete structure of a slot made of data and control fields and includes the symbol rate.

Parameters set via the slot format can subsequently be changed individually.

The structure of the channel currently selected is displayed in a graphic above the channel table (slot structure).

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:SFOrmat`

on page 408

Symbol Rate

Sets the symbol rate of the selected channel. The range of values depends on the channel selected.

A change in the symbol rate may lead to a change in the slot format and vice versa.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:SRATe` on page 408

Channelization Code

Enters the channelization code (formerly the spreading code number).

The code channel is spread with the set channelization code (spreading code). The range of values of the channelization code depends on the symbol rate of the channel.

The standard assigns a fixed channelization code to some channels (P-CPICH, for example, always uses channelization code 0).

The range of values runs from 0 to $((\text{Chip Rate}/\text{Symbol Rate}) - 1)$, where the Chip Rate is 3.84Mcps.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:CCODE` on page 378

Power

Sets the channel power in dB.

The power entered is relative to the powers of the other channels. If "3GPP > Adjust Total Power to 0 dB" is executed, all the power data is relative to 0 dB.

The set "Power" value is also the start power of the channel for "Misuse TPC", "Dynamic Power Control" (enhanced channels of basestation 1) and the power control sequence simulation of the OCNS mode 3i channels.

Note: The maximum channel power of 0 dB applies to non-blanked channels (duty cycle 100%), with blanked channels, the maximum value can be increased (by "Adjust Total Power") to values greater than 0 dB (to $10 \cdot \log_{10} 1/\text{duty_cycle}$).

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:POWer` on page 408

Data

Selects data source.

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "PNxx"
An internally generated pseudo-random noise sequence.
- "Pattern"
An internally generated sequence according to a bit pattern.

Use the "Pattern" box to define the bit pattern.

- "Data List/Select DList"

A binary data from a data list, internally or externally generated.

Select "Select DList" to access the standard "Select List" dialog.

- Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
- Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.
- Use the standard "File Manager" function to transfer external data lists to the instrument.

See also:

- section "Modulation Data" in the R&S SMW user manual.
- section "File and Data Management" in the R&S SMW user manual.
- section "Data List Editor" in the R&S SMW user manual

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DATA` on page 379

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DATA:PATtern`

on page 380

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DATA:DSElect`

on page 380

Data Config

(This feature is available for BS1 with active channel coding only.)

Accesses a dialog for configuring the data sources of subchannels in the transport layer, see [chapter 4.16, "Enhanced Settings for DPCHs - BS1"](#), on page 122.

Remote command:

n.a.

Timing Offset

Sets the timing offset (T_{Offset}).

The timing offset determines the shift of the source symbols before interleaving.


The absolute starting time of the frame (slot 0) is shifted relative to the start of the scrambling code sequence by the `timing offset * 256 chips`. This means that whatever the symbol rate, the resolution of the timing offset is always 256 chips.

This procedure is used to reduce the crest factor. To obtain a lower crest factor, for example, a good offset from channel to channel is 1, e.g. for DPCH11 a timing offset 0, for DPCH12 a timing offset 1, for DPCH13 a timing offset 2, etc.

The illustration below shows the effect of the timing offset parameter. For various scenarios, the scrambling code sequence is shown in time relation to the data slots and to a reference time t_0 (starting from t_0 the signal is calculated in the instrument).

- Timing offset is not used ($T_{\text{Offset}} = 0$).
The beginning of the frame (slot 0) and the beginning of the scrambling code period are synchronous with starting point t_0 .
- Timing offset is used ($T_{\text{Offset}} > 0$).
The absolute starting time of the frames (slot 0) is shifted relative to the reference time t_0 by `TOffset * 256 chips`. The beginning of the scrambling code

sequence is still synchronous with reference time t_0 . The beginning of the scrambling code period and the frame (slot 0) are no longer synchronous.

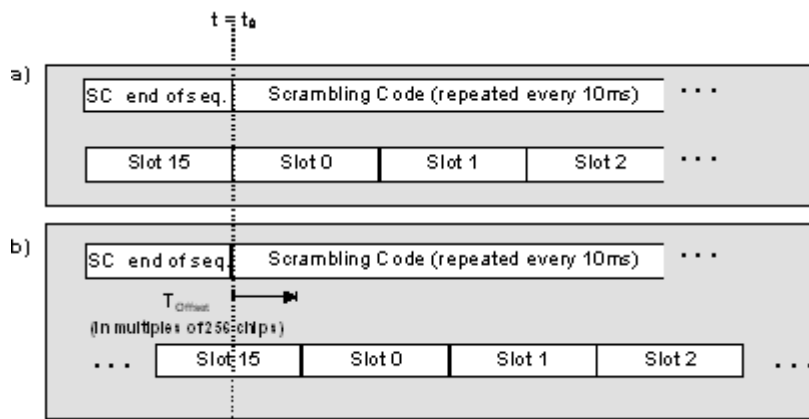

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:TOFFset`
on page 409

DPCCH Settings

Access a dialog for configuring the control fields of the selected channel, see [chapter 4.19, "DPCCH Settings - BS Channel Table"](#), on page 139

The selected slot format predetermines the setting of the control fields. So a change is also made to the control fields by changing the slot format and vice versa.

Remote command:

n.a.

Channel State

Activates or deactivates the channel.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:STATe` on page 409

Domain Conflict, Resolving Domain Conflicts

Displays whether the channel has a code domain conflict with one of the channels lying above it (with a lower channel number). A special symbol marks a conflict and the column is colored soft orange. If there is no conflict, the column is colored soft blue.

The instrument helps you to resolve code domain conflicts by automatically adapting the channelization code of the channels involved.

To access the required function, in the "3GPP FDD > Basestation > Channel Table" select the conflict symbol and trigger "Resolve Domain Conflicts".



Tip: Use the "Code Domain" to visualize the graphical display of code domain assignment by all the active code channels (see [chapter 4.10.5, "Code Domain Graph - BS"](#), on page 89).

Refer to [chapter 5, "How to Work with the 3GPP FDD Option"](#), on page 262 for step-by-step description.

Remote command:


[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:DCONflict[:STATe]? on page 420

[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:DCONflict:RESolve on page 419

4.10.4 Channel Graph - BS

The channel graph display shows the active code channels.

1. To access the base station channel graph, select "3GPP FDD > Link Direction > Downlink / Forward".
2. Select "Basestation > BS 1/2/3/4".
3. Select "Channel Graph".

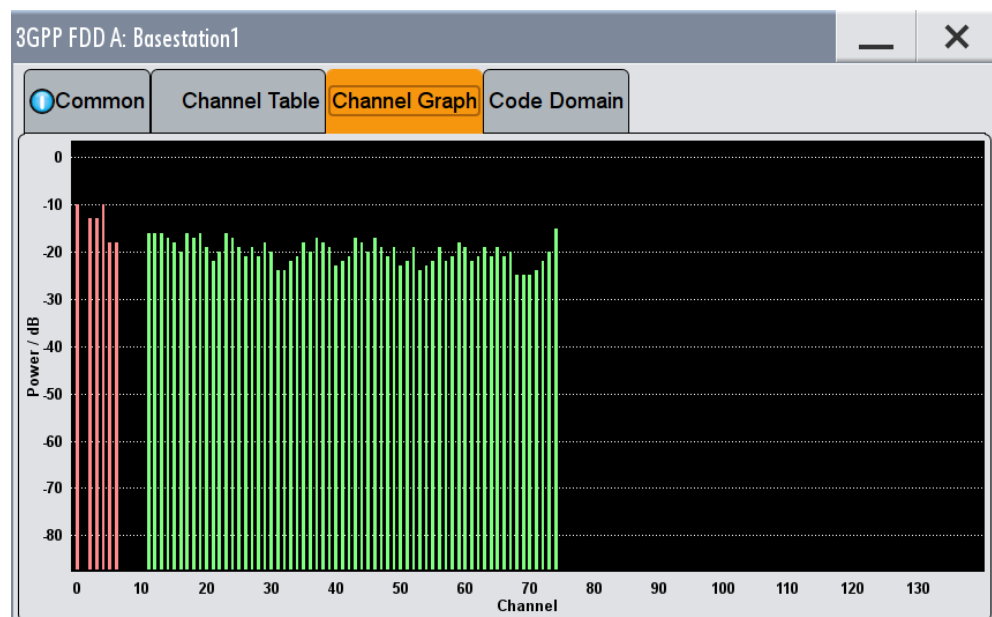

The channel number is plotted on the X-axis. The red bars represent the special channels (P-CPICH to DL-DPCCH), the green bars the other channels. The height of the bars shows the relative power of the channel

4.10.5 Code Domain Graph - BS

The channelization codes are taken from a code tree of hierarchical structure (see [figure 4-4](#)).

The higher the spreading factor, the smaller the symbol rate and vice versa. The product of the spreading factor and symbol rate is constant and always yields the chip rate.

The outer branches of the tree (right-most position in the figure) indicate the channelization codes for the smallest symbol rate (and thus the highest spreading factor). The use of a channelization code of the level with spreading factor N blocks the use of all other channelization codes of levels with spreading factor >N available in the same branch of the code tree. Channelization codes with smaller spreading factor are contained in the codes with larger spreading factor in the same code branch. When using such competitive channelization codes at the same time, the signals of associated code channels are mixed such that they can no longer be separated in the receiver. Orthogonality will then be lost.

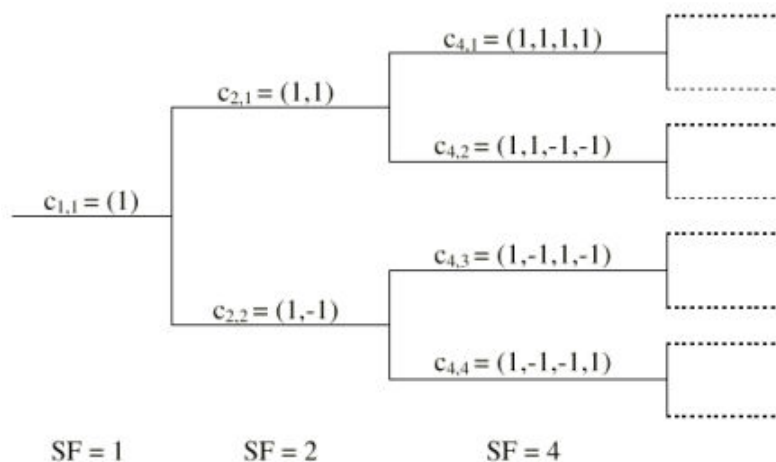


Fig. 4-4: Code tree of channelization codes

The outer branches of the tree (right-most position in the figure) indicate the channelization codes for the smallest symbol rate (and thus the highest spreading factor). The use of a channelization code of the level with spreading factor N blocks the use of all other channelization codes of levels with spreading factor >N available in the same branch of the code tree.

Example:

If code $c_{2,1}$ is being used, the remaining branch with $c_{4,1}$ and $c_{4,2}$ is blocked.


The domain of a certain channelization code is the outer branch range (with minimum symbol rate and max. spreading factor) which is based on the channelization code selected in the code tree. Using a spreading code means that its entire domain is used.

At a chip rate of 3.84 Mcps, the domain ranges from 0 to 511


$$= \frac{\text{Chip_rate}}{\text{min_Symbol_rate}} - 1 = \frac{3.84 \text{ Mcps}}{7.5 \text{ ksps}} - 1$$

Understanding the displayed information

The "Code Domain" display indicates the assigned code domain. The channelization code is plotted at the X-axis, the colored bars indicate coherent code channels. The colors are assigned to fixed symbol rates, the allocation is shown below the graph. The relative power can be taken from the height of the bar.

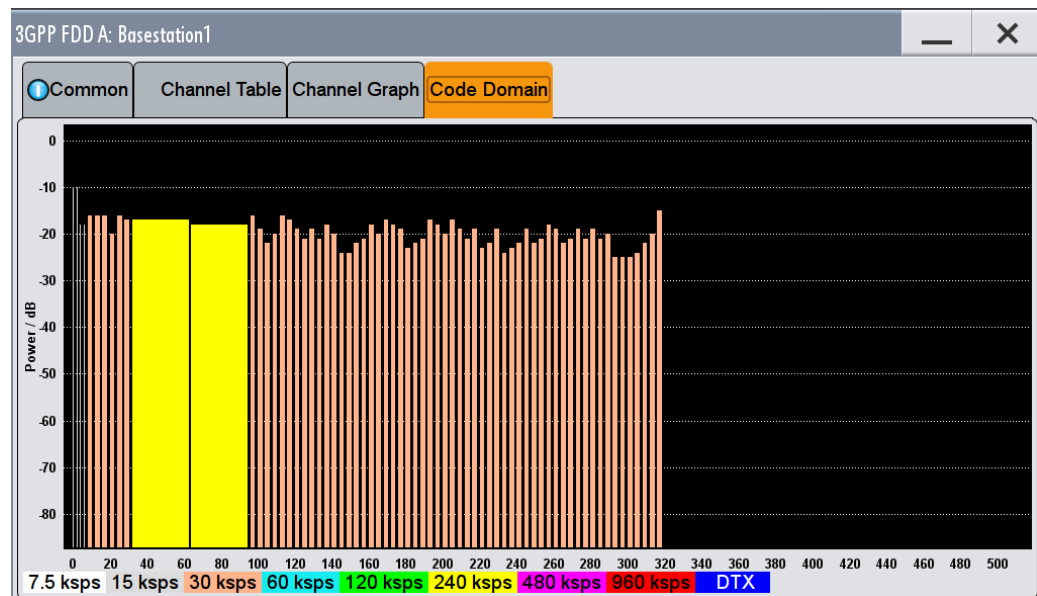

It is possible to determine from this display whether the settings made have resulted in a code domain conflict, that is to say, whether the code domains of the active channels intersect. A code domain conflict is indicated by overlapping bars.

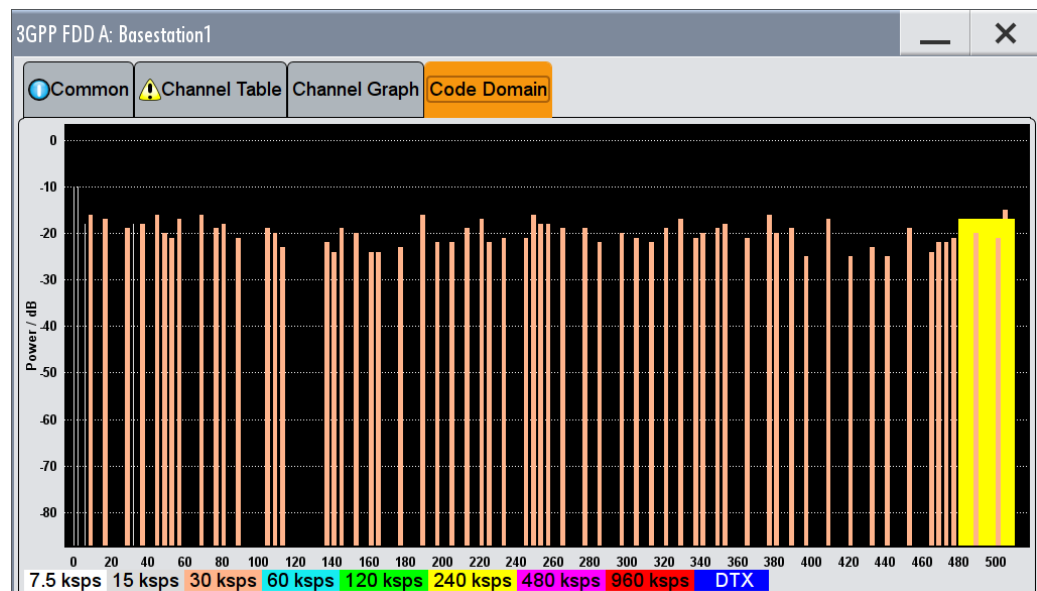

The occupied code domain of a channel is calculated from the symbol rate of the channel, the minimum symbol rate (for 3GPP FDD 7.5 ksp/s), the chip rate (3.84 Mcps) and the channelization code number with

$$\text{Domain_Factor} = \frac{\text{current_symbol_rate}}{\text{min_symbol_rate}(= 7.5\text{ksps})}$$

as follows:

"Lower domain limit" = current channelization code number * domain factor

"Upper domain limit" = lower domain limit + domain_factor - 1.

Example:

Channel with symbol rate 30 ksps and channelization code 10:

Domain factor = 30/7.5 = 4,

Lower domain limit = 10 x 4 = 40,

Upper domain limit = 40 + 4 - 1 = 43.

The channel occupies the code domain 40 to 43.



Refer to [chapter 5.1, "Resolving Domain Conflicts"](#), on page 262 for step-by-step description.

4.11 Compressed Mode

(This feature is available for BS 2...4 and UE 2...4 only.)

To enable handover of a mobile station from a 3GPP FDD base station/user equipment to another base station/user equipment, (3GPP FDD, 3GPP TDD, GSM or E-UTRA) at a different frequency, transmission and reception of the 3GPP FDD signal must be interrupted for a short time. During this time, the mobile station changes to the frequency of the new base station, for example to measure the receive level of this station or read system information.

To transmit a consistently high data volume also in the remaining (shorter) period of time, the data is compressed. This can be done by halving the spreading factor (SF/2 method) or reducing error protection (puncturing method). In both cases, transmit power in the ranges concerned is increased to maintain adequate signal quality.

Apart from these two methods, there is also the method of "higher layer scheduling". With this method, transmission of the data stream is stopped during the transmission gap. This method is suitable for packet-oriented services; it involves no power increase (power offset) in the active ranges.



4.11.1 Compressed Mode General Settings

Compressed Mode State

Activates compressed mode.

The compressed mode is configured in [chapter 4.11, "Compressed Mode"](#), on page 92.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BStation<st>:CMODE:STATE` on page 419

`[:SOURCE<hw>] :BB:W3GPp:MStation<st>:CMODE:STATE` on page 451

Compressed Mode Method - UE

Selects compressed mode method.

"Higher layer scheduling" The data is compressed by stopping the transmission of the data stream during the transmission gap.

"SF/2" The data is compressed by halving the spreading factor.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:CMODE:METHod` on page 449


Compressed Mode Method - BS

Selects compressed mode method.

"Puncturing" The data is compressed by reducing error protection.

"Higher layer scheduling" The data is compressed by stopping the transmission of the data stream during the transmission gap.

"SF/2" The data is compressed by halving the spreading factor. This method can be demonstrated in the code domain graph. The graph is split into two windows. The upper window shows the code domain assignment with non-compressed slots, the lower window with compressed slots. It can be recognized clearly that the DPCH bars in the lower window are wider, which is due to the reduction of the spreading factor of these channels. The other channels (e.g. CPICH) have the same width in both halves.

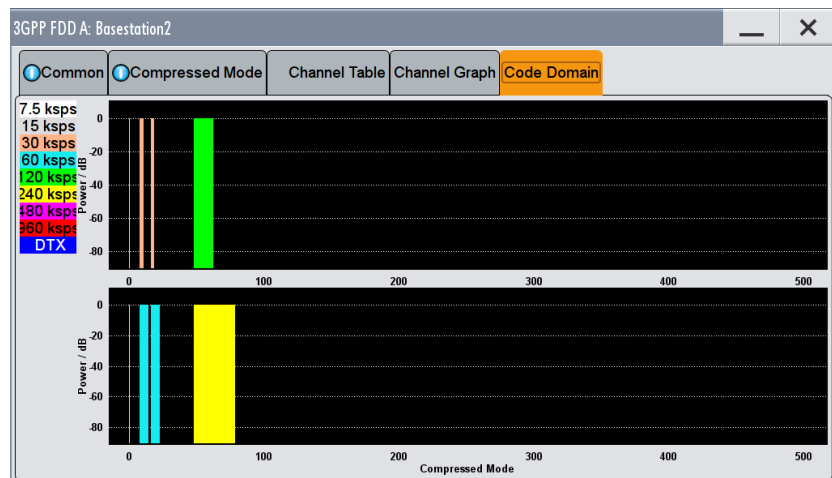

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CMODE:METHod` on page 416

DL Frame Structure - BS

Selects frame structure. The frame structure determines the transmission of TPC and pilot field in the transmission gaps.

For 3GPP FDD radio communication to operate, the mobile station receiver requires information in the pilot field for synchronization and channel estimation and in the power control field TPC for control of the mobile station transmit power.

To keep the period during which no channel estimation takes place as short as possible, the pilot is sent in the last slot of each transmission gap.



Optionally, the first TPC field of the transmission gap can be sent in addition.



"Type A (Last Pilot)" The pilot field is sent in the last slot of each transmission gap.

"Type B (First TPC, Last Pilot)" The pilot field is sent in the last slot of each transmission gap. The first TPC field of the transmission gap is sent in addition.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CMODE:DLFStructure` on page 416

Power Offset Mode

Selects power offset mode.

The compressed slots can be sent with a power offset, i.e. at an increased power level.

"Auto (By Pilot Bit Ratio)" The power offset is obtained as the relation between the Number of pilots bits of non-compressed slots and the Number of pilot bits by compressed slots.

"User" The power offset is defined manually. The value is input in entry field Power offset.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>|MSTation<st>:CMODE:POMode` on page 418

Power Offset

Defines power offset. The entered value is only valid for "Power Offset Mode User".

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>|MSTation<st>:CMODE:POFFset` on page 418

4.11.2 Compressed Mode Configuration Graph

The remaining parameters of the compressed mode are set in the configuration graph. The graph displays the distribution of transmission gaps in a compressed mode signal.

The signal generated can be divided into three subranges.

4.11.2.1 Transmission Gaps

A transmission gap has a maximum length of 14 slots. Since at least eight active slots must be sent per frame, gaps comprising seven slots and more have to be distributed over two neighboring frames.

The transmitted signal consists of max. two patterns that are sent alternately. Each pattern comprises two transmission gaps.

The graph includes all parameters necessary to define the transmission gaps in the signal.



The settings in the graph are also valid for the compressed mode graph of the user equipment with the same number. For example, setting a distance of 9 slots for base station 4 also sets the distance to 9 slots for user equipment 4.

The parameters below are interrelated in many ways. For example, the transmission gap distance must be selected so that no frame contains more than one gap. In the event of an invalid entry, the next valid value is automatically set. If the entry is valid but changes the valid range for another parameter, the setting of the parameter is adapted.

At Slot:

Transmission gap slot number.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CMODE:PATtern<ch>:TGSN`
on page 418

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:CMODE:PATtern<ch>:TGSN`
on page 450

Gap Len:

Transmission gap lengths.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CMODE:PATtern<ch>:TGL<di>`
on page 417

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:CMODE:PATtern<ch>:TGL<di>`
on page 450

Distance

Transmission gap distance.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CMODE:PATtern<ch>:TGD`
on page 417

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:CMODE:PATtern<ch>:TGD`
on page 449

Pattern Len:

Transmission gap pattern length. The input range is 1 ... 100 frames for pattern 1 and 0 ... 100 frames for pattern 2. Thus, it is possible to configure transmission gap pattern with only one pattern.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CMODE:PATtern<ch>:TGPL`
on page 417

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:CMODE:PATtern<ch>:TGPL`
on page 450

4.11.2.2 Compressed Ranges

All slots of a frame that are not blanked are compressed. If the transmission gap is transmitted within one frame (single-frame method), an envelope as shown by the diagram on [figure 4-5](#) is obtained:

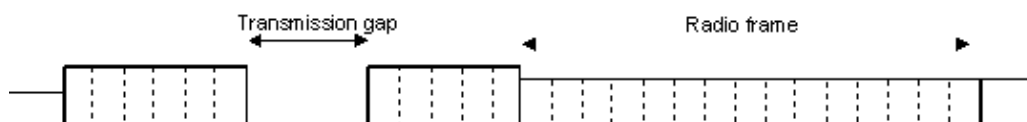


Fig. 4-5: Envelope of compressed mode signal with single-frame method

If the transmission gap is distributed over two neighboring frames, all slots of the two frames that are not blanked are compressed (see [figure 4-6](#)):



Fig. 4-6: Envelope of compressed mode signal with double-frame method

A different slot format, usually with a higher number of pilot bits, is used in the compressed ranges.

The transmit power can be increased ("Power Offset Mode") automatically or manually by defining a power offset.

4.11.2.3 Non-compressed ranges

Frames containing no transmission gaps are sent with the same slot format and the same power as in the non-compressed mode.

4.12 HSDPA Settings - BS

Generation modes of the high speed channels

The high speed channels can be generated either *continuously* as defined in test model 5, in packet mode or in H-Set mode according to TS 25.101 Annex A.7.

In *packet mode*, the start of the channel and the distance between the HSDPA packets can be set. The packet transmissions can start in one of the first five sub-frames (0 to 4). A sub-frame has the same length as a packet and is 3 slots long. A HS-SCCH starts at the beginning of the selected sub-frame, a HS-PDSCH starts with an offset of two slots to the selected sub-frame. The active parts of the HS-SCCH and the HS-PDSCH for a specific sub-frame setting differ by the slot offset of the HS-PDSCH.

Example:

Setting Sub-frame 1

HS-SCCH: slot 3 to 5 active

HS-PDSCH: slot 5 to 7 active.

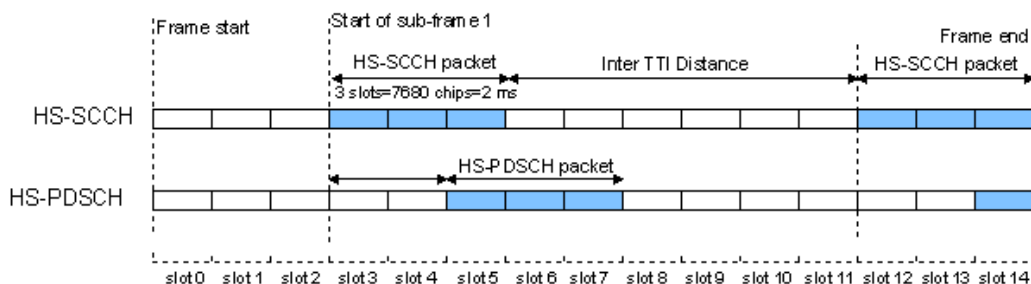


Fig. 4-7: Timing diagram for the HS-SCCH and the associated HS-PDSCH, Packet Subframe 1 mode and Inter TTI Distance = 3

In *H-Set mode*, the first packet is sent in the HS-SCCH subframe 0. Up to 15 HSDPA channels are coupled to be used in the fixed reference channels. The number of coupled channels depends on the selected H-Set. Channel coding is always performed over a certain number of bits. The resulting packets are distributed evenly over one subframe of all HS-PDSCH channelization codes. Therefore, the data stream is not assigned to a defined channel but to all coupled channels.

4.12.1 Enhanced HSDPA Mode Settings

1. To access "Enhanced HSDPA Mode" dialog, select "Baseband > 3GPP FDD > Link Direction > Downlink / Forward".
2. In the "Basestations" tab, select "Select Basestations > BS 1".
3. In the "Channel Table" tab, select e.g. "Channel Type > HS-PDS, QPSK 16QAM".
4. Select "Enh/HSDPA Settings > Config...".

5. Select "HSDPA-Mode > Subframe 1".

3GPP FDD A: BS1/Enhanced11 HSDPA Mode

HSDPA-Mode: Subframe 1

Burst-Mode: ☒ On

Inter TTI Distance: 5

The available settings and indications in this dialog depend on the selected HSDPA mode and channel type.

HSDPA Mode

Selects the HSDPA mode.

- | | |
|------------------------------|---|
| "Continuous" | The high-speed channel is generated continuously. This mode is used in test model 5 and 6. |
| "Subframe 0 1 2 3 4" | The high-speed channel is generated in packet mode. The start of the channel is set by selecting the subframe in which the first packet is sent. The distance between subsequent packets is set with parameter "Inter TTI Distance". |
| "H-Set" | (Available for BS1 and HS-SCCH only.)
The high-speed channel is generated in packet mode. The first packet is sent in the HS-SCCH subframe 0. The number of the coupled channel in the H-Set can be changed with the parameter "Number of HS-PDSCH Channel Codes". |

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:MODE
on page 407
```

Burst Mode

Activates/deactivates burst mode. The signal is bursted when on, otherwise dummy data are sent during transmission brakes.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:BMODE [ :
STATE ] on page 389
```

Inter TTI Distance (H-Set)

(Available for "subframe x")

Selects the distance between two packets in HSDPA packet mode.

The distance is set in number of sub-frames (3 slots = 2 ms). An "Inter TTI Distance" of 1 means continuous generation.

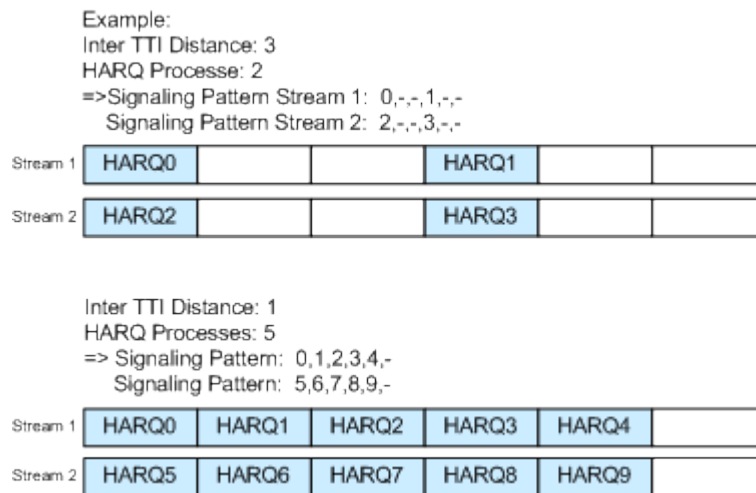


Fig. 4-8: Example: Inter TTI Distance in HSDPA H-Set Mode

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:TTIDistance` on page 407

Constellation Version Parameter b - BS

(Available for "HS-PDSCH 16QAM" and "64QAM" only)

Switches the order of the constellation points of the 16QAM or 64QAM mapping.

The re-arrangement is done according to 3GPP TS25.212.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:CVPB` on page 389

4.12.2 MIMO Configuration



The parameters in this section are available for instruments equipped with option R&S SMW-K83, BS1 and Channel Type HS-PDSCH (MIMO) only (see ["Diversity / MIMO"](#) on page 80).

1. To access "Enhanced HSDPA Mode" dialog, select "Baseband > 3GPP FDD > Link Direction > Downlink / Forward".
2. In the "Basestations" tab, select "Select Basestations > BS 1".
3. In the "Common" tab, select "Diversity / MIMO > Antenna 1/2 of 2".
4. In the "Channel Table" tab, select "Channel Type > HS-PDS MIMO".
5. Select "Enh/HSDPA Settings > Config...".

6. Select "HSDPA-Mode > Subframe 1".

The available settings and indications in this dialog depend on the selected HSDPA mode and channel type.

Precoding Weight Pattern (w2)

Sets the precoding weight parameter w2 for MIMO precoding.

The values of the weight parameters w1, w3 and w4 are calculated based on the value for w2 (see [chapter 3.1.15, "MIMO in HSPA+",](#) on page 36).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:MIMO:PWPattern` on page 406

Stream 2 Active Pattern

Enables/disables a temporal deactivation of Stream 2 per TTI in form of sending pattern.

The stream 2 sending pattern is a sequence of max 16 values of "1" (enables Stream 2 for that TTI) and "-" (disabled Stream 2 for that TTI).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:MIMO:STAPattern` on page 406

Modulation Stream 1/2 (HS-PDSCH MIMO)

Sets the modulation for stream 1 and respectively stream 2 to QPSK, 16QAM or 64QAM.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:MIMO:MODulation<di>` on page 406

Constellation Version Parameter b Stream 1/2 - BS

Switches the order of the constellation points of the 16QAM or 64QAM mapping.

The re-arrangement is done according to 3GPP TS25.212.

Remote command:

[:SOURCE<hw>] :BB:W3GPP:BSStation<st>:CHANnel<ch0>:HSDPa:MIMO:
CVPB<di> on page 405

4.13 HSDPA H-Set Mode Settings - BS



The Enhanced HSDPA H-Set Mode settings are available for BS1, HS-SCCH and HSDPA Mode set to H-Set only.

1. To access this dialog, select "3GPP FDD > Link Direction > Downlink"
2. Select "3GPP FDD > Basestations > Select Basestation > BS1"
3. In the "Basestation 1" dialog, select "Channel Table > Preset to HSDPA H-Set"
4. In the "Channel Table", select "Channel#12 HS-SCCH > Enhanced Settings > Config"

4.13.1 HSDPA H-Set General Setting

Provided are the following settings:

HSDPA Mode

Selects the HSDPA mode.

- | | |
|------------------------------|---|
| "Continuous" | The high-speed channel is generated continuously. This mode is used in test model 5 and 6. |
| "Subframe 0 1 2 3 4" | <p>The high-speed channel is generated in packet mode.</p> <p>The start of the channel is set by selecting the subframe in which the first packet is sent.</p> <p>The distance between subsequent packets is set with parameter "Inter TTI Distance".</p> |

"H-Set" (Available for BS1 and HS-SCCH only.)
 The high-speed channel is generated in packet mode. The first packet is sent in the HS-SCCH subframe 0.
 The number of the coupled channel in the H-Set can be changed with the parameter "Number of HS-PDSCH Channel Codes".

Remote command:

[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:MODE
 on page 407

Burst Mode

Activates/deactivates burst mode. The signal is bursted when on, otherwise dummy data are sent during transmission brakes.

Remote command:

[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:BMODE [:
 STATE] on page 389

4.13.2 H-Set Configuration Common Settings



The parameters in this section are available for BS1 and HSDPA H-Set Mode only.

Predefined H-Set

Selects the H-Set and the modulation according to TS 25.101 Annex A.7 .

Table 4-5: Following combinations are possible:

H-Set	Modulation
1, 2, 3, 6, 10	QPSK 16QAM
4, 5, 7, 12	QPSK
8	64QAM
9	16QAM (Stream 1) QPSK (Stream 2)
11	64QAM (Stream 1) 16QAM (Stream 2)
User	-

Note: H-Sets 7 - 9 and H-Set 11 are enabled for instruments equipped with option R&S SMW-K83 only. H-Set 9 and H-Set 11 are available only for enabled two-antenna system (see "[Diversity / MIMO](#)" on page 80).

Several parameters are automatically set, depending on the selection made for the parameter "H-Set". However, it is also possible to change these parameters. In this case, the value of the parameter "H-Set" is automatically set to User.

Note: Use the predefined settings to let the instrument generate a signal equal to the one generated by an instrument equipped with an older firmware.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
PREDefined on page 396
```

Advanced Mode (requires ARB)

(in Baseband C/D, this function is permanently active)

Activates/deactivates the advanced mode in which the H-Set will be generated by the ARB. The parameter can be configured only for H-Sets 1 - 5. For H-Sets 6 - 12 and User, it is always enabled.

For an H-Set calculated in arbitrary waveform mode (enabled "Advanced Mode") it is critical to set an appropriate "Current ARB Sequence Length" in order to generate a signal without unwanted artefacts when the pre-calculated sequence is repeated cyclically. In particular, the HARQ cycles have to terminate completely before restarting the signal.

Assistance in setting an appropriate sequence length is provided by the parameter "Suggested ARB Sequence Length" and the "Adjust" button. When working in Advanced Mode, it is recommended to adjust the current ARB sequence length to the suggested one.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
AMode on page 390
[ :SOURce<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
SLENgth? on page 400
```

Suggested ARB sequence length

Displays the suggested ARB sequence length.

The "Suggested ARB Sequence Length" is the calculated minimum length that depends on several parameters, like TTI distance, Number of HARQ Processes, HARQ cycles, HARQ Mode, RV Parameter Sequence, HS-SCCH Type, Precoding Weight Pattern and Stream 2 Active Pattern.

When working in "[Advanced Mode](#)", it is recommended to adjust the current ARB sequence length to the suggested one.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
SLENgth? on page 400
```

Current ARB sequence length

Displays the current ARB sequence length or the adjusted ARB sequence length, set after pressing the button "Adjust".

When working in "[Advanced Mode](#)", it is recommended to adjust the current ARB sequence length to the suggested one.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:SLENgth on page 351
```

Adjust

Sets the current ARB sequence length to the suggested value.

When working in "[Advanced Mode](#)", it is recommended to adjust the current ARB sequence length to the suggested one.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
SLENgth:ADJust on page 400
```

Nominal Average Information Bitrate

Indicates the average data rate on the transport layer. In case of MIMO, the parameter indicates the Combined Nominal Average Information Bitrate.

The "Nominal Average Information Bitrate" is calculated for the ideal case of infinite sequence and with regard of the Stream 2 Active Pattern.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
NAIBitrate? on page 396
```

UE Category

Displays the UE category that is minimum required to receive the selected H-Set (see also [chapter 3.1.19, "UE Capabilities"](#), on page 46).

Remote command:


```
[ :SOURce<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
UECategory? on page 404
```

HS-SCCH Type

Sets the HS-SCCH type.

"Type 1 (normal)" Normal operation mode.

- "Type 2 (HS-SCCH less)" (Available for instruments equipped with option R&S SMW-K83 only)
HS-SCCH Less operation mode (see also [chapter 3.1.13, "HS-SCCH less operation"](#), on page 34.
- "Type 3 (MIMO)" (Available for instruments equipped with option R&S SMW-K83 and enabled two-antenna system only)
HS-SCCH Type 3 mode is defined for MIMO operation (see also [chapter 3.1.15.2, "MIMO downlink control channel support"](#), on page 38.
Enabling this operation mode, enables the parameters in section "MIMO Settings" and the Stream 2 parameters in sections "HARQ Simulation, Signal Structure" and "Coding Configuration".
While working in HS-SCCH Type 3 mode and simulating Antenna 2 of one two-antenna system without transmit diversity, no control channel is sent although the HS-SCCH channel is displayed as active in the channel table. To prove that there is no control channel transmission consult the "Code Domain Graph".

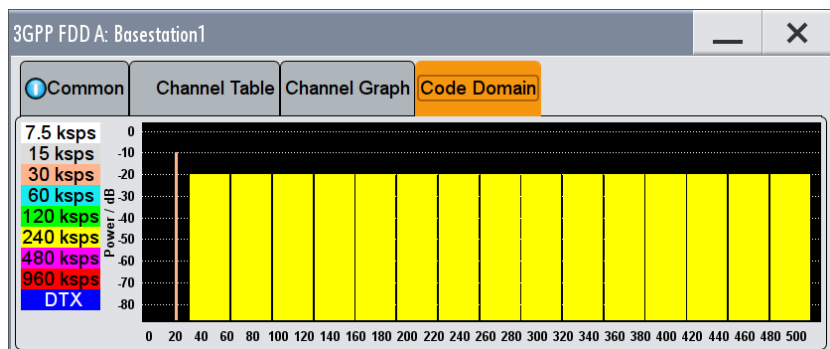

The HS-SCCH channel is displayed as DTX.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSStation<st>:CHANnel<ch0>:HSDPa:HSET:TYPE
```

on page 404

4.13.3 MIMO Settings



The parameters in this section are available for instruments equipped with option R&S SMW-K83, BS1, HSDPA H-Set Mode, and for HS-SCCH Type 3 (MIMO) only.

1. To access this dialog, select "3GPP FDD > Link Direction > Downlink".
2. Select "3GPP FDD > Basestations > Select Basestation > BS1".
3. In the "Basestation 1" dialog, select "Channel Table > Preset to HSDPA H-Set".
4. In the "Common" tab, select "Diversity/MIMO > Antenna 1 of 2".
5. In the "Channel Table" tab, select "Channel#12 HS-SCCH > Enhanced Settings > Config...".

6. In the "BS1/Enhanced HSDPA Mode" dialog, select "Common > Predefined H-Set > H-Set 9/H-Set 11".
7. Select "MIMO Settings".

The dialog contains the parameters for configuring the MIMO settings in enhanced HSDPA mode.

Precoding Weight Pattern (w2)

Selects the sequence for the MIMO precoding weight parameter w2.

The values of the weight parameters w1, w3 and w4 are calculated based on the value for w2 (see [chapter 3.1.15, "MIMO in HSPA+"](#), on page 36).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:PWPattern` on page 397

Stream 2 Active Pattern

Enables/disables a temporal deactivation of Stream 2 per TTI in form of sending pattern.

The stream 2 sending pattern is a sequence of max 16 values of "1" (enables Stream 2 for that TTI) and "-" (disabled Stream 2 for that TTI).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:STAPattern` on page 401

4.13.4 Global Settings



The parameters in this section are available for BS1 and HSDPA H-Set Mode only.

3GPP FDD A: BS1/Enhanced11 HSDPA Mode

HSDPA-Mode H-Set Burst-Mode ☒ On

Common *MIMO* MIMO Settings **Global Settings** Coding Signal Structure HARQ Simulation

Data Source (HS-DSCH) PN 9

UEID (H-RNTI) 0

Channelization Code HS-SCCH (SF128) 5

Number Of HS-PDSCH Channelization Codes 5

Start Channelization Code HS-PDSCH (SF16) 8

Total HS-PDSCH Power -10.01 dB

Data Source (HS-DSCH)

Selects the data source for the transport channel.

New data is retrieved from the data source each time an initial transmission is performed within one TTI. An initial transmission is performed in case of "HARQ Mode" set to Constant ACK or by each new beginning of the "Redundancy Version Sequence".

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "PNxx"
An internally generated pseudo-random noise sequence.
- "Pattern"
An internally generated sequence according to a bit pattern.
Use the "Pattern" box to define the bit pattern.
- "Data List/Select DList"
A binary data from a data list, internally or externally generated.
Select "Select DList" to access the standard "Select List" dialog.
 - Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
 - Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.
 - Use the standard "File Manager" function to transfer external data lists to the instrument.

See also:

- section "Modulation Data" in the R&S SMW user manual.
- section "File and Data Management" in the R&S SMW user manual.

- section "Data List Editor" in the R&S SMW user manual

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:DATA`
on page 393

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:`
`DATA:PATtern` on page 394

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:`
`DATA:DSElect` on page 393

UEID (H-RNTI)

Enters the UE identity which is the HS-DSCH Radio Network Identifier (H-RNTI) defined in 3GPP TS 25.331: "Radio Resource Control (RRC); Protocol Specification".

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:UEID`
on page 405

Channelization Code HS-SCCH (SF128)

Sets the channelization code of the HS-SCCH.

Note: To let the instrument generate a signal equal to the one generated by an instrument equipped with an older firmware, set the same "Channelization Codes" as the codes used for your physical channels.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:`
`HSCCode` on page 395

Number of HS-PDSCH Channelization Codes

Sets the number of physical HS-PDSCH data channels assigned to the HS-SCCH.

The maximum number of channels assigned to the H-Set depends on the "HS-SCCH Type" and the channel number of the first HS-PDSCH channel in the H-Set.

For HS-SCCH Type 2 (less operation) maximum of two channels can be assigned.

For HS-SCCH Type 1 (normal operation) and Type 3 (MIMO) the maximum number of assigned channels is 15.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:`
`CLEnGth` on page 392

Start Channelization Code HS-PDSCH (SF16)

Sets the channelization code of the first HS-PDSCH channel in the H-Set.

The channelization codes of the rest of the HS-PDSCHs in this H-Set are set automatically.

Note: To let the instrument generate a signal equal to the one generated by an instrument equipped with an older firmware, set the same "Channelization Codes" as the codes used for your physical channels.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:`
`SCCode` on page 399

Total HS-PDSCH Power

Sets the total HS-PDSCH power, i.e. sets the total power of all HS-PDSCH channels in the H-Set.

Note: In the 3GPP test specification, e.g. 3GPP TS34.121-1, the HS-PDSCH power is typically given as a total power of all HS-PDSCH channels.

Use this parameter to set the HS-PDSCH power level directly as given in the 3GPP test specification.

There are two possibilities to set the power of a H-Set:

- select "BS1 > Channel Table > HS-PDSCH Channel > Power" and set the power of the individual channels.

The total power of all HS-PDSCH channels of the H-Set depends on the [Number of HS-PDSCH Channelization Codes](#) and is calculated as follows:

$$TotalPower_{All\ HS-PDSCHs} = Power_{HS-PDSCH\ Channel} + 10 \cdot \log_{10}(NumberOfHS-PDSCHChannelizationCodes)$$

The calculated total power is displayed with the parameter "Total HS-PDSCH Power"

- set directly the total power of the H-Set, i.e. set the parameter "Total HS-PDSCH Power"

The individual power levels of the HS-PDSCHs are calculated automatically and displayed in the "BS1 > Channel Table > HS-PDSCH Channel > Power".

Example:

Select "BS1 > HSDPA H-Set".

The default H-Set with 5 Channelization Codes ("BS1 > Channel table > HSDPA Settings > Config > Enhanced HSDPA Mode > Number of HS-PDSCH Channelization Codes") is configured.

The default individual power levels of the HS-PDSCH channels are -20 dB. The "Total HS-PDSCH Power" is -13.01 dB.

Set the "Total HS-PDSCH Power" to -10 dB. The individual power levels of the HS-PDSCH channels are -16.99 dB.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
TPower on page 402
```

4.13.5 Coding Configuration

The parameters in this section are available for BS1 and HSDPA H-Set Mode only. The parameters for stream 2 are available for instruments equipped with option R&S SMW-K83 and for HS-SCCH Type 3 only.

To access the dialog for the two streams case:

1. Select "3GPP FDD > Link Direction > Downlink".
2. Select "3GPP FDD > Basestations > Select Basestation > BS1".

3. In the "Basestation 1" dialog, select "Channel Table > Preset to HSDPA H-Set".
4. In the "Common" tab, select "Diversity/MIMO > Antenna 1 of 2".
5. In the "Channel Table" tab, select "Channel#12 HS-SCCH > Enhanced Settings > Config...".
6. In the "BS1/Enhanced HSDPA Mode" dialog, select "Common > HS-SCCH Type > Type 3 (MIMO)".
7. Select "Coding".

3GPP FDD A: BS1/Enhanced HSDPA Mode

HSDPA-Mode: H-Set Burst-Mode: ☒ On

Common MIMO Settings Global Settings **Coding** Signal Structure HARQ Simulation

	Stream 1:	Stream 2:
HS-PDSCH Modulation	QPSK	QPSK
Binary Channel Bits Per TTI (Physical Layer)	4 800	4 800
Transport Block Size Table	Table 0	Table 0
Transport Block Size Index	41	41
Information Bit Payload (TB-Size)	3 202	3 202
Coding Rate	0.667	0.667
Virtual IR Buffer Size (per HARQ Process)	9 600	9 600

This dialog contains the parameters required to configure the streams for HSDPA H-Set mode.

HS-PDSCH Modulation Stream1/2

Sets the HS-PDSCH modulation for stream 1 and stream 2 to QPSK, 16QAM or 64QAM.

Note: The modulation 64QAM is available for instruments equipped with option R&S SMW-K83 only.

For HS-SCCH Type 2, the available modulation scheme is QPSK only.

For HS-SCCH Type 3 (MIMO), the modulation selected for stream 1 has to be the higher order one, i.e. combination 16QAM/64QAM is not allowed.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSStation<st>:CHANnel<ch0>:HSDPa:HSET:
MODulation<di> on page 395
```

UE Supports 64QAM

(Available for BS1, "HSDPA H-Set Mode", "HS-SCCH Type 1" and "16QAM" only)

Enables/disables UE support of 64QAM.

In case this parameter is disabled, i.e. the UE does not support 64QAM, the xccs,7 bit is used for channelization information.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
S64Qam on page 399
```

Binary Channel Bits per TTI (Physical Layer) Stream1/2

Displays the coded binary channel bits per TTI and per stream.

The value displayed is calculated upon the values and selections for the parameters "HS-PDSCH Modulation", "Symbol Rate" and "Number of HS-PDSCH Channel Codes".

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
BCBTti<di>? on page 391
```

Transport Block Size Table Stream1/2

Selects Table 0 or Table 1 as described in 3GPP TS 25.321.

For "HS-PDSCH Modulation" set to 64QAM, only Table 1 is available.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:TBS:
TABLE<di> on page 403
```

Transport Block Size Index Stream1/2

Selects the Index ki for the corresponding table and stream, as described in 3GPP TS 25.321.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:TBS:
INDEX<di> on page 402
```

Transport Block Size Reference Stream1/2

(Available for BS1, HSDPA H-Set Mode and HS-SCCH Type 2 only)

While working in less operation mode, this parameter is signaled instead of the parameter Transport Block Size Index.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:TBS:
REFerence on page 403
```

Information Bit Payload (TB-Size) Stream 1/2

Displays the payload of the information bit. This value determines the number of transport layer bits sent in each TTI before coding.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
BPAYload<di>? on page 391
```

Coding Rate Stream 1/2

Displays the resulting coding rate per stream.

The coding rate is calculated as a relation between the "Information Bit Payload" and "Binary Channel Bits per TTI".

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:CRATe<di>?` on page 392

Virtual IR Buffer Size (per HARQ Process) Stream1/2

Sets the size of the Virtual IR Buffer (Number of SMLs per HARQ-Process) per stream.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:VIBSize<di>` on page 405

4.13.6 Signal Structure



The parameters in this section are available for BS1 and HSDPA H-Set Mode only. The parameters for stream 2 are available for instruments equipped with option R&S SMW-K83 and for HS-SCCH Type 3 only.

3GPP FDD A: BS1/Enhanced11 HSDPA Mode

HSDPA-Mode: **H-Set** Burst-Mode ☒ On

Common MIMO MIMO Settings Global Settings Coding **Signal Structure** HARQ Simulation

Inter TTI Distance	3
Number Of HARQ Processes Per Stream	2
Signalling Pattern Stream 1	0,-,1,-
Signalling Pattern Stream 2	2,-,3,-

Inter TTI Distance (H-Set)

(Available for "subframe x")

Selects the distance between two packets in HSDPA packet mode.

The distance is set in number of sub-frames (3 slots = 2 ms). An "Inter TTI Distance" of 1 means continuous generation.

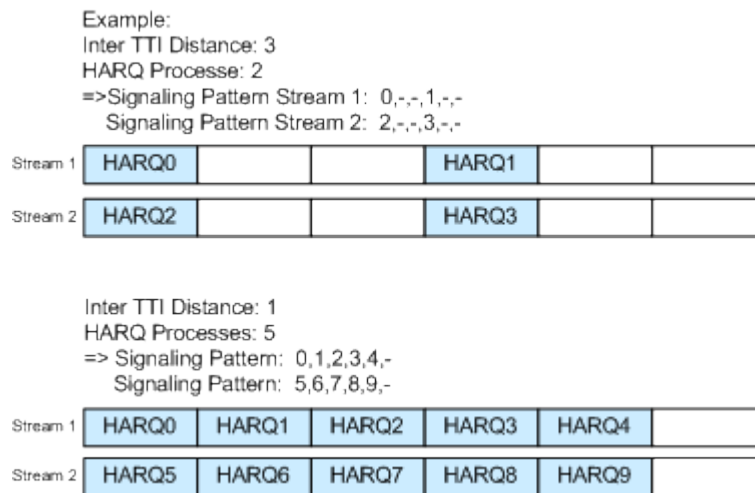


Fig. 4-9: Example: Inter TTI Distance in HSDPA H-Set Mode

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:TTIDistance` on page 407

Number of HARQ Processes per Stream

Sets the number of HARQ processes. This value determines the distribution of the payload in the subframes and depends on the Inter "TTI Distance" (see figure).

A minimum of 6 HARQ Processes are required to achieve continuous data transmission.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:HARQ:LENGTH` on page 394

Signaling Pattern Stream1/2

Displays the distribution of packets over time. The Signaling Pattern displays a HARQ-Process cycle and is a sequence of HARQ-IDs and "-". A HARQ-ID indicates a packet, a "-" indicates no packet (see figure). The Signaling Pattern is cyclically repeated.

Long signaling patterns with regular repeating groups of HARQ-ID and "-" are not displayed completely. The signaling pattern is shortened and ". . ." is displayed but the scheduling is performed according to the selected "Inter TTI Distance". Long signaling patterns with irregularity in the HARQ-ID and "-" groups are displayed completely.

Depending on the selected "Burst Mode", a Dummy - TTI will be sent within the no packet subframes.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:SPATtern<di>?` on page 401

4.13.7 HARQ Simulation



The parameters in this section are available for BS1 and HSDPA H-Set Mode only. The parameters for stream 2 are available for instruments equipped with option R&S SMW-K83 and for HS-SCCH Type 3 only.

3GPP FDD A: BS1/Enhanced11 HSDPA Mode

HSDPA-Mode: H-Set Burst-Mode: ☒ On

Common MIMO | MIMO Settings | Global Settings | Coding | Signal Structure | **HARQ Simulation**

HARQ Mode: Constant NACK

Redundancy Version Sequence Stream 1: 0

Redundancy Version Sequence Stream 2: 0

Mode (HARQ Simulation)

Sets the HARQ Simulation Mode.

Note: To let the instrument generate a signal equal to the one generated by an instrument equipped with an older firmware, set the "HARQ Mode" to "Constant ACK".

"Constant ACK"

New data is used for each new TTI. This mode is used to simulate maximum throughput transmission.

"Constant NACK"

(enabled in "Advanced Mode" only)

Enables NACK simulation, i.e. depending on the sequence selected with parameter "Redundancy Version Parameter Sequence" packets are retransmitted. This mode is used for testing with varying redundancy version.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BStation<st>:CHANnel<ch0>:HSDPa:HSET:
HARQ:MODE on page 395
```

Redundancy Version Stream1/2

The parameter is enabled for "HARQ Simulation Mode" set to Constant ACK.

Enters the Redundancy Version Parameter per stream. This value determines the processing of the Forward Error Correction and Constellation Arrangement (16/64QAM modulation), see TS 25.212 4.6.2.

For HS-SCCH Type 2 (less operation), the Redundancy Version Parameter is always 0.

Remote command:

[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:RVParameter<di> on page 397

Redundancy Version Sequence Stream 1/2

The parameter is enabled for "HARQ Simulation Mode" set to Constant NACK.

Enters a sequence of Redundancy Version Parameters per stream. The value of the RV parameter determines the processing of the Forward Error Correction and Constellation Arrangement (16/64QAM modulation), see TS 25.212 4.6.2.

The sequence has a length of maximum 30 values. The sequence length determines the maximum number of retransmissions. New data is retrieved from the data source after reaching the end of the sequence.

For HS-SCCH Type 2 (less operation), the Redundancy Version Parameter Sequence is always "0,3,4".

Remote command:

[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:RVSequence<di> on page 397

4.13.8 Error Insertion



The parameters in this section are available for BS1, HSDPA H-Set Mode and disabled Advanced Mode only.

In the "Bit Error Insertion" and "Block Error Insertion" sections, errors can be inserted into the data source and into the CRC checksum, in order, for example, to check the bit and block error rate testers.

Bit Error State (HSDPA H-Set)

Activates or deactivates bit error generation.

Bit errors are inserted into the data stream of the coupled HS-PDSCHs. It is possible to select the layer in which the errors are inserted (physical or transport layer).

When the data source is read out, individual bits are deliberately inverted at random points in the data bit stream at the specified error rate in order to simulate an invalid signal.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:DERRor:BIT:STATe` on page 443

Bit Error Rate (HSDPA H-Set)

Sets the bit error rate.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:DERRor:BIT:RATE` on page 442

Insert Errors On (HSDPA H-Set)

Selects the layer at which bit errors are inserted.

"Transport layer"

Bit errors are inserted in the transport layer.

"Physical layer"

Bit errors are inserted in the physical layer.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:DERRor:BIT:LAYer` on page 442

Block Error State (HSDPA H-Set)

Activates or deactivates block error generation.

The CRC checksum is determined and then the last bit is inverted at the specified error probability in order to simulate an invalid signal.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:DERRor:BLOCK:STATe` on page 443

Block Error Rate (HSDPA H-Set)

Sets the block error rate.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:DERRor:BLOCK:RATE` on page 443

4.13.9 Randomly Varying Modulation And Number Of Codes (Type 3i) Settings

(Available for enabled [Advanced Mode](#), HS-SCCH Type 1 and for instruments equipped with option R&S SMW-K83)

1. To access this dialog, select "3GPP FDD > Link Direction > Downlink".
2. Select "3GPP FDD > Basestations > Select Basestation > BS1".

3. In the "Basestation 1" dialog, select "Channel Table > Preset to HSDPA H-Set".
4. In the "Channel Table" tab, select "Channel#12 HS-SCCH > Enhanced Settings > Config...".
5. In the "BS1/Enhanced HSDPA Mode" dialog, select "Common".
6. Select "Advanced Mode > On".
7. Select "HS-SCCH Type > Type 1 (normal)"
8. Select the "Type 3i" tab.

3GPP FDD A: BS1/Enhanced12 HSDPA Mode

HSDPA-Mode **H-Set** Burst-Mode ☒ On

Common *normal* Global Settings Coding Signal Structure HARQ Simulation **Type 3i**

Randomly Varying Modulation And Number Of Codes Off ☒ On

Alternative HS-PDSCH Modulation 16QAM

Alternative Number Of HS-PDSCH Channelization Codes 2

Random Seed 0

This section comprises the settings necessary to configure the signal of both interferer according to the 3i Enhanced Performance Requirements tests, described in 3GPP TS34.12.-1, chapters 9.2.1L and 9.2.1LA.

The used modulation and number of HS-PDSCH codes in an H-Set is randomly selected every HSDPA TTI among four options with equal probability (see [table 4-6](#)).

Table 4-6: Used modulation and number of HS-PDSCH codes

Option	Modulation	Number of HS-PDSCH Codes
1	HS-PDSCH Modulation	Alternative Number of HS-PDSCH Channelization Codes
2	"Alternative HS-PDSCH Modulation" on page 119	Alternative Number of HS-PDSCH Channelization Codes
3	HS-PDSCH Modulation	Number of HS-PDSCH Channelization Codes
4	"Alternative HS-PDSCH Modulation" on page 119	Number of HS-PDSCH Channelization Codes



Although the number of active HS-PDSCH channels varies over time, the overall power of the HS-PDSCH channels in the H-Set stays constant, as the power of the individual HS-PDSCH channels is raised when the number is reduced.

The channel powers displayed in the "BS > Channel Table" are the channel powers during the TTIs in which the [Number of HS-PDSCH Channelization Codes](#) is applied.

The ARB sequence length suggestion (see [Suggested ARB sequence length](#)) does not consider the statistical process of the selection among the four options, it may be necessary to further increase the ARB sequence length to achieve the desired statistical properties.



To generate a signal without unwanted artefacts, select "3GPP FDD > Filter/Clipping/ARB Settings" and set the parameter [Sequence Length ARB](#) to a multiple of the suggested length.

The configured Transport Block Size Table and Transport Block Size Index are used in all TTIs, no matter which of the four options is used. The payload size can vary over time and can deviate from the value displayed with the parameter [Information Bit Payload \(TB-Size\) Stream 1/2](#).

Randomly Varying Modulation And Number Of Codes

Enables/disables the random variation of the modulation and codes.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:RVSTate` on page 398

Alternative HS-PDSCH Modulation

Sets the alternative modulation (see [table 4-6](#)).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:ALTModulation` on page 391

Alternative Number of HS-PDSCH Channelization Codes

Sets the alternative number of HS-PDSCH channelization codes (see [table 4-6](#)).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:ACLlength` on page 390

Random Seed


Sets the seed for the random process deciding between the four option (see [table 4-6](#)).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:SEED` on page 399

4.14 Enhanced Settings for P-CPICH - BS1

- To access this dialog, select "3GPP FDD > BS > Channel Table > P-CPICH > Enhanced Settings > Config".

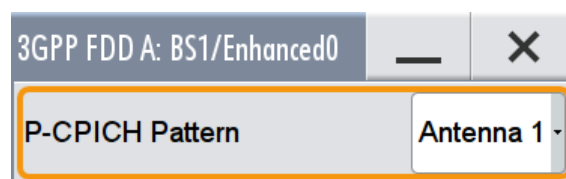**P-CPICH Pattern**



Sets the P-CPICH pattern (channel 0).

Remote command:

`[:SOURCE<hw>] :BB:W3GpP:BSStation<st>:ENHanced:PCPich:PATtern`
on page 424

4.15 Enhanced Settings for P-CCPCH - BS1

- To access this dialog, select "3GPP FDD > BS1 > Channel Table > P-CCPCH > Enhanced Settings > Config".

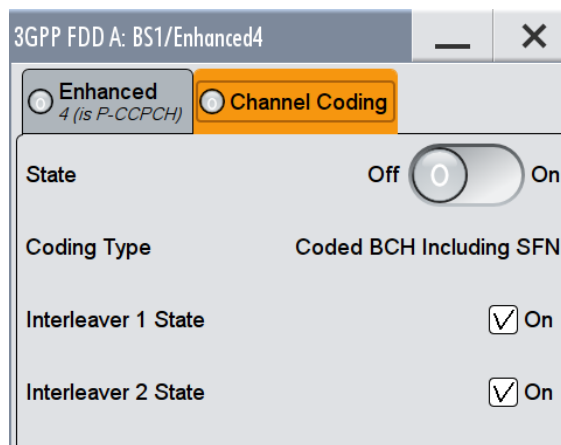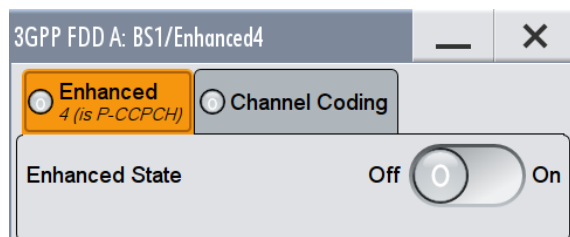

The dialog comprises the settings for configuring the enhanced state of this displayed channel and the channel coding settings. Interleaver states 1 and 2 can be activated separately.

The settings for the enhanced P-CCPCH channel and the enhanced DPCH channels are different (see [chapter 4.16, "Enhanced Settings for DPCHs - BS1"](#), on page 122).

4.15.1 Channel Number and State

Channel Number (Enhanced P-CCPCH)

Displays the channel number and the channel type.

Remote command:

n.a.

State (Enhanced P-CCPCH)

Switches the P-CCPCH (Primary Common Control Phys. Channel) to the enhanced state. The channel signal is generated in realtime.

Remote command:

`[:SOURce<hw>] :BB:W3GpP:BStation:ENHanced:PCCPch:STATe` on page 424

4.15.2 Channel Coding - Enhanced P-CCPCH BS1

The "Channel Coding" section is where the channel coding settings are made.

The channel-coded P-CCPCH (Broadcast Channel BCH) with System Frame Number is generated according to the following principle.

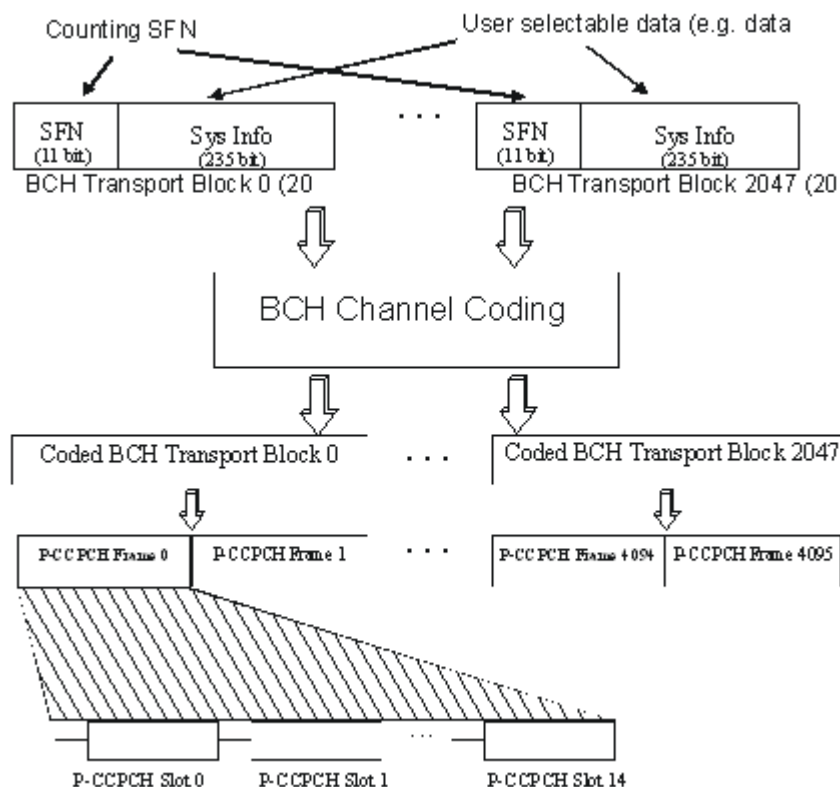


Fig. 4-10: Generation of a channel coded P-CCPCH/BCH

The data blocks of the BCH at transport-channel level comprise data determined for 20 ms of the PCCPCH (i.e. 2 frames) after channel coding. The first field of such a data block is an 11bit long field for the system frame number (SFN). The SFN is automatically incremented by 1 (as stipulated in the standard) from transport block to transport block (equivalent to a step width of 2 frames due to the transport time interval length of 20 ms). After 2048 transport blocks (equivalent to 4096 frames) the SFN is reset and starts again at 0 (SFN restart). An output trigger indicating the SFN restart can be generated.

The SFN format is defined in the standard; it is MSB-first coded.

The remaining system information (a 235-bit long field per block) is filled from the data source selected for the P-CCPCH.

A data list can be used to transmit further specific system information in addition to the SFN. If only the SFN is required, "ALL 0" is recommended as data source for P-CCPCH.

The BCH transport blocks are then channel-coded. A coded transport block comprises the data sequence for two P-CCPCH frames.

Channel Coding State

Activates or deactivates channel coding.

The coding scheme is displayed in the field below.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation:ENHanced:PCCPch:CCODing:STATE`
on page 435

Channel Coding Type

Displays the coding scheme.

The coding scheme of P-CCPCH (BCH) is specified in the standard. The channel is generated automatically with the counting system frame number (SFN). The system information after the SFN field is completed from the selected data source.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation:ENHanced:PCCPch:CCODing:TYPE?`
on page 435

Interleaver

Activates or deactivates channel coding interleaver states 1 and 2.

Note: The interleaver states do not cause the symbol rate to change

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation:ENHanced:PCCPch:CCODing:INTERleaver<di>` on page 435

4.16 Enhanced Settings for DPCHs - BS1

The settings for the enhanced P-CCPCH channel (see [chapter 4.15, "Enhanced Settings for P-CCPCH - BS1"](#), on page 120) and the enhanced DPCH channels are differ-


ent. This section describes the settings for the enhanced DPCH channels (channels#11/12/13). The channels can be configured independently.



Use the [HSDPA Settings - BS](#) dialog to configure the high-speed channels.

4.16.1 Channel Number and State

- To access these settings, select "3GPP FDD > BS1 > Channel Table > Channel#11/12/13 > DPCH > Enhanced/HSDPA Settings > Config... > Enhanced".

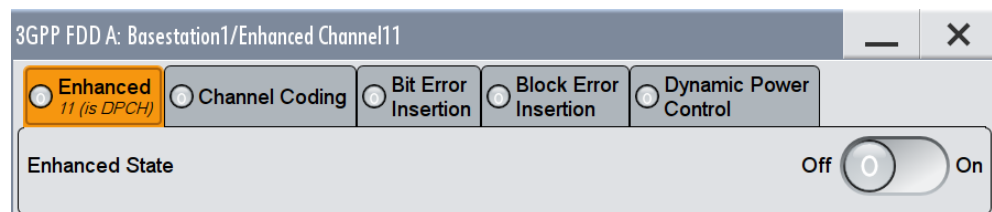

In this tab, you can activate the currently selected channel.

Enhanced State

Switches the DPCH channel to the enhanced state.

In the enhanced state, the modulation signal of the selected channel is generated in realtime. It is possible to activate channel coding and simulate bit and block errors or use dynamic power control. Data lists, for example with user data for the transport layer, can be used as the data source.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:STATE
```

on page 423

4.16.2 Channel Coding

- To access the "Channel Coding" settings, select "3GPP FDD > BS1 > Channel Table > Channel#11/12/13 > DPCH > Enhanced/HSDPA Settings > Config... > Channel Coding".

3GPP FDD A: Basestation1/Enhanced Channel11

Enhanced 11 (is DPCH) **Channel Coding** Bit Error Insertion Block Error Insertion Dynamic Power Control

State Off ☐ On

Coding Type RMC (12.2 kbps)

User Coding...

Slot Format 10

Symbol Rate 30 kps

Bits per Frame (DPDCH) 510

General DTCH 1 PN 9, 244 DTCH 2 PN 9, 100 DTCH 3 PN 9, 100 DTCH 4 PN 9, 100 DTCH 5 PN 9, 100

The "Channel Coding > General" tab comprises the settings for enabling and configuring the channel coding. The provided settings are divided into general settings and several sub-tabs, one per transport channel.

To access the channel coding settings of a transport channel, select the corresponding side tab, for example "DTCH1". Refer to [chapter 4.16.3, "Transport Channel - Enhanced DPCHs BS1"](#), on page 127 for description of the provided settings.

A downlink reference measurement channel according to 3GPP TS 25.101 is generated when the transport channels DTCH (Dedicated Traffic Channel) and DCCH (Dedicated Control Channel), which contain the user data, are mapped to a DPCH (Dedicated Physical Channel) with a different data rate after channel coding and multiplexing. The display below is taken from the standard (TS 25.101) and shows in diagrammatic form the generation of a 12.2 kbps reference measurement channel from the DTCH and DCCH transport channels (see standard for figures and tables of other reference measurement channels).

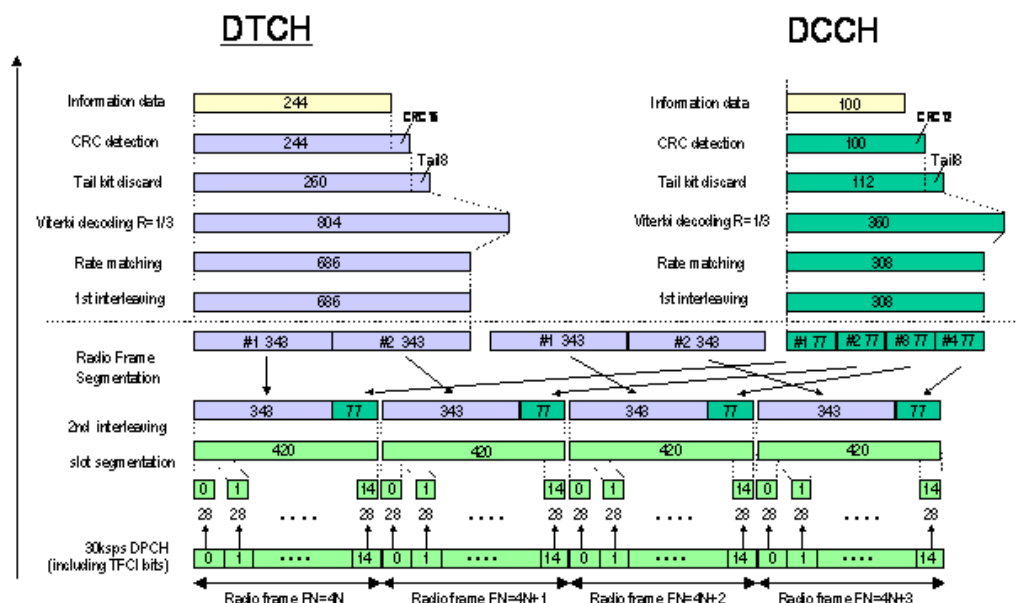


Fig. 4-11: Channel coding of the 12.2 kbps reference measurement channel (downlink)

The [table 4-7](#) shows a summary of the transport channel parameters of the 12.2 kbps reference measurement channel

Table 4-7: Transport channel parameters (12.2 kbps reference measurement channel)

Parameter	DCCH	DTCH
Data Source	All 0	All 0
Transport Block Size	100	244
Transmission Time Interval	40 ms	20 ms
Type of Error Protection	Convolution Coding	Convolution Coding
Coding Rate	1/3	1/3
Rate Matching attribute	256	256
Size of CRC	12	16
Interleaver 1/2	On	On

Channel Coding State

Activates or deactivates channel coding.

Channel-coded measurement channels - so-called "reference measurement channels" - are required for many test procedures specified by the standard.

When channel coding is activated, (depending on the coding type) the slot format (and thus the symbol rate, the pilot length and the TFCI state) are predetermined. The corresponding parameters in the channel table are disabled.

Remote command:

`[[:SOURCE<hw>]:BB:W3GPP:BSTation:ENHanced:CHANNEL<ch0>:DPCH:CCoding:STATE` on page 427

Channel Coding Type

Selects channel coding.

The 3GPP specification defines 4 reference measurement channel coding types, which differ in the input data bit rate bit to be processed (12.2, 64, 144 and 384 kbps). The additional AMR CODER coding scheme generates the coding of a voice channel.

The BTFD coding types with different data rates are also defined in the 3GPP specification (TS 34.121). They are used for the receiver quality test Blind Transport Format Detection. DTX (Discontinuous Transmission) bits are included in the data stream between rate matching and interleaving 1.

User coding can be defined as required in the detailed coding settings menu section revealed with button "Show Details". They can be stored and loaded in the "User Coding" submenu. Selection User is indicated as soon as a coding parameter is modified after selecting a predefined coding type.

The input data bits are taken for channel coding from the data source specified in the "Transport Channel" dialog section. The bits are available with a higher rate at the channel coding output. The allocations between the measurement input data bit rate and the output symbol rate are fixed, that is to say, the symbol rate is adjusted automatically.

The following are available for selection:

"RMC 12.2 kbps"	12.2 kbps measurement channel
"RMC 64 kbps"	64 kbps measurement channel
"RMC 144 kbps"	144 kbps measurement channel
"RMC 384 kbps"	384 kbps measurement channel
"AMR 12.2 kbps"	Channel coding for the AMR coder
"BTFD Rate 1 12.2kps"	Blind Transport Format Detection Rate 1 (12.2 kbps)
"BTFD Rate 2 7.95kps"	Blind Transport Format Detection Rate 2 (7.95 kbps)
"BTFD Rate 3 1.95kps"	Blind Transport Format Detection Rate 3 (1.95 kbps)

Remote command:

`[[:SOURCE<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:TYPE` on page 427

User Coding

Provides access to the standard "File Select" function of the instrument. The provided navigation possibilities in the dialog are self-explanatory.

See also, chapter "File and Data Management" in the R&S SMW User Manual.

User coding of BST1 are files with the predefined file extension *.3g_ccod_d1. The file name and the directory they are stored in are user-definable; the file extension is assigned automatically.

The complete channel coding settings are saved and recalled.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel:DPCH:CCODing:USER:CATalog?` on page 429

`[:SOURCE<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:USER:STORE` on page 429

`[:SOURCE<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:USER:LOAD` on page 429

Slot Format (DPDCH)

Enters the slot format. The slot format (and thus the symbol rate, the pilot length and the TFCI state) depends on the coding type selected. The User Coding selection appears as soon as the slot format is changed.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:SFOFormat` on page 426

Symbol Rate (DPDCH)

Displays the symbol rate.

The symbol rate is determined by the slot format set.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:SRATe?` on page 426

Bits per Frame (DPDCH)

Displays the data bits in the DPDCH component of the DPCH frame at physical level. The value depends on the slot format.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:BPFRame?` on page 425

4.16.3 Transport Channel - Enhanced DPCHs BS1

1. To access this dialog, select "3GPP FDD > BS1 > Channel Table > Channel#11/12/13 > DPCH > Enhanced/HSDPA Settings > Config... > Channel Coding".

- To access the channel coding settings of a transport channel, select the corresponding side tab, for example "DTCH1".

3GPP FDD A: Basestation1/Enhanced Channel11

Enhanced 11 (is DPCH) Channel Coding Bit Error Insertion Block Error Insertion Dynamic Power Control

State Off On

Data Source PN 9

Transport Time Interval 20 ms Transport Blocks 1

Transport Block Size 244 Size Of CRC 16

Rate Matching Attribute 256 DTX Indication Bits 0

Error Protection Conv 1/3

Interleaver 1 State On Interleaver 2 State On

General DTCH 1 PN 9, 244 DTCH 2 PN 9, 100 DTCH 3 PN 9, 100 DTCH 4 PN 9, 100 DTCH 5 PN 9, 100 DTCH 6 PN 9, 100

The dialog provides access to the settings of up to 7 transport channels (TCHs), the DTCHs (DTCH1 to 6) and the DCCH.

Transport Channel State

Activates or deactivates the transport channel.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BStation:ENHanced:CHANnel<ch0>:DPCH: TCHannel<di0>:STATE` on page 434

In case of remote control, DCCH corresponds to :TCHannel0, DTCH1 to : TCHannel1, etc.

Data Source

Selects the data source for the transport channel.

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "PNxx"
An internally generated pseudo-random noise sequence.
- "Pattern"
An internally generated sequence according to a bit pattern.
Use the "Pattern" box to define the bit pattern.
- "Data List/Select DList"
A binary data from a data list, internally or externally generated.
Select "Select DList" to access the standard "Select List" dialog.
 - Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.

- Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.
- Use the standard "File Manager" function to transfer external data lists to the instrument.

See also:

- section "Modulation Data" in the R&S SMW user manual.
- section "File and Data Management" in the R&S SMW user manual.
- section "Data List Editor" in the R&S SMW user manual

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH: TCHannel<di0>:DATA` on page 431

`[:SOURce<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH: TCHannel<di0>:DATA:PATtern` on page 432

`[:SOURce<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH: TCHannel<di0>:DATA:DSElect` on page 431

Transport Time Interval

Sets the number of frames into which a TCH is divided. This setting also defines the interleaver depth.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH: TCHannel<di0>:TTInterval` on page 435

Transport Block

Sets the number of transport blocks for the TCH.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH: TCHannel<di0>:TBCount` on page 434

Transport Block Size

Sets the size of the transport block at the channel coding input.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH: TCHannel<di0>:TBSize` on page 434

Size of CRC

Defines the type (length) of the CRC. Checksum determination can also be deactivated (setting None).

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH: TCHannel<di0>:CRCSize` on page 430

Rate Matching Attribute

Sets data rate matching (Rate Matching).

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH: TCHannel<di0>:RMATtribute` on page 433

DTX Indication Bits

Sets the number of DTX (Discontinuous Transmission) bits. These bits are entered in the data stream between rate matching and interleaver 1. Channel coding of BTFD reference measurement channels Rate 2 and Rate 3 includes DTX267 and DTX644, respectively (see 3GPP TS 34.121).

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
TCHannel<di0>:DTX on page 432
```

Error Protection

Selects error protection.

"None"	No error protection
"Turbo 1/3"	Turbo Coder of rate 1/3 in accordance with the 3GPP specifications.
"Conv 1/2 1/3"	Convolution Coder of rate 1/2 or 1/3 with generator polynomials defined by 3GPP.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
TCHannel<di0>:EPRotecti on page 432
```

Interleaver 1 State

Activates or deactivates channel coding interleaver state 1 of the transport channel. Interleaver state 1 can be set independently in each TCH. Activation does not change the symbol rate.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
TCHannel<di0>:INTerleaver on page 433
```

Interleaver 2 State

Activates or deactivates channel coding interleaver state 2 of all the transport channels. Interleaver state 2 can only be set for all the TCHs together. Activation does not change the symbol rate.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
INTerleaver2 on page 430
```

4.16.4 Error Insertion - Enhanced DPCHs BS1

1. To access this dialog, select "3GPP FDD > BS1 > Channel Table > Channel#11/12/13 > Enhanced/HSDPA Settings > Config...".
2. In the "Basestation /Enhanced Channel" dialog, select one of the following:

- a) Select "Bit Error Insertion".

The screenshot shows a dialog box titled "3GPP FDD A: Basestation1/Enhanced Channel11". It has five tabs: "Enhanced 11 (is DPCH)", "Channel Coding", "Bit Error Insertion" (which is selected and highlighted in orange), "Block Error Insertion", and "Dynamic Power Control". Below the tabs, there is a "State" section with a toggle switch set to "Off". Below that is a "Bit Error Rate" field with the value "0.001 000 0". At the bottom is an "Insert Errors On" dropdown menu currently set to "Physical Layer".

- b) Select "Block Error Insertion".

The screenshot shows the same dialog box as above, but with the "Block Error Insertion" tab selected and highlighted in orange. The "State" toggle switch is still "Off". The "Block Error Rate" field now shows the value "0.100 0". The "Insert Errors On" dropdown menu is not visible in this view.

The dialogs provide the parameters for inserting errors into the data source and into the CRC checksum, for example, to check the bit and block error rate testers.

Bit Error State (Enhanced DPCHs)

Activates or deactivates bit error generation.

Bit errors are inserted into the data fields of the enhanced channels. When channel coding is active, it is possible to select the layer in which the errors are inserted (physical or transport layer).

When the data source is read out, individual bits are deliberately inverted at random points in the data bit stream at the specified error rate in order to simulate an invalid signal.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
DERRor:BIT:STATE on page 441
```

Bit Error Rate

Sets the bit error rate.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
DERRor:BIT:RATE on page 440
```

Insert Errors On

Selects the layer in the coding process at which bit errors are inserted.

"Transport layer"	Bit errors are inserted in the transport layer. This selection is only available when channel coding is active.
"Physical layer"	Bit errors are inserted in the physical layer.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:BIT:LAYer` on page 440

Block Error State

Activates or deactivates block error generation.

The CRC checksum is determined and then the last bit is inverted at the specified error probability in order to simulate an invalid signal.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:BLOCK:STATe` on page 442

Block Error Rate

Sets block error rate.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:BLOCK:RATE` on page 441

4.16.5 Dynamic Power Control - Enhanced DPCHs BS1

(not supported in Baseband C/D)

The "Dynamic Power Control" section comprises the settings necessary to configure the power of the selected enhanced channel and to increase or decrease it within the predefined dynamic range ("Up Range + Down Range") and with the predefined step size ("Power Step") depending on a control signal.

The control signal can be provided either externally, internally (TPC pattern) or manually (see [Mode](#)).

The external control signal has to be supplied at the local T/M 3 or global USER 6 connector, as defined with the parameter "[Connector](#)" on page 135.

The "Dynamic Power Control" is suitable for testing of Closed (Inner) Loop Power Control in two test constellations:

- To test whether the DUT (receiver) correctly performs the SIR (Signal to Interference Ratio) measurement and inserts the corresponding bits into the TPC field of its transmitting signal.
The TPC control information is provided by an external "Dynamic Power Control" signal.
- To test whether the DUT (transmitter) responds with the correct output power to received TPC bits.
To perform this test, use a data list adapted to the test condition as TPC data source. The TPC pattern is defined in the channel table.

The power change of the channels is performed by a switchover of a mapping table, controlled by the "Dynamic Power Control" signal which is queried at the beginning of the pilot field. The limited number of mappings restricts the maximum dynamic range to 30 dB and the step width to min. 0.5 dB. The output power of each channel is thus limited to the dynamic range around the channel-specific start power.



Optaining optimum signal quality

The "Power Up Range" should not be set higher than necessary because the mapping of the I/Q level in this range must be maintained as a level margin.

Example: Principle of the downlink dynamic power control

"Power Up Range = Power Down Range"

Channel#11/13, "Direction > Up"

Channel#12, "Direction > Down"

External control signal is provided

The [figure 4-12](#) illustrates the adjustment in the channel power of these 3 enhanced channels.

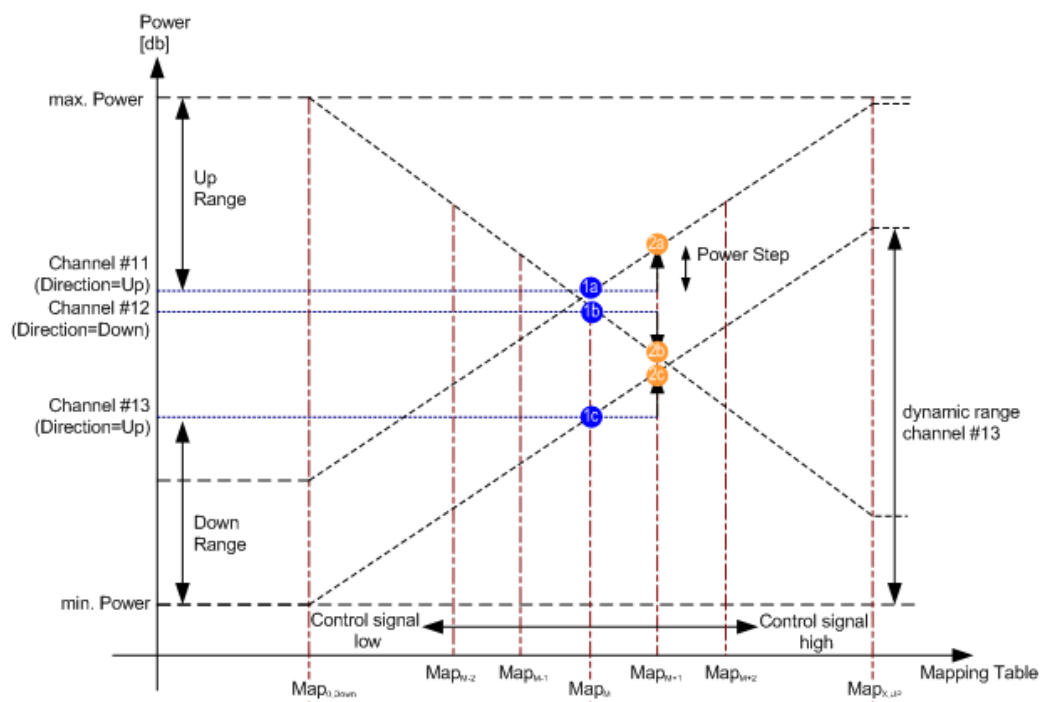


Fig. 4-12: Dynamic Power Control (Down Link)

1a, 1b, 1c = Start power of the corresponding channel#11/12/13

2a, 2b, 2c = Resulting channel power of channel#11/12/13 at high level of the control signal at the beginning of the pilot field.


The available mappings are shown on the X-axis with Map_M being the starting point. In this point, all channels have the start power as selected in the channel table.

At the beginning of the pilot field, the provided control signal is queried in each time-slot. Receiving of a logical "1" results in a switchover to the right mapping Map_{M+1} . This means an increase of the output power by "Power Step" for all channels with "Power Control Mode Up". In this example, the power of channel 12 is decreased by the same value (see figure 4-12).

Receiving of a logical "0" results in a switchover to the left mapping Map_{M-1} . This means a reduction of the output power by "Power Step" for all channels with "Power Control Mode Down". The power of channel 12 is increased by the same value.

How to access the settings

- To access the "Dynamic Power Control" settings, select "3GPP FDD > Channel Table > DPCH > Enhanced Settings > Dynamic Power Control".

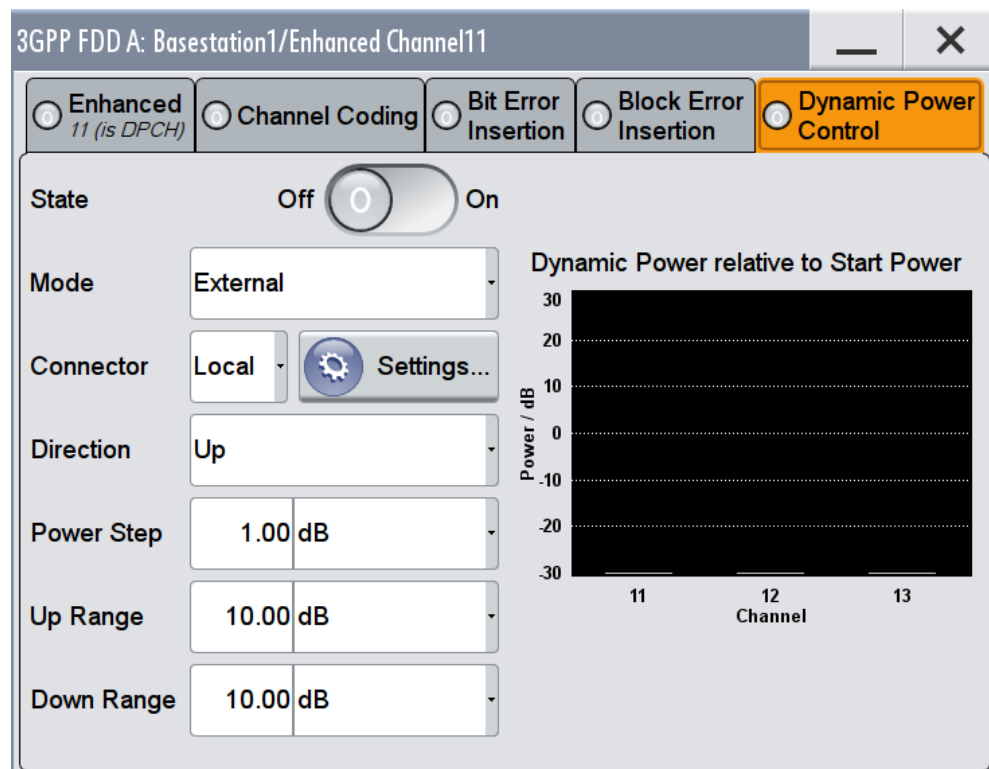

Dynamic Power Control State

Activates or deactivates the "Dynamic Power Control" for the selected enhanced channel.

With activated Dynamic Power Control, the power of the enhanced channel can be increased or decreased within the predefined dynamic range ("Up Range" + "Down Range") and with the predefined step size ("Power Step") with an external control signal.

The instrument expects an external control signal at the selected "[Connector](#)" on page 135.

The "Direction" settings determine if the channel power is increased or decreased by a high level of the control signal.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
DPControl:STATE on page 438
```

Mode

Selects the control signal for Dynamic Power Control.

- | | |
|------------|---|
| "External" | The instrument expects an external control signal at the selected "Connector" on page 135. |
| "TPC" | The TPC pattern is used for Dynamic Power Control. This selection corresponds to selection (Mis) Use TPC for not enhanced DPCHs. |
| "Manual" | The control signal is manually produced by selecting one of the buttons 0 or 1. Button 1 corresponds to a positive control signal, button 0 to a negative control signal.
The channel power is increased or decreased depending on the "Direction" setting by the selected power step. |

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
DPControl:MODE on page 438
[ :SOURCE<hw> ] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
DPControl:STEP:MANual on page 439
```

Connector

Determines the input connector the external control signal is supplied at.

In this firmware version, the "Global" connector is disabled.

See [chapter 3.2, "Routing and enabling an external control signal"](#), on page 52.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
DPControl:CONNector on page 437
```

Direction

Determines whether the channel power is increased or decreased by a high level of the control signal (see [figure 4-12](#)).

- | | |
|--------|---|
| "Up" | A high level of the control signal leads to an increase of channel power. |
| "Down" | A high level of the control signal leads to a decrease of channel power. |

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
DPControl:DIRection on page 437
```

Power Step

Sets step width by which – with "Dynamic Power Control" being switched on - the channel power of the selected enhanced channel in the timeslot grid (= 0,667 ms) is increased or decreased within the set dynamic range ("Up Range + Down Range").

The start power of the channel is set in the "Power" column of the channel table.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
DPControl:STEP[ :EXTernal ] on page 439
```

Up Range/Down Range

Sets dynamic range by which – with "Dynamic Power Control" switched on – the channel powers of the enhanced channels can be increased. The resulting "Dynamic Power Control" dynamic range ("Up Range" + "Down Range") depends on the selected "Power Step" and is as follow:

- For "Power Step" < 1 dB, the dynamic range ("Up Range" + "Down Range") <= 30 dB
- For "Power Step" => 1 dB, the dynamic range ("Up Range" + "Down Range") <= 60 dB

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BSTation<st>:ENHanced:CHANnel<ch0>:DPCH:
DPControl:RANGE:UP on page 438
[ :SOURce<hw> ] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
DPControl:RANGE:DOWN on page 438
```

Power Control Graph

Indicates the deviation of the channel power (delta POW) from the set power start value of the corresponding enhanced channels.

The graph is automatically displayed with "Dynamic Power Control" switched on.

Note: A realtime update of the display in the timeslot (= 0.667 ms) is not possible and is performed in a more coarse time interval. The power control graph does not display fast channel power changes. The settled state of the control loop is however easy to recognize.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
DPControl[ :POWER ] ? on page 439
```

4.17 S-CCPCH Settings - BS Channel Table

- To access the "S-CCPCH" settings, select "3GPP FDD > BS > Channel Table > Channel type > S-CCPCH > DPCCH Settings > Config...".

3GPP FDD A: BS1/S-CCPCH5		
TFCI 2	Data 10	Pilot 8
Slot Format		3
TFCI	<input checked="" type="checkbox"/> Use	
TFCI	0	
Pilot Length	8 Bit	

The selected slot format determines the provided settings. Whenever the "TFCI State" and PILOT LENGTH settings are changed, the slot format is adjusted accordingly.

Slot Structure (S-CCPCH)

Displays the slot structure.

TFCI 8	Data 296	Pilot 16
-----------	-------------	-------------

The structure of the slot depends on the selected slot format (see also 3GPP TS 25.211, Table 18: Secondary CCPCH fields)

Slot Format (S-CCPCH)

Displays the slot format.

The slot format displayed changes when a change is made to the TFCI and Pilot control field settings.

Remote command:
n.a.

Use TFCI

Activates TFCI field usage.

Remote command:

[:SOURCE<hw>] :BB:W3GPp:BSStation<st>:CHANnel<ch0>:DPCCh:TFCI:STATE on page 383

The remote-control command is not valid for multi channel mode.

TFCI Value

Enters the value of the TFCI field (Transport Format Combination Indicator) . This value is used to select a combination of 30 bits, which is divided into two groups of 15 successive slots.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TFCl`

on page 382

The remote-control command is not valid for multi channel mode.

Pilot Length

Sets the length of the pilot fields.

The range of values for this parameter depends on the channel type and the symbol rate.

To achieve a constant slot length, the data fields are lengthened or shortened depending on the pilot length, as defined in the standard.

Note: The pilot fields of all active power-controlled DPCHs must be of the same length if [Dynamic Power Control State](#) with external control signal is active.

Remote command:


`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:PLENgt`

on page 381

The remote-control command is not valid for multi channel mode.

4.18 Config AICH/AP-AICH - BS Channel Table

- To access the dialog for configuring the fields of the dedicated physical control channel, select "3GPP FDD > BS > Channel Table > AICH/AP-AICH > DPCCH Sett > Config...".

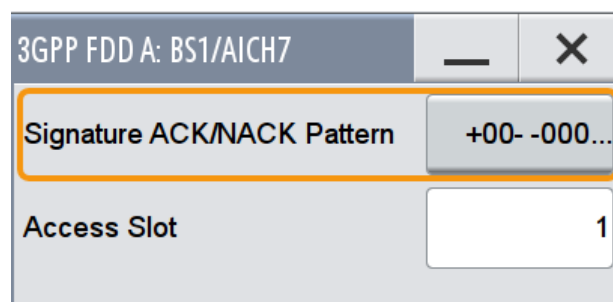

The dialog comprises the parameters for configuring the signature pattern and selecting the slot.

Signature ACK/NACK Pattern

Enters the 16 bit pattern for the ACK/NACK field.

This field is used by the base station to acknowledge, refuse or ignore requests of up to 16 user equipments.

""+" = ACK"	The ACK is sent. Transmission was successful and correct.
""- = NACK"	The NACK is sent. Transmission was not correct.
""0" = DTX"	Nothing is sent. Transmission is interrupted (Discontinuous Transmission (DTX)).

Remote command:

[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:AICH:SAPattern
on page 377

[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:APAIch:
SAPattern on page 378

Access Slot

Selects the slot in which the burst is transmitted.

Remote command:

[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:AICH:ASLOt
on page 377

[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:APAIch:ASLOt
on page 378

4.19 DPCCH Settings - BS Channel Table

The "DPCCH" settings dialog provides the parameters for configuring the fields of the dedicated physical control channel. The selected slot format determines the available settings.

4.19.1 Common Slot Structure (DPCCH)

1. To access these settings dialog, select "3GPP FDD > BS > Channel Table > DPCH > DPCCH Settings > Config...".

2. Select "Common".

3GPP FDD A: BS1/DPCCH11

Common TPC Settings DPCCH Power Offset

Data 6	TPC 2	Data 24	Pilot 8
-----------	----------	------------	------------

Slot Format 10

TFCI ☐ Use

TFCI

Pilot Length

Multi Code State ☐ On

This dialog contains the parameters for configuring the slot format. Whenever you change the "TFCI State" and "Pilot Length" settings, the slot format is adjusted accordingly.

Data 6	TPC 2	Data 28	Pilot 4
-----------	----------	------------	------------

The upper section of the dialog shows the structure. It depends on the slot format selected (see also 3GPP TS 25.211, Table 11: DPDCH and DPCCH fields)

Slot Format (DPCCH)

Displays the slot format.

The slot format displayed changes when a change is made to the TFCI and Pilot control field settings.

Remote command:
n.a.

Use TFCI

Activates TFCI field usage.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TFCI:STATE` on page 383

The remote-control command is not valid for multi channel mode.

TFCI Value

Enters the value of the TFCI field (Transport Format Combination Indicator) . This value is used to select a combination of 30 bits, which is divided into two groups of 15 successive slots.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TFCI` on page 382

The remote-control command is not valid for multi channel mode.

Pilot Length

Sets the length of the pilot fields.

The range of values for this parameter depends on the channel type and the symbol rate.

To achieve a constant slot length, the data fields are lengthened or shortened depending on the pilot length, as defined in the standard.

Note: The pilot fields of all active power-controlled DPCHs must be of the same length if [Dynamic Power Control State](#) with external control signal is active.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:PLENgtH` on page 381

The remote-control command is not valid for multi channel mode.

Multicode State (DPCCH)

Activates multicode transmission.

Multicode transmission can be activated for a group of channels destined for the same receiver that is to say, belonging to a radio link. The first channel of this group is used as the master channel.

With multicode transmission, the common components (Pilot, TPC and TCFI) for all the channels are spread using the spreading code of the master channel.

This parameter is only available for the DPCHs.


Note: The remote-control command is not valid for multi channel mode.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:MCODe` on page 380

4.19.2 TPC Settings

1. To access these settings dialog, select "3GPP FDD > BS > Channel Table > DPCCH > DPCCH Settings > Config...".
2. Select "TPC Settings".

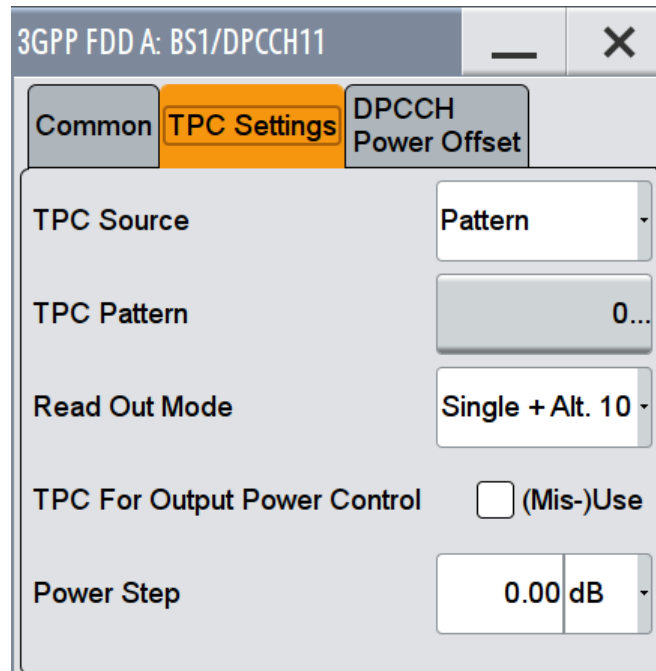

This tab provides the parameters for configuring the TPC data source and read out mode.

TPC Data Source (DPCCH)

Selects the data source for the TPC field (Transmit Power Control). This field is used to control the transmit power.

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "Pattern"
An internally generated sequence according to a bit pattern.
Use the "Pattern" box to define the bit pattern.
- "Data List / Select TPC List"
A binary data from a data list, internally or externally generated.
Select "Select TPC List" to access the standard "Select List" dialog.
 - Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
 - Use the standard "File Manager" function to transfer external data lists to the instrument.
 - Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.

See also:

- section "Modulation Data" in the R&S SMW user manual.
- section "File and Data Management" in the R&S SMW user manual.
- section "Data List Editor" in the R&S SMW user manual.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:DATA`
on page 383

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:DATA:`
`PATtern` on page 384

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:DATA:`
`DSElect` on page 384

The remote-control command is not valid for multi channel mode.

TPC Read Out Mode (DPCCH)

Defines TPC data usage.

With 3GPP, the TPC bits are used to signal the increase or reduction in transmit power to the called station. With all read out modes, one bit is taken from the data stream for the TPC field for each slot and entered into the bit stream several times (depending on the symbol rate). The difference between the modes lies in the usage of the TPC bits.

These different modes can be used, for example, to deliberately set a base station to a specific output power (e.g. with the pattern 11111) and then let it oscillate around this power (with Single + alt. 01 and Single + alt. 10). This then allows power measurements to be carried out at the base station (at a quasi-constant power). Together with the option (Mis-) Use TPC for output power control (see below), TPC Read Out Mode can also be used to generate various output power profiles.

"Continuous:" The TPC bits are used cyclically.

"Single + All 0" The TPC bits are used once, and then the TPC sequence is continued with 0 bits.

"Single + All 1" The TPC bits are used once, and then the TPC sequence is continued with 1 bit.

"Single + alt. 01" The TPC bits are used once and then the TPC sequence is continued with 0 and 1 bits alternately (in multiples, depending on by the symbol rate, for example, 00001111).

"Single + alt. 10" The TPC bits are used once and then the TPC sequence is continued with 1 and 0 bits alternately (in multiples, depending on by the symbol rate, for example, 11110000).

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:READ`
on page 385

The remote-control commands are not valid for multi channel mode.

Misuse TPC for Output Power Control (DPCCH)

Defines "mis-" use of the TPC data.

With 3GPP, the TPC bits are used to signal the increase or reduction in transmit power to the called station. If ("Mis-) use TPC for output power control" is activated, the specified pattern is misused; in order to vary the intrinsic transmit power over time. A bit of this pattern is removed for each slot in order to increase (bit = "1") or reduce (bit = "0") the channel power by the specified power step ("Power Step"). The upper limit for this is 0 dB and the lower limit -60 dB. The following envelope is produced at a channel power of 0 dB, power step 1.0 dB and pattern "001110100000011" and TPC Pattern ReadOut Mode "Continuous".

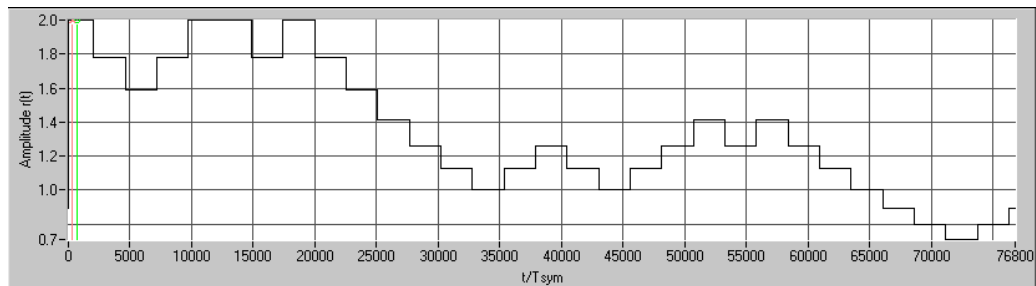


Fig. 4-13: Dynamic change of channel power (continuous)

Note: The change in power is always carried out (as stipulated in the standard) at the start of the slot pilot field. Misuse TPC for Output Power Control is not available for enhanced DPCCHs. Power Control via TPC pattern for enhanced channels can be selected for active Dynamic Power Control (see [chapter 4.16.5, "Dynamic Power Control - Enhanced DPCCHs BS1"](#), on page 132).

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:
MISuse on page 384
```

The remote-control command is not valid for multi channel mode.

TPC Power Step (DPCCH)

Sets the step width of the power change in dB for (Mis-) use TPC for output power control.

Note: Misuse TPC for Output Power Control is not available for enhanced DPCCHs. Power Control via TPC pattern for enhanced channels can be selected for active Dynamic Power Control (see [chapter 4.16.5, "Dynamic Power Control - Enhanced DPCCHs BS1"](#), on page 132).

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:PSTep
on page 385
```

The remote-control command is not valid for multi channel mode.

4.19.3 DPCCH Power Offset

1. To access these settings dialog, select "3GPP FDD > BS > Channel Table > DPCH > DPCCH Settings > Config...".

2. Select "DPCCH Power Offset".

The screenshot shows a configuration window titled "3GPP FDD A: BS1/DPCCH11". It has three tabs: "Common", "TPC Settings", and "DPCCH Power Offset". The "DPCCH Power Offset" tab is selected and highlighted in orange. It contains three settings, each with a text box and a unit dropdown menu:

Setting	Value	Unit
Power Offset Pilot	0.00	dB
Power Offset TPC	0.00	dB
Power Offset TFCI	0.00	dB

This tab provides the parameters for configuring power offsets of the control fields to the channel power.

Power Offset Pilot (DPCCH)

Sets the power offset of the pilot field to the channel power in dB.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:POFFset:PILot` on page 381

The remote-control command is not valid for multi channel mode.

Power Offset TPC (DPCCH)

Sets the power offset of the TPC field to the channel power in dB.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:POFFset:TPC` on page 382

The remote-control command is not valid for multi channel mode.

Power Offset TFCI (DPCCH)

Sets the power offset of the TFCI field to the channel power in dB.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:POFFset:TFCI` on page 382

The remote-control command is not valid for multi channel mode.

4.20 Config E-AGCH - BS Channel Table

- To access the dialog for configuring the fields of the HSUPA control channels, select "3GPP FDD > BS > Channel Table > E-AGCH > DPCCH Settings > Config...".

	UEID	Absolute Grant Value Index	Absolute Grant Scope
0	0	0	All HARQ Processes
1	0	0	All HARQ Processes
2	0	0	All HARQ Processes

The dialog provides the parameter required to configure the HSUPA control channels.

E-AGCH Information Field Coding

Enables/disables the information coding. Disabling this parameter corresponds to a standard operation, i.e. no coding is performed and the data is sent uncoded. Enabling this parameter allows you to configure the way the data is coded.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa] :EAGCh:IFCoding` on page 410

E-DCH TTI

Switches between 2 ms and 10 ms. The processing duration also influences the number of used slots.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa] :EAGCh:TTIEdch` on page 412

Number of Configurable TTIs

Sets the number of configurable TTIs.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EAGCh:
TTICount on page 411
```

UEID (A-GCH)

Sets the UE Id for the selected TTI.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EAGCh:
TTI<di0>:UEID on page 411
```

Absolute Grant Value Index

Sets the Index for the selected TTI. According to the TS 25.212 (4.10.1 A.1), there is a cross-reference between the grant index and the grant value. The TTI configuration of the table is used cyclically. Depending on the selection made for the parameter "E-DCH TTI", each table row corresponds to a 2ms TTI or to a 10ms TTI.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EAGCh:
TTI<di0>:AGVIndex on page 411
```

Absolute Grant Scope

Sets the scope of the selected grant. According to the TS 25.321, the impact of each grant on the UE depends on this parameter.

For E-DCH TTI = 10ms, the "Absolute Grant Scope" is always All HARQ Processes.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EAGCh:
TTI<di0>:AGScope on page 411
```

4.21 Config E-RGCH/E-HICH - BS Channel Table

- To access the "Config E-RGCH" or "Config E-HICH" dialog for configuring the fields of the HSUPA control channels, select "3GPP FDD > BS > Channel Table > E-RGCH/E-HICH > DPCCH Settings > Config...".

The dialogs provide the parameters for configuring the corresponding HSUPA control channels.

Type of Cell

Switches between Serving Cell and Non Serving Cell. The cell type determines the number of used slots.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:CTYPe` on page 414

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:CTYPe` on page 412

E-DCH TTI

Switches between 2 ms and 10 ms. The processing duration also influences the number of used slots.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:TTIEdch` on page 416

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:TTIEdch` on page 414

Signature Hopping Pattern Index – HSUPA BS

Enters a value that identifies the user equipment. The values are defined in TS 25.211.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:SSINdex` on page 415

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:SSINdex` on page 414

Relative Grant Pattern

(This feature is available for E-RGCH only.)

Enters a pattern: 0 = Hold, + = Up, - = Down.

Note: Pattern + is entered using the numeric key 1. Pattern - is entered via the numeric key +/-.

For Non Serving Cell "1" is not allowed.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:RGPattern` on page 415

ACK/NACK Pattern

(This feature is available for E-HICH only.)

Enters the pattern for the ACK/NACK field.

For Non Serving Cell only "+" (ACK) and "0" (no signal) is allowed. For Serving Cells only "+" (ACK) and "-" (NACK) is allowed.

Note: Pattern + is entered using the numeric key 1. Pattern - is entered via the numeric key +/-.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:RGPattern` on page 413

Tau DPCH

Enters the offset of the downlink dedicated offset channels.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:DTAU` on page 413

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:DTAU` on page 415

Tau E-RGCH/E-HICH

Displays the offset of the P-CCPCH frame boundary.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:ETAU?` on page 413


`[:SOURCE<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:ETAU?` on page 415

4.22 Config F-DPCH - BS Channel Table

This section provides the description of the setting parameters for the fractional dedicated physical control channel.

4.22.1 Common Settings

1. To access these settings, select "3GPP FDD > BS > Channel Table > F-DPCCH > DPCCH Settings > Config...".
2. Select "Common".

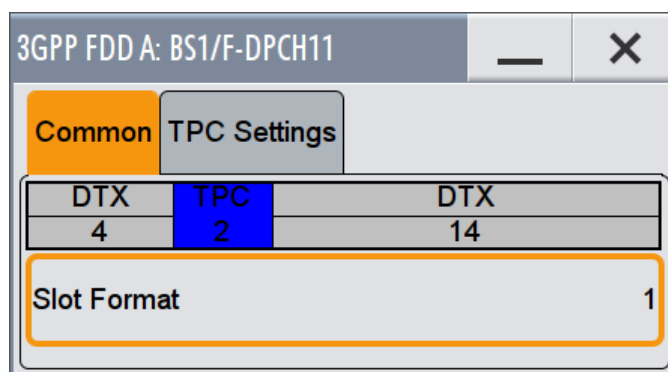

The "Common" tab shows the slot structure and format of the F-DPCH channel.

Slot Format (F-DPCH)

Displays the slot format as selected with the parameter "Slot Format" in the Channel Table.

The corresponding slot structure is displayed above the parameter.

DTX	TPC	DTX
2	2	16

Slot Formats 1 .. 9 are enabled only for instruments equipped with option R&S SMW-K83.

The difference between the F-DPCH slot formats is the position of the 2 bits TPC field.


Remote command:

n.a.

4.22.2 TPC Settings

1. To access these settings, select "3GPP FDD > BS > Channel Table > F-DPCCH > DPCCH Settings > Config...".

2. Select "TPC Settings".

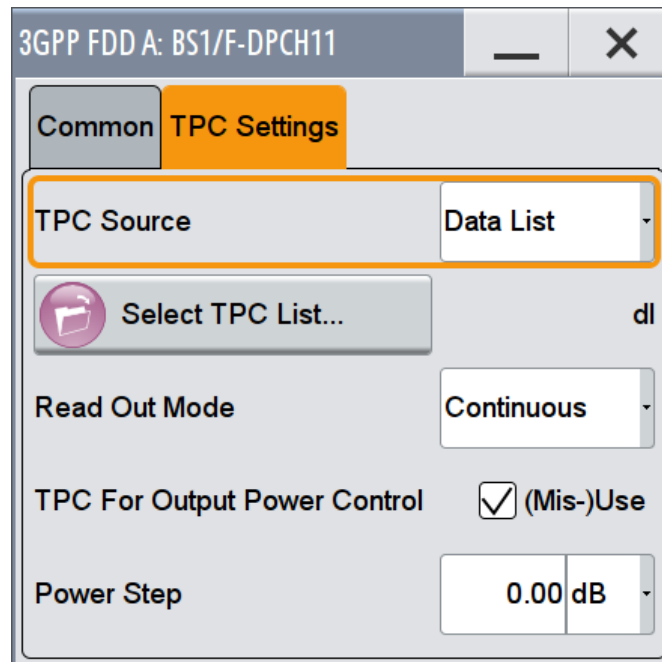

This tab contains the parameters for configuring the TPC data source and read out mode.

TPC Source

Selects the data source for the F-DPCH channel.

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "PNxx"
An internally generated pseudo-random noise sequence.
- "Pattern"
An internally generated sequence according to a bit pattern.
Use the "Pattern" box to define the bit pattern.
- "Data List/Select DList"
A binary data from a data list, internally or externally generated.
Select "Select DList" to access the standard "Select List" dialog.
 - Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
 - Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.
 - Use the standard "File Manager" function to transfer external data lists to the instrument.

See also:

- section "Modulation Data" in the R&S SMW user manual.
- section "File and Data Management" in the R&S SMW user manual.

- section "Data List Editor" in the R&S SMW user manual

Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCh:TPC:DATA` on page 386

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCh:TPC:DATA:DSElect` on page 387

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCh:TPC:DATA:PATtern` on page 387

TPC Read Out Mode (F-DPCH)

Defines TPC data usage.

With 3GPP, the TPC bits are used to signal the increase or reduction in transmit power to the called station. With all read out modes, one bit is taken from the data stream for the TPC field for each slot and entered into the bit stream several times (depending on the symbol rate). The difference between the modes lies in the usage of the TPC bits.

These different modes can be used, for example, to deliberately set a base station to a specific output power (e.g. with the pattern 11111) and then let it oscillate around this power (with Single + alt. 01 and Single + alt. 10). This then allows power measurements to be carried out at the base station (at a quasi-constant power). Together with the option (Mis-) Use TPC for output power control TPC Read Out Mode can also be used to generate various output power profiles.

"Continuous:" The TPC bits are used cyclically.

Note that, the remote-control commands are not valid for multi channel mode.

"Single + All 0" The TPC bits are used once, and then the TPC sequence is continued with 0 bits.

"Single + All 1" The TPC bits are used once, and then the TPC sequence is continued with 1 bit.

"Single + alt. 01" The TPC bits are used once and then the TPC sequence is continued with 0 and 1 bits alternately (in multiples, depending on by the symbol rate, for example, 00001111).

"Single + alt. 10" The TPC bits are used once and then the TPC sequence is continued with 1 and 0 bits alternately (in multiples, depending on by the symbol rate, for example, 11110000).


Remote command:

`[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCh:TPC:READ` on page 388

TPC For Output Power Control (Mis-) Use

Defines "mis-" use of the TPC data.

With 3GPP, the TPC bits are used to signal the increase or reduction in transmit power to the called station. If "(Mis-) use TPC for output power control" is activated, the specified pattern is misused; in order to vary the intrinsic transmit power over time. A bit of this pattern is removed for each slot in order to increase (bit = "1") or reduce (bit = "0") the channel power by the specified power step ("Power Step"). The upper limit for this is 0 dB and the lower limit -60 dB. The following envelope is produced at a channel power of 0 dB, power step 1.0 dB and pattern "001110100000011" and TPC Pattern ReadOut Mode "Continuous":

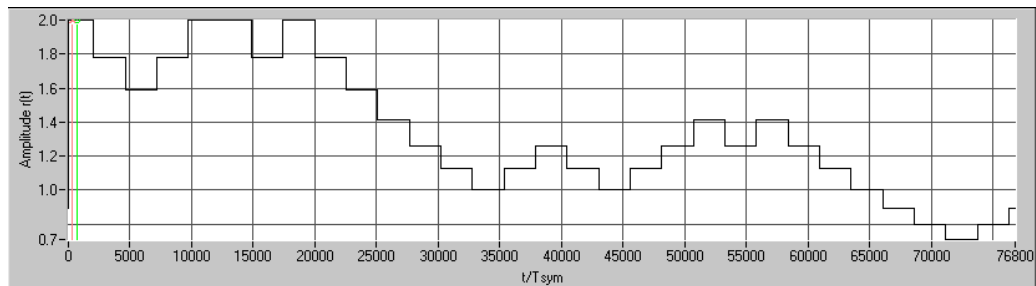

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCh:
TPC:MiSuse on page 388
```

TPC Power Step (F-DPCH)

Sets the step width of the power change in dB for "(Mis-) use TPC for output power control".

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCh:
TPC:PSTep on page 388
```

4.23 Multi Channel Assistant - BS

- To access this dialog, select "3GPP FDD > BS > Channel Table > Multi Channel Assistant".

3GPP FDD A Basestation1: Multi Channel Assistant

Start Channel Number	11	Stop Channel Number	11
Channel Type	DPCH		
Slot Format #	8		
Symbol Rate	30 ksps		
Channelization Code	0	Channelization Code Step	0
Power	0.00 dB	Power Step	0.00 dB
Data Source	PN 9		
DPCCH Settings...			
Timing Offset	0	Timing Offset Step	0
Channel State	<input type="checkbox"/> On		
Accept			

The "Multi Channel Assistant" allows several channels to be set simultaneously and is only available for the channel types DPCH, HS-SCCH, HS QPSK, HS 16QAM and HS 64QAM.

Enhanced state is automatically deactivated. The channel table is only filled with new values when the "Accept" button is pressed.

Start Channel Number

Enters the index for the start channel of the channel range that is set jointly.

Remote command:

n.a.

Stop Channel Number

Enters the index for the stop channel of the channel range that is set jointly.

Remote command:

n.a.

Channel Type

Enters the channel type for the channel range that is set jointly. Available for selection are DPCH, HS-SCCH, HS QPSK, HS 16QAM, or HS 64QAM.

Remote command:

n.a.

Slot Format

Enters the slot format.

For DPCH channels, the slot formats are 0 to 16.

A slot format defines the structure of a slot made of data and control fields and includes the symbol rate.

The individual parameters of a slot can later be changed, with the slot format being adjusted, if necessary.

This parameter is not available for high-speed channels.

Note: For the "DPCCH Settings", this value is read-only.

Remote command:

n.a.

Symbol Rate

Sets the symbol rate. The range of values depends on the channel selected.

The symbol rate is determined by the slot format set. A change in the symbol rate leads automatically to an adjustment of the slot format.

Remote command:

n.a.

Channelization Code

Sets the channelization code for the start channel.

The channel is spread with the specified channelization code (spreading code).

The range of values of the channelization code depends on the symbol rate of the channel.

The range of values runs from 0 to $(\text{chip_rate}/\text{symbol_rate}) - 1$

Remote command:

n.a.

Channelization Code Step

Sets the step width for the channelization code from channel to channel.

The valid range of values for the channelization code of an individual channel must not be exceeded. If the range of values is exceeded, the channelization code is limited automatically.

Remote command:

n.a.

Power

Sets the channel power of the start channel in dB.

The power entered is relative to the powers of the other channels and does not initially relate to the "Level" power display. If [Adjust Total Power to 0dB](#) is executed (top level of the 3GPP dialog), all the power data is relative to 0 dB.

Note: The maximum channel power of 0 dB applies to non-blanked channels (duty cycle 100%), with blanked channels, the maximum value can be increased (by "Adjust Total Power") to values greater than 0 dB (to $10 \cdot \log_{10}(1/\text{duty_cycle})$). The Power value is also the starting power of the channel for Misuse TPC and Dynamic Power Control

Remote command:

n.a.

Power Step

Enters the step width for the change of channel power from channel to channel.

The valid range of values must not be exceeded. If the range of values is exceeded, the power is automatically limited to the permissible of -80 dB to 0 dB.

Remote command:

n.a.

Data Source

Selects data source.

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "PNxx"
An internally generated pseudo-random noise sequence.
- "Pattern"
An internally generated sequence according to a bit pattern.
Use the "Pattern" box to define the bit pattern.
- "Data List/Select DList"
A binary data from a data list, internally or externally generated.
Select "Select DList" to access the standard "Select List" dialog.
 - Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
 - Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.
 - Use the standard "File Manager" function to transfer external data lists to the instrument.

See also:

- section "Modulation Data" in the R&S SMW user manual.
- section "File and Data Management" in the R&S SMW user manual.
- section "Data List Editor" in the R&S SMW user manual

Remote command:

n.a.

DPCCH Settings

Accesses the dialog for configuring DPCCH channels, see [chapter 4.19, "DPCCH Settings - BS Channel Table"](#), on page 139.

Remote command:

n.a.

In contrast to setting a single channel, the remote control commands are not available.

Timing Offset

Sets the timing offset for the start channel.

The timing offset determines the shift of the source symbols before interleaving.

The absolute starting time of the frame (slot 0) is shifted relative to the start of the scrambling code sequence by the `timing offset * 256 chips`. This means that whatever the symbol rate, the resolution of the timing offset is always 256 chips.

This procedure is used to reduce the crest factor. A good way to obtain a lower crest factor is to use an offset of 1 from channel to channel, for example.

Remote command:

n.a.

Timing Offset Step

Sets the step width for the timing offset from channel to channel.

The valid range of values must not be exceeded. If the range of values is exceeded, the timing offset is automatically limited to the permissible range.

Remote command:

n.a.

Channel State

Activates or deactivates all the channels in the set channel range.

Remote command:

n.a.

Accept

Executes automatic completion of the channel table in accordance with the parameters set.

Remote command:

n.a.

4.24 User Equipment Configuration (UE)

1. To access the user equipment settings, select "3GPP FFD > Link Direction > Uplink".

2. Select "3GPP FDD > User Equipment > UE 1/2/3/4".

The "User Equipment" dialog provides the parameters for configuring the general settings of mobile terminal equipment, specific user equipment related settings, as well as the channel table with graphical display of the structure of the currently selected channel.

A user equipment has a maximum of 6 DPDCHs, with parameters largely prescribed by the 3GPP specification TS 25.211. To simplify operation, the settings are grouped into three modes with following main differences:


- With the "DPCCH + DPDCH" mode, the HSDPA channel HS-DPCCH and the HSUPA channels E-DPCCH and E-DPDCH can be activated.
- With the "PRACH only" and "PCPCH only" modes, there is also a choice between "Standard" (all parameters can be set) and "Preamble only" (only the preamble can be set).

The dialog of each particular mode only displays the parameters that are relevant.

The DPCCH and one DPDCH of user equipment 1 are generated in realtime (enhanced mode). Depending on the actual configurations, other channels of user equipment 1 may also be generated in realtime. The PRACH and PCPCH channels are not generated in realtime.

4.24.1 General and Common Settings

- Select "Common".

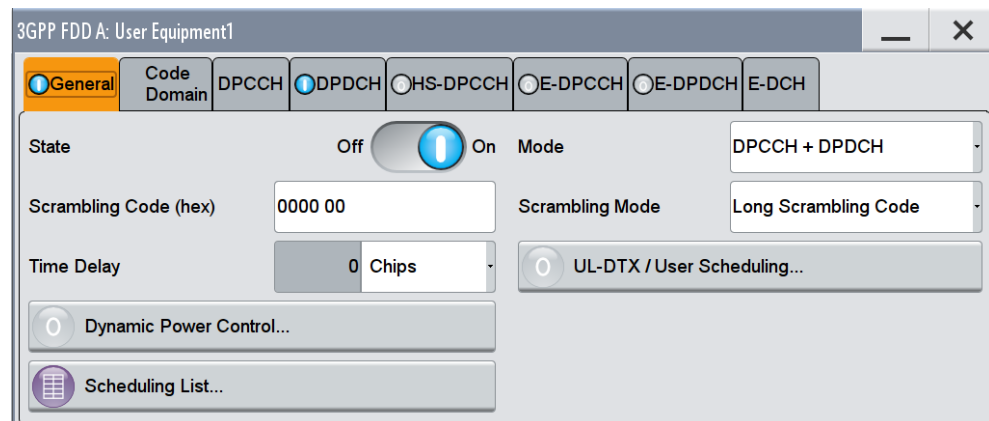

The "General" tab comprises the settings necessary to select the mode, e.g. "PRACH Settings" or "DPCCH Settings".

State

Activates or deactivates the selected user equipment. The number of the selected user equipment is specified in the menu header.

Remote command:

`[:SOURCE<hw>] :BB:W3Gpp:MSTation<st>:STATE` on page 448

Mode

Selects the mode in which the user equipment is to work. The lower part of the menu will change in accordance with the mode. The following modes are available:

"PRACH only - Standard"

In this mode, the instrument generates a single physical random access channel (PRACH). This channel is needed to set up the connection between the user equipment and the base station. All the PRACH parameters can be set in the PRACH Settings section (see [chapter 4.36, "PRACH Settings - UE"](#), on page 235).

"PRACH only - Preamble only"

In this mode, the instrument only generates the preamble of a physical random access channel (PRACH). Only the PRACH preamble parameters can be set in the PRACH Settings section. This mode is needed for Test Case 8.8 TS 25.141.

"PCPCH only - Standard"

In this mode the instrument generates a single physical common packet channel (PCPCH). This channel is used to transmit packet-oriented services (e.g. SMS). The specific PCPCH parameters can be set in the PCPCH Settings section (see [chapter 4.37, "PCPCH Settings - UE"](#), on page 245).

"PCPCH only - Preamble only"

In this mode, the instrument only generates the preamble of a physical common packet channel (PCPCH). Only the PRACH preamble parameters can be set in the PCPCH Settings section. This mode is needed for Test Case 8.9 TS 25.141.

"DPCCH + DPDCH"

In this mode the instrument generates a control channel (DPCCH) and up to 6 data channels (DPDCH). This mode corresponds to the standard mode of user equipment during voice and data transmission.

In addition, the HS-DPCCH, E-DPCCH and E-DPDCH channels can be activated.

Channel-specific parameters can be set in the section of the individual channels.

The DPCCH and one DPDCH of user equipment 1 are generated in realtime (enhanced mode). Depending on the actual configurations, other channels of user equipment 1 may also be generated in realtime.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:MODE` on page 446

Scrambling Code (hex)

Sets the scrambling code.

The scrambling code is used to distinguish the transmitter (UE) by transmitter-dependent scrambling. Hexadecimal values are entered. Long or short scrambling codes can be generated (see also [chapter 3.1.1, "Scrambling Code Generator"](#), on page 21).

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:SCODE` on page 447

Scrambling Mode

Sets the type of scrambling code.

With scrambling code, a distinction is made between Long and Short Scrambling Code (see also Section [Scrambling Code Generator](#)).

"Off" Disables scrambling code for test purposes.

"Long Scrambling Code" Sets the long scrambling code.

"Short Scrambling Code" (only modes "DPCCH + DPDCH" and "PCPCH only")
Sets short scrambling code.
The short scrambling code is only standardized for DPCCH and DPDCH channels. But it can also be generated for the PCPCH channel for test purposes.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:SCODE:MODE` on page 448

Time Delay

Enters the time delay of the signal of the selected user equipment compared to the signal of user equipment 1.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:TDElay` on page 448

UL-DTX .../ User Scheduling

(for instruments equipped with option R&S SMW-K83, UE 1 and DPCCH+DPDCH mode only)

Accesses the dialog for configuring an uplink discontinuous transmission (UL-DTX) or applying user scheduling, see [chapter 4.25, "UL-DTX/User Scheduling - UE"](#), on page 162.

Remote command:

n.a.

Dynamic Power Control

(for UE 1 and DPCCH+DPDCH mode only)

(not supported in Baseband C/D)

Accesses the dialog for configuring the "Dynamic Power Control" settings, see [chapter 4.26, "Dynamic Power Control - UE"](#), on page 167.

Remote command:


n.a.

Scheduling List

Accesses the dialog displaying the current scheduling per UE, see [chapter 4.27](#), "Scheduling List", on page 171.

4.24.2 Code Domain Graph - UE

- To access the graphical display, select "3GPP FDD > User Equipment > UE > Code Domain"

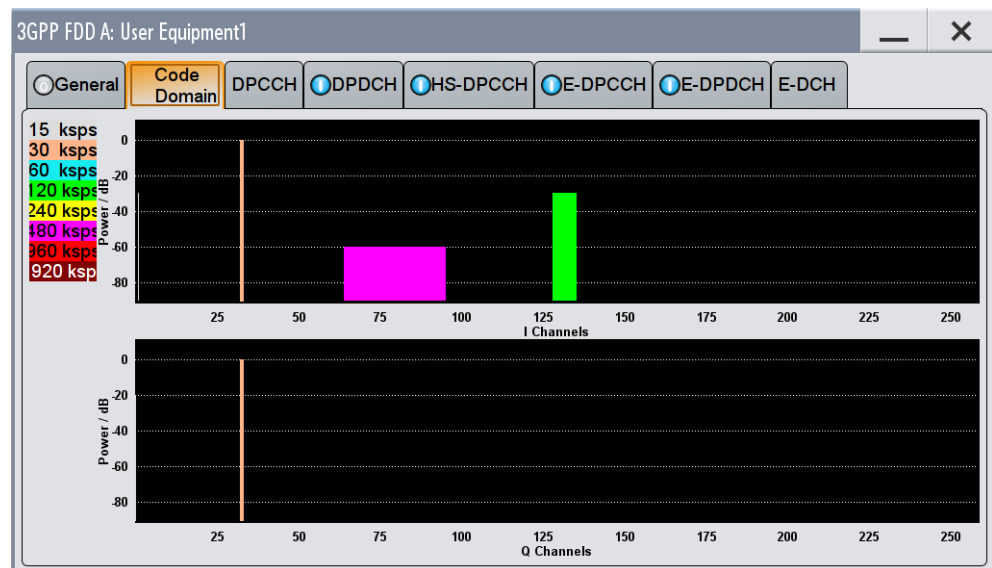

The "Code Domain" dialog enables you to visually check the uplink signal.

Understanding the display information

The "Code Domain" display indicates the assigned code domain. The channelization code is plotted at the X axis; the colored bars indicate coherent code channels. The colors are assigned to fixed symbol rates; the allocation is shown below the graph. The relative power can be taken from the height of the bar. The symbols on so-called I- and Q-branches are spread independently. The channelization codes are fixed for the channels.



Use the Code Domain Graph to evaluate whether there is a code domain conflict or not; a domain conflict arises when the code domains of the active channels intersect. A code domain conflict is indicated by overlapping bars.

A conflict may occur only when the parameter "Force Channelization Code to I/Q" is activated.

4.24.3 Channel Settings

The settings and the dialogs of the individual channels are described in the corresponding sections, see:

- [chapter 4.28, "DPCCH Settings - UE"](#), on page 173
- [chapter 4.29, "DPDCH Settings - UE"](#), on page 179
- [chapter 4.30, "HS-DPCCH Settings - UE"](#), on page 184
- [chapter 4.31, "E-DPCCH Settings - UE"](#), on page 206
- [chapter 4.33, "E-DPDCH Settings - UE"](#), on page 219
- [chapter 4.34, "E-DCH Scheduling - UE"](#), on page 223

4.25 UL-DTX/User Scheduling - UE



UL-DTX and User Scheduling settings require option R&S SMW-K83.

1. To access the **"UL-DTX"** settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE".
2. Select "Mode > DPCCH + DPDCH".
3. Select "UL-DTX / User Scheduling..."

4. Select "Mode > UL-DTX".

3GPP FDD A: UE1/UL-DTX

General UL-DTX Cycle 1 Configuration Cycle 2 Configuration

UL-DTX / User Scheduling Off ☒ On

Mode UL-DTX

Scheduling

E-DCH TTI 2 ms

Offset 0 Subframes

Inactivity Threshold for Cycle 2 1 TTIs

Long Preamble Length 2 Slots

The "UE /UL-DTX" contains the parameters for adjusting the UL-DTX settings and selecting a file containing user scheduling information.

The provided UL-DTX functionality is fully compliant with 3GPP TS 25.214. All dependencies from E-DCH transmissions, HARQ-ACK transmissions or CQI transmissions on the DPCCH are respected.

For the UL-DTX functionality, the dialog provides the settings necessary to configure the start offset, the threshold time for switching to UE-DTX cycle 2 and the DPCCH activity patterns for both UE-DTX cycle 1 and 2. It is possible to determine the frequentness of the DPCCH bursts, the DPCCH bursts length (without pre- and postamble) and to configure the length of the longer preamble for the UE-DTX cycle 2.




In this instrument, the signal generation starts with UE-DTX cycle 2. To trigger a switching to a UE-DTX cycle 1, activate the channel(s) E-DPCCH/E-DPDCH and configure the "**E-DCH Scheduling**" parameters.

To access the User Scheduling settings

The uplink user scheduling is a function that enables you to flexible configure the scheduling of the uplink transmission.

1. To access the "**User Scheduling**" dialog, select "3GPP FDD > User Equipment > UE1 > Mode > DPCCH + DPDCH" and select "UL-DTX/User Scheduling"
2. In the "UL-DTX/User Scheduling", enable "Mode > User Scheduling".

(not supported in Baseband C/D)

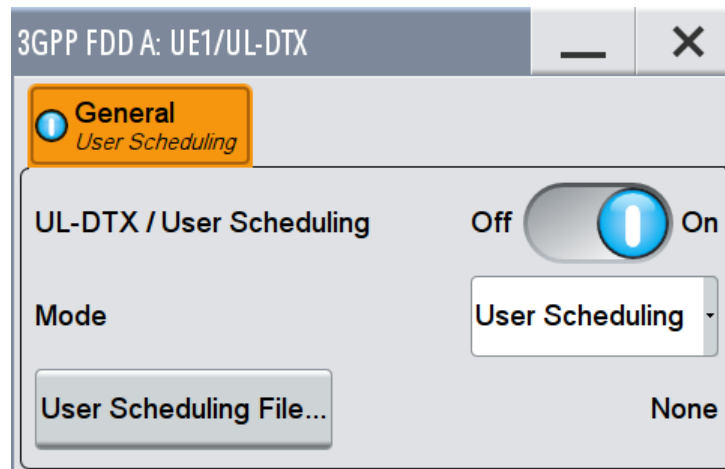

The instrument provides an interface for loading of externally created XML-like files with predefined file structure.



Use the [Scheduling List](#) to display the UL-DTX burst pattern and transmissions of E-DCH and HS-DPCCH, as well as the impact on the UL-DPCCH transmissions or the configured uplink user scheduling.

Detailed Information

For detailed information on the provided functions, like explanation of the UL-DTX principle, description of the user scheduling file format, possible interdependencies, refer to:

- [chapter 3.1.20, "Uplink discontinuous transmission \(UL DTX\)"](#), on page 47
- [chapter 3.1.21, "Uplink User Scheduling"](#), on page 49

For an example on how to use these functions, refer to:

- [chapter 5.3, "Configuring UL-DTX Transmission and Visualizing the Scheduling"](#), on page 265
- [chapter 5.4, "Configuring and Visualizing the Uplink User Scheduling"](#), on page 267

UL-DTX... / User Scheduling State

Depending on the selected "Mode", enables/disables:

- uplink discontinuous transmission (UL-DTX), i.e. uplink DPCCH gating
Enabling the UL-DTX deactivates the DPDCH and the HSUPA FRC.
- using the user scheduling settings defined in the selected file.
Enabling the Uplink Scheduling deactivates the HSUPA FRC.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:UDTX:STATE` on page 521

Mode

Selects the UL-DTX or User Scheduling function.

In Baseband C/D, the parameter is fixed to "UL-DTX".

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:UDTX:MODE` on page 521

User Scheduling File

Accesses the standard "File Select" function for selecting of a file containing user scheduling information. To perform standard file handling functions, e.g. to transfer externally created files to the instrument, use the "File Manager".

Files with user scheduling information use the predefined file extension *.3g_sch and follow a predefined file structure, see "File Structure" on page 50.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:UDTX:USCH:CATalog?` on page 524

`[:SOURCE<hw>] :BB:W3GPp:MSTation:UDTX:USCH:FSElect` on page 525

`[:SOURCE<hw>] :BB:W3GPp:MSTation:UDTX:USCH:DElete` on page 524

Scheduling

This section comprises the common settings for both UL-DTX cycles.

E-DCH TTI ← Scheduling

Sets the duration of a E-DCH TTI.

By enabled UL-DTX, the value configured with this parameter sets the value for the parameter "E-DCH TTI" in the "UE1 > E-DCH Scheduling" dialog.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:UDTX:TTIEdch` on page 521

UL-DTX Offset ← Scheduling

Sets the parameter UE_DTX_DRX_Offset and determines the start offset in subframes of the first uplink DPCCH burst (after the preamble). The offset is applied only for bursts belonging to the DPCCH burst pattern; HS-DPCCH or E-DCH transmissions are not affected.

The parameter UE_DTX_DRX_Offset is used to calculate the first subframe in each UL DPCCH burst pattern.

- for DTX Cycle 1:
 $(5 \cdot \text{CFN} - \text{UE_DTX_DRX_Offset} + \text{Subframe\#}) \bmod \text{UE_DTX_Cycle_1} = 0$
- for DTX Cycle 2:
 $(5 \cdot \text{CFN} - \text{UE_DTX_DRX_Offset} + \text{Subframe\#}) \bmod \text{UE_DTX_Cycle_2} = 0$

The offset is used to shift the DPCCH burst pattern of the different UEs so that they have the DPCCH transmission phase in their DTX cycles at different times.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:UDTX:OFFSet` on page 522

Inactivity Threshold for Cycle 2 ← Scheduling

Defines the number of consecutive E-DCH TTIs without an E-DCH transmission, after which the UE shall immediately move from UE-DTX cycle 1 to using UE-DTX cycle 2 (see figure 5-2).

Note: In this implementation, the signal generation starts with UE-DTX cycle 2. To trigger a switching to a UE-DTX cycle 1, activate the channel(s) E-DPCCH/E-DPDCH and configure the "E-DCH Scheduling" parameters.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:UDTX:ITHReshold` on page 522

Long Preamble Length ← Scheduling

Determines the length in slots of the preamble associated with the UE-DTX cycle 2.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:UDTX:LPLength` on page 522

Cycle 1 / Cycle 2 Configuration

Comprises the settings for configuring the frequentness of the DPCCH bursts and the DPCCH bursts length (without pre- and postamble).

The screenshot shows a configuration window titled "3GPP FDD A: UE1/UL-DTX". It has three tabs: "General UL-DTX", "Cycle 1 Configuration" (which is selected and highlighted in orange), and "Cycle 2 Configuration". Under the "Cycle 1 Configuration" tab, there are four settings:

- DTX Cycle 1:** Set to 4 Subframes.
- DPCCH Burst Length 1:** Set to 1 Subframes.
- Preamble Length 1:** Set to 2 Slots.
- Postamble Length 1:** Set to 1 Slot.

DTX Cycle 1 / DTX Cycle 2 ← Cycle 1 / Cycle 2 Configuration

Sets the offset in subframe between two consecutive DPCCH bursts within the corresponding UE-DTX cycle, i.e. determines how often the DPCCH bursts are transmitted (see figure 5-2).

The UE-DTX cycle 2 is an integer multiple of the UE-DTX cycle 1, i.e. has less frequent DPCCH transmission instants.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:UDTX:CYCLE<ch>` on page 523

DPCCH Burst Length 1 / DPCCH Burst Length 2 ← Cycle 1 / Cycle 2 Configuration

Determines the uplink DPCCH burst length in subframes without the preamble and postamble, when the corresponding UE-DTX cycle is applied.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:UDTX:BURSt<ch>` on page 523

Preamble Length 1 / Preamble Length 2 ← Cycle 1 / Cycle 2 Configuration

Displays the preamble length in slots, when the corresponding UE-DTX cycle is applied.

The preamble length is fixed to 2 slots.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation:UDTX:PREamble<ch>?` on page 523

Postamble Length 1 / Postamble Length 2 ← Cycle 1 / Cycle 2 Configuration

Displays the postamble length in slots, when the corresponding UE-DTX cycle is applied.


The postamble length is fixed to 1 slot.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation:UDTX:POSTamble<ch>?` on page 524

4.26 Dynamic Power Control - UE

- To access this dialog, select "3GPP FDD > User Equipment > UE > Dynamic Power Control".
(not supported in Baseband C/D)

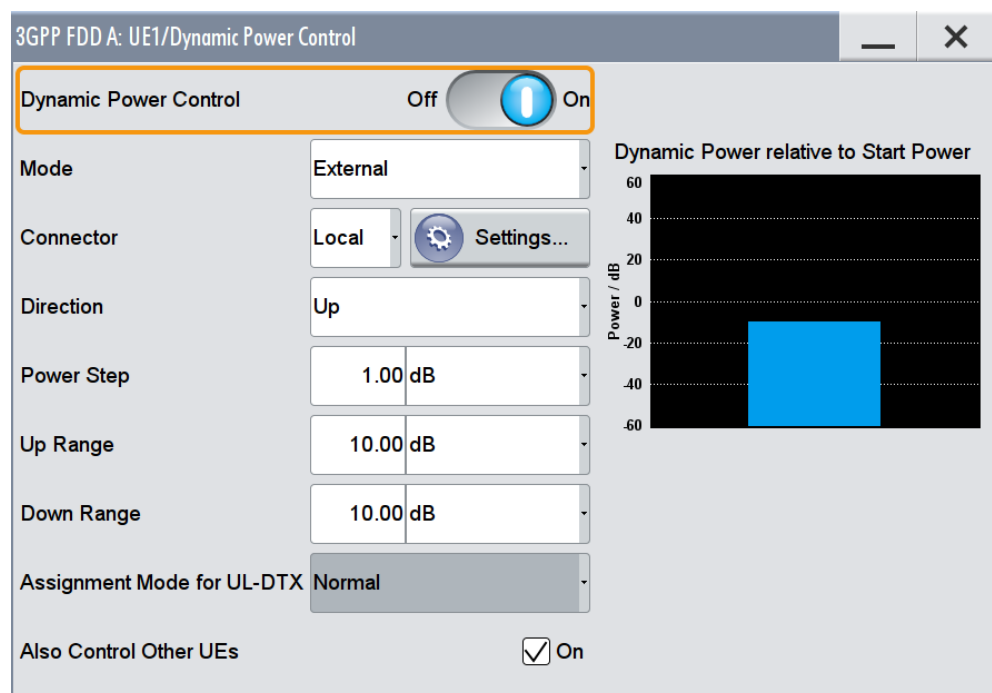

In the "Dynamic Power Control" dialog, the power of the enhanced channels can be increased or decreased within the predefined dynamic range ("Up Range" + "Down Range") and with the predefined step size ("Power Step") with an external, internal or manual control signal.

Dynamic Power Control State

Activates or deactivates the "Dynamic Power Control".

With activated "Dynamic Power Control" the power of the enhanced channels can be increased or decreased within the predefined dynamic range ("Up Range" + "Down Range") and with the predefined step size ("Power Step") with an external, internal or manual control signal.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:STATe`
on page 528

Mode

Selects the control signal for "Dynamic Power Control".

"External" An external control signal is used for Dynamic Power Control. The external control signal has to be supplied at the local T/M 3 or global USER 6 connector, as defined with the parameter "[Connector](#)" on page 168.

"By TPC Pattern" The TPC pattern is used for "Dynamic Power Control". This selection corresponds to selection "(Mis)Use TPC" for not enhanced channels.

"Manual" The control signal is manually produced by pushing one of the buttons 0 or 1. The channel power is increased or decreased depending on the "Direction" setting by the set power step.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:MODE`
on page 527
`[:SOURCE<hw>] :BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:STEP:MANual` on page 528

Connector

Determines the input connector the external control signal is supplied at.

In this firmware version, the "Global" connector is disabled.

See [chapter 3.2, "Routing and enabling an external control signal"](#), on page 52.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:CONNector` on page 527

Direction

Selects the Dynamic Power Control mode.

"Up" A high level of the control signal leads to an increase of channel power.

"Down" A high level of the control signal leads to a decrease of channel power.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:DIRection` on page 526

Power Step

Sets step width by which – with the "Dynamic Power Control" being switched on - the channel powers of the enhanced channels in the timeslot grid are increased or decreased within the set dynamic range ("Up Range" + "Down Range").

The start power of the channel is set in the "Channel Power" entry field of the menu.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:MSTation [ :ENHanced:DPDCh ] :DPControl:
STEP [ :EXternal ] on page 529
```

Up Range/Down Range

Sets dynamic range by which – with "Dynamic Power Control" switched on – the channel powers of the enhanced channels can be increased. The resulting "Dynamic Power Control" dynamic range ("Up Range" + "Down Range") depends on the selected "Power Step" and is as follow:

- For "Power Step" < 1 dB, the dynamic range ("Up Range" + "Down Range") <= 30 dB
- For "Power Step" => 1 dB, the dynamic range ("Up Range" + "Down Range") <= 60 dB

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:MSTation [ :ENHanced:DPDCh ] :DPControl:
RANGe:UP on page 528
[ :SOURce<hw> ] :BB:W3GPp:MSTation [ :ENHanced:DPDCh ] :DPControl:
RANGe:DOWN on page 528
```

Power Control Graph

Indicates the deviation of the channel power (delta POW) from the set power start value of the enhanced channels.

The graph is automatically displayed if "Dynamic Power Control > State > On".

Note: Since a realtime update of the window in the timeslot (= 0.667 ms) is not possible for reasons of speed, an update can be performed in a more coarse time interval. Fast channel power changes are not displayed but the settled state of the control loop can be recognized very easily.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:MSTation [ :ENHanced:DPDCh ] :DPControl [ :
POWer ] ? on page 527
```

Assignment Mode for UL-DTX

The parameter is enabled only for activated [UL-DTX...](#) / [User Scheduling State](#).

The power control recognizes the UL-DPCCH gaps according to 3GPP TS 25.214. Some of the TPC commands sent to the instrument over the external line or by the TPC pattern are ignored, whereas others are summed up and applied later. The processing of the TPC commands depends only on whether the BS sends the TPC bits on the F-DPCH with slot format 0/ slot format 9 (i.e. during the first 512 chips of the downlink slot) or not. It is not necessary to distinguish between the cases „DL-DPCH“ and „F-DPCH Slot Format different than 9 and 0“, as in both of these cases the downlink TPC commands would be sent (to a real UE via the air interface) later than in the first 512 chips of the downlink slot, and thus the treatment of the TPC commands by the UE is identical.

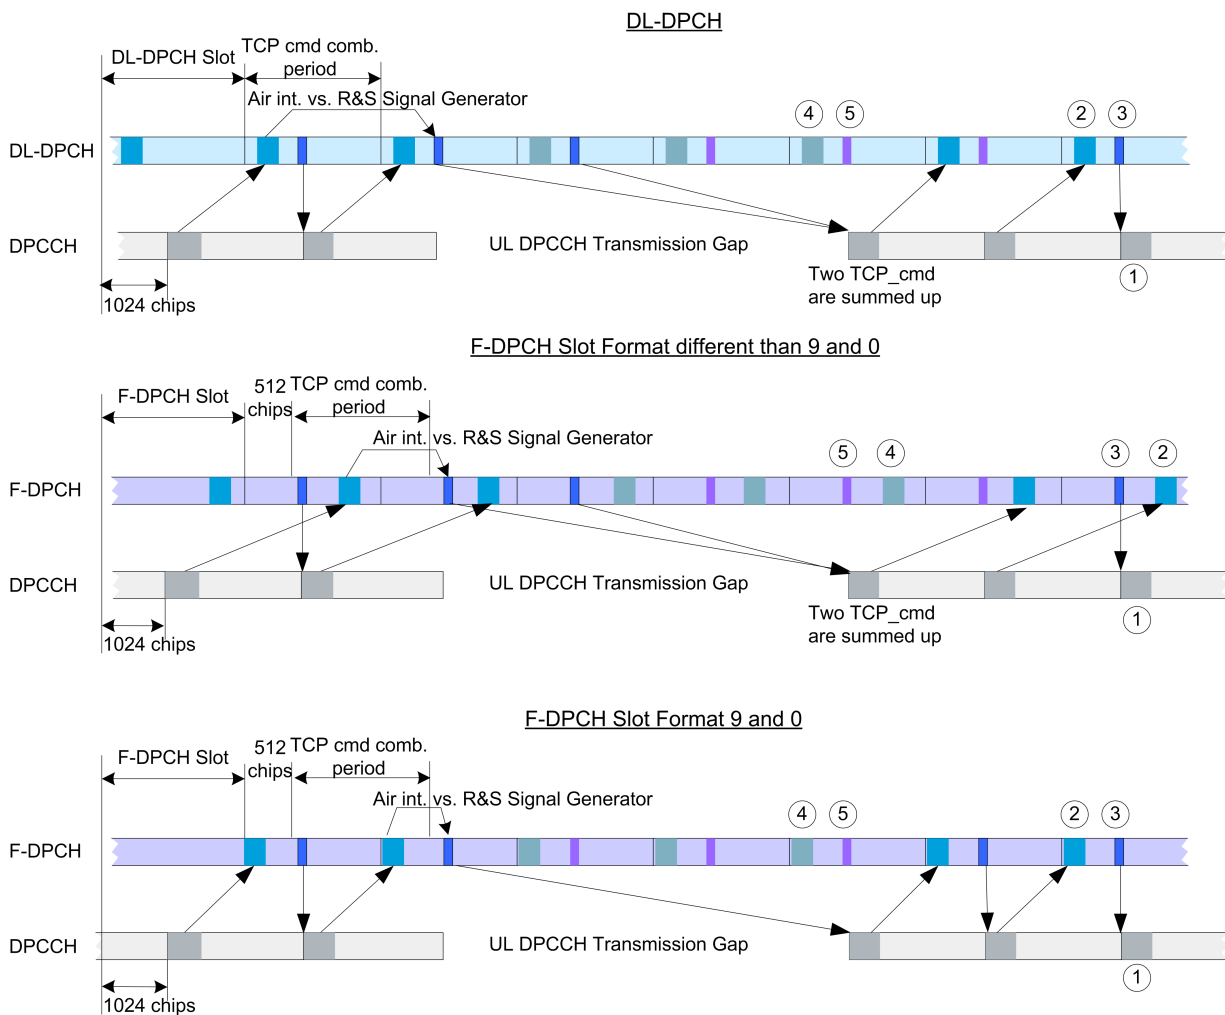


Fig. 4-14: Timing Diagram - Power Control with UL-DTX

- 1 = Uplink Pilot
- 2 = TPC bits via air interface
- 3 = TPC command via binary feedback
- 4 = No need to send TPC bits via air interface; UE ignores any TPC bits
- 5 = No need to send TPC commands via binary feedback line; R&S SMW ignores any TPC commands

The feedback sent to the instrument corresponds to the parameter „TPC_cmd“ defined in the 3GPP standard. It represents the TPC information of the last (already completed) „TPC command combining period“, even if the TPC information of the ongoing „TPC command combining period“ is already known by the BS prior to the feedback transmission over the binary feedback line (see figure).

Note: The provided external binary feedback has to be stable at least between 0.1 ms before and after the UL DPCCH slot boundary.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:MSTation [ :ENHanced:DPDCh ] :DPControl:
ASSignment on page 526
```

Also Control Other UEs

Enables you to dynamically control the power of the enhanced channels of all active UEs with the settings of UE1.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:MSTation [ :ENHanced:DPDCh ] :DPControl:AOUE
on page 529
```

4.27 Scheduling List

Opens a display of the current uplink scheduling per UE.

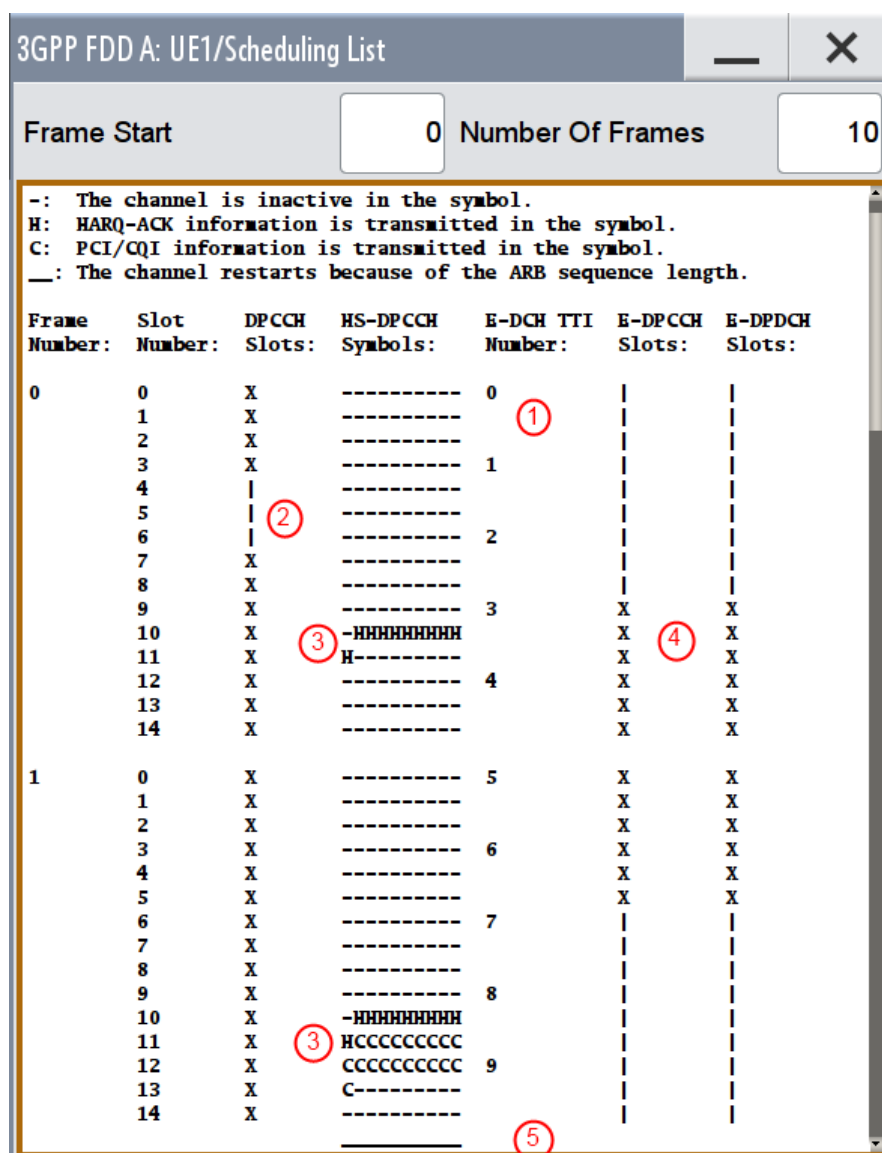


Fig. 4-15: Example of Scheduling List (UE1)

1 = E-DCH TTI is three slots long, i.e. E-DCH TTI = 2ms

2 = DPCCH shows busts pattern, i.e. UL-DTX is activated

3 = HS-DPCCH is active and the scheduled HARQ-ACK and PCI/CQI messages have different patterns

4 = E-DPCCH and E-DPDCH are active; both channels have the same E-DCH scheduling

5 = ARB Sequence Length = 2 frames

Frame Start

Defines the start frame of the displayed UL scheduling.

Number of Frames

Defines number of frames for that the UL scheduling is displayed.

4.28 DPCCH Settings - UE

The "DPCCH" tab provides the parameters for configuring the dedicated physical control channel.

1. To access the DPCCH channel settings, select "3GPP FDD > Link Direction > Uplink / Reverse"
2. Select "User Equipment > UE > Mode > DPCCH + DPDCH" and select "DPCCH".

3GPP FDD A: User Equipment1

General Code Domain **DPCCH** DPDCH HS-DPCCH E-DPCCH E-DPDCH E-DCH

Pilot 6 TFCI 2 TPC 2

Power 0.00 dB

DL-UL Timing Offset 1024 Chips Channelization Code Q / 0

Slot Format # 0 ☒ TFCI 0

FBI Mode Off FBI Pattern (bin) 0...

TPC Mode 2 Bits Read Out Mode Continuous

TPC Data Source All 0

The dialog displays the channel structure and the available parameters.

In UE1, the DPCCH is generated in realtime (enhanced).

About the Dedicated Physical Channels

At the physical level, an uplink DPCH consists of the DPDCH (Dedicated Physical Data Channel) and the DPCCH (Dedicated Physical Control Channel); the channel characteristics are defined by the symbol rate.

The DPDCH transports the user data that is fed directly into the data field. The DPCCH carries the control fields (Pilot field; TPC = Transmit Power Control, FBI (Feedback Information) and TFCI = Transport Format Combination Indicator). DPDCH is grouped with DPCCH I/Q code multiplexing in accordance with 3GPP TS 25.211, see diagram below. The generation of an uplink reference measurement channel is described in [chapter 4.35, "Global Enhanced Channel Settings - UE1"](#), on page 226.

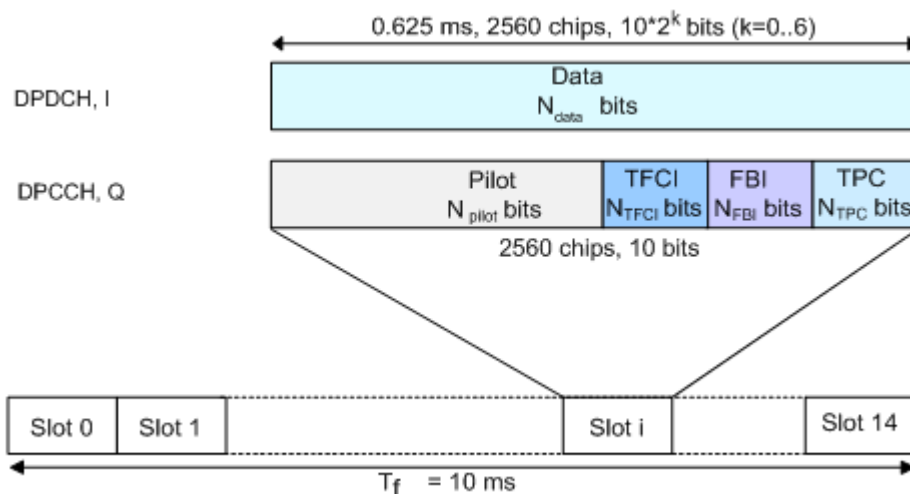


Fig. 4-16: Structure of an uplink DPCH in the time domain

Channelization Code

Displays the channelization code and the modulation branch (I or Q) of the DPCCH. The code channel is spread with the set channelization code (spreading code). The standard assigns a fixed channelization code to the DPCCH.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:CCODE?` on page 459

Power

Sets the power of the DPCCH channel.

Test cases defined in the 3GPP standard often use notation "Signaling values for β_c and β_d ". The quantization of the gain parameters is shown in the following table which is taken from 3GPP Spec 25.213 (left columns) and supplemented by the instrument-specific values (right column).

Signaling values for β_c and β_d	Quantized amplitude ratios β_c and β_d	Power to be set / dB
15	1.0	0.0
14	14/15	-0.60
13	13/15	-1.24
12	12/15	-1.94
11	11/15	-2.69
10	10/15	-3.52
9	9/15	-4.44
8	8/15	-5.46
7	7/15	-6.62
6	6/15	-7.96

Signaling values for β_c and β_d	Quantized amplitude ratios β_c and β_d	Power to be set / dB
5	5/15	-9.54
4	4/15	-11.48
3	3/15	-13.99
2	2/15	-17.52
1	1/15	-23.52
0	Switch off	Switch channel off or -80 dB

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:POWer` on page 452

DL-UL Timing Offset

Sets the timing offset between the downlink and the uplink.

The timing offset determines the time delay in chips between the downlink signal timing and transmission of the uplink signal.

Note: The signals of all UEs have the same uplink slot timing. The parameters "DL-UL Timing Offset" are coupled and by changing this parameter for one of the UEs, the values for the other UEs are automatically adjusted.

"1024 Chips" The uplink signal is generated according to the 3GPP specification. The signal is calculated synchronously to the downlink reference timing, i.e. the first uplink frame starts at chip position 1024 of the simulated signal.

"0 Chips" No timing offset is applied, i.e. there is no timing delay between receipt of the downlink signal and transmission of the uplink signal. See also "[To generate a continuous uplink signal composed of multiple separately generated uplink frames](#)" on page 264.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:TOFFset` on page 454

Slot Format

Selects the slot format.

The slot format defines the structure of the DPCCH slots and the control fields. Depending on the selected slot format, the slot structure is displayed.

Slot formats 0 to 4 are available for the DPCCH channel as defined in the 3GPP Release 7 specification TS 25.211.

Note: The former slot formats 4 and 5 according to 3GPP Release 4 specification TS 25.211 are not supported.

The slot format selection adjusts the DPCCH slot structure according to the 3GPP specification. However, it is also possible to adjust this structure by configuration of each of the control fields separately.

The table below gives an overview of the cross-reference between the slot format and the structure of the DPCCH slot.


Slot Format #	NPilot, bits	NTPC, bits (TPC Mode)	NTFCI, bits (Use TFCI)	NFBI, bits (FBI Mode)
0	6	2	2	0
1	8	2	0	0
2	5	2	2	1
3	7	2	0	1
4	6	4	0	0



"FBI Mode" = Off, i.e. no FBI field

"TFCI Mode" = 2 bits

 "Use TFCI" = On, i.e. TFCI field = 2 bits



"FBI Mode" = Off, i.e. no FBI field

"TFCI Mode" = 2 bits

 
"Use TFCI" = Off, i.e. no TFCI field



"FBI Mode" = 1 bit

"TFCI Mode" = 2 bits

"Use TFCI" = On, i.e. TFCI field = 2 bits



"FBI Mode" = 1 bit

"TFCI Mode" = 2 bits

"Use TFCI" = Off, i.e. no TFCI field



(enabled only for instruments equipped with R&S SMW-K83)

"FBI Mode" = Off, i.e. no FBI field

"TFCI Mode" = 4 bits

"Use TFCI" = Off, i.e. no TFCI field

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:SFORmat](#) on page 453

Use TFCI

Activates the TFCI (Transport Format Combination Indicator) field.

The status of the TFCI field is determined by the "Slot Format" set. A change leads automatically to an adjustment of the slot format.

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:TFCI:STAtE](#) on page 453

TFCI

Enters the value of the TFCI field (Transport Format Combination Indicator) of the DPCCH channel.

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:TFCI](#) on page 453

FBI Mode

Selects the FBI (Feed Back Information) mode.

The FBI mode is determined by the "Slot Format" set. A change in the FBI mode leads automatically to an adjustment of the slot format.

Note: The former 2-bits long FBI Mode according to 3GPP Release 4 specification TS 25.211 is not supported.

"Off" The FBI field is not in use.

"1 Bit" The FBI field with a length of 1 bit is used.

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:FBI:MODE](#) on page 452

FBI Pattern (bin)

Enters the bit pattern for the FBI field.

The FBI field is filled cyclically with a pattern of up to 32 bits in length.

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:FBI:PATtern](#) on page 452

TPC Mode

Selects the TPC (Transmit Power Control) mode.

The TPC mode is determined by the "Slot Format" set. A change in the TPC mode leads automatically to an adjustment of the slot format.

"2 Bits" A TPC field with a length of 2 bits is used.

"4 Bits" (enabled only for instruments equipped with R&S SMW-K83)
A TPC field with a length of 4 bits is used.
A 4 bits long TPC field can be selected, only for Slot Format 4 and disabled FBI and TFCI fields.

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:TPC:MODE](#) on page 456

TPC Data Source

Defines the data source for the TPC field of the DPCCH channel.

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "Pattern"
An internally generated sequence according to a bit pattern.
Use the "Pattern" box to define the bit pattern.
- "Data List / Select TPC Data List"
A binary data from a data list, internally or externally generated.
Select "Select TPC Data List" to access the standard "Select List" dialog.

- Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
- Use the standard "File Manager" function to transfer external data lists to the instrument.
- Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.

See also:

- section "Modulation Data" in the R&S SMW user manual.
- section "File and Data Management" in the R&S SMW user manual.
- section "Data List Editor" in the R&S SMW user manual.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPCCh:TPC:DATA` on page 454

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPCCh:TPC:DATA:PATtern`

on page 455

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPCCh:TPC:DATA:DSElect`

on page 455

TPC Read Out Mode

Defines the TPC data usage.

With 3GPP, the TPC bits are used to signal the increase or reduction in transmit power to the called station. With all read out modes, one bit is taken from the data stream for the TPC field for each slot and entered into the bit stream several times (depending on the symbol rate). The difference between the modes lies in the usage of the TPC bits.

These different modes can be used, for example, to deliberately set a DPCH of a base station to a specific output power (e.g. with the pattern 11111) and then let it oscillate around this power (with Single + alt. 01 and Single + alt. 10). This then allows power measurements to be carried out at the base station (at a quasi-constant power).

Together with the function "(Mis-)Use TPC for output power control" (see below), "TPC Read Out Mode" can also be used to generate various output power profiles.

"Continuous:" The TPC bits are used cyclically.

"Single + All 0" The TPC bits are used once, and then the TPC sequence is continued with 0 bits.

"Single + All 1" The TPC bits are used once, and then the TPC sequence is continued with 1 bits.

"Single + alt. 01" The TPC bits are used once and then the TPC sequence is continued with 0 and 1 bits alternately (in multiples, depending on by the symbol rate, for example, 00001111).

"Single + alt. 10" The TPC bits are used once and then the TPC sequence is continued with 1 and 0 bits alternately (in multiples, depending on by the symbol rate, for example, 11110000).

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPCCh:TPC:READ` on page 457

Misuse TPC for Output Power Control

(available for UE2, UE3 and UE4 only)

Defines "mis-" use of the TPC data.

With 3GPP, the TPC bits are used to signal the increase or reduction in transmit power to the called station. If "(Mis-) use TPC for output power control" is activated, the specified pattern is misused, in order to vary the intrinsic transmit power over time. A bit of this pattern is removed for each slot in order to increase (bit = "1") or reduce (bit = "0") the channel power by the specified power step ("Power Step"). The upper limit for this is 0 dB and the lower limit -60 dB. The following envelope is produced at a channel power of 0 dB, power step 1.0 dB and pattern "001110100000011" and TPC Pattern Read Out Mode Continuous:

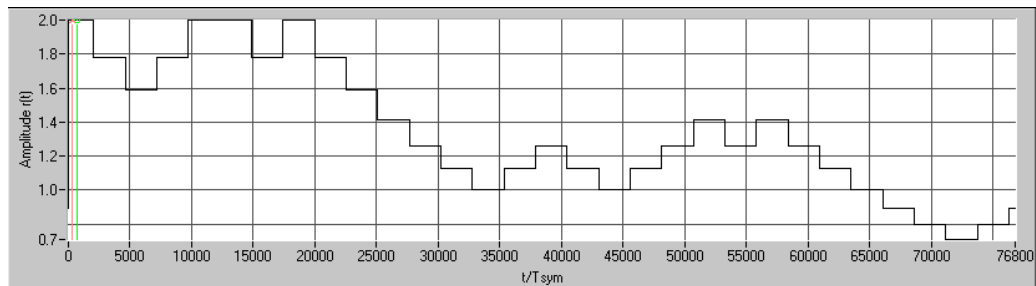


Fig. 4-17: Dynamic change of channel power (continuous)

Note: Power control works both on the DPCCH and all the active DPDCHs. The change in power is always carried out (as stipulated in the standard) at the start of the slot pilot field

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:TPC:MISuse` on page 455

TPC Power Step

(available for UE2, UE3 and UE4 only)

Sets the step width of the power change in dB for "(Mis-) use TPC for output power control".

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:TPC:PSTep` on page 456

4.29 DPDCH Settings - UE

1. To access the DPDCH channel settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE"

2. Select "DPDCH".

3GPP FDD A: User Equipment1

General Code Domain DPCCH **DPDCH** HS-DPCCH E-DPCCH E-DPDCH E-DCH

Data 40

State Off ☒ On Channel Power 0.00 dB

Overall Symbol Rate 60 kbps Force Channelization Code To I / 0 ☐ On

Global Enhanced Channels...

	1	2	3	4	5	6
Channel Type	DPDCH	DPDCH	DPDCH	DPDCH	DPDCH	DPDCH
Symbol Rate / State	60	Off	Off	Off	Off	Off
Channelization Code	I / 16					
DPDCH Data Source	PN 9					
DPDCH Pattern	0					
DPDCH Data List	None					
DCCH Data Source		Channel	Coding	Off		
DCCH Pattern						

The dialog contains the general parameters required for configuring the channel.
The channel table allows you to configure the individual parameters.

4.29.1 DPDCH Common Settings

State (DPDCH)

Activates or deactivates all the DPDCH channels.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPDCh:STATe` on page 479

Channel Power

Sets the channel power in dB.

The power entered is relative to the powers of the other channels and does not initially relate to the "Level" power display. If [Adjust Total Power to 0dB](#) is executed, all the power data is relative to "Level".

Note: The uplink channels are not blanked in this mode (duty cycle 100%).

Test cases defined in the 3GPP standard often use notation "Signaling values for β_c and β_d ". The quantization of the gain parameters is shown in the following table which is taken from 3GPP Spec 25.213 (left columns) and supplemented by the instrument-specific values (right column).

Signaling values for β_c and β_d	Quantized amplitude ratios β_c and β_d	Power to be set / dB
15	1.0	0.0
14	14/15	-0.60
13	13/15	-1.24
12	12/15	-1.94
11	11/15	-2.69
10	10/15	-3.52
9	9/15	-4.44
8	8/15	-5.46
7	7/15	-6.62
6	6/15	-7.96
5	5/15	-9.54
4	4/15	-11.48
3	3/15	-13.99
2	2/15	-17.52
1	1/15	-23.52
0	Switch off	Switch channel off or -80 dB

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPDCh:POWer` on page 479

Force Channelization Code To I/Q

Sets the channelization code to I/Q.

This mode can only be activated if the "Overall Symbol Rate < 2 x 960 kbps".

It is provided for test purposes. Using an oscilloscope, the data bits of the DPDCH are visible on the I/Q signal for the following settings:

- "Force Channelization Code to I/Q > On"
- "Scrambling Code Mode > Off"
- "DPCCH Channel Power = - 80 dB"

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPDCh:FCIO` on page 478

Overall Symbol Rate

Sets the overall symbol rate of all the DPDCH channels.

The structure of the DPDCH channel table depends on this parameter. The overall symbol rate determines which DPDCHs are active, which symbol rate they have and which channelization codes they use (see [table 1-2](#)).

DPDCHs that are not active by virtue of the overall rate are also disabled for operation.

Note: Up to an overall rate of 960 ksps, only DPDCH 1 is active, its symbol rate is the same as the overall symbol rate and the channelization code is the same as spreading factor/4 (spreading factor = chip rate / symbol rate).

With an overall symbol rate greater than 960 ksps, all the active DPDCH channels have the symbol rate 960 ksps.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPDCh:ORATe` on page 478

Global Enhanced Channels

Accesses the dialog for configuring all the enhanced channel settings of user equipment UE1, see [chapter 4.35, "Global Enhanced Channel Settings - UE1"](#), on page 226.

Remote command:

n.a.

4.29.2 Channel Table

The channel table allows you to configure the individual parameters for the DPDCH channels. The structure of the currently selected channel is displayed graphically in the table header.

The number of active channels depends on the selected overall symbol rate. You can select the data sources for the individual channels. The remaining parameters are only displayed and their values depend also on the overall symbol rate. See also [table 1-2](#).

Channel Number

Displays the channel number.

Remote command:

n.a.

(the channel is selected by the suffix at keyword `CHANnel<n>`)

Channel Type

Displays the channel type.

Remote command:

n.a.

Symbol Rate / State

Displays the symbol rate and the state of the DCDCH channel.

The symbol rate and the state of channel 2 to 6 are dependent on the overall symbol rate set and cannot be modified.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:SRATe?`
on page 478

Channelization Code

Displays the channelization code and the modulation branch (I or Q) of the DPDCH channel.

The channelization code is dependent on the overall symbol rate set and cannot be modified.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:CCODE?`
on page 476

DPDCH Data Source

For UE2, UE3 and UE4 and UE1 without channel coding, selects the data source for the DPDCH channel.

When channel coding is active, the data source for the DTCH1 component in the transport layer is selected here. In this situation, the display reads "DTCH data Source" and the "DCCH Data" entry field is enabled for selecting the data source of the DCCH channel. The data sources of the other DTCH channels can be set in the "Global Enhanced Channel Settings > Transport Channel" dialog, see [chapter 4.35, "Global Enhanced Channel Settings - UE1"](#), on page 226.

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "PNxx"
An internally generated pseudo-random noise sequence.
- "Pattern"
An internally generated sequence according to a bit pattern.
Use the "Pattern" box to define the bit pattern.
- "Data List/Select DList"
A binary data from a data list, internally or externally generated.
Select "Select DList" to access the standard "Select List" dialog.
 - Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
 - Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.
 - Use the standard "File Manager" function to transfer external data lists to the instrument.

See also:

- section "Modulation Data" in the R&S SMW user manual.
- section "File and Data Management" in the R&S SMW user manual.
- section "Data List Editor" in the R&S SMW user manual

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:DATA`

on page 476

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:DATA: PATtern` on page 477

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>[:HSUPa] :CHANnel<ch>:DPDCh:E: DATA:DSElect` on page 502

DCCH Data Source

For UE1 for enhanced channels with active channel coding, selects the data source for the DCCH component.

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "PNxx"
An internally generated pseudo-random noise sequence.
- "Pattern"
An internally generated sequence according to a bit pattern.
Use the "Pattern" box to define the bit pattern.
- "Data List/Select DList"
A binary data from a data list, internally or externally generated.
Select "Select DList" to access the standard "Select List" dialog.
 - Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
 - Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.
 - Use the standard "File Manager" function to transfer external data lists to the instrument.

See also:

- section "Modulation Data" in the R&S SMW user manual.
- section "File and Data Management" in the R&S SMW user manual.
- section "Data List Editor" in the R&S SMW user manual

4.30 HS-DPCCH Settings - UE

1. To access the HS-DPCCH channels settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE"
2. Select "HS-DPCCH"

3GPP FDD A: User Equipment1

General Code Domain DPCCH DPDCH **HS-DPCCH** E-DPCCH E-DPDCH E-DCH

HARQ-ACK (Slots) 1 PCI / CQI (Slots) 2

State Off ☒ On Power 0.00 dB

Compatibility Mode Release 8 and Later

Start Delay 101 * 256 Chips MIMO Mode ☒ On

Inter TTI Distance (Interval) 5 Subframes Secondary Cell Enabled 1

Channelization Code Q / 64 Secondary Cell Active 0

Slot Format 0 (15kps)

3GPP FDD A: User Equipment1

General Code Domain DPCCH DPDCH **HS-DPCCH** E-DPCCH E-DPDCH E-DCH

HARQ - ACK

Number of Rows HARQ-ACK Repeat After Intervals

	HARQ-ACK From Interval	HARQ-ACK To Interval	HS-DPCCH 1 HARQ-ACK 1	HS-DPCCH 1 HARQ-ACK 2	HS-DPCCH 2 HARQ-ACK 3	HS-DPCCH 2 HARQ-ACK 4	Pow Offs /dB
0	0	1	AA/D				0.0
1	3	3	NN/NN				0.0

PCI / CQI

Number of Rows PCI/CQI Repeat After Intervals

	PCI/CQI From Interval	PCI/CQI To Interval	HS-DPCCH 1 PCI/CQI 1 Type	HS-DPCCH 1 PCI/CQI 2 Type	HS-DPCCH 2 PCI/CQI 3 Type	HS-DPCCH 2 PCI/CQI 4 Type	PCI/CQI 3 Content	PCI/CQI 4 Content	Pow Offs /dB
0	0	0	DTX						
1	1	1	A (Dual TB)	Config...					0.0

Suggested / Current ARB Seq. Length 12 / 1 Adjust ARB Sequence Length

The dialog contains the general parameters required for configuring the channel, and displays the channel structure.




Real time signal generation

To enable real time signal generation for UE1, select "3GPP FDD > User Equipment > UE1> HS-DPCCH" and select "Compatibility Mode > Up to Release 7" or "Compatibility Mode > Release 8 and Later RT"

4.30.1 About HS-DPCCH

HS-DPCCH Structure

The HS-DPCCH carries uplink feedback signaling related to the accuracy and quality of downlink HS-DSCH transmission. Hybrid-ARQ Acknowledgment (HARQ-ACK) is transmitted in the first subframe slot, Channel-Quality Indication (CQI) and in case of UE configured in MIMO mode also Precoding Control Indication (PCI) are transmitted in the second and third subframe slot. Only one HS-DPCCH may be transmitted on each radio link. The HS-DPCCH can only exist together with an uplink DPCCH.

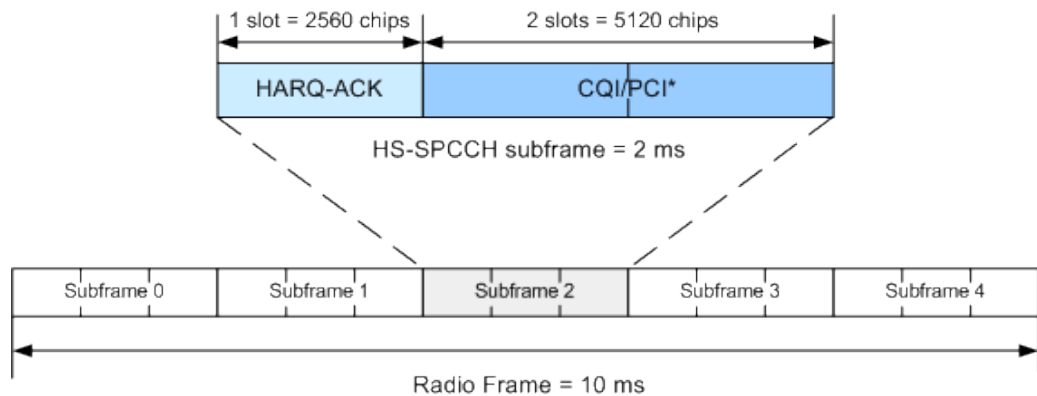

*) PCI for UE configured in MIMO mode only

Fig. 4-18: Structure of an uplink HS-DPCCH in the time domain

The HS-DPCCH subframe starts $256 \times m$ chips after the start of an uplink DPCCH slot with m selected such that the subframe transmission starts within the first 0-255 chips after 7.5 slots following the end of the received HS-PDSCH sub-frame.

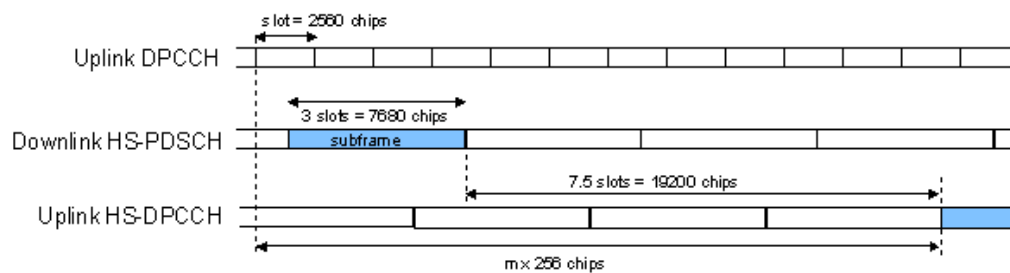


Fig. 4-19: Timing offset between the uplink DPCCH, the HS-PDSCH and the HS-DPCCH at the UE

HS-DPCCH Power

According to 3GPP TS 25.214, the uplink HS-DPCCH power shall be estimated for each HS-DPCCH slot.

In this implementation, the channel power can be set individually for each case of feedback signaling and UE mode as a combination of the CQI Power (parameter "Power") and the corresponding "Power Offset" (see the tables below). Since the feedback signaling can be configured per slot of TTI that carries HS-DPCCH, the channel power is also calculated on a slot basis.

Table 4-8: Calculating of the HARQ-ACK power

Mode	HARQ-ACK	Offset Parameter	Resulting Power
Compatibility Mode = Up to Release 7			
Normal	ACK/NACK Pattern	Power Offset ACK	Power + Power Offset ACK
		Power Offset NACK	Power + Power Offset NACK
	Single ACK	Power Offset ACK	Power + Power Offset ACK

Mode	HARQ-ACK	Offset Parameter	Resulting Power
	Single NACK	Power Offset NACK	Power + Power Offset NACK
MIMO	TB1: ACK, TB2: ACK	Power Offset ACK/ACK	Power + Power Offset ACK/ACK
	TB1: ACK, TB2: NACK	Power Offset ACK/NACK	Power + Power Offset ACK/NACK
	TB1: NACK, TB2: ACK	Power Offset NACK/ACK	Power + Power Offset NACK/ACK
	TB1: NACK, TB2: NACK	Power Offset NACK/NACK	Power + Power Offset NACK/ NACK
Compatibility Mode = Release 8 and Later (RT)			
all	HARQ-ACK	Power Offset HARQ-ACK	Power + Power Offset HARQ-ACK

Table 4-9: Calculating the PCI/CQI power

Mode	CQI	Type	CQI Parameter	Offset Parameter	Resulting Power
Compatib. Mode= Up to Release 7					
Normal	-		CQI	-	Power
MIMO	CQI Type A	Single TB	CQIs	Power Offset CQI Type A	Power + Power Offset CQI Type A
		Double TB	CQI1 and CQI2		
Compatib. Mode= Rel. 8 and Later (RT)					
Normal	CQI		CQI	Power Offset PCI/CQI	Power + Power Offset PCI/CQI
DC-HSDPA non MIMO	Comp. CQI		CQI1 and CQI2		
MIMO	CQI Type A	Single TB	CQIs		
		Double TB	CQI1 and CQI2		

4.30.2 HS-DPCCH Common Settings

The displayed channel structure depends on whether the UE is working in MIMO mode or not.

State (HS-DPCCH)

Activates or deactivates the HS-DPCCH channel.

Remote command:

[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:STAtE on page 458

Power (HS-DPCCH)

Sets the power in dB.

- In case of "Compatibility Mode > Release 8 and Later"/"Compatibility Mode > Release 8 and Later RT", this parameter represents the reference power, relative to that the power used during the HARQ-ACK slot and the power used during the PCI/CQI slots are calculated.
- While working in a "Compatibility Mode > Up to Release 7", this parameter represents the CQI Power of a UE configured in a normal mode or of a UE configured in MIMO mode and sending CQI Type B report. The CQI Power is the reference power, relative to that the power used during the HARQ-ACK slot and the power used during the PCI/CQI slots of a UE configured in MIMO mode and sending CQI Type A reports are calculated.

The power entered is relative to the powers of the other channels and does not initially relate to the "Level" power display. If [Adjust Total Power to 0dB](#) is executed, all the power data is relative to the "Level" display.

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:HS:POWER](#) on page 458

Compatibility Mode (HS-DPCCH)

Switches between the following modes:

"Up to Release 7"

Switches to the display of the HS-DPCCH settings provided for backwards compatibility.

"Release 8 and Later"

The concept of the graphical user interface for the configuration of HS-DPCCH has been adapted to support simultaneous DC-HSDPA and MIMO operation, as required in 3GPP Release 9 onwards.

This mode is disabled, if [Dynamic Power Control State](#) is On.

"Release 8 and Later RT"

(not supported in Baseband C/D)


Enables generation of the HS-DPCCH in real-time even for Release 8/9 content. Real-time signals are useful for complex HS-DPCCH scheduling and are required while using dynamic power control with the HS-DPCCH.

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:HS:COMPatibility](#) on page 458

Start Delay

Sets the delay between the uplink HS-DPCCH and the frame of uplink DPCH.

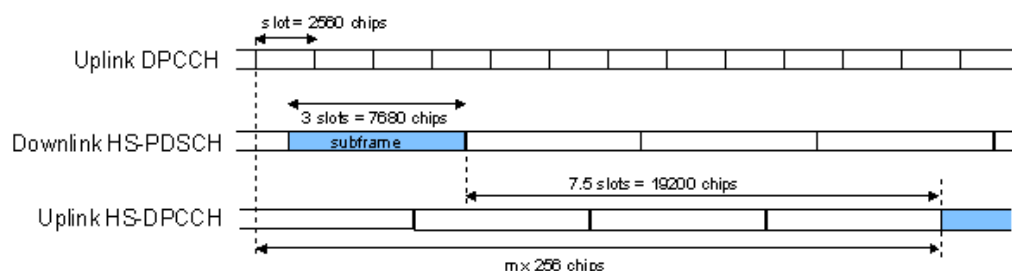

Thus, the channel can be synchronized with the associated downlink HS-PDSCH.

The delay is entered as a multiple m of 256 chips according to TS 25.211 7.7:

$$m = (T_{TX_diff} / 256) + 101$$

where T_{TX_diff} is the difference in chips ($T_{TX_diff} = 0, 256, \dots, 38144$).

The value range of m is 0 to 250 (2 frames + 1024 chips)

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:SDElay` on page 459

Inter TTI Distance (Interval)

Selects the distance between two HSDPA packets. The distance is set in number of subframes (3 slots = 2 ms). An "Inter TTI Distance" of 1 means continuous generation.

Regarding the HS-DPCCH uplink transmission, this parameter determines where HS-DPCCH transmissions are possible in principle. In order to have actual HS-DPCCH transmissions, HARQ-ACK and/or PCI/CQI transmissions have to be scheduled as described in 4.30.3, 4.30.4 and 4.30.5

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:TTIDistance`
on page 459

Channelization Code (HS-DPCCH)

Displays the channelization code and the modulation branch (I or Q) of the HS-DPCCH.

The code channel is spread with the set channelization code (spreading code). The channelization code of the high speed channel depends on the number of activated DPDCHs, i.e. on the overall symbol rate.

For "Secondary Cell Enabled ≥ 4 ", two HS-DPCCHs, i.e. two channelization codes are used.

Example:

Enable the following settings:

- "DPDCH State = On"
- "DPDCH Overall Symbol Rate = 60 ksp/s"
- "HS-DPCCH State = On"
- "Secondary Cell Enabled = 0"

The used "HS-DPCCH > Channelization Code" is Q / 64. Open the "User Equipment > Code Domain" dialog (see figure 4-20).

- Enable "Secondary Cell Enabled = 4"



Fig. 4-20: Impact of "Secondary Cell Enabled ≥ 4 " on the used channelization code

- 1 = The display confirms, that the DPDCH uses a 60 ksp/s symbol rate and a channelization code on the I channel. The HS-DPCCH is displayed with a symbol rate of 15 ksp/s (i.e. "Slot Format 0") on the Q channel.

2 = The "Code Domain" dialog displays the two HS-DPCCHs, one on each of the I and Q channels; the used symbol rate is 30 ksps, i.e. the "Slot Format 1" is used.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:CCODE? on page 459`

Slot Format

Displays the used slot format.

The specified slot format for "Secondary Cell Enabled < 2" is "Slot Format 0 (15 ksps)". With more than 2 secondary cells or with 2 secondary cells and "MIMO Mode = On", the "Slot Format 1 (30 ksps)" is required, i.e. slot format with higher symbol rate.

See also [figure 4-20](#).

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:SFORMAT? on page 469`

4.30.3 HS-DPCCH Scheduling Table (Release 8 and Later/Release 8 and Later RT)



This settings are available for "Compatibility Mode > Release 8 and Later/Release 8 and Later RT".

MIMO settings and DC-HSDPA/4C-HSDPA/8C-HSDPA settings are available for configuration only for instruments equipped with option R&S SMW-K83.

The settings available in this dialog allow you to adjust the HS-DPCCH signal of a UE configured for normal operation, DC-HSDPA or 4C/8C-HSDPA operation, MIMO mode or for a simultaneous secondary cells + MIMO operation.

The HS-DPCCH structure can be configured with the parameters "Inter TTI Distance", "Number of Table Rows", "From/To" and "Repeat After", as well as by configuring the HARQ-ACK and CQI/PCI information by means of the parameters of the HS-DPCCH scheduling tables. The scheduling for the HARQ-ACK and PCI/CQI reports can be performed independently; different repetition cycles can be specified.

Example: HS-DPCCH Scheduling

The following is a simple example intended to explain the principle. Configured is an HS-DPCCH scheduling in "MIMO Mode = Off" and with "Secondary Cell Enabled = 0".

Parameter	Value
Start Delay	101 * 256 Chips
Compatibility Mode (HS-DPCCH)	Release 8 and Later RT
Inter TTI Distance (Interval)	5 Subframes
HARQ-ACK Scheduling	
Number of Rows	2
HARQ-ACK Repeat After	4 Intervals

Parameter	Value
Row#0	
HARQ-ACK From Interval/ HARQ-ACK To Interval	from HARQ-ACK Interval 0 to 1
HS-DPCCH 1/2, HARQ-ACK 1/2/3/4	A
Row#1	
HARQ-ACK From Interval/ HARQ-ACK To Interval	from HARQ-ACK Interval 3 to 3
HS-DPCCH 1/2, HARQ-ACK 1/2/3/4	N
PCI/CQI Scheduling	
Number of Rows	2
PCI/CQI Repeat After	3 Intervals
Row#0	
PCI-CQI From Interval/ PCI-CQI To Interval	from PCI/CQI Interval 0 to 0
HS-DPCCH 1/2, PCI/CQI 1/2/3/4 Type	DTX
Row#1	
PCI-CQI From Interval/ PCI-CQI To Interval	from PCI/CQI Interval 1 to 1
HS-DPCCH 1/2, PCI/CQI 1/2/3/4 Type	CQI
CQI/CQI _S /CQI _I /CQI _L	5



Use the [Scheduling List](#) to display the configured scheduling.

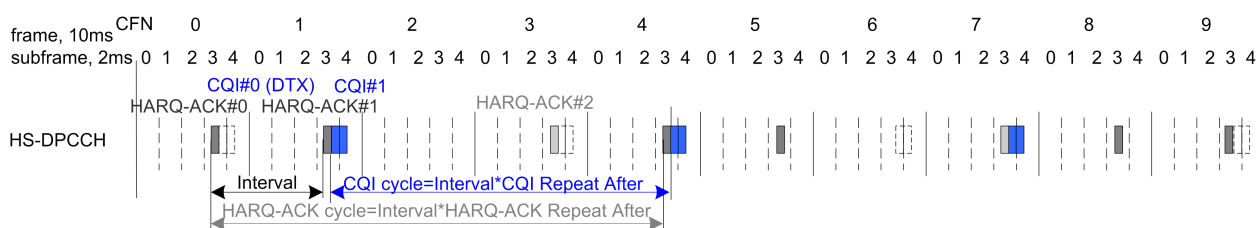


Fig. 4-21: Example of HS-DPCCH Scheduling

"Inter TTI Distance (Interval)" = 5 subframes

"HARQ-ACK Cycle" = "Inter TTI Distance (Interval)" * "HARQ-ACK Repeat After" = 5 * 4 = 20 Intervals"

"CQI Cycle" = "Inter TTI Distance (Interval)" * "CQI Repeat After" = 5 * 3 = 15 Intervals"

MIMO Mode

Enables/disables working in MIMO mode for the selected UE.

Remote command:

[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:MMODE on page 469

Secondary Cell Enabled

Enables the selected number of secondary cells for the selected UE. Secondary cells are used for working in DC-/4C/8C-HSDPA mode.

See also [chapter 3.1.16, "Dual Cell HSDPA \(DC-HSDPA\)"](#), on page 42, [chapter 3.1.17, "HS-DPCCH Extension for 4C-HSDPA and 8C-HSDPA"](#), on page 46 and [chapter 5.5, "How to Configure the HS-DPCCH Settings for 4C-HSDPA Tests"](#), on page 269.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:SC:ENABled`
on page 470

Secondary Cell Active

Sets the number of active secondary cells for the selected UE.

See also [chapter 3.1.16, "Dual Cell HSDPA \(DC-HSDPA\)"](#), on page 42, [chapter 3.1.17, "HS-DPCCH Extension for 4C-HSDPA and 8C-HSDPA"](#), on page 46 and [chapter 5.5, "How to Configure the HS-DPCCH Settings for 4C-HSDPA Tests"](#), on page 269.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:SC:ACTive` on page 470

HARQ-ACK

Comprises the parameters provided for the independent configuration of the HARQ-ACK scheduling.

Number of Rows ← HARQ-ACK

Determines the number of the rows in the HARQ-ACK scheduling table.

Each row represents one TTI interval, as configured with the parameter [Inter TTI Distance \(Interval\)](#). The parameters set in the table are read out cyclically.

See also [figure 4-21](#).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:HACK:ROWS` on page 470

HARQ-ACK Repeat After ← HARQ-ACK

Defines the cycle length after that the information in the HS-DPCCH scheduling table is read out again from the beginning.

The parameter together with the parameter [Inter TTI Distance \(Interval\)](#) defines the repetition cycle of the HARQ-ACK pattern:

$\text{HARQ-ACK cycle} = \text{Inter TTI Distance (Interval)} * \text{HARQ-ACK Repeat After}$

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:HACK:REPeat`
on page 475

HARQ-ACK From Interval/ HARQ-ACK To Interval ← HARQ-ACK

Defines the beginning/end of the HARQ-ACK transmissions inside the HARQ-ACK cycle (specified by [HARQ-ACK Repeat After](#)). The range is specified in multiples of intervals, determined by [Inter TTI Distance \(Interval\)](#).

See also [figure 4-21](#).

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:HACK:FROM`
on page 471

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:HACK:TO`
on page 471

HS-DPCCH 1/2, HARQ-ACK 1/2/3/4 ← HARQ-ACK

Per HS-DPCCHs, sets the information transmitted during the HARQ-ACK slots of the TTIs during the corresponding specified "HARQ-ACK From/To" range.

Two HS-DPCCHs are transmitted, if "Secondary Cell Enabled > 3".

The number of enabled HARQ-ACKs depends on the combination of enabled and active secondary cells. In this implementation, the activated cells are mapped from left to right.

The processing of HS-DPCCH is defined for four different main cases (see [table 4-10](#)).

Table 4-10: HS-DPCCH processing

Mode	"MIMO Mode"	"Secondary Cell Enabled"	"Secondary Cell Active"	Comment
Normal operation	Off	0	0	-
MIMO only	On	0	0	see chapter 3.1.15.5, "MIMO uplink control channel support" , on page 40
DC-HSDPA only 4C/8C-HSDPA only	Off	1 2 .. 7	0, 1 2 .. 7	see chapter 3.1.16.1, "DC-HSDPA Data Acknowledgement (non MIMO mode)" , on page 43 see chapter 3.1.17, "HS-DPCCH Extension for 4C-HSDPA and 8C-HSDPA" , on page 46
DC-HSDPA +MIMO 4C/8C-HSDPA +MIMO	On	1 2 .. 7	1 2 .. 7	see chapter 3.1.16.2, "DC-HSDPA + MIMO" , on page 45 see chapter 3.1.17, "HS-DPCCH Extension for 4C-HSDPA and 8C-HSDPA" , on page 46

Meaning of the used abbreviations:

- **A** indicates an ACK response; **N** - an NACK
- **D** means no transmission (DTX), i.e. no transport block was sent on the corresponding HS-DSCH downlink transmission.
- Single letter, e.g. an **A** stands for a response to a single scheduled transport block (TB)
- A letter's couple, e.g. an **AA** indicates two MIMO streams, i.e. the response on two TBs
- **/** is a separation mark between the response to the serving and secondary cells, where the feedback related to the serving HS-DSCH cell is the one before the divider sign.

Example: Understanding the syntax

For better representation of the principle, the sending of ACK only messages is assumed.

HARQ-ACK value	Description
A/A/A	MIMO Mode = Off (single letters only) Three active cells, one serving and two secondary serving cells; one single TB transmission per cell
AA/A	MIMO Mode = On Two active cells, one serving with two MIMO streams and one secondary serving cell with single TB transmission
AA/AA	MIMO Mode = On Two active cells, each transmitting two MIMO streams
AA/AA, AA/D	MIMO Mode = On Three active cells, each transmitting two MIMO streams
AA/AA, AA/AA	MIMO Mode = On Four active cells, each transmitting two MIMO streams

"DTX" No HARQ-ACK feedback information is sent.

"A, N" Selects an ACK or NACK response to a single scheduled transport block.

"AA, AN, NA, NN"

(MIMO Mode On, Secondary Cell Enabled/Active = 0)

Selects the response to two scheduled transport blocks, i.e. feedback on the primary and secondary stream in a dual stream transmission.

"A/D, N/A, ... (different combinations possible)"

(MIMO Mode Off, "Secondary Cell Enabled < 2")

Selects the response to a single scheduled transport block on each of the serving and secondary serving HS-DSCH cells.

"A/D/D, N/D/D, ... (different combinations possible)"

(MIMO Mode Off, "Secondary Cell Enabled = 2")

Selects the response to a single scheduled transport block on each of the serving and the two secondary serving HS-DSCH cells.

"AN/NN, D/AA, ... (different combinations possible)"

(MIMO Mode On, Secondary Cell Active On)

Selects the response to two scheduled transport blocks on each of the serving and secondary serving HS-DSCH cells.

"PRE, POST" PRE or POST is sent in the HARQ-ACK slots of the corresponding TTI.

Remote command:

[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:HACK<di>
on page 471

Power Offset HARQ-ACK ← HARQ-ACK

Sets the power offset of a HARQ-ACK response relative to the "Power".

The power used during all HARQ-ACK slots during the corresponding specified "HARQ-ACK From/To" range is calculated as:

$$P_{\text{HARQ-ACK}} = \text{Power} + P_{\text{off_HARQ-ACK}}$$

The value range is -10 dB to 10 dB.

The parameter is enabled for HARQ-ACK different than DTX.

While generating the HS-DPCCH signal in real-time, the HARQ-ACK power offsets of all configured HARQ-ACK responses are set to the same value.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:POHACK`
on page 472

PCI / CQI

Comprises the parameters provided for the independent configuration of the PCI/CQI reports scheduling.

Number of Rows ← PCI / CQI

This parameter determines the number of the rows in the PCI / CQI scheduling table.

Each row represents one TTI interval, as configured with the parameter [Inter TTI Distance \(Interval\)](#). The parameters set in the table are read out cyclically.

See also [figure 4-21](#).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:PCQI:ROWS` on page 470

PCI/CQI Repeat After ← PCI / CQI

Defines the cycle length after that the information in the HS-DPCCH scheduling table is read out again from the beginning.

The parameter together with the parameter [Inter TTI Distance \(Interval\)](#) defines the repetition cycle of the PCI/CQI pattern:

$$\text{PCI/CQI cycle} = \text{Inter TTI Distance (Interval)} * \text{PCI/CQI Repeat After}$$

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:PCQI:REPEAT`
on page 475

PCI-CQI From Interval/ PCI-CQI To Interval ← PCI / CQI

Defines the beginning/ end of the PCI/CQI transmissions inside the PCI/CQI cycle (specified by [PCI/CQI Repeat After](#)). The range is specified in multiples of intervals, defined by [Inter TTI Distance \(Interval\)](#).

See also [figure 4-21](#).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI:FROM`
on page 473
`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI:TO`
on page 473

HS-DPCCH 1/2, PCI/CQI 1/2/3/4 Type ← PCI / CQI

Per HS-DPCCH, selects the type of the PCI/CQI report (see [CQI Reports: Type A and Type B](#) and [CQI reports: CQI1 and CQI2](#)).

Two HS-DPCCHs are required, if "Secondary Cell Enabled > 3".

The number of enabled PCI/CQIs depends on the number of required HS-DPCCHs and the "Slot Format". In this implementation, the activated cells are mapped from left to right.

The available values depend on the state of the parameters "MIMO Mode", "Secondary Cell Enabled" and "Secondary Cell Active".

"DTX" No PCI/CQI feedback information is sent.

"CQI" Selects CQI report for the normal operation.

"Type A Single TB"

(MIMO Mode On)

Selects CQI Type A report with information that 1 transport block is preferred.

"Type A Double TB"

(MIMO Mode On)

Selects CQI Type A report with information that 2 transport blocks are preferred.

"Type B"

(MIMO Mode On)

Selects CQI Type B report.

"Composite CQI"

(MIMO Mode Off, "Secondary Cell Enabled = Secondary Cell Active ≤ 2")

Selects a Composite CQI, constructed from the two individual reports CQI1 and CQI2 of the serving and secondary serving HS-DSCH cell.

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI<di>:TYPE](#) on page 473

Power Offset PCI/CQI ← PCI / CQI

Sets the power offset $P_{\text{off_PCI/CQI}}$ of all PCI/CQI slots during the corresponding specified PCI/CQI From/To range relative to the [Power](#).

The power $P_{\text{PCI/CQI}}$ used during the PCI/CQI slots is calculated as:

$$P_{\text{PCI/CQI}} = \text{Power} + P_{\text{off_PCI/CQI}}$$

The value range is -10 dB to 10 dB.

While generating the HS-DPCCH signal in real-time, the PCI/CQI power offsets of all configured PCI/CQI slots are set to the same value.

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:POPCqi](#) on page 474

PCI/CQI 1/2/3/4 Content ← PCI / CQI

Accesses a dialog for configuring the PCI and CQI report. The provided settings depend on the selected "PCI/CQI Type".

PCI / CQI Type	A (Dual TB)
CQI 1	1
CQI 2	3
PCI	2

CQI/CQI_s/CQI₁/CQI₂ ← PCI/CQI 1/2/3/4 Content ← PCI / CQI

Sets the CQI report transmitted during the PCI/CQI slots of the TTIs during the corresponding specified PCI/CQI From/To range (see [chapter 3.1.15.6, "CQI Reports: Type A and Type B"](#), on page 41 and ["CQI reports: CQI1 and CQI2"](#) on page 45).

- "CQI" Sets the CQI value for CQI Type B report and the CQI in normal operation.
- "CQI_s" Sets the CQI value in case a CQI Type A report when one transport block is preferred.
- "CQI₁" Sets the CQI₁ value of CQI Type A report when 2 transport blocks are preferred or the CQI₁ value of a composite CQI report of a dual cell only operation.
- "CQI₂" Sets the CQI₂ value of CQI Type A report when 2 transport blocks are preferred or the CQI₂ value of a composite CQI report of a dual cell only operation.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI<di>:CQI<us>` on page 474

PCI ← PCI/CQI 1/2/3/4 Content ← PCI / CQI

Selects the PCI value transmitted during the PCI/CQI slots of the TTIs during the corresponding specified PCI/CQI From/To range (see [PCI reports](#)).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI<di>:PCI` on page 474

Suggested / Current ARB Seq. Length (HS-DPCCH)

Displays the suggested and current ARB sequence length, in case the signal is not generated in real-time.

The "Suggested ARB Sequence Length" is the calculated minimum length that depends on the [Inter TTI Distance \(Interval\)](#), the [Number of Rows/Number of Rows](#), the [HARQ-ACK Repeat After](#) and the [PCI/CQI Repeat After](#). The current ARB sequence length is adjusted by pressing the button "Adjust ARB Sequence Length".

Example: Effect of the ARB Sequence Length

- Preset the instruments and adjust the settings as described in [example "HS-DPCCH Scheduling"](#) on page 191.
Use the [Scheduling List](#) to show the HS-DPCCH scheduling (see also [figure 4-21](#)).
- Change the [Compatibility Mode \(HS-DPCCH\)](#) to "Release 8 and Later" and compare the displayed HS-DPCCH scheduling in the "Scheduling List".

Real-time signal generation

3GPP FDD A: UE1/Scheduling List

Frame Start: 0 Number Of Frames: 10

! : The channel is inactive in the slot.
X : The channel is active in the slot.
- : The channel is inactive in the symbol.
H : HARQ-ACK information is transmitted in the symbol.
C : PCI/CQI information is transmitted in the symbol.

Frame Number	Slot Number	DPCCH Slots	DPDCH Slots	HS-DPCCH Symbols
0	0	X	X	-----
	1	X	X	-----
	2	X	X	-----
	3	X	X	-----
	4	X	X	-----
	5	X	X	-----
	6	X	X	-----
	7	X	X	-----
	8	X	X	-----
	9	X	X	-----
	10	X	X	-----
	11	X	X	-----
	12	X	X	-----
	13	X	X	-----
	14	X	X	-----
1	0	X	X	-----
	1	X	X	-----
	2	X	X	-----
	3	X	X	-----
	4	X	X	-----
	5	X	X	-----
	6	X	X	-----
	7	X	X	-----
	8	X	X	-----
	9	X	X	-----
	10	X	X	-----
	11	X	X	-----
	12	X	X	-----
	13	X	X	-----
	14	X	X	-----

ARB signal generation with "Current ARB Seq. Length" < "Suggested ARB Seq. Length"

3GPP FDD A: UE1/Scheduling List

Frame Start: 0 Number Of Frames: 10

! : The channel is inactive in the slot.
X : The channel is active in the slot.
- : The channel is inactive in the symbol.
H : HARQ-ACK information is transmitted in the symbol.
C : PCI/CQI information is transmitted in the symbol.
_ : The channel restarts because of the ARB sequence length.

Frame Number	Slot Number	DPCCH Slots	DPDCH Slots	HS-DPCCH Symbols
0	0	X	X	-----
	1	X	X	-----
	2	X	X	-----
	3	X	X	-----
	4	X	X	-----
	5	X	X	-----
	6	X	X	-----
	7	X	X	-----
	8	X	X	-----
	9	X	X	-----
	10	X	X	-----
	11	X	X	-----
	12	X	X	-----
	13	X	X	-----
	14	X	X	-----
1	0	X	X	-----
	1	X	X	-----
	2	X	X	-----
	3	X	X	-----
	4	X	X	-----
	5	X	X	-----
	6	X	X	-----
	7	X	X	-----
	8	X	X	-----
	9	X	X	-----
	10	X	X	-----
	11	X	X	-----
	12	X	X	-----
	13	X	X	-----

The channel restarts after 1 frame ("Current ARB Seq. Length = 1 Frame")

- The "Suggested / Current ARB Sequence Length" is 12 / 1. Press the [Adjust ARB Sequence Length \(HS-DPCCH\)](#).
The "Current ARB Seq. Length" is adjusted, the channel restarts after 12 frames and the "Scheduling List" shows the HS-DPCCH scheduling in all frames as in the real-time mode.

Tip: To ensure a long enough ARB sequence, select "3GPP FDD > Filter/Clipping/ARB Settings" and adjust the [Sequence Length ARB](#) so that the ARB sequence length is multiple or equal the scheduling repetition.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:SEnGth?` on page 475

Adjust ARB Sequence Length (HS-DPCCH)

Sets the current ARB sequence length to the suggested value (see also [example "Effect of the ARB Sequence Length"](#) on page 199).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:SEnGth:ADJust`
on page 476

4.30.4 HS-DPCCH Settings for Normal Operation (Up to Release 7)

The R&S SMW supports also the parameters for backward compatibility.

1. To enable these parameters, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE"
2. Select "HS-DPCCH".
3. Select "Compatibility Mode > Up to Release 7".

3GPP FDD A: User Equipment1

General Code Domain DPCCH DPDCH **HS-DPCCH** E-DPCCH E-DPDCH E-DCH

HARQ-ACK (Slots) 1 CQI (Slots) 2

State Off ☒ On Power -10.00 dB

Compatibility Mode Up to Release 7

Start Delay 101 * 256 Chips Power Offset ACK 1.5 dB

Inter TTI Distance 5 Subframes Power Offset NACK 1.0 dB

Channelization Code Q / 64 MIMO Mode ☐ On

ACK/NACK Pattern (bin) 1...

CQI Pattern Length 4

CQI Values 1 1 10 2

The dialog contains the parameters that were available up to the selected release.

Power Offset ACK

Sets the power offset $P_{\text{off_ACK}}$ of an ACK response to a single scheduled transport block relative to the CQI [Power](#) P_{CQI} .

The power PACK used during the HARQ-ACK slot is calculated as:

$$P_{\text{ACK}} = P_{\text{CQI}} + P_{\text{off_ACK}}$$

The value range is -10 dB to 10 dB.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:POACK` on page 460

Power Offset NACK

Sets the power offset $P_{\text{off_NACK}}$ of an NACK response to a single scheduled transport block relative to the CQI [Power](#) P_{CQI} .

The power P_{NACK} used during the HARQ-ACK slot is calculated as:

$$P_{\text{NACK}} = P_{\text{CQI}} + P_{\text{off_NACK}}$$

The value range is -10 dB to 10 dB.

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:HS:PONack](#) on page 460

ACK/NACK Pattern

(available for "MIMO Mode" set to Off only)

Enters the pattern for the HARQ-ACK field (Hybrid-ARQ Acknowledgment).

After receiving a transmission packet, the user equipment returns feedback information in the HARQ-ACK field that is related to the accuracy of downlink HS-DSCH transmission.

One bit is used per HS-DPCCH packet. The maximum length of the pattern is 32 bits.

""1" = ACK" The HARQ ACK is sent. Transmission was successful and correct.

""0" = NACK" The NACK is sent. Transmission was not correct. With an NACK, the UE requests retransmission of the incorrect data.

""-" = DTX" Nothing is sent. Transmission is interrupted (Discontinuous Transmission (DTX)).

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:HS:HAPattern](#) on page 461

CQI Pattern Length

(available for "MIMO Mode" set to Off only)

Sets the length of the CQI sequence. The values of the CQI sequence are entered in input fields "CQI Values". The pattern is generated cyclically.

With the CQI (Channel Quality Indicator), the user equipment informs the base station about the receive quality of the downlink HS-PDSCH.

Thus, the base station can adapt the modulation and coding scheme to improve the signal quality. The instrument supports the control of the base station HS-PDSCH by CQI sequences with a length of 1 to 10 values.

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:HS:CQI:PLENgt](#)h on page 461

CQI Values

(available for MIMO Mode set to Off only)

Enters the values of the CQI sequence. Value -1 means that no CQI is sent (DTX).

The length of the CQI sequence is set at input field CQI Length. The pattern is generated cyclically.

With the CQI (Channel Quality Indicator), the user equipment informs the base station about the receive quality of the downlink HS-PDSCH. Thus, the base station can adapt the modulation and coding scheme to improve the signal quality. The instrument supports the control of the base station HS-PDSCH by CQI sequences with a length of 1 to 10 values.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:MSTation<st>:DPCCh:HS:CQI<ch> [ :VALues ]
```

on page 462

MIMO Mode (Up to Release 7)

(enabled for configuration for instruments equipped with option R&S SMW-K83 only)

Enables/disables working in MIMO mode for the selected UE.

When MIMO mode is enabled, the parameters ACK/NACK Pattern, CQI Pattern Length and CQI Values are not available. Several MIMO specific parameters are enabled for configuration (see [chapter 4.30.5, "MIMO Settings HS-DPCCH \(Up to Release 7\)"](#), on page 202s).

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO [ :MODE ]
```

on page 462

4.30.5 MIMO Settings HS-DPCCH (Up to Release 7)



MIMO settings are available for configuration only for instruments equipped with option R&S SMW-K83 and enabled parameter "MIMO Mode".

1. To access these parameters, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE"
2. Select "HS-DPCCH".
3. Select "Compatibility Mode > Up to Release 7".

4. Select "MIMO Mode > On".

3GPP FDD A: User Equipment1

General Code Domain DPCCH DPDCH **HS-DPCCH** E-DPCCH E-DPDCH E-DCH

Compatibility Mode Up to Release 7

Start Delay 101 *256 Chips Power Offset ACK 1.5 dB

Inter TTI Distance 5 Subframes Power Offset NACK 1.0 dB

Channelization Code Q / 64 MIMO Mode ☒ On

MIMO Settings

Power Offset ACK/ACK 1.0 dB Power Offset ACK/NACK 0.0 dB

Power Offset NACK/ACK 0.0 dB Power Offset NACK/NACK 0.0 dB

Power Offset CQI Type A 2.0 dB Number Of TTIs 3

	HARQ-ACK	PCI	CQI Type	CQI/CQIs/CQI1	CQI2
0	TB1: ACK, TB2: ACK	3	Type A Dual TB	2	5
1	Single TB: NACK	1	Type B	9	
2	Single TB: ACK	0	Type A Single TB	1	

The available settings allow you to adjust the HS-DPCCH configuration for UE configured in MIMO mode.

The HS-DPCCH structure can be configured with the parameters [Inter TTI Distance](#) and [Number of TTIs](#), as well as by configuring the HARQ-ACK and CQI/PCI information per TTI by means of the parameters of the HS-DPCCH scheduling table. Any combination of single or dual transport block [HARQ-ACK](#), [PCI value](#), [CQI Type](#) and corresponding [CQI value\(s\)](#), as well as channel power can be configured.

Power Offset ACK/ACK

Sets the power offset $P_{\text{off_ACK/ACK}}$ of an ACK/ACK response to two scheduled transport blocks relative to the CQI [Power](#) P_{CQI} .

The power $P_{\text{ACK/ACK}}$ used during the HARQ-ACK slots is calculated as:

$$P_{\text{ACK/ACK}} = P_{\text{CQI}} + P_{\text{off_ACK/ACK}}$$

The value range is -10 dB to 10 dB.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:POAAck`
on page 462

Power Offset ACK/NACK

Sets the power offset $P_{\text{off_ACK/NACK}}$ of an ACK/NACK response to two scheduled transport blocks relative to the CQI [Power](#) P_{CQI} .

The power $P_{\text{ACK/NACK}}$ used during the HARQ-ACK slots is calculated as:

$$P_{\text{ACK/NACK}} = P_{\text{CQI}} + P_{\text{off_ACK/NACK}}$$

The value range is -10 dB to 10 dB.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:POANack`
on page 463

Power Offset NACK/ACK

Sets the power offset $P_{\text{off_NACK/ACK}}$ of an NACK/ACK response to two scheduled transport blocks relative to the CQI Power P_{CQI} .

The power $P_{\text{NACK/ACK}}$ used during the HARQ-ACK slots is calculated as:

$$P_{\text{NACK/ACK}} = P_{\text{CQI}} + P_{\text{off_NACK/ACK}}$$

The value range is -10 dB to 10 dB.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:PONack`
on page 464

Power Offset NACK/NACK

Sets the power offset $P_{\text{off_NACK/NACK}}$ of an NACK/NACK response to two scheduled transport blocks relative to the CQI Power P_{CQI} .

The power $P_{\text{NACK/NACK}}$ used during the HARQ-ACK slots is calculated as:

$$P_{\text{NACK/NACK}} = P_{\text{CQI}} + P_{\text{off_NACK/NACK}}$$

The value range is -10 dB to 10 dB.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:PONNack`
on page 464

Power Offset CQI Type A

Sets the power offset $P_{\text{off_CQI Type A}}$ of the PCI/CQI slots in case a CQI Type A report is sent relative to the CQI Power P_{CQI} .

The power $P_{\text{CQI Type A}}$ used during the PCI/CQI slots is calculated as:

$$P_{\text{CQI Type A}} = P_{\text{CQI}} + P_{\text{off_CQI Type A}}$$

Since the CQI Type B reports are used in a single stream transmission (see [chapter 3.1.15.6, "CQI Reports: Type A and Type B"](#), on page 41), the power $P_{\text{CQI Type B}} = P_{\text{CQI}}$.

The value range is -10 dB to 10 dB.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:POCA` on page 465

Number of TTIs (Up to Release 7)

Selects the number of configurable TTIs.

This parameter determines the number of the rows in the HS-DPCCH scheduling table. Each row represents one TTI. The parameters set in the table are read out cyclically.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:TTICount`
on page 465

HARQ-ACK (Up to Release 7)

Selects the information transmitted during the HARQ-ACK slot of the corresponding TTI (see [chapter 3.1.15.5, "MIMO uplink control channel support"](#), on page 40).

"DTX" Selects Discontinuous Transmission (DTX) for the corresponding TTI. During that TTI no feedback information is sent, i.e. all other parameters in the feedback signaling table are disabled.

"Single TB: ACK/Single TB: NACK" Selects an ACK or NACK response to a single scheduled transport block.

"TB1:ACK,TB2:ACK / TB1:ACK,TB2:NACK / TB1:NACK,TB2:ACK / TB1:NACK,TB2:NACK" Selects the response to two scheduled transport blocks.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:TTI<ch0>:HACK`
on page 466

PCI (Up to Release 7)

Selects the PCI value transmitted during the PCI/CQI slots of the corresponding TTI (see [chapter 3.1.15.7, "PCI reports"](#), on page 41).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:TTI<ch0>:PCI`
on page 466

CQI Type (Up to Release 7)

Selects the type of the CQI report (see [chapter 3.1.15.6, "CQI Reports: Type A and Type B"](#), on page 41).

"Type A Single TB" Selects CQI Type A report with information that 1 transport block is preferred.

"Type A Double TB" Selects CQI Type A report with information that 2 transport blocks are preferred.

"Type B" Selects CQI Type B report.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:TTI<ch0>:CQIType`
on page 466

CQI/CQI_s/CQI₁/CQI₂ (Up to Release 7)

Selects the CQI report transmitted during the PCI/CQI slots of the corresponding TTI (see [chapter 3.1.15.6, "CQI Reports: Type A and Type B"](#), on page 41).


"CQI"	Sets the CQI value for CQI Type B report.
"CQI _s "	Sets the CQI value in case a CQI Type A report when 1 transport block is preferred.
"CQI ₁ "	Sets the CQI ₁ value of CQI Type A report when 2 transport blocks are preferred.
"CQI ₂ "	Sets the CQI ₂ value of CQI Type A report when 2 transport blocks are preferred.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:TTI<ch0>:
CQI<di>` on page 467

4.31 E-DPCCH Settings - UE

1. To access the E-DPCCH channel settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE".
2. Select "Mode > DPCCH + DPDCH".
3. Select "E-DPCCH".

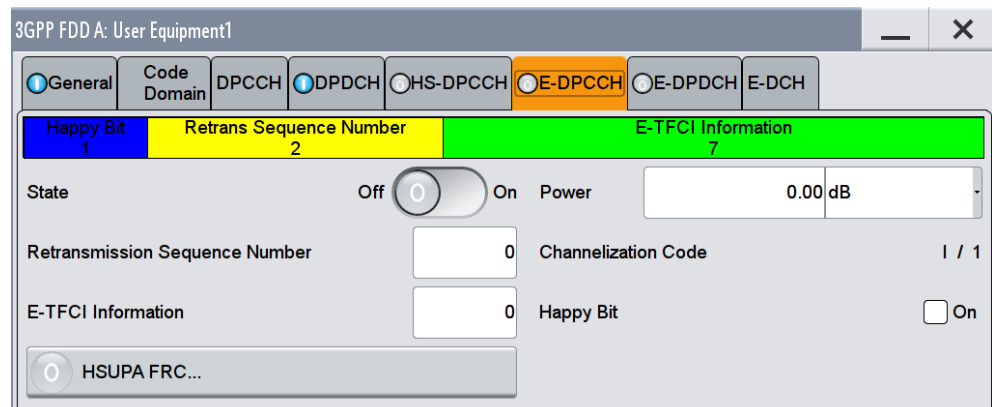

The dialog displays the channel structure and the available parameters.

State (E-DPCCH)

Activates or deactivates the E-DPCCH channel.

If an FRC is set for the channel, this field is activated automatically.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:STATE`
on page 516

Power

Sets the power of the E-DPCCH channel.

The value range is -80 dB to 0 dB.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:POWer`
on page 516

Retransmission Sequence Number

Sets the retransmission sequence number.

The value range is 0 to 3.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:RSNumber`
on page 516

Channelization Code

Displays the channelization code and the modulation branch (always I) of the E-DPCCH. The code channel is spread with the set channelization code (spreading code). The standard assigns a fixed channelization code to the E-DPCCH.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:CCODE?`
on page 515

E-TFCI Information

Sets the value for the TFCI (Transport Format Combination Indicator) field.

The value range is 0 to 127.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:TFCI`
on page 516

Happy Bit

Activating the happy bit. This bit is indicating whether the UE could use more resources (Not Happy/deactivated) or not (Happy/activated).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:HBIT`
on page 515

HSUPA FRC...

For UE1, accesses the dialog for configuring the FRC (Fixed Reference Channel), see [chapter 4.32, "HSUPA FRC Settings - UE"](#), on page 207.

Remote command:

n.a.


4.32 HSUPA FRC Settings - UE

The "UE HSUPA FRC" dialog provides the parameters for configuring the fixed reference channel (FRC) and the settings for the HARQ simulation.

For more information, see also [chapter 3.1.12, "HARQ Feedback"](#), on page 32 and [chapter 3.1.14.4, "16QAM Fixed Reference Channel: FRC 8"](#), on page 36.

4.32.1 FRC General Settings

1. To access these settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE"
2. Select "E-DPCCH > HSUPA FRC..."

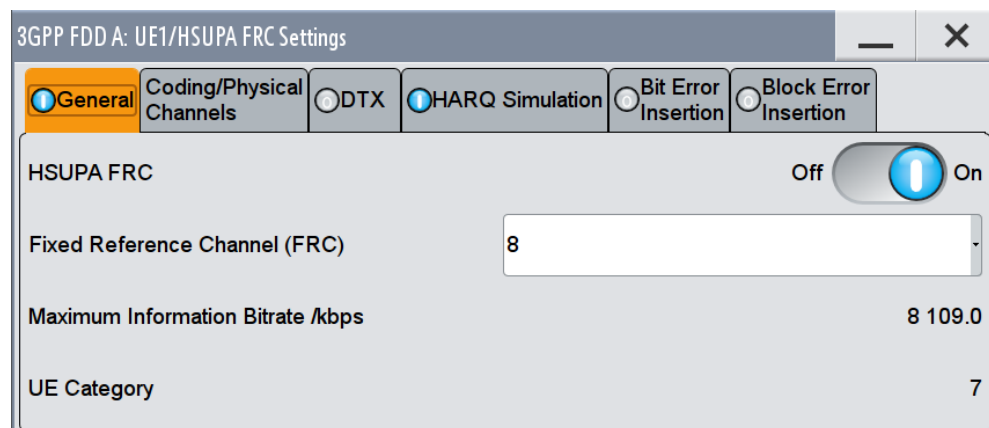

The dialog comprises the common settings for the fixed reference channel (FRC).

State (HSUPA FRC)

Activates or deactivates the FRC state for the E-DCH channels.

If FRC is activated, the channels E-DPCCH and E-DPDCH are automatically activated.

The following parameters of these channels are set automatically, depending on the configured FRC:

- for E-DPCCH:
 - "Retransmission Sequence Number" is set to 0
 - "E-TFCI"
- For E-DPDCH:
 - [Overall Symbol Rate](#) is set according to the correspondent parameter of FRC. The "Modulation" is set according to the "Modulation" used for the selected FRC. The [E-DPDCH Data Source](#) is set according to the [Data Source \(E-DCH\)](#) used for the selected FRC.
- For E-DCH Scheduling:
 - [E-DCH TTI](#) is set according to the [E-DCH TTI](#) of the selected FRC

If the "HARQ Simulation" is disabled and the state in the DTX mode section is activated, the "E-DCH Scheduling Table" is configured according to the ["DTX Pattern"](#) specified.

By enabled "HARQ Simulation", the settings in the "E-DCH Scheduling Table" are configured to ensure a continuous E-DCH transmission.

Note: HSUPA FRCs are disabled, if [UL-DTX...](#) / [User Scheduling State](#) or [Dynamic Power Control State](#) are activated.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:STATe`
on page 513

Fixed Reference Channel (FRC)

Selects the FRC according to TS 25.141 Annex A.10.

Additionally, user defined FRC can be configured.

FRC8 is available only for instruments equipped with R&S SMW-K83.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:CHANnel`
on page 504

Maximum Information Bitrate/kbps

Displays the maximum information bit rate.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:MIBRate?`
on page 511

UE Category

Displays the UE category that is minimum required for the selected FRC (see also [chapter 3.1.19.2, "UL 16QAM UE Capabilities"](#), on page 47).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:UECategory?` on page 515

4.32.2 Coding And Physical Channels Settings

1. To access the coding and physical channel settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE"

2. Select "E-DPCCH > HSUPA FRC...> Coding/Physical Channels"

3GPP FDD A: UE1/HSUPA FRC Settings	
<div> <input checked="" type="radio"/> General <input checked="" type="radio"/> Coding/Physical Channels <input type="radio"/> DTX <input type="radio"/> HARQ Simulation <input type="radio"/> Bit Error Insertion <input type="radio"/> Block Error Insertion </div>	
Data Source (E-DCH)	PN 9
Overall Symbol Rate	2x960 + 2x1920 ksps
Modulation	4PAM
E-DCH TTI	2 ms
Number Of HARQ Processes	8
Binary Channel Bits / TTI (Nbin)	23 040
Transport Block Size Table	Table 3 (2ms)
Transport Block Size Index (E-TFCI)	96
Information Bit Payload (Ninf)	16 218
Coding Rate (Ninf Nbin)	0.704

This dialog comprises the parameters required for configuring the physical channel settings and coding.

Data Source (E-DCH)

Selects the data source for the E-DCH channels, i.e. this parameter affects the corresponding parameter of the E-DPDCH.

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "PNxx"
An internally generated pseudo-random noise sequence.
- "Pattern"
An internally generated sequence according to a bit pattern.
Use the "Pattern" box to define the bit pattern.
- "Data List/Select DList"
A binary data from a data list, internally or externally generated.
Select "Select DList" to access the standard "Select List" dialog.
 - Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
 - Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.

- Use the standard "File Manager" function to transfer external data lists to the instrument.

See also:

- section "Modulation Data" in the R&S SMW user manual.
- section "File and Data Management" in the R&S SMW user manual.
- section "Data List Editor" in the R&S SMW user manual

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:DATA`

on page 504

`[:SOURce<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:DATA: PATtern` on page 506

`[:SOURce<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:DATA: DSElect` on page 505

Overall Symbol Rate

Sets the overall symbol rate for the E-DCH channels, i.e. this parameter affects the corresponding parameter of the E-DPDCH.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:ORATe`

on page 512

Modulation

Sets the modulation of the FRC, i.e. this parameter affects the corresponding parameter of the E-DPDCH.

There are two possible modulation schemes specified, BPSK and 4PAM (4 Pulse-Amplitude Modulation). The latter one is available only for the following [Overall Symbol Rates](#):

- 2x960 ksp/s
- 2x1920 ksp/s
- 2x960 + 2x1920 ksp/s.

Note: Modulation scheme 4PAM is available only for instruments equipped with the HSPA+ option R&S SMW-K83.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:`

`MODulation` on page 512

E-DCH TTI

Sets the size of the TTI (Transmission Time Interval) for the E-DCH channels, i.e. this parameter affects the corresponding parameter of the E-DCH scheduling configuration.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:TTIEdch`

on page 515

Number Of HARQ Processes

Displays the number of HARQ (Hybrid-ARQ Acknowledgement) processes. This value determines the distribution of the payload in the subframes.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:HPROcesses?` on page 511

Binary Channel Bits / TTI (Nbin)

Displays the number of binary bits per TTI.

Transport Block Size Table

Selects the Transport Block Size Table from 3GPP TS 25.321, Annex B according to that the transport block size is configured.

The transport block size is determined also by the parameter "Transport Block Size Index".

The allowed values of this parameter depend on the selected "E-DCH TTI" and "Modulation" scheme.

E-DCH TTI	Modulation	Transport Block Size Table	Transport Block Size Index (E-TFCI)
2 ms	BPSK	Table 0	0 .. 127
		Table 1	0 .. 125
	4PAM	Table 2	0 .. 127
		Table 3	0 .. 124
10 ms	-	Table 0	0 .. 127
		Table 1	0 .. 120

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:TBS:TABLE` on page 513

Transport Block Size Index (E-TFCI)

Selects the Transport Block Size Index (E-TFCI) for the corresponding table, as described in 3GPP TS 25.321, Annex B.

The value range of this parameter depends on the selected "Transport Block Size Table".

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:TBS:INDEX` on page 513

Information Bit Payload (Ninf)

Displays the payload of the information bit. This value determines the number of transport layer bits sent in each HARQ process.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:PAYBits?`
on page 512

Coding Rate (Ninf/Nbin)


Displays the relation between the information bits to binary channel bits.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:CRATe?`
on page 504

4.32.3 DTX Mode Settings

1. To access these settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE"
2. Select "E-DPCCH > HSUPA FRC... > DTX"

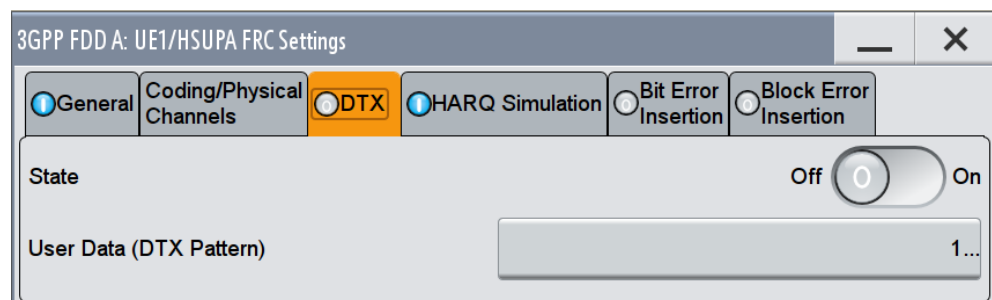

This dialog comprises the parameters required for enabling and defining user data.

State (DTX)

Activates or deactivates the DTX (Discontinuous Transmission) mode.

Note: If activated, the "E-DCH Scheduling Table" in the "E-DPCCH Settings" dialog is configured according to the "DTX Pattern" specified.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:DTX:STATE` on page 508

User Data (DTX Pattern)

Sets the user-definable the bit pattern for the DTX. The maximum length is 64 bits.

The following values are allowed:

- 1: Data transmission
- -: DTX

Note: If activated, this setting will overwrite the "E-DCH Scheduling Table" in the "E-DPCCH Settings" dialog.

Example:

"User Data (DTX Pattern) = 1-11-" sets the E-DCH Scheduling settings as follow:

E-DCH TTI		E-DCH From TTI		E-DCH To TTI	
10 ms		0	0	0	0
Number Of Table Rows: 3		1	2	2	2
E-DCH Schedule Repeats After: 5 TTIs		2	3	3	3

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DTX:
PATtern on page 507
```

4.32.4 HARQ Simulation Settings

This section describes the HARQ settings. The provided settings depend on the selected "HARQ Simulation > Mode".

1. To access these settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE"
2. Select "E-DPCCH > HSUPA FRC... > HARQ Simulation".
3. Select "Mode > Virtual HARQ".

3GPP FDD A: UE1/HSUPA FRC Settings

General Coding/Physical Channels DTX **HARQ Simulation** Bit Error Insertion Block Error Insertion

State Off ☒ On

Mode Virtual HARQ

Virtual HARQ Mode

Always Use Redundancy Version 0 ☒ On

HARQ1: ACK/NACK	<input type="text" value="1"/>	HARQ2: ACK/NACK	<input type="text" value="1"/>
HARQ3: ACK/NACK	<input type="text" value="1"/>	HARQ4: ACK/NACK	<input type="text" value="1"/>
HARQ5: ACK/NACK	<input type="text" value="1"/>	HARQ6: ACK/NACK	<input type="text" value="1"/>
HARQ7: ACK/NACK	<input type="text" value="1"/>	HARQ8: ACK/NACK	<input type="text" value="1"/>

4. Select "Mode > HARQ Feedback".

3GPP FDD A: UE1/HSUPA FRC Settings

General Coding/Physical Channels DTX **HARQ Simulation** Bit Error Insertion Block Error Insertion


HARQ Feedback

Always Use Redundancy Version 0 ☒ On

Maximum Number Of Retransmissions

ACK Definition High

Connector Local

 Local Connector Settings...

Delay Between HARQ And Feedback 138 *256 Chips


Additional User Delay *256 Chips

TTL Input

HARQ Feedback

Uplink Signal

Device Under Test

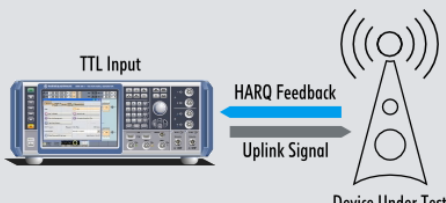

For background information, refer to [chapter 3.1.12, "HARQ Feedback"](#), on page 32.

State (HARQ)

Activates or deactivates the HARQ simulation mode.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:MSTation<st> [ :HSUPa ] :DPCCh:E:FRC:HARQ:
SIMulation [ :STATe ] on page 511
```

Mode (HARQ)

Selects the HARQ simulation mode.

"Virtual HARQ" This mode simulates basestation feedback. For every HARQ process (either 4 or 8), a bit pattern can be defined to simulate ACKs and NACKs.

"HARQ Feed- (not supported in Baseband C/D)
back" This mode allows you to dynamically control the transmission of the HSUPA fixed reference channels. An "ACK" from the base station leads to the transmission of a new packet while a "NACK" forces the instrument to retransmit the packet with a new channel coding configuration (i.e. new "redundancy version") of the concerned HARQ process.
For further information, see [chapter 3.1.12, "HARQ Feedback"](#), on page 32.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:MSTation<st> [ :HSUPa ] :DPCCh:E:FRC:HARQ:
SIMulation:MODE on page 509
```

Virtual HARQ Mode

Simulates a basestation feedback with the following settings:

Always Use Redundancy Version 0 (HARQ) ← Virtual HARQ Mode

If activated, the same redundancy version is sent, that is, the redundancy version is not adjusted for the next retransmission in case of a received NACK.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:MSTation<st> [ :HSUPa ] :DPCCh:E:FRC:HARQ:
SIMulation:RVZero on page 510
```

HARQ1..8: ACK/NACK ← Virtual HARQ Mode

(HARQ mode Virtual HARQ only)

Enters the pattern for the HARQ (Hybrid-ARQ Acknowledgement).

The maximum length of the pattern is 32 bits.

"1" = ACK New data is transmitted and the RSN (Retransmission Sequences Number) is set to 0.

""0" = NACK" The data is retransmitted and the RSN is increased with 1.
The maximum value of RSN is 3, i.e. even if more than 3 retransmissions are configured, the RSN remains 3.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:HARQ [:SIMulation] :PATtern<ch>` on page 511

HARQ mode HARQ Feedback

(not supported in Baseband C/D)

Dynamically control the transmission of the HSUPA fixed reference channels with the following settings:

Always Use Redundancy Version 0 (HARQ) ← HARQ mode HARQ Feedback

If activated, the same redundancy version is sent, that is, the redundancy version is not adjusted for the next retransmission in case of a received NACK.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:HARQ:SIMulation:RVZero` on page 510

Maximum Number Of Retransmissions (HARQ) ← HARQ mode HARQ Feedback

Sets the maximum number of retransmissions. After the expiration of this value, the next packet is sent, regardless of the received feedback.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:HARQ:SIMulation:MRETransmissions` on page 510

ACK Definition (HARQ) ← HARQ mode HARQ Feedback

Selects whether a high level (TTL) is interpreted as an ACK or a low level.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:HARQ:SIMulation:ADEFinition` on page 508

Connector (HARQ) ← HARQ mode HARQ Feedback

Selects the connector used by the HARQ Feedback line.

Tip: Assign different connectors to the two basebands to enable two HARQ feedback lines with different configuration.

In this firmware version, the "Global" connector is disabled.

See [chapter 3.2, "Routing and enabling an external control signal"](#), on page 52.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPCCh:E:FRC:HARQ:SIMulation:CONNector` on page 508

Delay Between HARQ And Feedback (HARQ) ← HARQ mode HARQ Feedback

Displays the time between the start of the HARQ process and the start of the related feedback.

For further information, see [chapter 3.1.12, "HARQ Feedback"](#), on page 32.

Remote command:

`[:SOURCE<hw>] :BB:W3GPP:MSTation<st> [:HSUPa] :DPCCh:E:FRC:HARQ:SIMulation:DElay:FEEDback?` on page 509

Additional User Delay ← HARQ mode HARQ Feedback

Sets an additional delay to adjust the delay between the HARQ and the feedback.


For further information, see [chapter 3.1.12, "HARQ Feedback"](#), on page 32.

Remote command:

`[:SOURCE<hw>] :BB:W3GPP:MSTation<st> [:HSUPa] :DPCCh:E:FRC:HARQ:SIMulation:DElay:AUSer` on page 509

4.32.5 Bit and Block Error Insertion Settings

1. To access these settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE"
2. Select "E-DPCCH > HSUPA FRC... > Bit/Block Error Insertion".

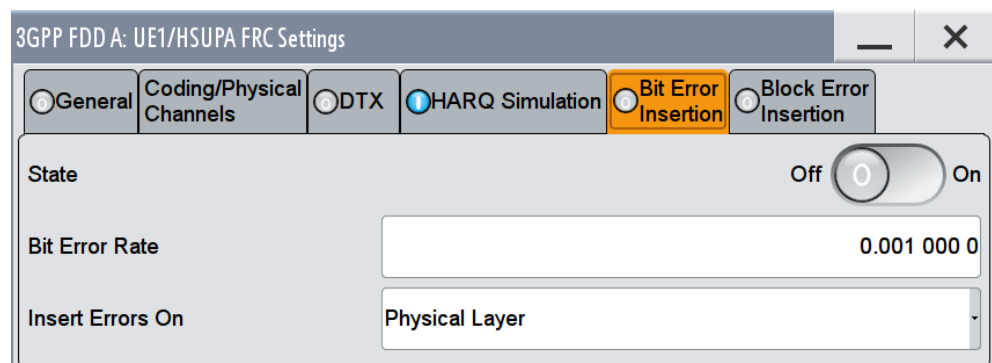

The dialogs provide the parameters for inserting errors into the data source and into the CRC checksum.

Bit Error State

Activates or deactivates bit error generation.

Bit errors are inserted into the data fields of the enhanced channels. It is possible to select the layer in which the errors are inserted (physical or transport layer).

When the data source is read out, individual bits are deliberately inverted at random points in the data bit stream at the specified error rate in order to simulate an invalid signal.

Remote command:

`[:SOURCE<hw>] :BB:W3GPP:MSTation<st> [:HSUPa] :DPCCh:E:FRC:DERRor:BIT:STATE` on page 506

Bit Error Rate

Sets the bit error rate. The value range is 10E-1 to 10E-7.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:MSTation<st> [ :HSUPa ] :DPCCh:E:FRC:DERRor:  
BIT:RATE on page 506
```

Insert Errors On

Selects the layer in the coding process at which bit errors are inserted.

"Transport layer"

Bit errors are inserted in the transport layer.

"Physical layer"

Bit errors are inserted in the physical layer.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:MSTation<st> [ :HSUPa ] :DPCCh:E:FRC:DERRor:  
BIT:LAYer on page 506
```

Block Error State

Activates or deactivates block error generation.

The CRC checksum is determined and then the last bit is inverted at the specified error probability in order to simulate an invalid signal.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:MSTation<st> [ :HSUPa ] :DPCCh:E:FRC:DERRor:  
BLOCK:STATE on page 507
```

Block Error Rate

Sets block error rate.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:MSTation<st> [ :HSUPa ] :DPCCh:E:FRC:DERRor:  
BLOCK:RATE on page 507
```

4.33 E-DPDCH Settings - UE

1. To access the E-DPDCH channel settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE".
2. Select "Mode > DPCCH + DPDCH".

3. Select "E-DPDCH".

	1	2	3	4
Channel Type	E-DPDCH	E-DPDCH	E-DPDCH	E-DPDCH
Symbol Rate / State	60	Off	Off	Off
Channelization Code	Q / 32			
Channel Power /dB	0.00			
E-DPDCH Data Source	PN 9			
E-DPDCH Pattern	0			

The dialog displays the channel structure and the available parameters.

4.33.1 E-DPDCH Common Settings

State (E-DPDCH)

Activates or deactivates all the E-DPDCH channels.

If an FRC is set for the channel, this field is activated automatically.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>[:HSUPa]:DPDCh:E:STATE`
on page 518

Force Channelization Code To I/Q

Sets the channelization code to I/Q.

This mode can only be activated if the overall symbol rate is less than 2 x 960 kbps.

It is provided for test purposes. Using an oscilloscope, the data bits of the E-DPDCH are visible on the I/Q signal if:

- Force Channelization Code to I/Q is On
- Scrambling Code Mode is set to Off.
- DPDCH power is - 80 dB

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>[:HSUPa]:DPDCh:E:FCIO`
on page 517

Overall Symbol Rate

Sets the overall symbol rate of all the E-DPDCH channels.

The structure of the E-DPDCH channel table depends on this parameter. The overall symbol rate determines which E-DPDCHs are active, which symbol rate they have and which channelization codes they use.

E-DPDCHs that are not active by virtue of the overall rate are also disabled for operation.

If an FRC is set for the channel, this field is read-only.

Note: If the [Dynamic Power Control State](#) and/or the [UL-DTX... / User Scheduling State](#) is enabled, the E-DPDCH is generated in realtime. Then only the overall symbol rates with one E-DPDCH channel or those that restrict the E-DPDCHs to the I or Q branch are enabled for configuration.

To send simultaneously multiple physical E-DPDCH, set the Overall Rate to one of the predefined two-channel configurations. For some special applications it might be necessary to split up the generation of this channels to two baseband blocks. The instrument provides additionally special non-standard overall symbol rates, that enable the instrument to generate only the E-DPDCH channels of the I branch or of the Q branch per baseband block.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:MSTation<st> [ :HSUPa ] :DPDCh:E:ORate
```

on page 517

Modulation

Sets the modulation of the E-DPDCH.

There are two possible modulation schemes specified for this channel, BPSK and 4PAM (4 Pulse-Amplitude Modulation). The latter one is available only for [Overall Symbol Rates](#) using two channels, e.g 2x960 ksps and/or 2x1920 ksps.

Note: Modulation scheme 4PAM is available only for instruments equipped with the HSPA+ option R&S SMW-K83.

Remote command:

```
[ :SOURce<hw> ] :BB:W3GPp:MSTation<st> [ :HSUPa ] :DPDCh:E:MODulation
```

on page 517

4.33.2 Channel Table

The channel table allows you to configure the individual parameters for the E-DPDCH channels. The structure of the currently selected channel is displayed graphically in the table header.

The number of active channels depends on the selected overall symbol rate. You can select the data sources for the individual channels. The remaining parameters are only displayed and their values depend also on the overall symbol rate. See also [table 1-3](#) and [table 1-4](#).

Channel Number

Displays the channel number.

Remote command:

n.a.

(the channel is selected by the suffix at keyword CHANnel<n>)

Channel Type

Displays the channel type.

Remote command:

n.a.

Symbol Rate / State

Displays the symbol rate and the state of the E-DPDCH channel.

The symbol rate and the state of the channels are dependent on the overall symbol rate set and cannot be modified.

Remote command:

[:SOURce<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :CHANnel<ch>:DPDCh:E:SRATe? on page 503

Channelization Code

Displays the channelization code and the modulation branch (I or Q) of the DPDCH channel.

The channelization code is dependent on the overall symbol rate set and cannot be modified.

Remote command:

[:SOURce<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :CHANnel<ch>:DPDCh:E:CCODE? on page 501

Channel Power

Sets the power of the selected E-DPDCH channel.

The power entered is relative to the powers of the other channels and does not initially relate to the "Level" power display. If [Adjust Total Power to 0dB](#) is executed, all the power data is relative to "Level"

Remote command:

[:SOURce<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :CHANnel<ch>:DPDCh:E:POWer on page 503

E-DPDCH Data Source

Selects the data source for the E-DPDCH channel.

The data source for the DPDCH is also entered here for the enhanced channels of UE1 without channel coding.

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "PNxx"
An internally generated pseudo-random noise sequence.

- "Pattern"
An internally generated sequence according to a bit pattern.
Use the "Pattern" box to define the bit pattern.
- "Data List/Select DList"
A binary data from a data list, internally or externally generated.
Select "Select DList" to access the standard "Select List" dialog.
 - Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
 - Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.
 - Use the standard "File Manager" function to transfer external data lists to the instrument.

See also:

- section "Modulation Data" in the R&S SMW user manual.
- section "File and Data Management" in the R&S SMW user manual.
- section "Data List Editor" in the R&S SMW user manual

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :CHANnel<ch> :DPDCh:E:DATA` on page 501

`[:SOURce<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :CHANnel<ch> :DPDCh:E:DATA:PATtern` on page 503

`[:SOURce<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :CHANnel<ch> :DPDCh:E:DATA:DSElect` on page 502

4.34 E-DCH Scheduling - UE

(requires option R&S SMW-K83)

1. To access the E-DCH settings, select "3GPP FDD > User Equipment > link Direction > Uplink / Reverse > User Equipments > UE"
2. Select "E-DCH".

The screenshot shows the '3GPP FDD A: User Equipment1' configuration window with the 'E-DCH' tab selected. The window contains several settings and a table.

Settings:

- E-DCH TTI:** 2 ms
- Number Of Table Rows:** 2
- E-DCH Schedule Repeats After:** 1 000 TTIs

E-DCH Table:

	E-DCH From TTI	E-DCH To TTI
0	3	6
1	128	156

This dialog comprises the settings necessary to configure the common time schedule of the E-DPDCH and E-DPCCH. The settings enable you to configure single E-DCH packets or "bursts" of variable length consisting of several successive E-DCH packets and to decide upon the E-DCH packets distribution.

Use the [Scheduling List](#) to display and verify the configured uplink scheduling for every UE.



Real-time vs. ARB signal generation

The E-DCH channels are generated in real-time or as an ARB signal.

- If the E-DCH channels are generated as ARB signal, the ARB sequence length has to be long enough and a multiple or equal the scheduling repetition.
- The instrument generate the channels in real-time if [UL-DTX...](#) / [User Scheduling State](#) and/or [Dynamic Power Control State](#) is activated.
 - During generation of E-DCH channels in real-time, channel coding (i.e. activation of FRCs) is disabled. Use pre-channel-coded data list as "Data Source" if channel coded data on the E-DCH is required.
 - The E-DPDCH can be generated in realtime only for overall symbol rates with one E-DPDCH channel or those that restrict the E-DPDCHs to the I or Q branch.

Example: E-DCH Scheduling

To configure an E-DCH transmission in TTIs 3-6, 128-156, 1003-1006, 1128-1156, etc. perform the settings listed in [table 4-11](#).

Table 4-11: E-DCH scheduling example

Parameter	Value	Comment
Select "3GPP FDD > Filter/Clipping/ARB Settings" and adjust the Sequence Length ARB	200 frames	If the E-DCH channels are generated as ARB signal, the ARB sequence length has to be long enough and a multiple or equal the scheduling repetition.
E-DCH TTI	2 ms	
Number of Table Rows	2	two scheduled E-DCH bursts
E-DCH Schedule Repeats After	1000 TTIs	each E-DCH burst is repeated every 1000 TTIs
Row#0		E-DCH burst (4 E-DCH packets)
"E-DCH TTI From"	3	
"E-DCH TTI To"	6	
Row#1		E-DCH burst (29 E-DCH packets)
"E-DCH TTI From"	128	
"E-DCH TTI To"	156	
E-DPCCH State	On	Enables E-DPCCH
E-DPDCH State	On	Enables E-DPDCH

Open the [Scheduling List](#) to display the E-DCH scheduling.

3GPP FDD A: UE1/Scheduling List

Frame Start

0

Number Of Frames

10

|: The channel is inactive in the slot.
X: The channel is active in the slot.
__: The channel restarts because of the ARB sequence length.

Frame Number:	Slot Number:	DPCCH Slots:	DPDCH Slots:	E-DCH TTI Number:	E-DPCCH Slots:	E-DPDCH Slots:
0	0	X	X	0		
	1	X	X			
	2	X	X			
	3	X	X	1		
	4	X	X			
	5	X	X			
	6	X	X	2		
	7	X	X			
	8	X	X			
	9	X	X	3	X	X
	10	X	X		X	X
	11	X	X		X	X
	12	X	X	4	X	X
	13	X	X		X	X
	14	X	X		X	X
1	0	X	X	5	X	X
	1	X	X		X	X
	2	X	X		X	X
	3	X	X	6	X	X
	4	X	X		X	X
	5	X	X		X	X
	6	X	X	7		
	7	X	X			
	8	X	X			
	9	X	X	8		
	10	X	X			
	11	X	X			
	12	X	X	9		
	13	X	X			
	14	X	X			
2	0	X	X	10		

E-DCH TTI

Sets the size for the TTI (Transmission Time Interval).

If an [FRC](#) is set for the E-DPCCH or [UL-DTX...](#) / [User Scheduling State](#) is enabled, this field is read-only.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :EDCH:TTIEdch`

on page 518

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st> [:HSUPa] :DPDCh:E:TTIEdch`

on page 518

Number of Table Rows

Sets the number of the rows in the scheduling table, i.e. determines the number of the E-DCH "bursts" enabled for configuration. An E-DCH "burst" is build of several successive E-DCH packets.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:MSTation<st>[:HSUPa]:EDCH:ROWCount
```

on page 519

E-DCH Schedule Repeats After

Determine the number of TTIs after that the E-DCH scheduling is repeated.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:MSTation<st>[:HSUPa]:EDCH:REPeat
```

on page 519

E-DCH Scheduling Table

Enables the user to flexible configure single E-DCH packets or E-DCH "bursts" of variable length consisting of several successive E-DCH packets

E-DCH TTI From ← E-DCH Scheduling Table

Determines the start TTI of the corresponding E-DCH burst.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:MSTation<st>[:HSUPa]:EDCH:ROW<ch0>:FROM
```

on page 519

E-DCH TTI To ← E-DCH Scheduling Table

Determines the end TTI of the corresponding E-DCH burst.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:MSTation<st>[:HSUPa]:EDCH:ROW<ch0>:TO
```

on page 519

4.35 Global Enhanced Channel Settings - UE1




The "Global Enhanced Channel" settings are only available for user equipment 1 (UE1).

1. To access these settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE 1".
2. Select "DPDCH Settings > Global Enhanced Channels...".

4.35.1 Enhanced Channels State

- Select "Enhanced".

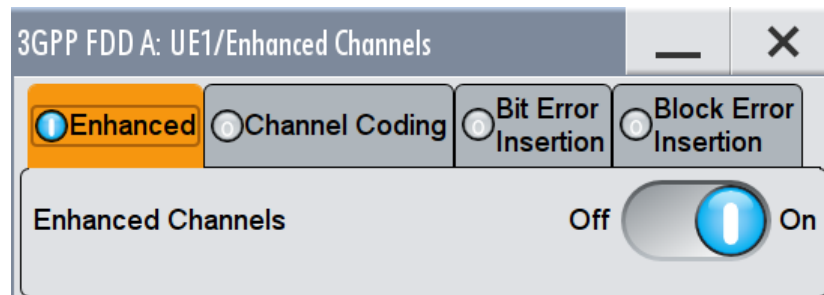

In this tab, you can activate the global enhanced settings.

Enhanced Channels State

Displays the enhanced state of the station. As at least the DPCCH of UE1 is always calculated in realtime, the enhanced state is always on for UE1.

The DPCCH and one DPDCH of user equipment 1 are generated in realtime. Depending on the actual configurations, other channels of user equipment 1 may also be generated in realtime.

It is possible to activate channel coding and simulate bit and block errors. Data lists, for example with user data for the transport layer, can be used as the data source.


Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation:ENHanced:DPDCh:STATe](#) on page 536

4.35.2 Channel Coding

1. To access these settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE 1".
2. Select "DPDCH Settings > Global Enhanced Channels...".

3. Select "Channel Coding"

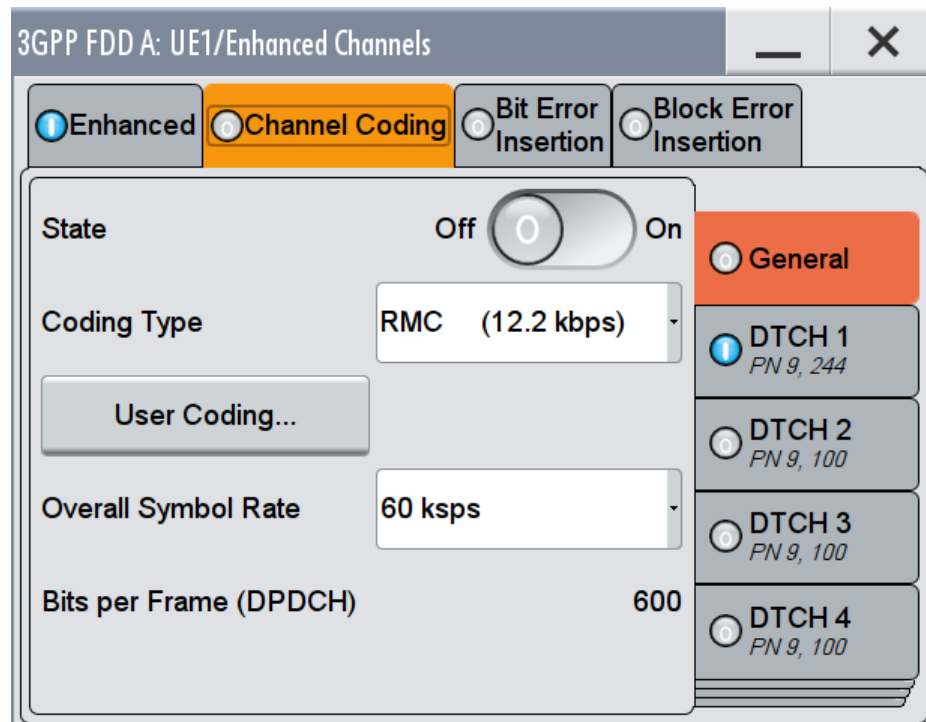

The "Channel Coding > General" tab comprises the settings for enabling and configuring the channel coding. The provided settings are divided into general settings and several sub-tabs, one per transport channel.

To access the channel coding settings of a transport channel, select the corresponding side tab, for example "DTCH1". Refer to [chapter 4.35.3, "Transport Channel"](#), on page 231 for description of the provided settings.

An uplink reference measurement channel according to 3GPP TS 25.141 is generated when the transport channels DTCH (Dedicated Traffic Channel) and DCCH (Dedicated Control Channel), which contain the user data, are mapped to a DPDCH (Dedicated Physical Data Channel) with a different data rate after channel coding and multiplexing. The display below is taken from the standard (TS 25.141) and shows in diagrammatic form the generation of a 12.2 kbps reference measurement channel from the DTCH and DCCH transport channels.

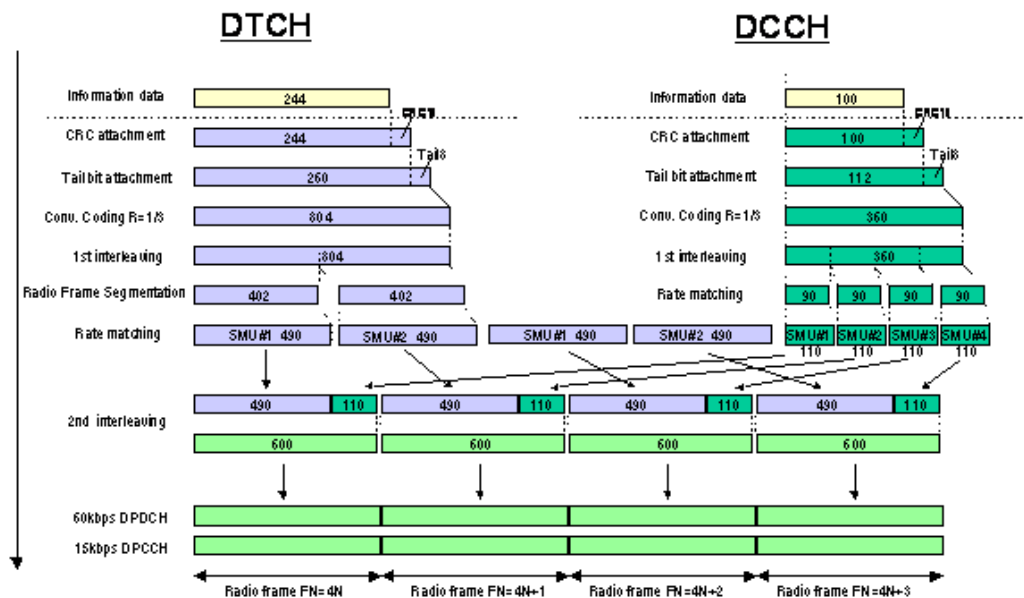


Fig. 4-22: Channel coding of the 12.2 kbps reference measurement channels (uplink)

Channel Coding State

Activates or deactivates channel coding.

Note: Annex A.1, 3GPP TS 25.141, lists the recommended DPCCH-settings.

Remote command:

[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:STAtE
on page 531

Coding Type

Selects channel coding.

The 3GPP specification defines 4 reference measurement channel coding types, which differ in the input data bit rate to be processed (12.2, 64, 144 and 384 kbps). The additional AMR CODER coding scheme generates the coding of a voice channel.

"User" coding can be defined as required in the detailed coding settings menu section revealed with button "Show Details". They can be stored and loaded in the "User Coding" submenu. Selection "User" is indicated as soon as a coding parameter is modified after selecting a predefined coding type.

The input data bits are taken from the data source specified for the "Transport Channels" for channel coding. The bits are available with a higher rate at the channel coding output. The allocations between the measurement input data bit rate and the output symbol rate are fixed, that is to say, the overall symbol rate is adjusted automatically.

The following are available for selection:

- "RMC 12.2" 12.2 kbps measurement channel kbps"
- "RMC 64 kbps" 64 kbps measurement channel
- "RMC 144" 144 kbps measurement channel kbps"

"RMC 384 384 kbps measurement channel
kbps"

"AMR 12.2 Channel coding for the AMR coder
kbps"

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:TYPE`
on page 531

User Coding ...

Accesses files with user codings and the standard "File Select" function.

User coding of UE1 are stored as files with the predefined file extension

* .3g_ccod_ul. The file name and the directory they are stored in are user-definable; the file extension is assigned automatically.

The complete channel coding settings are saved and recalled.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:CATalog?` on page 532

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:DElete` on page 533

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:LOAD`
on page 533

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:STORe` on page 533

Overall Symbol Rate

Sets the overall symbol rate of the DPDCH.

The structure of the DPDCH channel table depends on this parameter. The overall symbol rate determines which DPDCHs are active, which symbol rate they have and which channelization codes they use.

DPDCHs that are not active by virtue of the overall rate, are also disabled for operation.

Note: Up to an overall rate of 960 ksps, only DPDCH 1 is active, its symbol rate is the same as the overall rate and the channelization code is the same as spreading factor/4 (spreading factor = chip rate / symbol rate). With an overall symbol rate greater than 960 ksps, all the active DPDCHs have the symbol rate 960 ksps.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:ORATe` on page 536

Bits per Frame (DPDCH)


Displays the data bits in the DPDCH component of the frame at physical level. The value depends on the overall symbol rate.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:BPFFrame?`
on page 530

4.35.3 Transport Channel

1. To access these settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE 1".
2. Select "DPDCH Settings > Global Enhanced Channels... > Channel Coding".
3. Select the corresponding side tab, for example "DTCH1".

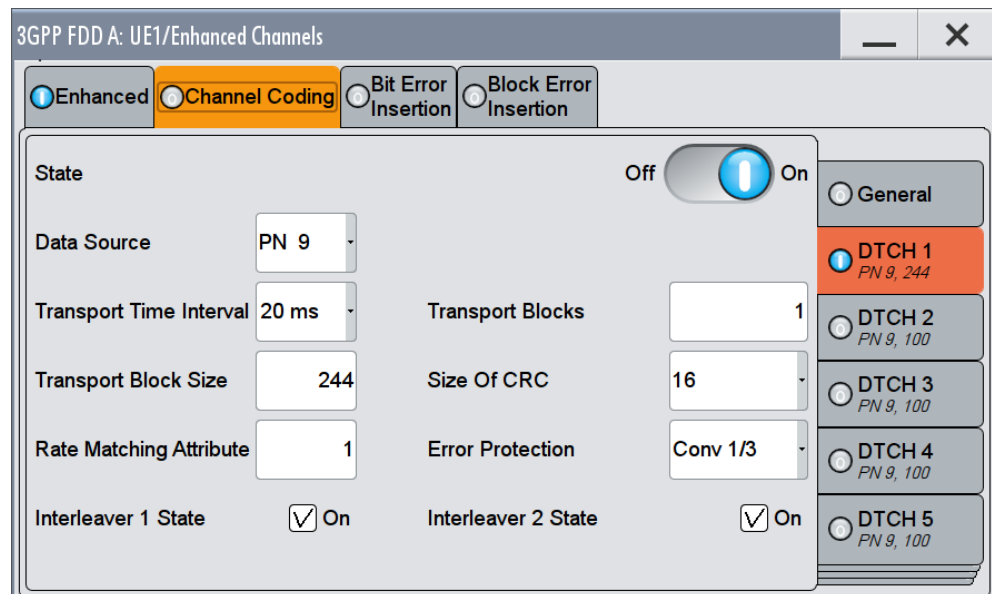

The dialog provides an access to the settings of up to 7 transport channels (TCHs), the DTCHs (DTCH1 to 6) and the DCCH.

Transport Channel State

Activates or deactivates the transport channel.

Remote command:

`[:SOURCE<hw>] :BB:W3GPP:MStation:ENHanced:DPDCh:TChannel<di0>:STATE` on page 537

In case of remote control, DCCH corresponds to :TChannel10, DTCH1 to :TChannel1, etc.

Data Source

Selects the data source for the transport channel.

The data source for the DCCH and DTCH1 can also be selected in the main dialog in the channel table.

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "PNxx"
An internally generated pseudo-random noise sequence.
- "Pattern"
An internally generated sequence according to a bit pattern.

Use the "Pattern" box to define the bit pattern.

- "Data List/Select DList"

A binary data from a data list, internally or externally generated.

Select "Select DList" to access the standard "Select List" dialog.

- Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
- Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.
- Use the standard "File Manager" function to transfer external data lists to the instrument.

See also:

- section "Modulation Data" in the R&S SMW user manual.
- section "File and Data Management" in the R&S SMW user manual.
- section "Data List Editor" in the R&S SMW user manual

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:DATA` on page 538

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:DATA:PATtern` on page 540

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:DATA:DSElect` on page 539

Transport Time Interval

Sets the number of frames into which a TCH is divided. This setting also defines the interleaver depth.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:TTInterval` on page 538

Number of Transport Blocks

Sets the number of transport blocks for the TCH.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:TBCount` on page 537

Transport Block Size

Sets the size of the transport block at the channel coding input.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:TBSize` on page 538

Size of CRC

Defines the type (length) of the CRC. Checksum determination can also be deactivated (setting None).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:CRCSize` on page 538

Rate Matching Attribute

Sets data rate matching (Rate Matching).

Remote command:

`[:SOURCE<hw>] :BB:W3GPP:MSTation:ENHanced:DPDCh:TCHannel<di0>:RMATtribute` on page 537

Error Protection

Selects error protection.

"None" No error protection

"Turbo 1/3" Turbo Coder of rate 1/3 in accordance with the 3GPP specifications.

"Conv 1/2 | 1/3" Convolution Coder of rate 1/2 or 1/3 with generator polynomials defined by 3GPP.

Remote command:

`[:SOURCE<hw>] :BB:W3GPP:MSTation:ENHanced:DPDCh:TCHannel<di0>:EProtection` on page 540

Interleaver 1 State

Activates or deactivates channel coding interleaver state 1 of the transport channel. Interleaver state 1 can be set independently in each TCH. Activation does not change the symbol rate.

Remote command:

`[:SOURCE<hw>] :BB:W3GPP:MSTation:ENHanced:DPDCh:TCHannel<di0>:INTERleaver` on page 540

Interleaver 2 State

Activates or deactivates channel coding interleaver state 2 of all the transport channels. Interleaver state 2 can only be set for all the TCHs together. Activation does not change the symbol rate.


Remote command:

`[:SOURCE<hw>] :BB:W3GPP:MSTation:ENHanced:DPDCh:INTERleaver2` on page 536

4.35.4 Error Insertion

1. To access these settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE 1".
2. Select "DPDCH Settings > Global Enhanced Channels...".

3. Select "Bit Error Insertion / Block Error Insertion"

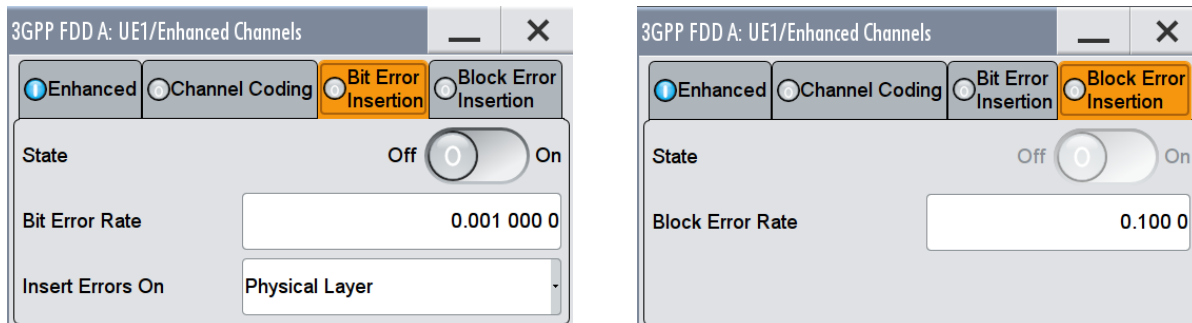

The dialogs provide the parameters for inserting errors into the data source and into the CRC checksum, for example, to check the bit and block error rate testers.

Bit Error State

Activates or deactivates bit error generation.

Bit errors are inserted into the data fields of the enhanced channels. When channel coding is active, it is possible to select the layer in which the errors are inserted (physical or transport layer).

When the data source is read out, individual bits are deliberately inverted at random points in the data bit stream at the specified error rate in order to simulate an invalid signal.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BIT:STATE`
on page 535

Bit Error Rate TCH1

Sets the bit error rate.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BIT:RATE`
on page 534

Insert Errors On

Selects the layer at which bit errors are inserted.

"Transport layer" Bit errors are inserted in the transport layer.
This layer is only available when channel coding is active.

"Physical layer" Bit errors are inserted in the physical layer.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BIT:LAYer`
on page 534

Block Error State

Activates or deactivates block error generation.

The CRC checksum is determined and then the last bit is inverted at the specified error probability in order to simulate an invalid signal.

Block error generation is only available when channel coding is active.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BIT:STATe`
on page 535

Block Error Rate

Sets the block error rate.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BLOCK:RATE`
on page 535


4.36 PRACH Settings - UE

1. To access the PRACH settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE 1".


2. Select "Mode > PRACH Standard/PRACH Preamble Only".

The PRACH settings are available in two modes:

- In "Standard" mode, the instrument generates a single physical random access channel (PRACH). This channel is needed to set up the connection between the user equipment and the base station.

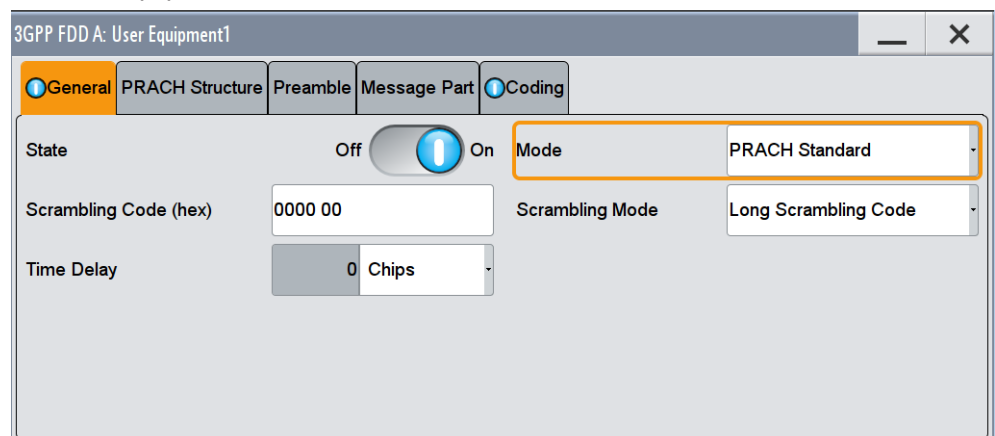

- In "Preamble only" mode, the instrument only generates the preamble of a physical random access channel (PRACH). This mode is needed for Test Case 8.8 TS 25.141.

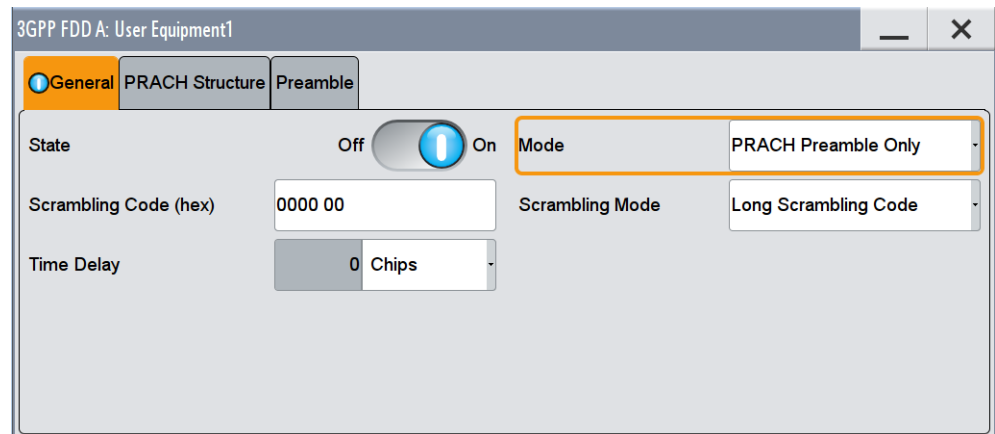

In this mode, only the preamble parameters are available.

3. Select "PRACH Structure".

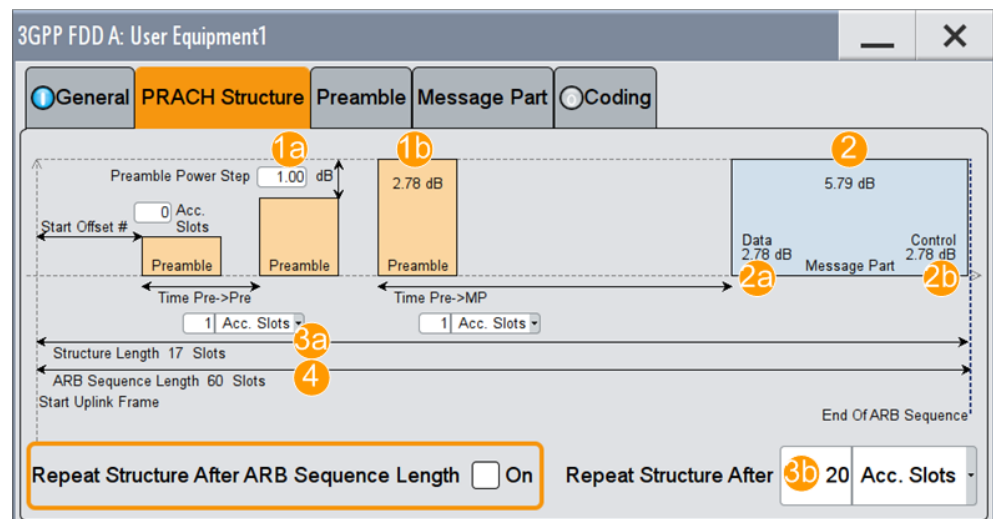


Fig. 4-23: Standard PRACH Structure: Understanding the displayed information

- 1a = "Preamble Power Step"; subtract this value from 1b to calculate the power of the other preambles
- 1b = "Delta Power (Preamble)", i.e. correction value for the last preamble before the message part
- 2 = "Delta Power (Message Part)", i.e. correction value for the message part overall
- 2a, 2b = correction values for the data and control part of the message part
- 3a = current "Structure Length"
- 3b = user-defined repetition of the PRACH structure, i.e. the same structure is repeated 3 times within the current ARB sequence length
- 4 = current ARB sequence length (in slots); set with the parameter [Sequence Length ARB](#)

The dialog comprises a graphical representation of the PRACH structure, including the timing parameters, the "Preamble Settings" and "Message Part" sections, comprising respectively the preamble settings for the parameters of the data part of the channel. Some settings are made directly in the input fields of the graphical display.

In the "Channel Coding" section channel coding can be activated.

Power settings and power calculation

- Calculating the power of the preamble
The correction value for the last preamble before the message part (indication in the preamble block) are indicated in the graphical display of the PRACH structure. The power of the other preambles are calculated by subtracting the selected "Preamble Power Step".
- Calculating the power of the message part
The correction values for the message part overall and separately for data and control part (indications in the message part block) are also indicated. For one active UE and if the "Level Reference" is set to "RMS Power", the RF power of the message part is calculated as:
Message Part Power = "RF Level" + Delta Power Message Part

Example: Calculating the power of the message part

- "3GPP > User Equipment > Level Reference > RMS Power"
- "Level = 5 dBm"
- "Delta Power Message Part = 5.79 dB"

The resulting Message Part Power = 5 + 5.79 = 10.79 dBm

4.36.1 Graphical Display

The graphical display shows either the complete PRACH including the message part or only the preamble depending on the selected mode.

PRACH Standard

1. To access these settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE 1".
2. Select "Mode > PRACH Standard".
3. Select "PRACH Structure".
See [figure 4-23](#)

PRACH Preamble-only

1. In the "General" tab, select "Mode > PRACH Preamble Only"

2. Select "PRACH Structure".

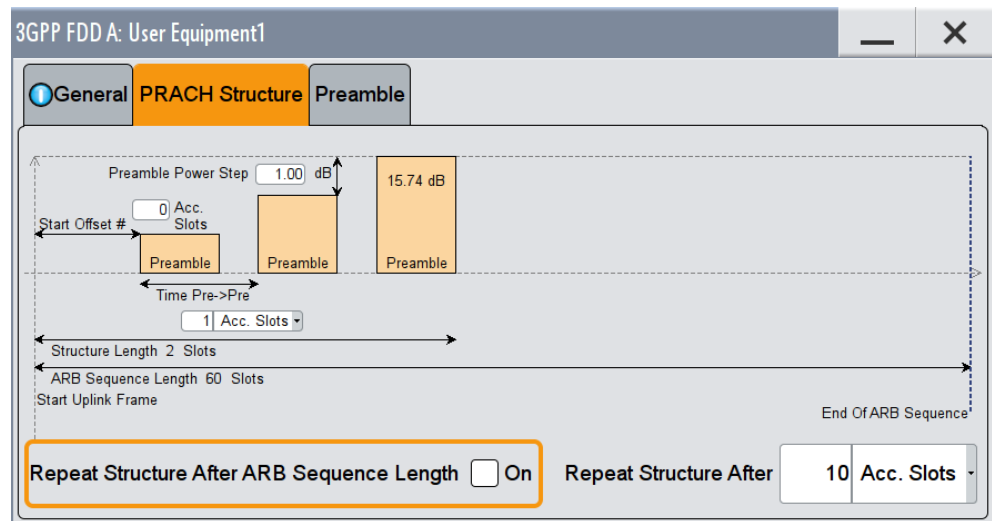


Fig. 4-24: PRACH Mode Preamble Only

Some of the parameter values can be input directly in the input fields of the graphical display. The indicated structure length and the power correction values match the real settings; the number of preambles, however, is shown as an example, to explain the parameter function.

Use the power correction values to calculate the correct settings for the desired RF level, see ["Power settings and power calculation"](#) on page 237.

Delta Power (Preamble)

Indicates the level correction value for the last preamble before the message part.

The level of the other preambles can be calculated by subtracting the set "Preamble Power Step".

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:MSTation<st>:PRACH:TIMing:DPOWER:PREamble? on page 498
```

Delta Power (Message Part)

Indicates the level correction value for the message part, together with the power offsets of the data and control part.

The indication of the total value is important for measurements where just the envelope of the signal is of interest whereas the separate indication is useful for receiver tests.

See also ["Power settings and power calculation"](#) on page 237.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:MSTation<st>:PRACH:TIMing:DPOWER:MPART? on page 497
```

```
[ :SOURCE<hw> ] :BB:W3GPp:MSTation<st>:PRACH:TIMing:DPOWER:MPART:DATA? on page 497
```

```
[ :SOURCE<hw> ] :BB:W3GPp:MSTation<st>:PRACH:TIMing:DPOWER:MPART:CONTrol? on page 497
```

Start Offset #

Enters the start offset of the PRACH in access slots or slots.

The starting time delay in timeslots is then equal to $2 \times \text{Start Offset \#}$

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PRACH:TIMing:SOFFset`
on page 498

Time Pre->Pre

Enters the time difference between two successive preambles in access slots.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PRACH:TIMing:TIME:PREPre`
on page 499

Time Pre->MP

Enters the time difference between the last preamble and the message part in access slots.

Two modes are defined in the standard. In mode 0, the preamble to message part difference is 3 access slots, in mode 1 it is 4 access slots.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PRACH:TIMing:TIME:PREMp`
on page 499

Structure Length

Indicates the structure length:

- In "PRACH only - Preamble" mode, the structure length is defined as:
"Structure Length" = "Start Offset (Slots)" + "Preamble Repetition" * "Time Pre->Pre"

Example: Calculating the structure length in PRACH Preamble Only mode

"Start Offset # = 1 Access Slots", i.e. 2 Slots

"Preamble Repetition = 2"

"Time Pre->Pre = 2 Access Slots", i.e. 4 Slots

"Structure Length" = 2 Slots + 2 x 4 Slots = 10 Slots

- In "PRACH only - Standard" mode, the structure length is defined as:
"Structure Length" = "Start Offset (Slots)" + "Preamble Repetition" * "Time Pre->Pre" + "Time Pre->MP" + 15 * "Message Part Length (Frames)"

Example: Calculating the structure length in PRACH Standard mode

"Start Offset # = 2 Access Slots", i.e. 4 Slots

"Preamble Repetition = 3"

"Time Pre->Pre = Time Pre->MP = 3 Access Slots", i.e. 6 Slots

"Message Part Length = 2 Frames"

"Structure Length" = 4 Slots + 3 x 6 Slots + 6 Slots + 15 x 2 = 52 Slots

See also ["Repeat Structure After ARB Sequence Length"](#) on page 240.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PRACH:TIMing:SPERiod?`
on page 498

ARB Sequence Length

Indicates the ARB sequence length.

Note: A caution message is displayed, if the structure length is longer than the selected ARB sequence length.

The change the ARB sequence length, use the parameter [Sequence Length ARB](#).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:SEnGth` on page 351

Repeat Structure After ARB Sequence Length

Enables/disables repeating the selected PRACH structure during one ARB sequence.

"On"

Within one ARB sequence, the selected PRACH structure is repeated once.

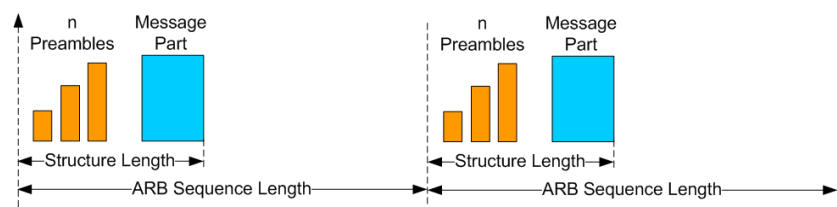


Fig. 4-25: "Repeat Structure After ARB Sequence Length = On"

"Off"

The selected PRACH structure can be repeated several time, depending on the structure length and the [Repeat Structure After \(x Acc. Slots\)](#).

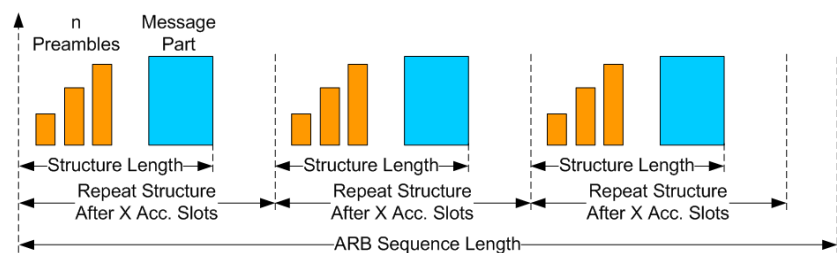


Fig. 4-26: "Repeat Structure After ARB Sequence Length = Off"

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PRACH:RARb` on page 495

Repeat Structure After (x Acc. Slots)

If "Repeat Structure After ARB Sequence Length > Off", sets the number of access slots after that the selected PRACH structure will be repeated, see [figure 4-26](#).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PRACH:RAFTer` on page 494

4.36.2 Preamble Settings

1. To access these settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE 1".
2. Select "Mode > PRACH Standard/PRACH Preamble Only".
3. Select "Preamble".

The screenshot shows a software interface for configuring PRACH preamble settings. The title bar reads '3GPP FDD A: User Equipment1'. There are four tabs: 'General' (selected with a blue dot), 'PRACH Structure', 'Preamble' (highlighted in orange), and 'Message Part'. Below the tabs, there are four input fields: 'Preamble Power' set to '0.00 dB', 'Preamble Power Step' set to '0.00 dB', 'Preamble Repetition' set to '1', and 'Signature' set to '0'.

The dialog comprises the parameters for configuring the PRACH preamble.

Preamble Power

Sets the power of the preamble component of the PRACH channel.

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:PRACH:PPower](#) on page 493

Preamble Power Step

Sets the power by which the preamble is increased from repetition to repetition. The power set with the parameter [Preamble Power](#) is the "target power", used during the last repetition of the preamble.

Example:

"Preamble Power = 0 dB"

"Preamble Repetition = 3"

"Preamble Power Step = 3 dB"

Preamble 1 -6 dB	→ + 3 dB	Preamble 2 -3 dB	→ + 3 dB	Preamble 3 0 dB
---------------------	----------	---------------------	----------	--------------------

Fig. 4-27: Generated power sequence

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:PRACH:PPower:STEP](#) on page 494

Preamble Repetition

Sets the preamble count.

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:PRACH:PREpetition](#) on page 494

Signature

Selects the signature to be used for the PRACH channel.

The signature defines the code domain for the channelization code being used. 16 fixed bit patterns are defined.

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:PRACH:SIGNature](#) on page 496

4.36.3 Message Part Settings

1. To access these settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE 1".
2. Select "Mode > PRACH Standard".
3. Select "Message Part".

The screenshot shows the '3GPP FDD A: User Equipment1' settings window with the 'Message Part' tab selected. The window contains several configuration fields:

Parameter	Value	Parameter	Value
Data Power	0.00 dB	Control Power	0.00 dB
Message Length	1 Frames	Slot Format #	1
Symbol Rate	30 ksps	TFCI	0
Data Source	PN 9		

The tab comprises the settings for the data part of the PRACH.

Data Power

Sets the power of the data component of the PRACH channel.

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:PRACH:DPOWer](#) on page 493

Control Power

Sets the power of the control component of the PRACH channel.

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:PRACH:CPOWer](#) on page 491

Message Length

Sets the length of the message component of the PRACH channel in frames.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PRACH:MLENgtH` on page 493

Slot Format

Selects the slot format.

Slot formats 0 to 3 are available for the PRACH channel. The slot format defines the symbol rate of the message component.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PRACH:SFOFormat` on page 495

Symbol Rate

Sets the symbol rate of the PRACH channel.

The symbol rate is determined by the slot format set. A change in the symbol rate leads automatically to an adjustment of the slot format.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PRACH:SRATe` on page 496

TFCI

Enters the value of the TFCI field (Transport Format Combination Indicator) in the control component of the PRACH channel.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PRACH:TFCI` on page 496

Data Source

Selects the data source for the data component of the PRACH channel.

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "PNxx"
An internally generated pseudo-random noise sequence.
- "Pattern"
An internally generated sequence according to a bit pattern.
Use the "Pattern" box to define the bit pattern.
- "Data List/Select DList"
A binary data from a data list, internally or externally generated.
Select "Select DList" to access the standard "Select List" dialog.
 - Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
 - Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.
 - Use the standard "File Manager" function to transfer external data lists to the instrument.

See also:

- section "Modulation Data" in the R&S SMW user manual.
- section "File and Data Management" in the R&S SMW user manual.

- section "Data List Editor" in the R&S SMW user manual

Remote command:

[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PRACH:DATA on page 492

[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PRACH:DATA:PATtern on page 493

[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PRACH:DATA:DSElect on page 492

4.36.4 Channel Coding State

Channel coding of PRACH is possible for all UEs.

1. To access these settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE 1".
2. Select "Mode > PRACH Standard".
3. Select "Coding".

The screenshot shows the '3GPP FDD A: User Equipment1' configuration window with the 'Coding' tab selected. The 'Coding State' is set to 'On' (checkbox checked). The 'Coding Type' is 'RACH RMC (TB size 168 bit)'. Below this, a blue bar highlights the 'Transport Channel' settings: 'RACH', '168', 'PN 9', and 'On' (checkbox checked). At the bottom, a table displays fixed settings for the channel coding parameters.

Transport Block Size	168	Transport Blocks	1
Transport Time Interval	20 ms		
Size Of CRC	16	Error Protection	Conv 1/2
Interleaver 1 State	On	Interleaver 2 State	On

The tab comprises the parameters defining the coding type and activating the PRACH channel. The fixed settings for the channel coding parameters are displayed.

Channel Coding State

Activates or deactivates channel coding for the PRACH channel.

When On, the "Message Part Length" automatically is set to 2. It cannot be changed.

Remote command:

[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:ENHanced:PRACH:CCODing:STATe on page 541

Channel Coding Type

Selects the predefined reference measurement channel coding types for the PRACH channel.

"RACH RMC (TB size 168 bit)"

Reference Measurements Channel Coding with transport block size of 168 bit.

"RACH RMC (TB size 360 bit)"

Reference Measurements Channel Coding with transport block size of 360 bit.

Remote command:

[:SOURce<hw>] :BB:W3GPp:MSTation<st>:ENHanced:PRACH:CCODing:TYPE
on page 542

Show Coding

Calls the menu for displaying the channel coding settings. The reference measurement channel parameters are set to fixed values.

The following parameters are displayed:

"Data Source" The data source is displayed in the transport channel graphical display.

"Transport Block Size" Size of the transport block at the channel coding input.

"Transport Block" Transport block count.

"Transport Time Interval" Number of frames into which a TCH is divided.

"Size of CRC" CRC type (length).

"Error Protection" Error protection.

"Interleaver 1 / 2 State" Channel coding interleaver state

Remote command:


n.a.

4.37 PCPCH Settings - UE


1. To access the PCPCH settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE 1".
2. Select "Mode > PCPCH Standard/PCPCH Preamble Only".

The PCPCH settings are available in two modes:

- In "PCPCH Standard" mode, the instrument generates a single physical common packet channel (PCPCH). This channel is used to transmit packet-oriented services (e.g. SMS).

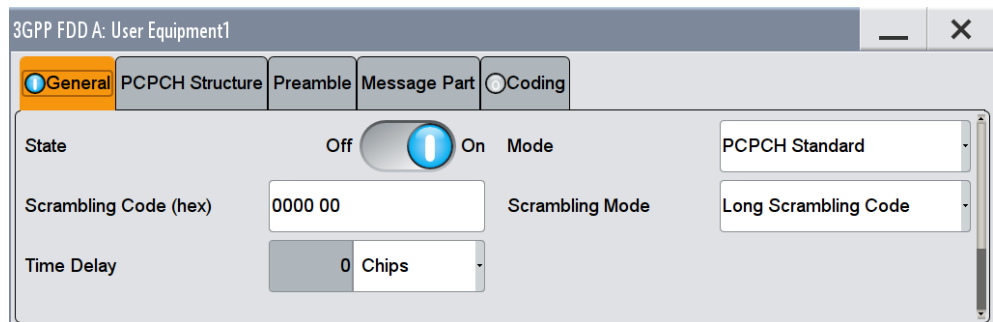

- In "PCPCH Preamble only" mode, the instrument only generates the preamble of a physical common packet channel (PCPCH). This mode is needed for Test Case 8.9 TS 25.141.

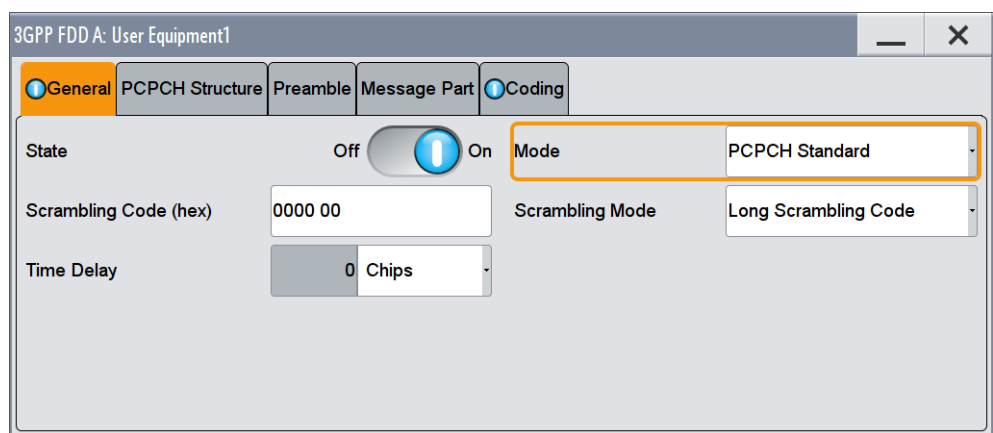

In this mode, only the preamble parameters are available.

3. Select "PCPCH Structure".

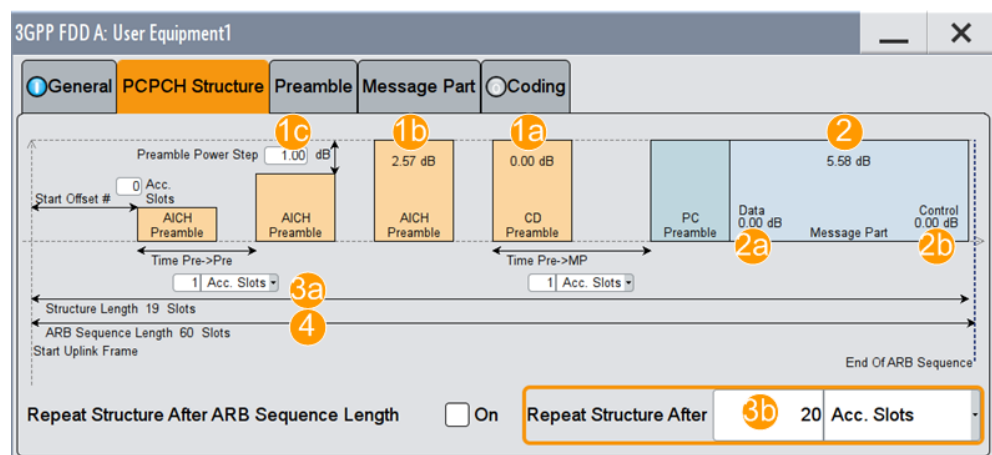


Fig. 4-28: Standard PCPCH Structure: Understanding the displayed information

- 1a, 1b = "Delta Power (Preamble)", i.e. correction values for the last AICH preamble before the message part and the CD Preamble
- 1c = "Preamble Power Step"; subtract this value from 1b to calculate the power of the other preambles
- 2 = "Delta Power (Message Part)", i.e. correction value for the message part overall
- 2a, 2b = correction values for the data and control part of the message part

- 3a = current "Structure Length = 19 slots"
- 3b = user-defined repetition of the PCPCH structure, i.e. the same structure is repeated 3 times with the current ARB sequence length
- 4 = current ARB sequence length (in slots); set with the parameter [Sequence Length ARB](#)

The dialog comprises a graphical display of the PCPCH structure including the timing parameters, the "Preamble Settings" and "Message Part" sections, comprising respectively the preamble settings and the parameters for the data part of the channel. Some settings are made directly in the input fields of the graphical display.

The "Channel Coding" settings for activating channel coding are available for UE1.

Power settings and power calculation

- Calculating the power of the preamble
The correction value for the last AICH preamble before the message part and the CD Preamble (indication in the AICH and CD Preamble block) are indicated in the graphical display of the PCPCH structure. These two values are identical.
The power of the other preambles are calculated by subtracting the selected "Preamble Power Step".
- Calculating the power of the message part
The power correction value of the message part is indicated in the message part settings.
For one active UE, the RF power of the message part is calculated as:
Message Part Power = "RF Level" + Delta Power Message Part
For PCPCH, the parameter "Level Reference" is always "RMS Power".

Example: Calculating the power of the message part

- "Level = 5 dBm"
- "Delta Power Message Part = 5.58 dB"

The resulting Message Part Power = 5 + 5.58 = 10.58 dBm

4.37.1 Graphical Display

The graphical display shows either the complete PCPCH including the message part or only the preamble depending on the selected mode.

PCPCH Standard

1. To access these settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE 1".
2. Select "Mode > PCPCH Standard"
3. Select "PCPCH Structure".
See [figure 4-28](#)

PCPCH Preamble-only

1. In the "General" tab, select "Mode > PCPCH Preamble Only"

2. Select "PCPCH Structure".

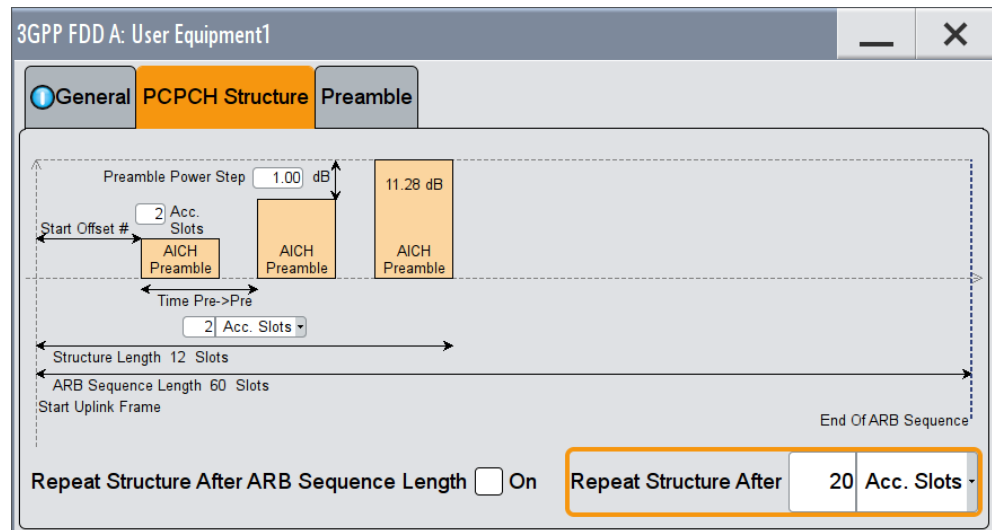


Fig. 4-29: PCPCH Structure in "Mode > PCPCH Preamble-only"

Some of the parameter values can be input directly in the input fields of the graphical display. The indicated structure length and the power correction values match the real settings; the number of preambles, however, is shown as an example, to explain the parameter function.

Use the power correction values to calculate the correct settings for the desired RF level (see "Power settings and power calculation" on page 247).

Delta Power (Preamble)

Indication of the level correction value for the last AICH preamble before the message part. This value is identical to the correction value for the CD preamble.

The level of the other preambles can be calculated by subtracting the set "Preamble Power Step".

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PCPCh:TIMing:DPOWer:PREamble?` on page 487

Delta Power (Message Part)

Indicates the level correction value for the message part, together with the power offsets of the data and control part.

See also [example "Calculating the power of the message part"](#) on page 247.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PCPCh:TIMing:DPOWer:MPART?` on page 486

Start Offset

Enters the start offset of the PCPCH in access slots.

Note: The PCPCH only transmitted once, at the start of the sequence.

The starting time delay in time slots is calculated according to TS 25 211, Chapter 7.3 PCPCH/AICH timing relation and is $2 \times \text{"Start Offset \#"}.$

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:MSTation<st>:PCPCh:TIMing:SOFFset
```

on page 487

Transmission Timing (Preamble)

Enters the time difference between two successive preambles in access slots.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:MSTation<st>:PCPCh:TIMing:TIME:PREPre
```

on page 488

Transmission Timing (Message Part)

Enters the time difference between the last preamble and the message part in access slots.

Two modes are defined in the standard. In mode AICH transmission timing 0, the preamble to message part difference is 3 access slots, in mode AICH transmission timing 1 it is 4 access slots.

Remote command:

```
[ :SOURCE<hw> ] :BB:W3GPp:MSTation<st>:PCPCh:TIMing:TIME:PREMp
```

on page 488

Structure Length

Indicates the structure length:

- In "PCPCH only - Preamble" mode, the structure length is defined as:
"Structure Length" = "Start Offset (Slots)" + "Preamble Repetition" * "Time Pre->Pre"

Example: Calculating the structure length in PCPCH Preamble Only mode

"Start Offset # = 2 access slots", i.e. = 4 slots

"Preamble Repetition = 2"

"Time Pre->Pre = 2 access slots", i.e. = 4 slots

"Structure Length" = 4 slots + 2 x 4 slots = 12 slots

- In "PCPCH only - Standard" mode, the structure length is defined as:
"Structure Length" = "Start Offset (Slots)" + "Preamble Repetition" * "Time Pre->Pre" + "Time Pre->MP" + "Power Control Preamble Length" + 15 * "Message Part Length (Frames)"
In PCPCH mode the CD preamble has to be taken into account. Therefore, Preamble Repetition instead of (Preamble Repetition - 1) is used.

Example: Calculating the structure length in PCPCH Standard mode

"Start Offset = 2 access slots", i.e. 4 slots

"Preamble Repetition = 3"

"Time Pre - Pre = Time Pre - MP = 3 access slots", i.e. 6 slots

"Power Control Preamble Length = 8 slots"

"Message Part Length = 2 frames"

"Structure Length" = 4 slots + 3 x 6 slots + 6 slots + 8 + 15 x 2 = 66 slots

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PCPCh:TIMing:SPERiod?`
on page 488

ARB Sequence Length

Indication of the ARB sequence length.

Note: A caution message is displayed, if the structure length is longer than the selected ARB sequence length.

The change the ARB sequence length, use the parameter [Sequence Length ARB](#).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:SLENgth` on page 351

Repeat Structure After ARB Sequence Length

Enables/disables repeating the selected PCPCH structure during one ARB sequence.

"On" Within one ARB sequence, the selected PCPCH structure is repeated once.
See [figure 4-25](#) for illustration of the principle.

"Off" The selected PCPCH structure can be repeated several time, depending on the structure length and the [Repeat Structure After \(x Acc. Slots\)](#).
See [figure 4-26](#) for illustration of the principle.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PCPCh:RARB` on page 485

Repeat Structure After (x Acc. Slots)

If "Repeat Structure After ARB Sequence Length > Off", sets the number of access slots after that the selected PCPCH structure will be repeated, see [figure 4-26](#).

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PCPCh:RAFTer` on page 485

4.37.2 Preamble Settings

1. To access these settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE 1".
2. Select "Mode > PCPCH Standard/PCPCH Preamble Only".

3. Select "Preamble".

3GPP FDD A: User Equipment1

General PCPCH Structure **Preamble** Message Part Coding

Preamble Power 0.00 dB Preamble Power Step 0.00 dB

Preamble Repetition 1 Power Control Preamble Length 8 Slots

Signature 0

The dialog comprises the parameters for configuring the PCPCH preamble.

Preamble Power

Sets the power of the preamble component of the PCPCH channel.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PCPCh:PPower` on page 484

Preamble Repetition

Sets the preamble count.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PCPCh:PREpetition` on page 484

Preamble Power Step

Sets the power by which the preamble is increased from repetition to repetition. The power set under Preamble Power is the "target power", used during the last repetition of the preamble.

Example:

"Preamble Power" = 0 dB

"Preamble Repetition" = 3

"Preamble Power Step" = 3 dB

 


Fig. 4-30: Generated power sequence

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PCPCh:PPower:STEP` on page 484

Power Control Preamble Length

Sets the length of the power control preamble in slots.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation<st>:PCPCh:PLENgt h` on page 483

Signature

Selects the signature to be used for the PCPCH channel. The signature defines the code domain for the channelization code being used.

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:PCPCh:SIGNature](#) on page 486

4.37.3 Message Part Settings

1. To access these settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE 1".
2. Select "Mode > PCPCH Standard".
3. Select "Message Part".

The screenshot shows the '3GPP FDD A: User Equipment1' settings window with the 'Message Part' tab selected. The 'Data Power' field is highlighted with an orange box. The settings are as follows:

Parameter	Value	Parameter	Value
Data Power	0.00 dB	Control Power	0.00 dB
Message Length	1 Frames	Slot Format Control Part #	1
FBI Mode	1 Bit	FBI Pattern (bin)	0...
Symbol Rate	480 ksps		
Data Source	PN 9		
TFCI	0		
TPC Data Source	Pattern	TPC Pattern (bin)	0...
Read Out Mode	Single + Alt. 01		

The tab comprises the settings for the data part of the PCPCH.

Data Power

Sets the power of the data component of the PCPCH channel.

Remote command:

[\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:PCPCh:DPOwer](#) on page 482

Control Power

Sets the power of the control component of the PCPCH channel.

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:PCPCh:CPower](#) on page 480

Message Length

Sets the length of the message component of the PCPCH channel in frames.

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:PCPCh:MLEngth](#) on page 483

Slot Format

Selects the slot format of the control component of the PCPCH channel.

Slot formats 0 to 2 are available for the PCPCH channel. The slot format defines the structure of the control component, the FBI mode.

When channel coding is active, the FBI mode and the slot format are prescribed.

"Slot format 0" no FBI field

"Slot format 1" 1 FBI field

"Slot format 2" 2 FBI fields

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:PCPCh:CPSFormat](#) on page 480

FBI Mode

Selects the FBI (Feed Back Information) mode.

The FBI mode is determined by the slot format set. A change in the FBI mode leads automatically to an adjustment of the slot format.

"FBI Off" The FBI field is not in use.

"FBI On 1 Bit" The FBI field is used with a length of 1 bit.

"FBI On 2 Bits" The FBI field is used with a length of 2 bits.

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:PCPCh:FBI:MODE](#) on page 482

FBI Pattern

Enters the bit pattern for the FBI field in the control part (of the message part) of the PCPCH.

The FBI field is filled cyclically with a pattern of up to 32 bits in length.

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:PCPCh:FBI:PATtern](#) on page 483

Symbol Rate

Sets the symbol rate of the PCPCH channel.

The symbol rate is determined by the slot format set. A change in the symbol rate leads automatically to an adjustment of the slot format.

When channel coding is active, the symbol rate is prescribed.

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:PCPCh:SRATe](#) on page 486

Data Source

Selects the data source for the data component of the PCPCH channel.

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "PNxx"
An internally generated pseudo-random noise sequence.
- "Pattern"
An internally generated sequence according to a bit pattern.
Use the "Pattern" box to define the bit pattern.
- "Data List/Select DList"
A binary data from a data list, internally or externally generated.
Select "Select DList" to access the standard "Select List" dialog.
 - Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
 - Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.
 - Use the standard "File Manager" function to transfer external data lists to the instrument.

See also:

- section "Modulation Data" in the R&S SMW user manual.
- section "File and Data Management" in the R&S SMW user manual.
- section "Data List Editor" in the R&S SMW user manual

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:PCPCh:DATA](#) on page 481

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:PCPCh:DATA:PATtern](#) on page 482

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:PCPCh:DATA:DSElect](#) on page 481

TFCI

Enters the value of the TFCI field (Transport Format Combination Indicator) in the control component of the PCPCH channel.

Remote command:

[\[:SOURCE<hw>\]:BB:W3GPp:MSTation<st>:PCPCh:TFCI](#) on page 486

TPC Data Source

Defines the data source for the TPC field of the PCPCH channel.

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "Pattern"
An internally generated sequence according to a bit pattern.
Use the "Pattern" box to define the bit pattern.
- "Data List/Select TPC Data List"
A binary data from a data list, internally or externally generated.

Select "Select DList" to access the standard "Select List" dialog.

- Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
- Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.
- Use the standard "File Manager" function to transfer external data lists to the instrument.

See also:

- section "Modulation Data" in the R&S SMW user manual.
- section "File and Data Management" in the R&S SMW user manual.
- section "Data List Editor" in the R&S SMW user manual.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:PCPCh:TPC:DATA` on page 489

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:PCPCh:TPC:DATA:DSElect`
on page 489

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:PCPCh:TPC:DATA:PATtern`
on page 490

Read Out Mode

Defines the TPC data usage.

With 3GPP, the TPC bits are used to signal the increase or reduction in transmit power to the called station. With all read out modes, one bit is taken from the data stream for the TPC field for each slot and entered into the bit stream several times (depending on the symbol rate). The difference between the modes lies in the usage of the TPC bits.

"Continuous" The TPC bits are used cyclically.

"Single + All 0" The TPC bits are used once, and then the TPC sequence is continued with 0 bits.

"Single + All 1" The TPC bits are used once, and then the TPC sequence is continued with 1 bits.

"Single + alt. 01"

The TPC bits are used once and then the TPC sequence is continued with 0 and 1 bits alternately (in multiples, depending on by the symbol rate, for example, 00001111).

"Single + alt. 10"

The TPC bits are used once and then the TPC sequence is continued with 1 and 0 bits alternately (in multiples, depending on by the symbol rate, for example, 11110000).

Remote command:

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:PCPCh:TPC:READ` on page 490

4.37.4 Channel Coding Settings

1. To access these settings, select "3GPP FDD > Link Direction > Uplink / Reverse > User Equipments > UE 1".

2. Select "Mode > PCPCH Standard".
3. Select "Coding".

3GPP FDD A: User Equipment1			
<input checked="" type="radio"/> General <input type="radio"/> PCPCH Structure <input type="radio"/> Preamble <input type="radio"/> Message Part <input checked="" type="radio"/> Coding			
Coding State	<input type="checkbox"/> On	Coding Type	CPCH RMC (TB size 168 bit)
Transport Channel			
<div>CPCH</div> <div>168</div> <div>PN 9</div> <div><input checked="" type="checkbox"/> On</div>			
Transport Block Size	168	Transport Blocks	1
Transport Time Interval	20 ms		
Size Of CRC	16	Error Protection	Conv 1/2
Interleaver 1 State	On	Interleaver 2 State	On

The tab comprises the parameters defining the coding type and activating the PCPCH channel. The fixed settings for the channel coding parameters are displayed.

Channel Coding State

Activates or deactivates channel coding for the PCPCH channel.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:PCPCh:CCODing:STATE`
on page 541

Channel Coding Type

Selects the predefined reference measurement channel coding types for the PCPCH channel.

"CPCH RMC (TB size 168 bit)"

Reference Measurements Channel Coding with transport block size of 168 bit.

"CPCH RMC (TB size 360 bit)"

Reference Measurements Channel Coding with transport block size of 360 bit.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:MSTation:ENHanced:PCPCh:CCODing:TYPE`
on page 541

Show Coding

Calls the menu for displaying channel coding. The reference measurement channel parameters are set to fixed values.

The following parameters are displayed:

"Data Source" The data source is displayed in the transport channel graphical display.


"Transport Block Size"	Size of the transport block at the channel coding input.
"Transport Block"	Transport blocks count.
"Transport Time Interval"	Number of frames into which a TCH is divided.
"Size of CRC"	CRC type (length).
"Error Protection"	Error protection.
"Interleaver 1 / 2 State"	Channel coding interleaver state
Remote command:	n.a.

4.38 Filtering, Clipping, ARB Settings

- To access this dialog, select "3GPP FDD > General > Filter/Clipping/ARB Settings".

The dialog comprises the settings, necessary to configure the baseband filter, to enable clipping and adjust the sequence length of the arbitrary waveform component.

4.38.1 Filter Settings

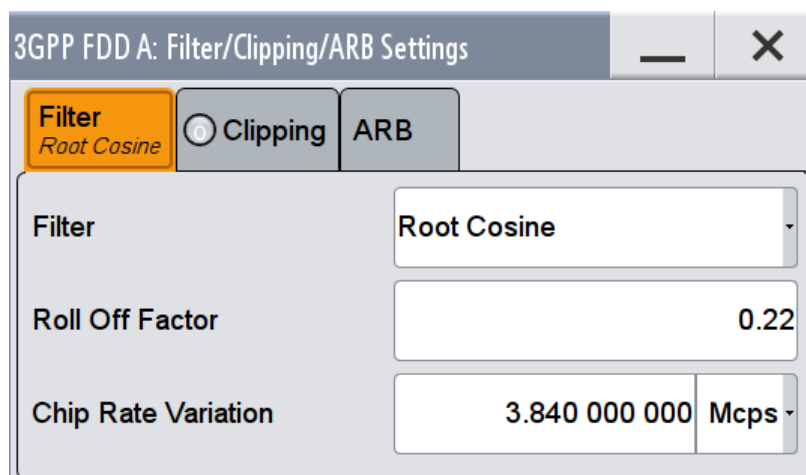

Provided are the following settings for configuring the baseband filter:

Filter

Selects the baseband filter.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:FILTer:TYPE` on page 359

Roll Off Factor or BxT

Sets the filter parameter.

The filter parameter offered ("Roll Off Factor" or "BxT") depends on the currently selected filter type. This parameter is preset to the default for each of the predefined filters.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:FILTer:PARAmeter:APCO25` on page 357

`[:SOURce<hw>] :BB:W3GPp:FILTer:PARAmeter:COsine` on page 357

`[:SOURce<hw>] :BB:W3GPp:FILTer:PARAmeter:GAUSs` on page 358

`[:SOURce<hw>] :BB:W3GPp:FILTer:PARAmeter:RCOSine` on page 358

`[:SOURce<hw>] :BB:W3GPp:FILTer:PARAmeter:SPHase` on page 359

Cut Off Frequency Factor

Sets the value for the cut off frequency factor. The cut off frequency of the filter can be adjusted to reach spectrum mask requirements.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:FILTer:PARAmeter:LPASs` on page 358

`[:SOURce<hw>] :BB:W3GPp:FILTer:PARAmeter:LPASSEVM` on page 358

Chip Rate Variation


Enters the chip rate. The default settings for the chip rate is 3.84 Mcps.

The chip rate entry changes the output clock and the modulation bandwidth, as well as the synchronization signals that are output. It does not affect the calculated chip sequence.

Remote command:

`[:SOURce<hw>] :BB:W3GPp:CRATe:VARiation` on page 357

4.38.2 Clipping Settings

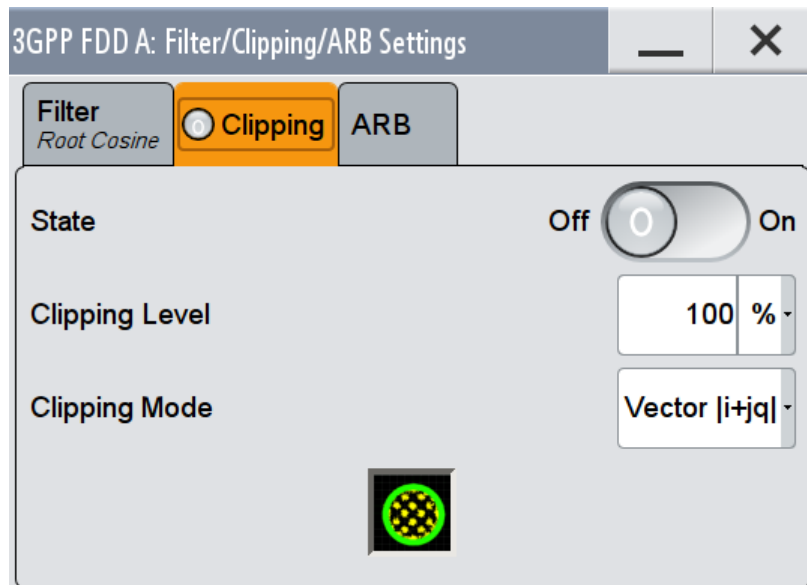

Provided are the following settings:

Clipping State

Switches baseband clipping on and off.

Baseband clipping is a very simple and effective way of reducing the crest factor of the WCDMA signal.

WCDMA signals may have very high crest factors particularly with many channels and unfavorable timing offsets. High crest factors entail two basic problems:

- The nonlinearity of the power amplifier (compression) causes intermodulation which expands the spectrum (spectral regrowth).
- Since the level in the D/A converter is relative to the maximum value, the average value is converted with a relatively low resolution. This results in a high quantization noise.

Both effects increase the adjacent-channel power.

With baseband clipping, all the levels are limited to a settable value ("Clipping Level"). This level is specified as a percentage of the highest peak value. Since clipping is done prior to filtering, the procedure does not influence the spectrum. The EVM however increases.

Since clipping the signal not only changes the peak value but also the average value, the effect on the crest factor is unpredictable. The following example shows the effect of the "Clipping" on the crest factor for typical scenarios.

Example: Clipping effect on the crest factor

The [table 4-12](#) shows changing the crest factor by clipping (vector mode $|i+jq|$) for signal configurations with different output crest factors.


100% clipping levels mean that clipping does not take place.

Table 4-12: Crest factor values as function of the vector clipping

Clipping level	Downlink: 10 DCHs "Minimum Crest" 30 kbps	Downlink: 10 DCHs "Worst Crest" 30 kbps	Downlink: 10 DCHs "Average Crest" 30 kbps	Downlink: 128 DCHs "Average Crest" 30 kbps
100%	9.89 dB	14.7 dB	10.9 dB	21.7 dB
80%	8.86 dB	12.9 dB	9.39 dB	20.2 dB
50%	7.50 dB	10.1 dB	8.29 dB	16.9 dB
20%	5.50 dB	6.47 dB	6.23 dB	12.5 dB
10%	5.34 dB	6.06 dB	5.80 dB	9.57 dB
5%	5.34 dB	6.06 dB	5.80 dB	8.17 dB

The pictures in the following table demonstrate the effect of clipping with vector mode ($|I+q|$), using a signal configuration with 4 DPCH as an example.

The arrows and the circle in the upper illustration show how the levels are mapped during subsequent clipping in vector mode ($|I+q|$).

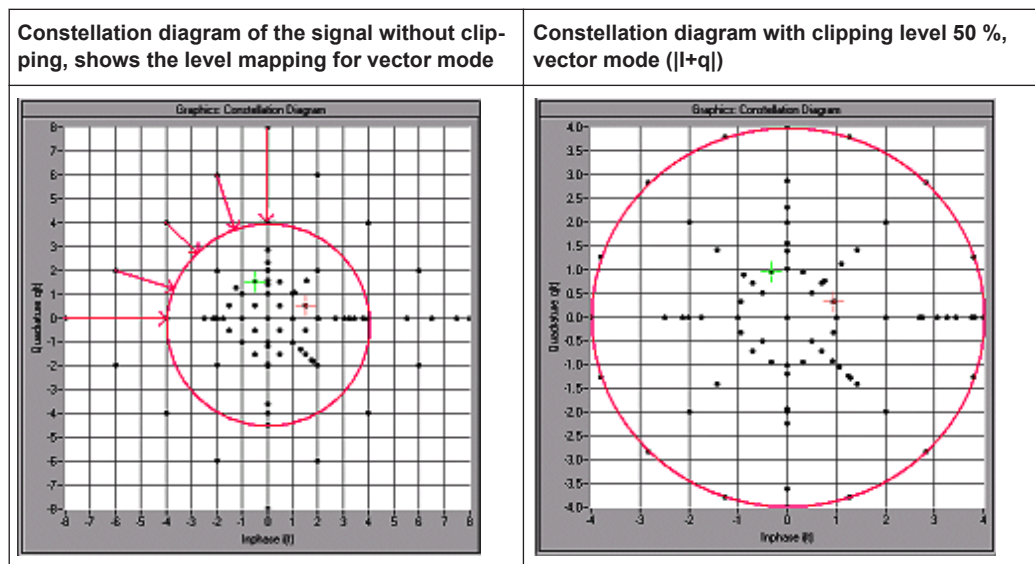

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:CLIPping:STATe` on page 356

Clipping Level

Sets the limit for clipping.

This value indicates at what point the signal is clipped. It is specified as a percentage, relative to the highest level. 100% indicates that clipping does not take place.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:CLIPping:LEVel` on page 355

Clipping Mode


Selects the clipping method. A graphic illustration of the way in which these two methods work is given in the dialog.

- "Vector $|i + jq|$ "
The limit is related to the amplitude $|i + q|$. The I and Q components are mapped together, the angle is retained.
- "Scalar $|i|, |q|$ "
The limit is related to the absolute maximum of all the I and Q values $|i| + |q|$. The I and Q components are mapped separately, the angle changes.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:CLIPping:MODE` on page 356

4.38.3 ARB Settings

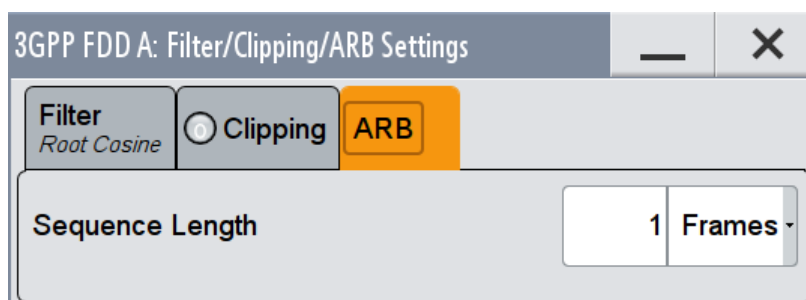

Provided are the following settings:

Sequence Length ARB

Changes the sequence length of the arbitrary waveform component of the signal. This component is calculated in advance and output in the arbitrary waveform generator. It is added to the realtime signal components.

The maximum number of frames is calculated as follows:

Max. No. of Frames = Arbitrary waveform memory size / (3.84 Mcps x 10 ms).

Tip: In pure amplifier tests with several channels and no enhanced channels, it is possible to improve the statistical properties of the signal by increasing the sequence length.

Remote command:

`[:SOURCE<hw>] :BB:W3GPp:SLENgth` on page 351

5 How to Work with the 3GPP FDD Option

The following step-by-step instructions demonstrate how to perform some signal generation tasks with the 3GPP FDD option.

5.1 Resolving Domain Conflicts

To resolve code domain conflicts

1. A downlink domain conflict can be recognized by one of the following methods:

- a) Select "3GPP FDD > Basestation > Channel Table"


A warning symbol in the tab name indicates a domain conflict.

In the channel table, a code domain conflict with an overlying channel (with a lower index) is indicated in column "Dom Conf" on the far right of the table by a conflict symbol and an orange-colored column.

Data 320												
	Channel Type	Enh / HSDPA Settings	Slot Fmt	Symb Rate /ksp	Chan Code	Power /dB	Data	DLIST / Pattern	T Offs	DPCCH Settings	State	Dom Conf
6	PICH			15	0	0.00	PN 9		0		Off	
7	AICH			15	0	0.00				Config...	Off	
8	AP-AICH			15	0	0.00				Config...	Off	
9	PDSCH		4	240	0	0.00	PN 9				On	
10	DL-DPCCH		0	7.5	0	0.00				Config...	On	⚠
11	DPCH	Config...	15	480	0	0.00	PN 9		0	Config...	On	⚠
12	HS-SCCH	Config...		30	5	0.00	PN 9				On	⚠
13	HS-PDS.QPSK	Config...		240	2	0.00	PN 9				On	
14	DPCH		8	30	48	0.00	PN 9		9	Config...	On	

- b) Select "3GPP FDD > Basestation > Code Domain"

A code domain conflict is indicated by overlapping bars.

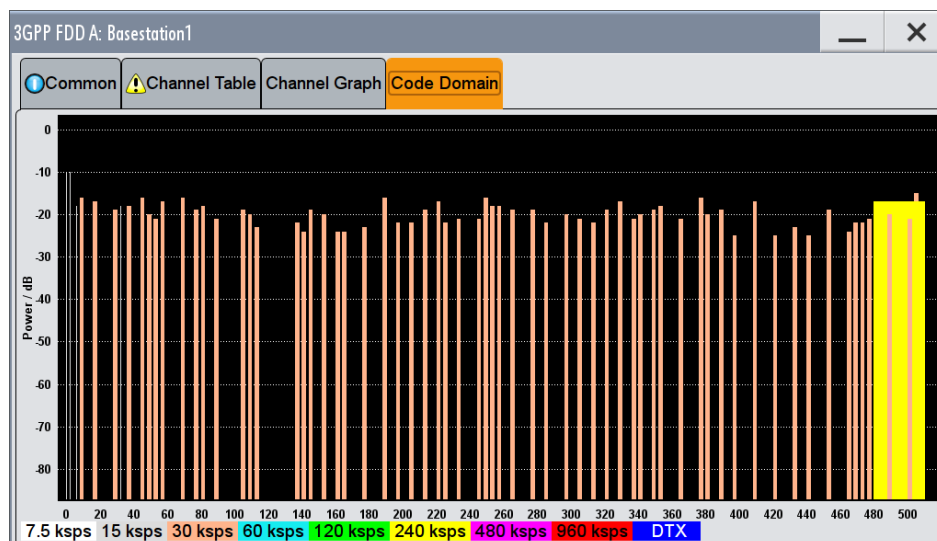

2. The instrument helps you to resolve code domain conflicts by automatically adapting the channelization code of the channels involved.
To access the required function, in the "3GPP FDD > Basestation > Channel Table" select the conflict symbol and trigger "Resolve Domain Conflicts".



Note: The HSUPA control channels E-RGCH and E-HICH may use the same channelization code as long as they use different signature sequence hopping index that identifies the user equipment. The F-DPCH channels may also use the same channelization code as long as they use a different timing offset (TOFFs) or slot format.

The code domain conflict is resolved by changing the channelization codes of the affected channels.

3GPP FDD A: Basestation1


Common Channel Table Channel Graph Code Domain

Multi Channel Assistant... Reset All Channels Preset To HSDPA H-Set

Data 320

	Channel Type	Enh / HSDPA Settings	Slot Fmt	Symb Rate /ksp	Chan Code	Power /dB	Data	DLList / Pattern	T Offs	DPCCH Settings	State	Dom Conf
6	PICH			15	0	0.00	PN 9		0		Off	
7	AICH			15	0	0.00				Config...	Off	
8	AP-AICH			15	0	0.00				Config...	Off	
9	PDSCH		4	240	0	0.00	PN 9				On	
10	DL-DPCCH		0	7.5	32	0.00				Config...	On	
11	DPCH	Config...	15	480	1	0.00	PN 9		0	Config...	On	
12	HS-SCCH	Config...		30	9	0.00	PN 9				On	
13	HS-PDS QPSK	Config...		240	4	0.00	PN 9				On	
14	DPCH		8	30	10	0.00	PN 9		9	Config...	On	

The graphs immediately display the change

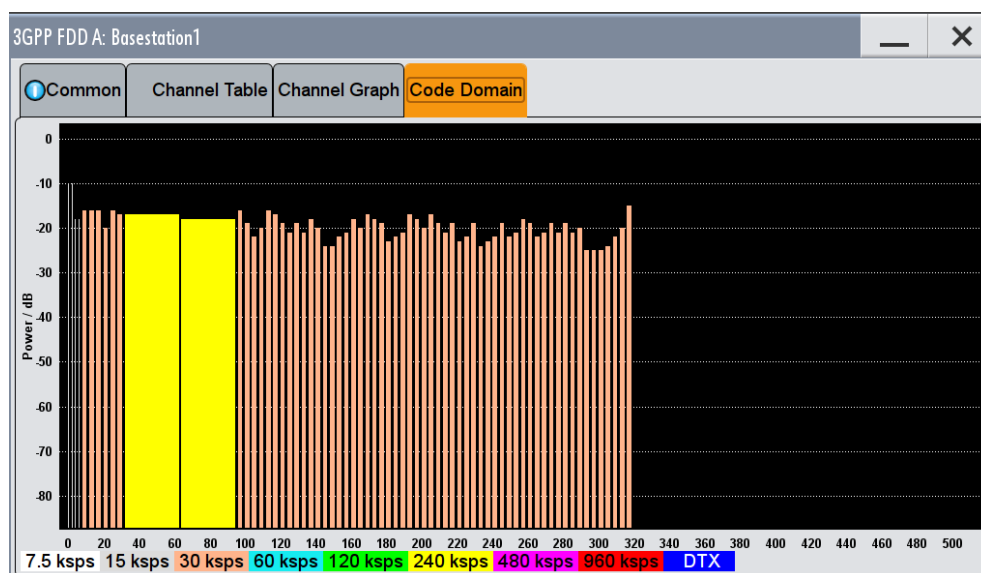

5.2 Using the DL-UL Timing Offset Settings

To generate a continuous uplink signal composed of multiple separately generated uplink frames

1. Adjust the uplink settings as required and set "User Equipment > UE > DPCCH > DL-UL Timing Offset = 0 Chips".
2. Enable generation of the 3GPP FDD signal, i.e "3GPP FDD > State > On"

3. Use the [Generate Waveform](#) function to save the current signal as an ARB signal in a waveform file.
4. Re-configure the uplink settings and save the signal as an ARB file.
5. Use the "Baseband > ARB > Multi Segment" function to assemble a common signal from the several uplink signals.
6. If required, re-adjust the "Marker" settings. A sequence list can be additionally applied to configure the order the waveforms are processed and how many times each of them is repeated.

5.3 Configuring UL-DTX Transmission and Visualizing the Scheduling

To configure the instrument to generate an UL DPCCH DTX signal

1. Enable "Baseband > 3GPP FDD > Transmission Direction > Uplink".
2. Select "User Equipment > UE1 > UL-DTX", enable "Mode > UL-DTX" and configure the following settings:

Table 5-1: UL-DTX Settings

Parameter	Value
E-DCH TTI	2 ms
UL-DTX Offset	2 Subframes
Inactivity Threshold for Cycle 2	8 TTIs
Long Preamble Length	4 Slots
DTX Cycle 1 / DTX Cycle 2	4 Subframes and 8 Subframes respectively
DPCCH Burst Length 1 / DPCCH Burst Length 2	1 Subframes (3 Slots)
UL-DTX... / User Scheduling State	On

The figure below shows the generated UL DPCCH DTX bursts pattern.

3. Use the [Scheduling List](#) to display the configured burst pattern.

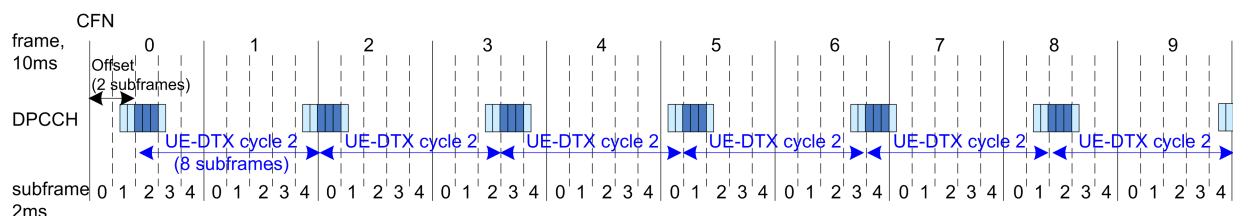


Fig. 5-1: Example for UL DPCCH DTX burst pattern as generated by the R&S SMW (E-DCH TTI=2ms, beginning at CFN0, UE_DTX_DRX_Offset=2, DTX Cycle 2=8 subframes)

Note: In this implementation the signal generation starts with UE-DTX cycle 2. The UL DPCCH DTX burst pattern is offset with 2 subframes, the burst are 6 slots long (2 slots Preamble + 3 slots DPCCH Burst Length 2 + 1 slot postamble) and are generated every 8 subframe.

4. Select "User Equipment > UE1 > E-DCH Scheduling Settings" and configure the settings as follow:

Table 5-2: E-DCH Scheduling Settings

Parameter	Value
Number of Table Rows	1
E-DCH Schedule Repeats After	24 TTIs
E-DCH TTI From	10
E-DCH TTI To	10

5. Select "UE1 > E-DPDCH Settings > State > On" to enable the generation of E-DPDCH.

The "UE1 > Scheduling List" shows the updated UL DPCCH DTX bursts pattern (see also figure below).

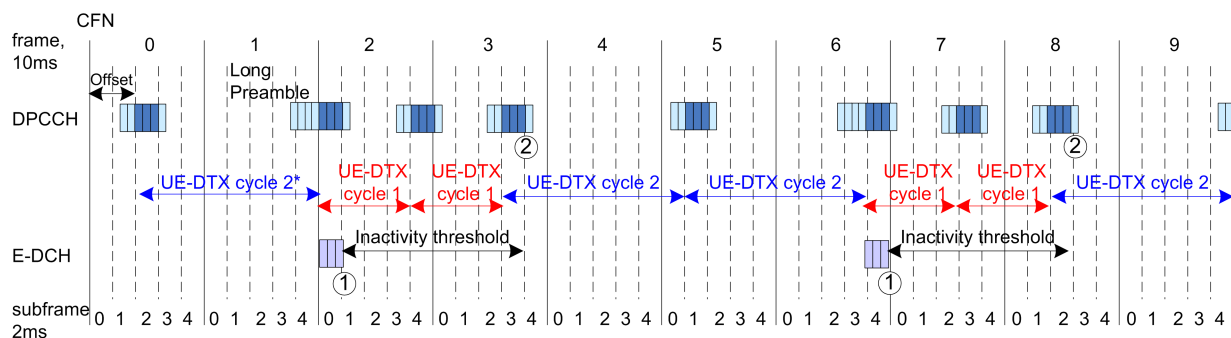


Fig. 5-2: Example for UL DPCCH DTX burst pattern in case of E-DCH transmission

1 = Cycle 2 to Cycle 1 switch after E-DCH transmission

2 = Cycle 1 to Cycle 2 switch when the inactivity timer expires

*) = In the R&S Signal Generator, the signal generation starts with UE-DTX cycle 2.

6. Configure the "UE1 > HS-DPCCH Settings" as follow:

Table 5-3: HS-DPCCH Settings

Parameter	Value
Compatibility Mode (HS-DPCCH)	Release 8 and Later RT
Inter TTI Distance (Interval)	1 subframe
Number of Rows	1
HARQ-ACK Repeat After	40 intervals
HARQ-ACK From Interval/ HARQ-ACK To Interval	20 / 20
HS-DPCCH 1/2, HARQ-ACK 1/2/3/4	A

Parameter	Value
Number of Rows	1
PCI/CQI Repeat After	40 intervals
PCI-CQI From Interval/ PCI-CQI To Interval	2 /2
HS-DPCCH 1/2, PCI/CQI 1/2/3/4 Type	CQI
CQI/CQI _S /CQI _I /CQI ₂	5

7. Select "UE1 > HS-DPCCH Settings > State > On" to enable the transmission of control signaling.

The figure below shows the generated UL DPCCH DTX bursts pattern.

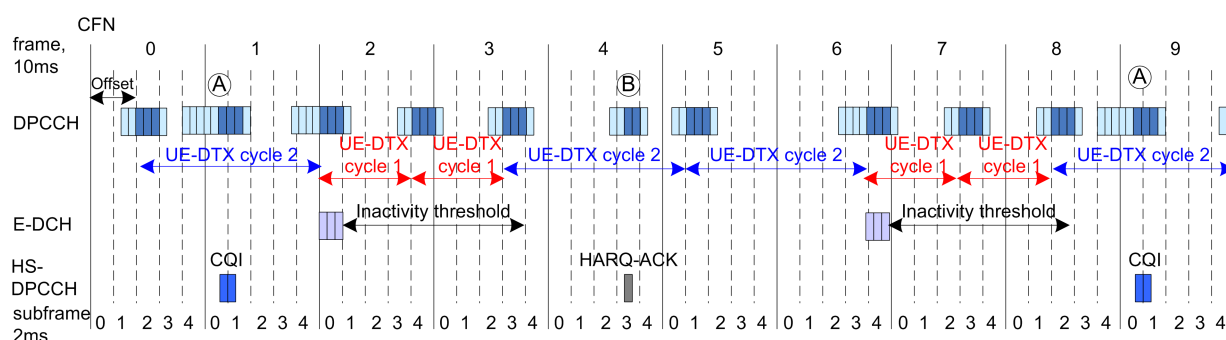


Fig. 5-3: Example for UL DPCCH DTX burst pattern in case of E-DCH and HS-DPCCH transmissions

A = DPCCH burst caused by the transmission of a CQI report

B = DPCCH burst caused by the transmission of a HARQ-ACK message

Although there is an HS-DPCCH transmission, the UE does not switch from UE-DTX cycle 2 to UE-DTX cycle 1.

5.4 Configuring and Visualizing the Uplink User Scheduling

To configure an uplink user scheduling

Consider the exemplary scheduling file. The file content is suitable as a basis for further customization.

1. Enable "Baseband > 3GPP FDD > Transmission Direction > Uplink".
2. Select "User Equipment > UE1" and enable the channels DPDCH and E-DCH; enable "Dynamic Power Control".
3. Select "User Equipment > UE1 > UL-DTX/User Scheduling", enable "Mode > User Scheduling".

4. Use the example scheduling file to generate an user scheduling according to your testing needs.
5. Open the "UE1 > Scheduling List" to visualize the configured transmission.

3GPP FDD A: UE1/Scheduling List

Frame Start

0

Number Of Frames

10

|: The channel is inactive in the slot.
X: The channel is active in the slot.

Frame Number:	Slot Number:	DPCCH Slots:	DPDCH Slots:	E-DCH TTI Number/Size:	E-DPCCH Slots/E-TFCI:	E-DPDCH Slots:	
0	0			0 / 10 ms			
	1						
	2						
	3						
	4						
	5						
	6						
	7						
	8						
	9						
	10						
	11						
	12						
	13						
	14						
1	0	X		1 / 2 ms	X / 5	X	
	1	X			X	X	
	2	X			X	X	
	3	X			2 / 2 ms	X / 5	X
	4	X				X	X
	5	X		3 / 2 ms	X	X	
	6	X			X / 5	X	
	7	X			X	X	
	8	X			X	X	
	9	X			4 / 2 ms	X / 5	X
	10	X		X		X	
	11	X		X		X	
	12	X		5 / 2 ms		X / 5	X
	13	X				X	X
	14	X			X	X	
2	0			6 / 2 ms			
	1						
	2			7 / 2 ms			
	3						
	4						

Fig. 5-4: Example: Scheduling List display of the User Scheduling configuration

```
<?xml version="1.0"?>
<SMxScheduling>
  <head type="3GPP FDD" subtype="Uplink User Scheduling" version="1" />
  <command slot="0" action="DPCCH_OFF" />
  <command slot="0" action="DPDCH_OFF" />
  <command slot="0" action="EDCH_OFF" />
  <command slot="0" action="DYNPC_OFF" />

  <command slot="15" action="DPCCH_ON" />

```



```

<command slot="15" action="EDCH_ON" />
<command slot="15" action="EDCH_TTIS" ttis="2" />
<command slot="15" action="EDCH_ETFCI" etfci="5" />
<command slot="15" action="DPCCH_OFF" />
<command slot="15" action="EDCH_OFF" />

<command slot="45" action="DYNPC_ON" />
<command slot="45" action="DPCCH_ON" />
<command slot="45" action="DPDCH_ON" />
<command slot="45" action="EDCH_ON" />
<command slot="45" action="EDCH_TTIS" ttis="10" />
<command slot="45" action="EDCH_ETFCI" etfci="20" />
<command slot="60" action="DPCCH_OFF" />
<command slot="60" action="DPDCH_OFF" />
<command slot="60" action="EDCH_OFF" />
<command slot="60" action="DYNPC_OFF" />

<command slot="150" action="REPEAT" />
</SMxScheduling>

```

Interpretation of the scheduling

- The instrument will transmit the following channels:
 - DPCCH and E-DCH during the second frame (frame # 1, from slot # 15 to slot # 29), where a TTI size of 2 ms and an E-TFCI of 5 is used for the E-DCH
 - DPCCH, DPDCH and E-DCH during the fourth frame (frame # 3, from slot # 45 to slot # 59), where a TTI size of 10 ms and an E-TFCI of 20 is used for the E-DCH.
- External dynamic power control commands are considered during the second transmission block of the example. The instrument ignores any power control commands during the first transmission block and during all prior signal gaps, between and after the two transmission blocks.
- The scheduling is looped at slot 150, i.e a transmission of DPCCH and E-DCH starts from slot 165 on, a (power controlled) transmission of DPCCH/DPDCH/E-DCH starts from slot 195 on, etc.

The displayed information in the "Scheduling List" confirms the expected scheduling of the channels as well as the changes in the E-DCH E-TFCI and TTI size. Refer to [chapter 4.27, "Scheduling List"](#), on page 171 for detailed explanation on how to understand the displayed information.

5.5 How to Configure the HS-DPCCH Settings for 4C-HSDPA Tests

The following is an example on how to use the provided settings to configure the instrument to send ACK only messages, as required in the ACK mis-detection test for 4C-HSDPA, according to 3GPP TS 25.141, section 8.11A.3 and 8.11A.4.

The example is based on the test configuration specified in 3GPP TS 25.141, Annex A.9A.

Table 5-4: Required test configurations (excerpt)

Test Configuration	4/4/4	4/2/2	3/3/3	3/2/1	3/3/0
HS-DPCCH Spreading Factor	128	128	128	128	256
Secondary Cell Enabled	3	3	2	2	2
Secondary Cell Active	3	1	2	1	2
Number of MIMO carriers	4	2	3	1	0

To configure the 4C-HSDPA HS-DPCCH Reference Measurement Channel

The example lists only the related setting and is based on Test Configuration = 3/3/3, see [table 5-4](#).

1. Enable "Baseband > 3GPP FDD > Link Direction > Uplink".
2. Select "User Equipment > UE1" and enable the "HS-DPCCH > State > On".
3. Select "HS-DPCCH > MIMO Mode > On".
4. Select "HS-DPCCH > Secondary Cell Enabled > 2".
5. Select "HS-DPCCH > Secondary Cell Active > 2".
6. Use the default values "HS-DPCCH > HARQ-ACK Scheduling > Number of Rows > 1" and "HS-DPCCH > HARQ-ACK Scheduling > HARQ-ACK Repeat After > 1".
7. Select "HS-DPCCH > HARQ-ACK Scheduling > HS-DPCCH 1 HARQ-ACK 1 > AA/AA".
8. Select "HS-DPCCH > HARQ-ACK Scheduling > HS-DPCCH 1 HARQ-ACK 2 > AA/D".

The screenshot shows the '3GPP FDD A: User Equipment1' configuration window. The 'HS-DPCCH' tab is selected. Key settings include:

- Start Delay:** 101 *256 Chips
- Inter TTI Distance (Interval):** 5 Subframes
- Channelization Code:** Q / 32
- Slot Format:** 1 (30ksps)
- MIMO Mode:** On (checked)
- Secondary Cell Enabled:** 2
- Secondary Cell Active:** 2
- HARQ - ACK:**
 - Number of Rows:** 1
 - HARQ-ACK Repeat After:** 1 Intervals
- HARQ-ACK Scheduling Table:**

HARQ-ACK From Interval	HARQ-ACK To Interval	HS-DPCCH 1 HARQ-ACK 1	HS-DPCCH 1 HARQ-ACK 2	HS-DPCCH 2 HARQ-ACK 3	HS-DPCCH 2 HARQ-ACK 4	Pow Offs /dB
0	0	0	AA/AA	AA/D		0.0

6 Application Sheets

Application sheets describe short application examples for selected issues and provide related background information.

6.1 Uplink Dual Cell HSDPA Test Signal Generation

The R&S SMW supports the generation of feedback messages for HSDPA data acknowledgment and channel quality indication as defined in the 3GPP TS 25.212 release 8 and release 9.

This application sheet describes how to configure the R&S SMW to generate an uplink test signal for basic tests on Dual Cell HSDPA (DC-HSDPA) operation.

6.1.1 Options and Equipment Required

The following equipment is required:

- Vector Signal Generator R&S SMW, equipped with:
 - Latest firmware version recommended
 - one of the baseband options, e.g. R&S SMW-B10
 - one of the frequency options, e.g. R&S SMW-B103
- Option R&S SMW-K42, "Digital Standard 3GPP FDD"
- Option R&S SMW-K83, "3GPP FDD enhanced incl. MS/BS tests, HSPA, HSPA+"

6.1.2 Test Setup


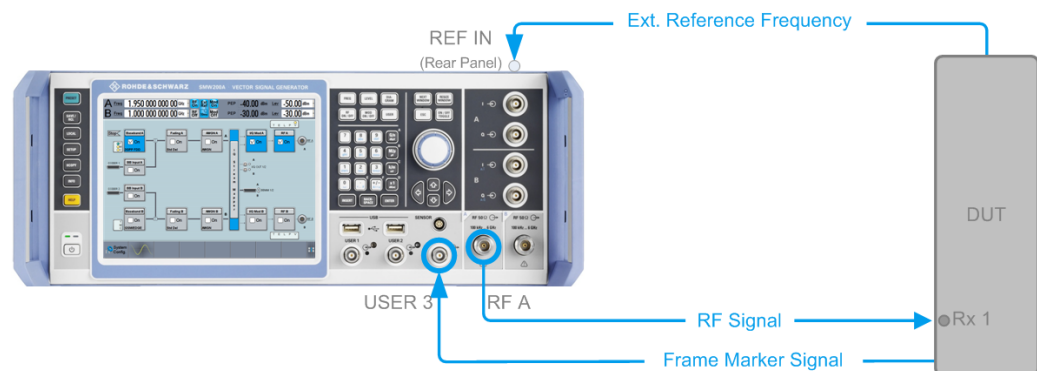


Fig. 6-1: Test Setup

6.1.3 Generating an uplink DC-HSDPA Test Signal (Non MIMO Mode)

To generate an uplink test signal corresponding to the signal of a UE configured to work in DC-HSDPA non MIMO mode, configure the uplink HS-DPCCH as follows:

1. Preset the R&S SMW to ensure a defined instrument state.
2. Open the 3GPP FDD dialog (e.g. "Baseband Block > 3GPP FDD") and select "Link Direction > Uplink".
3. In the "3GPP FDD" dialog, select "User Equipment > UE1".
4. Set the "Scrambling Code" as required.
5. In the "User Equipment" dialog, select the "HS-DPCCH" tab and perform the following:
 - a) Ensure that the "Compatibility Mode" is set to "Release 8 and Later".
 - b) Select the "Secondary Cell Enabled = 1" and "Secondary Cell Active = 1" to configure dual cell HSDPA mode for the selected UE.

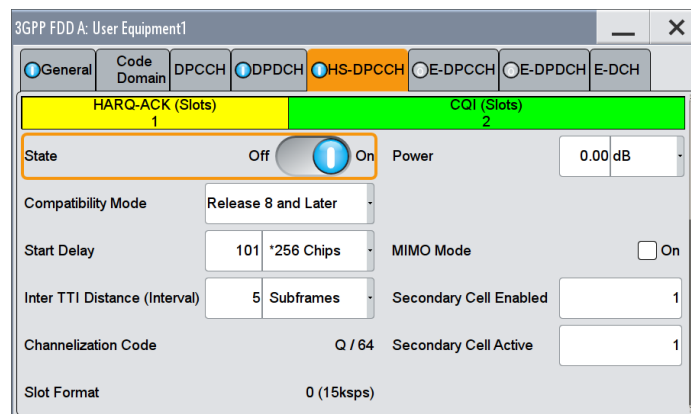

- c) Configure the HS-DPCCH structure with the parameters "Inter TTI Distance" and "Number of HARQ-ACK or PCI/CQI Rows", as well as by configuring the HARQ-ACK and CQI/PCI information per interval by means of the parameters in the table.
- d) Set the parameter "HS-DPCCH 1 HARQ-ACK 1" as required to adjust the information transmitted during the HARQ-ACK slot of the corresponding TTI. For example, an A/N feedback means that an ACK is sent to the serving cell and a NACK to the secondary serving cell.
- e) To include composite CQI messages in the signal as specified in 3GPP TS 25.212:
 - Select "HS-DPCCH 1 PCI/CQI Type > Composite CQI"
 - Select "PCI/CQI 1 Content > Config" and adjust the values of the parameters "CQI1" and "CQI2"
- f) Adjust the power settings as required.
- g) Execute "Adjust ARB Sequence Length".
- h) Set the "HS-DPCCH > State > On" and close the dialog.

3GPP FDD A: User Equipment1

General Code Domain DPCCH **HS-DPCCH** OE-DPCCH OE-DPDCH E-DCH

HARQ - ACK

Number of Rows: 1 HARQ-ACK Repeat After: 1 Intervals

HARQ-ACK From Interval	HARQ-ACK To Interval	HS-DPCCH 1 HARQ-ACK 1	HS-DPCCH 1 HARQ-ACK 2	HS-DPCCH 2 HARQ-ACK 3	HS-DPCCH 2 HARQ-ACK 4	Pow Offs /dB
0	0	0	A/N			0.0

PCI / CQI

Number of Rows: 1 PCI/CQI Repeat After: 1 Intervals

PCI/CQI From Interval	PCI/CQI To Interval	HS-DPCCH 1 PCI/CQI 1 Type	HS-DPCCH 1 PCI/CQI 1 Content	HS-DPCCH 1 PCI/CQI 2 Type	HS-DPCCH 2 PCI/CQI 3 Type	HS-DPCCH 2 PCI/CQI 3 Content	HS-DPCCH 2 PCI/CQI 4 Type	HS-DPCCH 2 PCI/CQI 4 Content	Pow Offs /dB
0	0	0	Comp CQI	Config...					0.0

Suggested / Current ARB Seq. Length: 1 / 1 Adjust ARB Sequence Length

6. In the "3GPP FDD" dialog, select "Trigger" and adjust the settings as required. For example, to synchronize the R&S SMW to the frame timing of the DUT:
 - a) feed the frame marker signal of the DUT (if available) to the "USER 3" connector of the instrument
 - b) enable "Trigger > Mode > Armed Auto"
 - c) select "Trigger > Source > External Global Trigger 1"
 - d) select "Trigger > Global Trigger Settings" and confirm that the global connector "USER3" is configured for "Direction > Input" and "Signal > Global Trigger 1".
7. In the "3GPP FDD" dialog, set the "State > On" to enable the generation of the 3GPP FDD uplink (UL) signal.
8. In the "RF > RF Frequency > Reference Frequency" dialog, adjust the settings as required. For example, if a common reference signal is used or if the DUT provides the reference frequency, connect the reference signal source to the R&S SMW, select "Source External" and adjust the "External Reference Frequency".
9. Press the FREQ key and select the desired RF frequency, e.g. 1950 MHz.
10. Adjust the output signal level as required and press the RF ON/OFF key to activate the RF output.

6.1.4 Generating an Uplink Test Signal for Simultaneous Dual Cell and MIMO Operation

- Perform the steps described above and enable the parameter "3GPP FDD > UE1 > HS-DPCCH Settings > MIMO Mode".

You are enabled to configure the HARQ-ACK feedback messages for up to four simultaneously transmitted downlink transport blocks.



For background information about the dual cell operation and processing of HARQ-ACK feedback messages, refer to [chapter 3.1.16, "Dual Cell HSDPA \(DC-HSDPA\)"](#), on page 42.

7 Performing Base Stations Tests According to TS 25.141

This section describes the "Test Case Wizard", provided for tests on Base Stations in Conformance with the 3G Standard 3GPP FDD.

7.1 Introduction

The Test Case Wizard supports tests on base stations in conformance with the 3G Standard 3GPP-FDD. It offers a selection of predefined settings according to Test Cases in TS 25.141.

The basic equipment layout for the test is the same as for the 3GPP FDD signal generation. It includes the options Baseband Main Module (B13), Baseband Generator (B10/B11) and Digital Standard 3GPP FDD (K42). However, some of the tests require further options. An overview of the available test cases is given in ["Test Case"](#) on page 279.


The Test Case Wizard has effect on frequency and level settings, link direction, trigger, baseband clock source, marker settings and base station or user equipment configuration. Besides the 3GPP required settings also interfering signals (AWGN, CW interferer, co-located modulation signals) or fading profiles are set.

The degree of freedom in setting the parameters can be determined. The "According to Standard" edit mode allows only settings in compliance with TS 25.141. The "User Definable" edit mode allows a wider range of settings.

1. To access the dialog for setting the 3GPP FDD digital standard, select "Baseband > 3GPP FDD".

2. Select "General > Test Case Wizard"

3GPP FDD: Test Case Wizard (TS 25.141)

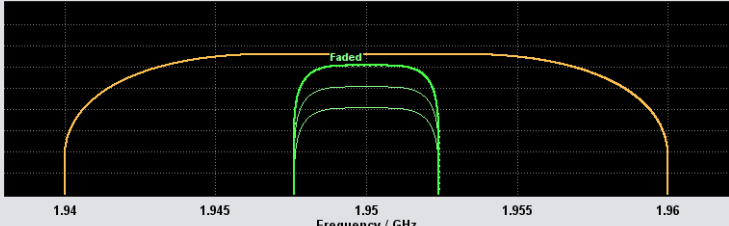

General Base Station ☒ Wanted Signal ☒ AWGN ☒ Fading

Test Case 8.3.1 Multipath Fading Case 1

Edit Mode According to Standard Marker Configuration Auto

Trigger Configuration Auto (Ext. Trigger 1) Diversity Off

Baseband A Signal Routing To Path and RF Port A

8.3.1 Multipath Fading Case 1

General Base Station ☒ Wanted Signal ☒ AWGN ☐ Fading

Scrambling Code (hex) 0000 00

Scrambling Mode Long Scrambling Code

Power Class Wide Area BS

General Base Station ☒ Wanted Signal ☒ AWGN ☒ Fading

State Off ☒ On Reference Measurement Channel RMC 12.2 kbps

RF Frequency 1.950 000 000 00 GHz Power Level -89.28 dBm

General Base Station ☒ Wanted Signal ☒ AWGN ☒ Fading

State Off ☒ On Required BLER < 0.01

Power Level (within 3.84 MHz BW) -84.00 dBm Eb/N0 19.70 dB

General Base Station ☒ Wanted Signal ☒ AWGN ☒ Fading

State Off ☒ On

This dialog comprises the settings necessary to select and configure a test case.

The "Test Wizard" dialog is divided into several sections:

- At the top of the panel, the test case is selected. In the "General Settings" section the edit mode and the general signal generator parameters are set.
- The base station parameters are input in the "Basestation Configuration" section.
- The graph in the right upper section symbolizes the interference scenario defined by power level and frequency offset.
- The middle section depends on the selected test case. It displays the input/output parameters of the wanted and the interfering signals and further configuration entries besides the default settings.
- Button "Apply Settings" activates the preset settings for the selected test case. Further modification of the generator settings is still possible. Signal generation starts with the first trigger event.

General workflow for creating complex test scenarios

With the "Test Case Wizard", you can create highly complex test scenarios with just a few keystrokes, see the following example:

1. Preset the signal generator
2. Open the "Baseband > 3GPP FDD > Test Case Wizard" dialog
3. Select one of the provided test cases
4. Enter the specific settings for the selected test case , e.g. frequency, level, ...
5. Execute "Apply Settings" to activate the selected configuration
6. Enable the RF output and further refine the generator settings if required
7. Start signal generation by a trigger from the base station at connector USER3 (default configuration).

7.1.1 General Considerations

Test Frequencies

For 3GPP-FDD, several paired frequency bands are used. The following table shows start and stop frequencies of both uplink (UE transmit, node B receive) and downlink (node B transmit, UE receive) frequency bands according to 3GPP.

Operating band	Uplink frequencies UE transmit, node B receive	Downlink frequencies UE receive, node B transmit
I	1920 MHz to 1980 MHz	2110 MHz to 2170 MHz
II	1850 MHz to 1910 MHz	1930 MHz to 1990 MHz
III	1710 MHz to 1785 MHz	1805 MHz to 1880 MHz
IV	1710 MHz to 1755 MHz	2110 MHz to 2155 MHz

Operating band	Uplink frequencies UE transmit, node B receive	Downlink frequencies UE receive, node B transmit
V	824 MHz to 849MHz	869 MHz to 894MHz
VI	830 MHz to 840 MHz	875 MHz to 885 MHz

The measurements that have to be performed according to 3GPP in order to verify proper operation of FDD systems apply to appropriate frequencies in the bottom, middle and top of the operating frequency band of the base station (BS). These frequencies are denoted as RF channels B (bottom), M (middle) and T (top).

Reference Frequency

When building up the measurement setups according to TS 25.141 it might be useful that all the instruments share a common reference clock. However, after "Preset" the signal generator uses its internal clock reference. In order to feed in the clock of an external clock the RF module configuration should be switched to external reference frequency.

In the external reference mode an external signal with selectable frequency and defined level must be input at the REF IN connector. This signal is output at the REF OUT connector. The reference frequency setting is effective for both paths. For very good reference sources of high spectral purity a wideband setting is provided.

Trigger Signal

For test cases with channel coded signal, e.g. an activated RMC, the base station that triggers the signal generation must emit an 'SFN (System Frame Number) mod 4' periodic trigger. A simple SFN periodic trigger probably will disturb the channel coding scheme.

Baseband Clock

The clock source is automatically switched to internal when the test case settings are activated.

Improvement of signal quality

Improvement of signal quality is possible via several settings:

- Use the "I/Q Mod > I/Q Modulator > Internal Baseband > Baseband Gain > 2dB" parameter to select a improved ACLR performance.
- In the "Automatic Level Control Settings" menu the RF output level can be recalibrated with "Search Once" in "Sample&Hold" mode. This is recommended if in CW mode the signal/intermodulation ratio is to be improved for multi-transmitter measurements. With setting "Auto", the level control is automatically adapted to the operating conditions, it may cause increased intermodulations, however.
- In the "User Correction" menu a list of correction values can be created and subsequently activated. Thus, the frequency response of the test setup can be taken into account.

- In order to compensate cable loss and additionally inserted attenuators, the RF level can directly be adjusted in the "Level" input field.

7.1.2 General Settings

In the General Settings section the edit mode and the general signal generator parameters are set.

Test Case

Selects the test case.

The following table gives an overview of the available test cases, the type of signal transmitted by the signal generator and the required additional options besides the basic configuration. An equipment layout as required for 3GPP FDD signal generation for one-path instruments is assumed to be the basic configuration.

Table 7-1: Transmitter Tests

TS 25.141 chapter	Test case	Generator Signal	Additional options
6.4.2	Power control steps: Output power dynamics	Uplink	-
6.6	Transmit intermodulation	Interferer (downlink)	-

Table 7-2: Receiver Tests

TS 24.141 chapter	Test case	Generator Signal	Additional signal generator options
7.2	Reference sensitivity level	Uplink	-
7.3	Dynamic range	Uplink, AWGN	R&S SMW-K62
7.4	Adjacent Channel Selectivity (ACS)	Uplink, Interferer	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-B10 2xR&S SMW-K42
7.5	Blocking characteristics	Uplink, Interferer	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-B10 2xR&S SMW-K42
7.6	Intermodulation characteristics	Uplink, 2 x Interferer	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-B10 2xR&S SMW-K42 R&S SMW-K62
7.8	Verification of the internal BER calculation	Uplink	-

TS 24.141 chapter	Test case	Generator Signal	Additional signal generator options
8.2.1	Performance requirement - Demodulation in static propagation conditions: Demodulation of DCH	Uplink, AWGN	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-K62
8.3.1	Performance requirement - Demodulation of DCH in multipath fading conditions: Multipath fading case 1	Uplink, AWGN Fading	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-K62 R&S SMW-B14/K71
8.3.2	Performance requirement - Demodulation of DCH in multipath fading conditions: Multipath fading case 2	Uplink, AWGN Fading	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-K62 R&S SMW-B14/K71
8.3.3	Performance requirement - Demodulation of DCH in multipath fading conditions: Multipath fading case 3	Uplink AWGN Fading	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-K62 R&S SMW-B14/K71
8.3.4	Performance requirement - Demodulation of DCH in multipath fading conditions: Multipath fading case 4	Uplink AWGN Fading	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-K62 R&S SMW-B14/K71
8.4	Demodulation of DCH in moving propagation conditions	Uplink AWGN Fading	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-K62 R&S SMW-B14/K71
8.5	Demodulation of DCH in birth/death propagation conditions	Uplink AWGN Fading	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-K62 R&S SMW-B14/K71
8.6	Verification of the internal BLER calculation	Uplink	R&S SMW-B20x R&S SMW-B13T
8.8.1	RACH performance: RACH preamble detection in static propagation conditions	Uplink AWGN	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-K62

TS 24.141 chapter	Test case	Generator Signal	Additional signal generator options
8.8.2	RACH performance: RACH preamble detection in multipath fading case 3	Uplink AWGN Fading	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-K62 R&S SMW-B14/K71
8.8.3	RACH performance: Demodulation of RACH message in static propagation conditions	Uplink AWGN	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-K62
8.8.4	RACH performance: Demodulation of RACH message in multipath fading case 3	Uplink AWGN Fading	B20x, RF path B R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-K62 R&S SMW-B14/K71
8.9.1	CPCH performance: CPCH access preamble and collision detection, preamble detection in static propagation conditions	Uplink AWGN	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-K62
8.9.2	CPCH performance: CPCH access preamble and collision detection, preamble detection in multipath fading case 3	Uplink AWGN Fading	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-K62 R&S SMW-B14/K71
8.9.3	CPCH performance: Demodulation of CPCH message in static propagation conditions	Uplink AWGN	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-K62
8.9.4	CPCH performance: Demodulation of CPCH message in multipath fading case 3	Uplink AWGN Fading	R&S SMW-B20x R&S SMW-B13T 2xR&S SMW-K62 R&S SMW-B14/K71

Remote command:

[:SOURce] :BB:W3GPp:TS25141:TCASe on page 554

Edit Mode

Selects the edit mode.

"According to Standard"

Only settings in compliance with TS 25.141 are possible in the wizard panel.

"User Definable"

A wider range of settings is possible in the wizard panel.

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:EMODe](#) on page 547

Trigger Configuration

Selects the trigger configuration. The trigger is used to synchronize the signal generator to the other equipment.

"Auto" The trigger settings are customized for the selected test case. In most cases trigger setting "Armed Auto" with external trigger source "External Trigger 1" is used. Unless otherwise noted the trigger delay is set equal to zero. Thus, the base station frame timing is able to synchronize the signal generator by a SFN (System Frame Number) periodic trigger. If the signal generator offers a channel coded signal (as all the Reference Measurements Channels require) the base station must emit a 'SFN mod 4' periodic trigger.

"Unchanged" The current trigger settings of the signal generator are retained unchanged.

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:TRIGger](#) on page 555

Marker Configuration

Selects the marker configuration. The marker can be used to synchronize the measuring equipment to the signal generator.

"Auto" The marker settings are customized for the selected test case. In most cases "Radio Frame" markers are output. Unless otherwise noted the marker delays are set equal to zero.

"Unchanged" The current marker settings of the signal generator are retained unchanged.

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:TRIGger:OUTPut](#) on page 555

Diversity

Selects the signal routing according to the base station's diversity processing capability.

"ON" The test signal is routed to both RF outputs.

"Off" The test signal is routed to the selected RF output.

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:RXDiversity](#) on page 553

Baseband A Signal Routing

Selects the signal routing for baseband A signal which in most test cases represents the wanted signal (exception test case 6.6).

"A" The baseband signal A is routed to RF output A.

"B" The baseband signal A is routed to RF output B.

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:ROUTe](#) on page 553

7.1.3 Basestation Configuration

The base station parameters are input in the "Basestation Configuration" section.

Scrambling Code (hex)

Enters the scrambling code.

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:SCODE](#) on page 554

Scrambling Mode

Sets the type of scrambling code.

With scrambling code, a distinction is made between "Long" and "Short Scrambling Code" for uplink signals. For downlink signals (test case 6.6) the scrambling code generator can be switched on and off.

"On " (downlink only)
Enables scrambling code generator.

"Off" Disables scrambling code generator for test purposes.

"Long Scrambling Code"
(uplink only)
Sets the long scrambling code.

"Short Scrambling Code"
(uplink only)
Sets short scrambling code.

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:SCODE:MODE](#) on page 554

Power Class

Enters the base station power class. The selected power class determines the output level of the signal generator. The output level is indicated in the "Wanted Signal" section of the Wizard panel.

For edit mode "User Definable", the output level can be set in the "Wanted Signal" section of the Wizard panel.

"Wide Area BS"
Enables power class wider area BS

"Medium Range BS"
Enables power class medium range BS

"Local Area BS"
Enables power class local area BS

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:BSPClass](#) on page 546

7.1.4 Apply

Apply Settings

Activates the current settings of the test case wizard.

Initialization of the signal generator with the test case settings is performed by a partial reset that includes only the baseband, fading and AWGN module and the RF frequency and RF level settings. Other settings of the signal generator are not altered.

Before triggering the signal generator the user still can change these other settings. This is particularly useful when compensating for cable loss and additionally inserted attenuators by adjusting the RF power levels is required.

Signal generation is started at the first trigger received by the generator. The RF output is not activated /deactivated by the test case wizard, so care has to be taken that RF State is On at the beginning of the measurement.

Note: For safety reasons the RF is not active unless the button RF ON has been pressed.

Remote command:

[:SOURce] :BB:W3GPp:TS25141:TCASe:EXECute on page 555

7.2 Receiver Tests

7.2.1 Overview

7.2.1.1 Basic Configuration

The test cases for receiver tests require at least the following equipment layout for the signal generator:

- Digital Standard 3GPP FDD (R&S SMW-K42)
- Arbitrary Waveform Generator (R&S SMW-B10),
- Baseband Main module (R&S SMW-B13),
- Frequency option (R&S SMW-B10x).

If the test case requires further options they are listed together with the description of the test case.

Receiver test can be performed with the signal generator only, i.e. without additional measuring equipment.

7.2.1.2 Test Setups - Receiver Tests

The tests can be performed using the standard test setup according to TS 25.141. Test setups beside the two standard test setups described below are specified at the Test Case description.

Standard Test Setup - One Path

In case of two-path instruments, signal routing to path A is assumed. RF port A outputs the wanted signal (with or without fading and/or interference) and is connected to the Rx port of the base station. The signal generator will start signal generation at the first received BS frame trigger.

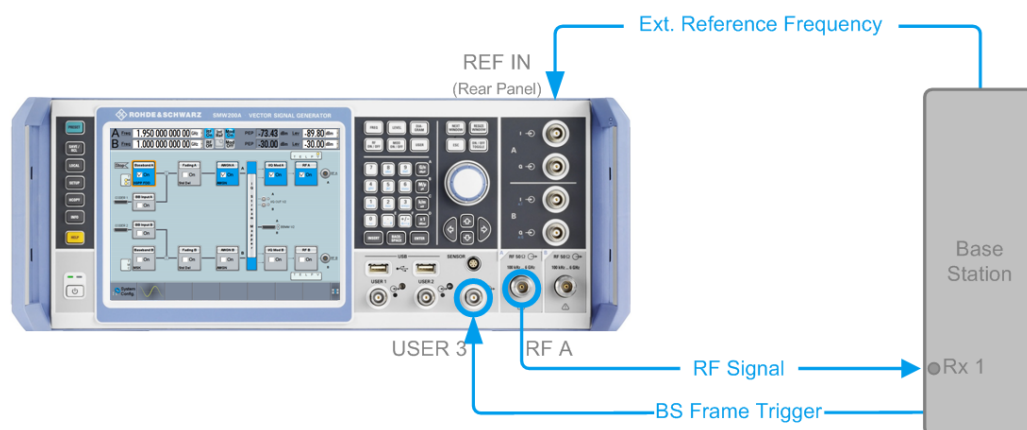


Fig. 7-1: Standard Test Setup (One Path)

For two-path instruments it is also possible to route baseband signal A to RF output B and connect RF output B to the Rx port of the base station.

Standard Test Setup - Two Paths

For two-paths measurements, the test cases always require option second RF path, a option Baseband Main Module (R&S SMW-B13T) and at least one option to generate the interfering signal in addition to the basic configuration. The signal routing can be selected, the wanted signal can be provided either at output RF A or at output RF B.

The signal generator outputs the reference measurement channel signal (= wanted signal) at output RF A and the interfering signal(s) at output RF B. After combining the two(three) signals the sum signal is fed into the base station Rx port. The signal generator will start signal generation at the first received BS frame trigger.

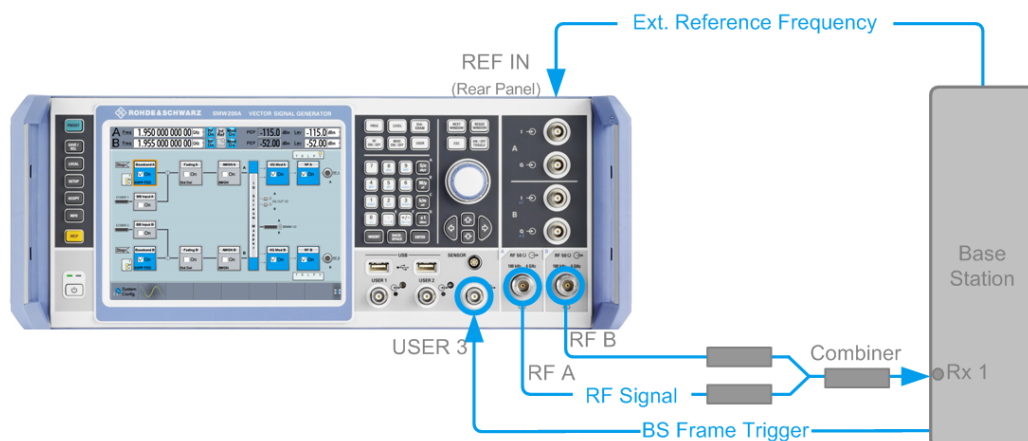


Fig. 7-2: Standard Test Setup (Two Paths)

Standard Test Setup - Diversity Measurements

For **diversity measurements**, the test cases always require at option R&S SMW-B20x and R&S SMW-B13T in addition to the basic configuration. The signal routing is fixed.

RF output A and RF output B transmit the corrupted reference measurement channel signal (wanted signal) and are connected to the Rx ports of the base station for diversity reception. The signal generator will start signal generation at the first received BS frame trigger.

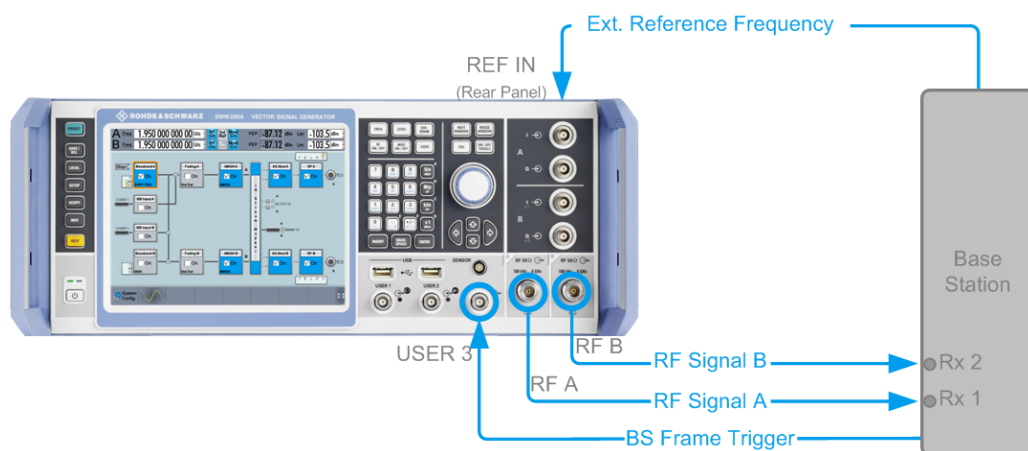


Fig. 7-3: Standard Test Setup (Diversity Measurements)



As signal routing takes place at the output of the baseband block, the interference settings of the two paths are identical for diversity measurements.

7.2.1.3 Carrying Out a Receiver Test Measurement

The following instructions list the general steps for performing a receiver test. Specific requirements are described together with the individual test case.

1. Set the base station to the basic state
 - a) Initialize the base station,
 - b) Set the scrambling scheme,
 - c) Set the frequency
 - d) Set the base station to receive the Reference Measurement Channel (for most test cases),
2. Set the signal generator to the basic state
 - a) reset the signal generator.
3. Set the test case wizard
 - a) Open the 3GPP FDD dialog in the baseband block
 - b) Open the Test Case Wizard and select Test Case
The General Settings parameters are preset according to TS 25.141
 - c) Enter scrambling code and scrambling mode according to the base station scrambling scheme.
 - d) Enter additional required parameters, e.g. power class of base station.
 - e) Enter the test frequency (e.g. M). It must be the same as the base station has been set to.
 - f) Activate the settings with the "Apply Settings" button.
The signal generator is now ready to start signal generation
4. Switch on RF output
5. If required, make additional settings (e.g. in the "I/Q Mod" or "RF" block) or change test case settings (e.g. in the "Fading" block)
6. Start the measurement
 - a) Send a start trigger impulse (e.g. SFN modulo 4) from the base station to the signal generator.
The signal generator will start signal generation.
7. Calculate the result
The base station internally calculates the BER, BLER or Pd depending on the test case. This value is compared to the required value.

7.2.1.4 General Wanted Signal Parameters

The following parameters are available for all receiver tests. Specific parameters are listed together with the Test Case description.

Wanted Signal State - Receiver Tests

Enables/disables the signal generation of the wanted 3GPP signal.

In edit mode "According to Standard" the state is fixed to "On".

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:WSIGnal:STATe` on page 562

RMC - Receiver Tests

Sets the reference measurement channel.

In edit mode "According to Standard" the selection of the reference measurement channel is restricted.

In edit mode "User definable", all following reference measurement channels are available for selection:

"RMC 12.2 kbps"

12.2 kbps measurement channel

"RMC 64 kbps" 64 kbps measurement channel

"RMC 144 kbps"

144 kbps measurement channel

"RMC 384 kbps"

384 kbps measurement channel

"AMR 12.2 kbps"

channel coding for the AMR coder

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:WSIGnal:DPDCh:CCODing:TYPE](#) on page 559

Wanted Signal Frequency - Receiver Tests

Sets the RF frequency of the wanted signal.

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:WSIGnal:FREQuency](#) on page 561

Wanted Signal Level - Receiver Tests

Sets the RF level in edit mode "User Definable".

In edit mode "According to Standard" the RF level is determined by the selected "Power Class".

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:WSIGnal:POWer](#) on page 562

7.2.2 Receiver Characteristics**7.2.2.1 Test Case 7.2 - Reference Sensitivity Level**

The test case requires the basic configuration and is performed using the standard test setup for one path. The signal generator outputs a reference measurement channel signal.

Table 7-3: The following table lists the settings on the base station:

Parameter	Value
Frequency	B, M and T
RMC	12.2 kbps

Parameter	Value
Scrambling code	Any
TPC function	OFF

Test Purpose and Test Settings - Test Case 7.2


The test case verifies that a BS receiver has the capability to correctly demodulate the signal sent by the signal generator at the specified (low) reference sensitivity power level.

The test is passed when the resulting BER (calculated internally by the BS) is below a 0.001 at the test frequencies B, M, and T. Note TS 25.141 Annex C: General Rules for Statistical Testing, where test conditions in terms of test methods and test conditions are defined.

Quotation from TS 25.141:

The reference sensitivity level is the minimum mean power received at the antenna connector at which the BER shall not exceed the specific value indicated in subclause 7.2.2. The test is set up according to Figure B.7 and performed without interfering signal power applied to the BS antenna connector. For duplex operation, the measurement configuration principle is indicated for one duplex branch in Figure B.7. For internal BER calculation an example of the test connection is as shown in figure B.7. The reference point for signal power is at the input of the receiver (antenna connector).

The measurement must be made at the three frequencies B, M and T.

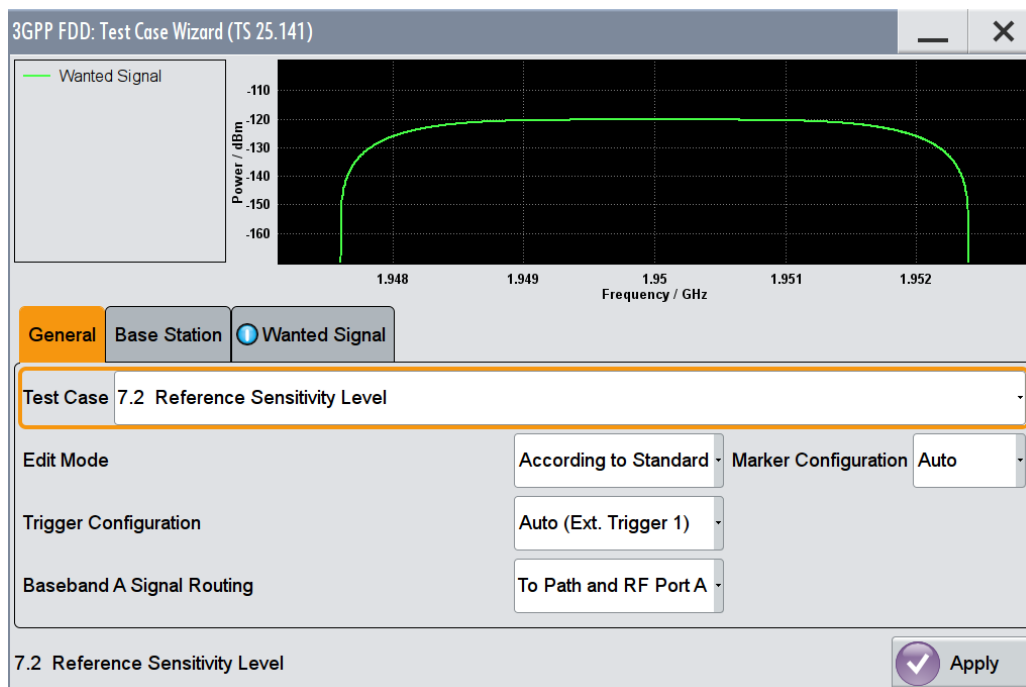

The top screenshot shows the 'Wanted Signal' configuration window. It has three tabs: 'General', 'Base Station', and 'Wanted Signal'. The 'Wanted Signal' tab is active. It contains three input fields: 'Scrambling Code (hex)' with the value '0000 00', 'Scrambling Mode' with a dropdown menu showing 'Long Scrambling Code', and 'Power Class' with a dropdown menu showing 'Wide Area BS'.

The bottom screenshot shows the 'Wanted Signal' configuration window with a different set of controls. It has the same three tabs. The 'Wanted Signal' tab is active. It features a 'State' toggle switch set to 'On', a 'Reference Measurement Channel' dropdown menu showing 'RMC 12.2 kbps', an 'RF Frequency' input field showing '1.950 000 000 GHz', and a 'Power Level' dropdown menu showing '-120.3 dBm'.

The settings of the wanted signal are described in [chapter 7.2.1.4, "General Wanted Signal Parameters"](#), on page 287.

7.2.2.2 Test Case 7.3 - Dynamic Range

The test case is performed using the standard test setup for one path.

It requires option K62 - Additional White Gaussian Noise (AWGN) in addition to the basic configuration.

The signal generator outputs a reference measurement channel signal disturbed by an interfering AWGN signal.

The following table lists the settings on the base station:

Parameter	Value
Frequency	B, M and T
RMC	12.2 kbps
Scrambling code	Any

Test Purpose and Test Settings - Test Case 7.3


The test case verifies that a BS receiver has the capability to demodulate the useful signal sent by the signal generator even when it is superimposed by a heavy AWGN (Additive White Gaussian Noise) signal.

The test is passed when the resulting BER (calculated internally by the BS) is below 0.001 at the test frequencies B, M, and T. Note TS 25.141 Annex C: General Rules for Statistical Testing, where test conditions in terms of test methods and test conditions are defined.

Quotation from TS 25.141

Receiver dynamic range is the receiver ability to handle a rise of interference in the reception frequency channel. The receiver shall fulfil a specified BER requirement for a

specified sensitivity degradation of the wanted signal in the presence of an interfering AWGN signal in the same reception frequency channel.

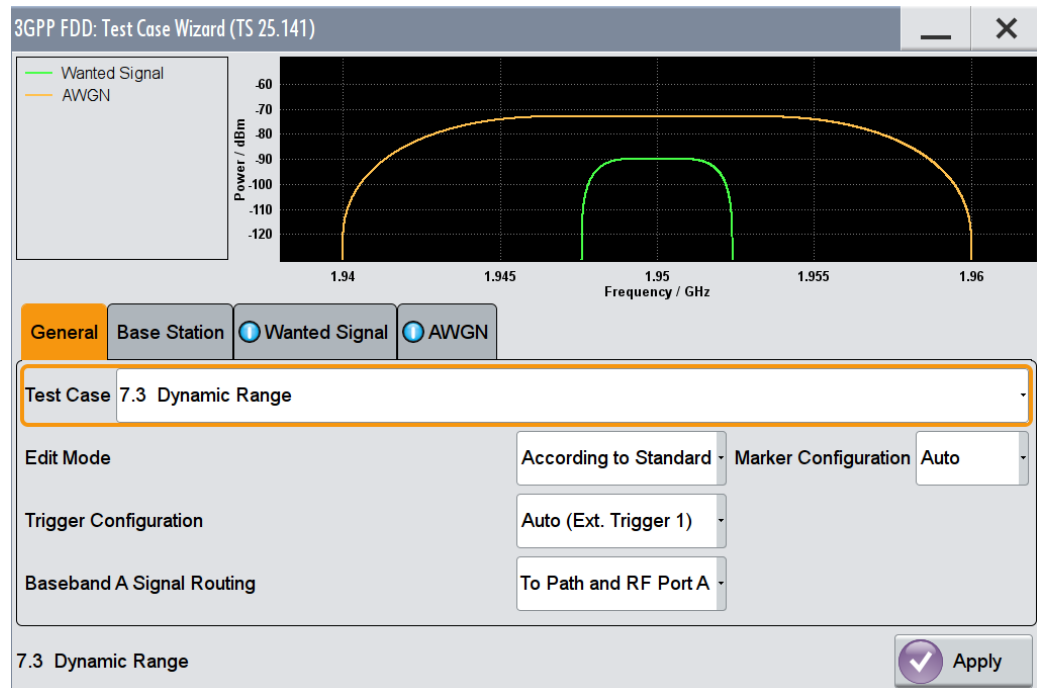

General | **Base Station** | ☒ Wanted Signal | ☒ AWGN

Scrambling Code (hex): 0000 00

Scrambling Mode: Long Scrambling Code

Power Class: Wide Area BS

General | Base Station | ☒ Wanted Signal | ☒ AWGN

State: Off ☒ On Reference Measurement Channel RMC 12.2 kbps

RF Frequency: 1.950 000 000 00 GHz Power Level: -89.80 dBm

General | Base Station | ☒ Wanted Signal | **☒ AWGN**

State: Off ☒ On

C/N: -16.80 dB Power Level (within 3.84 MHz BW): -73.00 dBm

Besides the settings described for all receiver tests, AWGN configuration is possible in edit mode "User Definable". In edit mode "According to Standard" the AWGN settings are preset:

AWGN State - Test Case 7.3

Enables/disables the generation of the AWGN signal.

In edit mode "According to Standard" the state is fixed to "On".

C/N - Test Case 7.3

Sets the carrier/noise ratio.

In edit mode "According to Standard" the state is fixed to -16.8 dB.

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:AWGN:CNRatio](#) on page 544

Power Level - Test Case 7.3

Sets the AWGN level in edit mode "User Definable".

In edit mode "According to Standard" the AWGN level is determined by the selected "Power Class".

- -73 dB for Wide Area BS
- -63 dB for Medium Range BS
- -59 dB for Local Area BS

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:AWGN:POWer:NOISe](#) on page 545

7.2.2.3 Test Case 7.4 - Adjacent Channel Selectivity

In addition to the standard configuration, this test case requires:

- option R&S SMW-B20x
- option R&S SMW-B13T
- option R&S SMW-K42

It is performed using the standard test setup for two paths.

The signal generator outputs the reference measurement channel signal (= wanted signal) at output RF A(B) and the adjacent channel interfering signal at output RF B(A). After combining the two signals the sum signal is fed into the base station Rx port. The signal generator will start signal generation at the first received BS frame trigger.

The measurement must be made at the three frequencies B, M and T.

The following table lists the settings on the base station:

Parameter	Value
Frequency	B, M and T
RMC	12.2 kbps
Scrambling code	Any

Test Purpose and Test Settings - Test Case 7.4

The test case verifies that a BS receiver has the capability to demodulate a signal that is sent by the signal generator but superimposed by a heavy WCDMA signal in the adjacent channel.


The test is passed when the resulting BER (calculated internally by the BS) is below 0.001 at the test frequencies B, M, and T. Note TS 25.141 Annex C: General Rules for Statistical Testing, where test conditions in terms of test methods and test conditions are defined.

Quotation from TS 25.141:

Adjacent channel selectivity (ACS) is a measure of the receiver ability to receive a wanted signal at its assigned channel frequency in the presence of an adjacent channel signal at a given frequency offset from the center frequency of the assigned channel. ACS is the ratio of the receiver filter attenuation on the assigned channel frequency to the receiver filter attenuation on the adjacent channel(s).

The interference signal is offset from the wanted signal by the frequency offset F_{uw} . The interference signal shall be a W-CDMA signal as specified in Annex I.

3GPP FDD: Test Case Wizard (TS 25.141)

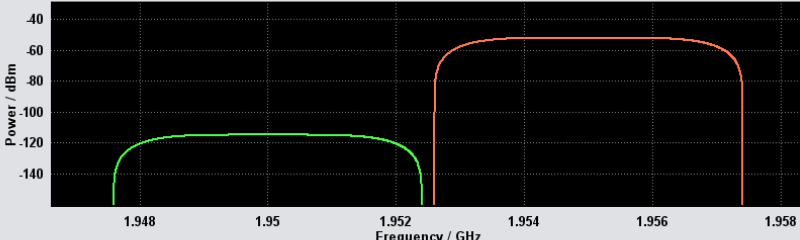

Legend:
— Wanted Signal
— Interferer

Power / dBm: -40, -60, -80, -100, -120, -140
Frequency / GHz: 1.948, 1.95, 1.952, 1.954, 1.956, 1.958

General Base Station ☒ Wanted Signal ☒ Interferer

Test Case 7.4 Adjacent Channel Selectivity (ACS)

Edit Mode According to Standard Marker Configuration Auto

Trigger Configuration Auto (Ext. Trigger 1)

Baseband A Signal Routing To Path and RF Port A

7.4 Adjacent Channel Selectivity (ACS) ☒ Apply

General Base Station ☒ Wanted Signal ☒ Interferer

Scrambling Code (hex) 0000 00

Scrambling Mode Long Scrambling Code

Power Class Wide Area BS

The image displays two screenshots of the R&S SMW-K42/-K83 software interface, specifically the 'Base Station' configuration section.

Top Screenshot (Wanted Signal Tab):

- General:** Base Station
- Wanted Signal:** Selected tab.
- Interferer:** Unselected tab.
- State:** Off (toggle switch is On).
- Reference Measurement Channel:** RMC 12.2 kbps.
- RF Frequency:** 1.950 000 000 00 GHz.
- Power Level:** -115.0 dBm.

Bottom Screenshot (Interferer Tab):

- General:** Base Station
- Wanted Signal:** Unselected tab.
- Interferer:** Selected tab.
- State:** Off (toggle switch is On).
- Frequency Offset:** +5 MHz.
- Modulation:** W-CDMA (3GPP FDD).
- Value:** -63.00 dB.

Besides the settings described for all receiver test, interferer configuration is possible in edit mode "User Definable". In edit mode "According to Standard" the settings are preset.

Interferer State - Test Case 7.4

Enables/disables the signal generation of the interfering uplink signal in the second path.

In edit mode "According to Standard" the state is fixed to "On".

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:IFSignal:STATe](#) on page 552

Frequency Offset - Test Case 7.4

Enters the frequency offset of the interfering signal versus the wanted signal.

In edit mode "According to Standard" the choice is limited to +/- 5 MHz.

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:IFSignal:FOFFset](#) on page 550

C to I - Test Case 7.4

Enters the ratio of wanted signal level to interfering signal level.

In edit mode "According to Standard" the value is fixed to - 63 dB:

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:IFSignal:CNRatio](#) on page 548

Interferer Modulation - Test Case 7.4

Selects the type of modulation for the interfering uplink signal in the second path.

In edit mode "According to Standard" the modulation is fixed to "W-CDMA (3GPP FDD)".

"W-CDMA (3GPP FDD)"

A 3GPP FDD uplink signal with the following characteristic is generated for path B.

- DPCCH + DPDCH mode
- DPDCH with 240 kbps, 0 dB relative power, PRBS23 data source
- DPCCH with -5.46 dB relative power and slot format 2
- Same scrambling code as the wanted signal

("3GPP FDD" dialog)

"QPSK (3.84 MHz, Root Cosine 0.22)"

A QPSK signal (3.84 MHz bandwidth, root cosine filter 0.22, PRBS9 data source) is generated for path B ("Custom Dig Mod" dialog).

Remote command:

[:SOURce] :BB:W3GPp:TS25141:IFSignal:TYPE on page 553

7.2.2.4 Test Case 7.5 - Blocking Characteristics

In addition to the standard configuration, this test case requires:

- option R&S SMW-B20x
- option R&S SMW-B10
- option R&S SMW-B13T
- option R&S SMW-K42

It is performed using the standard test setup for two paths.

The signal generator provides the reference measurement channel signal (= wanted signal) at output RF A and the interfering signal with a selectable frequency offset at output RF B. After combining the two signals the sum signal is fed into the base station Rx port. The signal generator will start signal generation at the first received BS frame trigger sent.

The measurement must be made at the frequency M.

The following table lists the settings on the base station:

Parameter	Value
Frequency	M
RMC	12.2 kbps
Scrambling code	Any



In comparison with test case 7.4 this test case requires very large offset frequencies for the interfering signal. Therefore, a second RF output is always required. Due to the maximum frequency range of 6 GHz (option B106), the test case can not be performed at all frequency offsets required by the standard (1 MHz to 12.75 GHz).

Test Purpose and Test Settings - Test Case 7.5

The test case verifies that a BS receiver has the capability to demodulate a signal that is sent by the signal generator but superimposed by a heavy interfering signal in the not adjacent channel.


The test is passed when the resulting BER (calculated internally by the BS) is below 0.001 at the test frequency M. Note TS 25.141 Annex C: General Rules for Statistical Testing, where test conditions in terms of test methods and test conditions are defined.

Quotation from TS 25.141:

The blocking characteristics is a measure of the receiver ability to receive a wanted signal at its assigned channel frequency in the presence of an unwanted interferer on frequencies other than those of the adjacent channels. The blocking performance requirement applies as specified in tables 7.4A to 7.4J.

The requirements shall apply to the indicated base station class, depending on which frequency band is used. The requirements in Tables 7.4D to 7.4J may be applied for the protection of FDD BS receivers when GSM900, DCS1800, PCS1900, GSM850 and/or FDD BS operating in Bands I to VI are co-located with a UTRA FDD BS.

3GPP FDD: Test Case Wizard (TS 25.141)

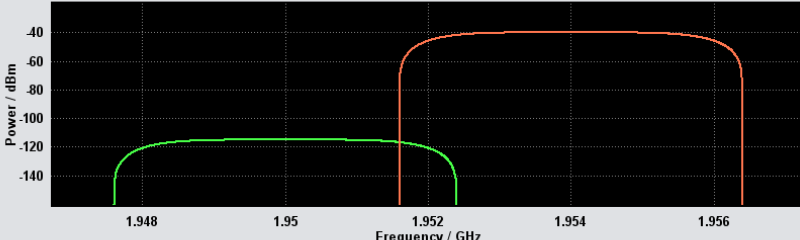

Power / dBm

Frequency / GHz

General Base Station ☒ Wanted Signal ☒ Interferer

Test Case 7.5 Blocking Characteristics

Edit Mode According to Standard Marker Configuration Auto

Trigger Configuration Auto (Ext. Trigger 1)

Baseband A Signal Routing To Path and RF Port A

7.5 Blocking Characteristics ☒ Apply

General Base Station ☒ Wanted Signal ☒ Interferer

Scrambling Code (hex) 0000 00

Scrambling Mode Long Scrambling Code

Power Class Wide Area BS

The image shows two screenshots of the R&S SMW-K42/-K83 software interface. The top screenshot shows the 'Wanted Signal' tab with the following settings: State is 'Off', Blocking Scenario is 'Wideband Blocking', Reference Measurement Channel is 'RMC 12.2 kbps', Operating Band is 'I: (1920 - 1980 MHz)', RF Frequency is '1.950 000 000 00 GHz', and Power Level is '-115.0 dBm'. The bottom screenshot shows the 'Interferer' tab with the following settings: State is 'On', Frequency Offset is '4 MHz', Power Level is '-40.00 dBm', and Modulation is 'W-CDMA (3GPP FDD)'.

Besides the settings described for all receiver test, the following settings are possible in edit mode "User Definable". In edit mode "According to Standard" most settings are preset.

Additional settings in the "Wanted Signal" section:

Blocking Scenario - Test Case 7.5

Selects the type of blocking scenario in edit mode "According to Standard".

The type of blocking scenario presets the selected "Interferer Modulation" and the "Power Level".

"Wideband Blocking"

The interferer signal for wide band blocking depends on the set "Operating Band" and "RF Frequency":

- As long as the interferer "RF frequency" lies within or close to the selected "Operating Band", a "3GPP FDD" uplink signal with a defined power level (depending on the selected Power Class and RMC) is generated for path B.
- When the interferer "RF Frequency" lies outside the selected "Operating Band", a "CW carrier" interfering signal with a defined power level (depending on the selected Power Class and RMC) is generated for path B.

"Collocated BS Blocking"

A CW carrier interfering signal with a defined power level (depending on the selected Power Class and RMC) is generated for path B ("RF" block)

"Narrowband Blocking"

A GMSK (270.833 kHz) interfering signal with a defined power level (depending on the selected Power Class and RMC) is generated for path B ("Custom Dig Mod" dialog).

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:WSIGnal:BTYPe` on page 556

Operating Band - Test Case 7.5

Selects the operating band of the base station for "Wideband Blocking". The operating band is required for the calculation of power levels and interferer modulation.

- Operating band I: (1920 – 1980 MHz)
- Operating band II: (1850 – 1910 MHz)
- Operating band III: (1710 – 1785 MHz)
- Operating band IV: (1710 – 1755 MHz)
- Operating band V: (824 – 849 MHz)
- Operating band VI: (830 – 840 MHz)

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:WSIGnal:OBANd` on page 561

Interferer Signal

Settings in the "Interferer Signal" section:

Interferer State - Test Case 7.5

Enables/disables the signal generation of the interfering signal in the second path.

In edit mode "According to Standard" the state is fixed to "On".

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:IFSignal:STATe` on page 552

Frequency Offset - Test Case 7.5

Enters the frequency offset of the interfering signal versus the wanted signal.

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:IFSignal:FOFFset` on page 550

Power Level - Test Case 7.5

Enters the level of the interfering signal.

In edit mode "According to Standard" the value is fixed to a value determined by the selected "Blocking Scenario", the "RF frequency" and "Frequency Offset" and the base station "Power Class".

For blocking scenario "Colocated BS Blocking" several power settings are permitted by the standard. The following table show the blocking requirements for Medium Range and Local Area BS when co-located with BS in other bands.

For blocking performance requirement tables see "[Blocking performance requirements](#)" on page 299.

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:IFSignal:POWer` on page 552

Interferer Modulation - Test Case 7.5

Selects the type of modulation for the adjacent channel interfering signal at output RF B.

In edit mode "According to Standard" the modulation is determined by the selected "Blocking Scenario".

"W-CDMA (3GPP FDD)"

A 3GPP FDD uplink signal with the following characteristic is generated for path B.

- DPCCH + DPDCH mode
- DPDCH with 240 ksps, 0 dB relative power, PRBS23 data source
- DPCCH with -5.46 dB relative power and slot format 2
- Same scrambling code as the wanted signal ("3GPP FDD" dialog)

"QPSK (3.84 MHz, Root Cosine 0.22)"

A QPSK signal (3.84 MHz bandwidth, root cosine filter 0.22, PRBS9 data source) is generated for path B ("Custom Dig Mod" dialog).

"CW Carrier"

A carrier-only signal is generated for path B; the frequency and level of the CW signal are determined by the parameters "Frequency Offset" and "Power Level".

"GMSK (270.833 kHz)"

A GMSK signal (270.833 kHz bandwidth, PRBS9 data source) is generated for path B ("Custom Dig Mod" dialog).

Remote command:

[:SOURCE] :BB:W3GPp:TS25141:IFSignal:TYPE on page 553

Blocking performance requirements

The following tables are taken from TS25141 (V6.6.0), chapter 7.5.5.

Blocking performance requirement for Medium Range BS when co-located with BS in other bands

Co-located BS type	Center Frequency of Interfering Signal	Interfering Signal mean power
Micro GSM850	869 – 894 MHz	-3 dBm
MR UTRA-FDD Band V	869 – 894 MHz	+8 dBm
MR UTRA-FDD Band III	1805 – 1880 MHz	+8 dBm
Micro DCS1800	1805 – 1880 MHz	+5 dBm
Micro PCS1900	1930 – 1990 MHz	+5 dBm
MR UTRA-FDD Band II	1930 – 1990 MHz	+8 dBm

Blocking performance requirement for Local Area BS when co-located with BS in other bands

Co-located BS type	Center Frequency of Interfering Signal	Interfering Signal mean power
LA UTRA-FDD Band V	869 – 894 MHz	-6 dBm
Pico GSM850	869 – 894 MHz	-7 dBm
LA UTRA-FDD Band III	1805 – 1880 MHz	-6 dBm

Co-located BS type	Center Frequency of Interfering Signal	Interfering Signal mean power
Pico DCS1800	1805 – 1880 MHz	-4 dBm
LA UTRA-FDD Band II	1930 – 1990 MHz	-6 dBm
Pico PCS1900	1930 – 1990 MHz	-4 dBm

Blocking characteristics for Wide Area BS

Operating Band	Center Frequency of Interfering Signal	Interfering Signal mean power	Wanted Signal mean power	Minimum Offset of Interfering Signal	Type of Interfering Signal
I	1920 - 1980 MHz	-40 dBm	-115 dBm	10 MHz	WCDMA signal *
	1900 - 1920 MHz 1980 - 2000 MHz	-40 dBm	-115 dBm	10 MHz	WCDMA signal *
	1 MHz - 1900 MHz 2000 MHz - 12750 MHz	-15 dBm	-115 dBm		CW carrier
II	1850 - 1910 MHz	-40 dBm	-115 dBm	10 MHz	WCDMA signal *
	1830 - 1850 MHz 1910 - 1930 MHz	-40 dBm	-115 dBm	10 MHz	WCDMA signal *
	1 MHz - 1830 MHz 1930 MHz - 12750 MHz	-15 dBm	-115 dBm		CW carrier
III	1710- 1785 MHz	-40 dBm	-115 dBm	10 MHz	WCDMA signal *
	1690 - 1710 MHz 1785- 1805 MHz	-40 dBm	-115 dBm	10 MHz	WCDMA signal *
	1 MHz - 1690 MHz 1805 MHz - 12750 MHz	-15 dBm	-115 dBm		CW carrier
IV	1710- 1755 MHz	-40 dBm	-115 dBm	10 MHz	WCDMA signal *
	1690 - 1710 MHz 1755- 1775 MHz	-40 dBm	-115 dBm	10 MHz	WCDMA signal *
	1 MHz - 1690 MHz 1775 MHz - 12750 MHz	-15 dBm	-115 dBm		CW carrier
V	824-849 MHz	-40 dBm	-115 dBm	10 MHz	WCDMA signal *
	804-824 MHz 849-869 MHz	-40 dBm	-115 dBm	10 MHz	WCDMA signal *
	1 MHz- 804 MHz 869 MHz - 12750 MHz	-15 dBm	-115 dBm		CW carrier

Operating Band	Center Frequency of Interfering Signal	Interfering Signal mean power	Wanted Signal mean power	Minimum Offset of Interfering Signal	Type of Interfering Signal
VI	810- 830 MHz 840- 860 MHz	-40 dBm	-115 dBm	10 MHz	WCDMA signal *
	1 MHz- 810 MHz 860 MHz- 12750 MHz	-15 dBm	-115 dBm		CW carrier

*: The characteristics of the W-CDMA interference signal are specified in Annex I of TS 25.141.

Blocking performance requirement for Wide Area BS when co-located with BS in other bands.

Co-located BS type	Center Frequency of Interfering Signal	Interfering Signal mean power	Wanted Signal mean power	Type of Interfering Signal
Macro GSM900	921- 960 MHz	+16 dBm	-115 dBm	CW carrier
Macro DCS1800	1805- 1880 MHz	+16 dBm	-115 dBm	CW carrier
Macro PCS1900	1930- 1990 MHz	+16 dBm	-115 dBm	CW carrier
Macro GSM850	869- 894 MHz	+16 dBm	-115 dBm	CW carrier
WA UTRA-FDD Band I	2110- 2170 MHz	+16 dBm	-115 dBm	CW carrier
WA UTRA-FDD Band II	1930- 1990 MHz	+16 dBm	-115 dBm	CW carrier
WA UTRA-FDD Band III	1805- 1880 MHz	+16 dBm	-115 dBm	CW carrier
WA UTRA-FDD Band IV	2110- 2155 MHz	+16 dBm	-115 dBm	CW carrier
WA UTRA-FDD Band V	869- 894 MHz	+16 dBm	-115 dBm	CW carrier
WA UTRA-FDD Band VI	875- 885 MHz	+16 dBm	-115 dBm	CW carrier

Blocking performance requirement for Medium Range BS when co-located with BS in other bands.

Co-located BS type	Center Frequency of Interfering Signal	Interfering Signal mean power	Wanted Signal mean power	Type of Interfering Signal
Micro GSM900	921- 960 MHz	-3 dBm	-105 dBm	CW carrier
Micro DCS1800	1805- 1880 MHz	+5 dBm	-105 dBm	CW carrier
Micro PCS1900	1930- 1990 MHz	+5 dBm	-105 dBm	CW carrier
Micro GSM850	869- 894 MHz	-3 dBm	-105 dBm	CW carrier

Co-located BS type	Center Frequency of Interfering Signal	Interfering Signal mean power	Wanted Signal mean power	Type of Interfering Signal
MR UTRA-FDD Band I	2110- 2170 MHz	+8 dBm	-105 dBm	CW carrier
MR UTRA-FDD Band II	1930- 1990 MHz	+8 dBm	-105 dBm	CW carrier
MR UTRA-FDD Band III	1805- 1880 MHz	+8 dBm	-105 dBm	CW carrier
MR UTRA-FDD Band IV	2110- 2155 MHz	+8 dBm	-105 dBm	CW carrier
MR UTRA-FDD Band V	869- 894 MHz	+8 dBm	-105 dBm	CW carrier
MR UTRA-FDD Band VI	875- 885 MHz	+8 dBm	-105 dBm	CW carrier

Blocking performance requirement for Local Area BS when co-located with BS in other bands.

Co-located BS type	Center Frequency of Interfering Signal	Interfering Signal mean power	Wanted Signal mean power	Type of Interfering Signal
Pico GSM900	921- 960 MHz	-7 dBm	-101 dBm	CW carrier
Pico DCS1800	1805- 1880 MHz	-4 dBm	-101 dBm	CW carrier
Pico PCS1900	1930- 1990 MHz	-4 dBm	-101 dBm	CW carrier
Pico GSM850	869- 894 MHz	-7 dBm	-101 dBm	CW carrier
LA UTRA-FDD Band I	2110- 2170 MHz	-6 dBm	-101 dBm	CW carrier
LA UTRA-FDD Band II	1930- 1990 MHz	-6 dBm	-101 dBm	CW carrier
LA UTRA-FDD Band III	1805- 1880 MHz	-6 dBm	-101 dBm	CW carrier
LA UTRA-FDD Band IV	2110- 2155 MHz	-6 dBm	-101 dBm	CW carrier
LA UTRA-FDD Band V	869- 894 MHz	-6 dBm	-101 dBm	CW carrier
LA UTRA-FDD Band VI	875- 885 MHz	-6 dBm	-101 dBm	CW carrier

Blocking performance requirement (narrowband) for Wide Area BS

Operating Band	Center Frequency of Interfering Signal	Interfering Signal mean power	Wanted Signal mean power	Minimum Offset of Interfering Signal	Type of Interfering Signal
II	1850 - 1910 MHz	- 47 dBm	-115 dBm	2.7 MHz	GMSK modulated*
III	1710- 1785 MHz	- 47 dBm	-115 dBm	2.8 MHz	GMSK modulated*
IV	1710- 1755 MHz	- 47 dBm	-115 dBm	2.7 MHz	GMSK modulated*
V	824- 849 MHz	- 47 dBm	-115 dBm	2.7 MHz	GMSK modulated*

* GMSK modulation as defined in TS 45.004.

Blocking performance requirement (narrowband) for Medium Range BS

Operating Band	Center Frequency of Interfering Signal	Interfering Signal mean power	Wanted Signal mean power	Minimum Offset of Interfering Signal	Type of Interfering Signal
II	1850 - 1910 MHz	- 42 dBm	-105 dBm	2.7 MHz	GMSK modulated*
III	1710- 1785 MHz	- 42 dBm	-105 dBm	2.8 MHz	GMSK modulated*
IV	1710- 1755 MHz	- 42 dBm	-105 dBm	2.7 MHz	GMSK modulated*
V	824- 849 MHz	- 42 dBm	-105 dBm	2.7 MHz	GMSK modulated*

* GMSK modulation as defined in TS 45.004 [12]

Blocking performance requirement (narrowband) for Local Area BS

Operating Band	Center Frequency of Interfering Signal	Interfering Signal mean power	Wanted Signal mean power	Minimum Offset of Interfering Signal	Type of Interfering Signal
II	1850 - 1910 MHz	- 37 dBm	-101 dBm	2.7 MHz	GMSK modulated*
III	1710- 1785 MHz	- 37 dBm	-101 dBm	2.8 MHz	GMSK modulated*
IV	1710- 1755 MHz	- 37 dBm	-101 dBm	2.7 MHz	GMSK modulated*
V	824- 849 MHz	- 37 dBm	-101 dBm	2.7 MHz	GMSK modulated*

* GMSK modulation as defined in TS 45.004.

7.2.2.5 Test Case 7.6 - Intermodulation Characteristics

In addition to the standard configuration, this test case requires:

- option R&S SMW-B20x
- option R&S SMW-B10
- option R&S SMW-B13T
- option R&S SMW-K62
- option R&S SMW-K42

It is performed using the standard test setup for two paths.

The signal generator outputs the reference measurement channel signal (= wanted signal) at output RF A and both interfering signals (CW interferer and the WCDMA or GMSK modulated interferer) at output RF B. After combining the signals the sum signal is fed into the base station Rx port. The signal generator will start signal generation at the first received BS frame trigger.

The measurement must be made at frequency M.



In order to generate both interfering signals with the desired frequency offset, a frequency offset is introduced for baseband B. This baseband frequency offset has to be added to the RF frequency B.

The following table lists the settings on the base station:

Parameter	Value
Frequency	M
RMC	12.2 kbps
Scrambling code	Any

Test Purpose and Test Settings - Test Case 7.6

The test case verifies that a BS receiver has the capability to demodulate a signal that is sent by the signal generator but superimposed by two heavy interfering signals in the adjacent channels, where the receiver intermodulation products disturb the wanted signal.

The test is passed when the resulting BER (calculated internally by the BS) is below 0.001 at the test frequency M. Note TS 25.141 Annex C: General Rules for Statistical Testing, where test conditions in terms of test methods and test conditions are defined.

Quotation from TS 25.141:

Third and higher order mixing of the two interfering RF signals can produce an interfering signal in the band of the desired channel. Intermodulation response rejection is a measure of the capability of the receiver to receive a wanted signal on its assigned channel frequency in the presence of two or more interfering signals which have a specific frequency relationship to the wanted signal.

3GPP FDD: Test Case Wizard (TS 25.141)

☐ Wanted Signal
☐ Interferer 1: CW Carrier
☐ Interferer 2: Modulated

General Base Station ☒ Wanted Signal ☒ Interferer 1: CW Carrier ☒ Interferer 2: Modulated Signal

Test Case 7.6 Intermodulation Characteristics

Edit Mode According to Standard Marker Configuration Auto

Trigger Configuration Auto (Ext. Trigger 1)

Baseband A Signal Routing To Path and RF Port A

7.6 Intermodulation Characteristics ☒ Apply

General Base Station ☒ Wanted Signal ☒ Interferer 1: CW Carrier ☒ Interferer 2: Modulated Signal

Scrambling Code (hex) 0000 00

Scrambling Mode Long Scrambling Code

Power Class Wide Area BS

General Base Station ☒ Wanted Signal ☒ Interferer 1: CW Carrier ☒ Interferer 2: Modulated Signal

State Off ☒ On Reference Measurement Channel RMC 12.2 kbps

RF Frequency 1.950 000 000 GHz Power Level -115.0 dBm

General Base Station ☒ Wanted Signal ☒ Interferer 1: CW Carrier ☒ Interferer 2: Modulated Signal

Bandwidth Type Wideband

State Off ☒ On

Frequency Offset 10.000 000 00 MHz Power Level -48.00 dBm

The screenshot shows the 'Interferer 2: Modulated Signal' configuration window. It includes tabs for 'General', 'Base Station', 'Wanted Signal', 'Interferer 1: CW Carrier', and 'Interferer 2: Modulated Signal'. The 'Interferer 2' tab is selected. The settings are as follows:

- Bandwidth Type:** Wideband
- State:** Off (toggle switch is in the 'On' position, labeled 'On Modulation')
- Frequency Offset:** 20.000 000 00 MHz
- Power Level:** -48.00 dBm

Besides the settings described for all receiver tests, interferer 1 and 2 configuration is possible in edit mode "User Definable". In edit mode "According to Standard" most of the settings are preset.

Interferer Bandwidth Type - Test Case 7.6

Selects the interferer scenario.

- "Wideband" A 3GPP FDD uplink interfering signal with the following characteristic is generated for path B.
- DPCCH + DPDCH mode
 - DPDCH with 240 ksps, 0 dB relative power, PRBS23 data source
 - DPCCH with -5.46 dB relative power and slot format 2
 - Same scrambling code as the wanted signal ("3GPP FDD" dialog)
- The 3GPP FDD uplink interfering signal is superimposed by a CW interfering signal with a frequency of 10 MHz and a level of -48 dBm ("AWGN" dialog).
- "Narrowband" GMSK interfering signal (270.833 kHz bandwidth, PRBS9 data source) is generated for path B ("Custom Dig Mod" dialog). The GMSK interfering signal is superimposed by a CW interfering signal with a frequency of 3.5 MHz and a level of -47 dBm ("AWGN" dialog).

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:IFSignal:BWIDth` on page 547

Interferer 1 and 2 State - Test Case 7.6

Enables/disables the signal generation of the CW and modulation interfering signal in the second path.

In edit mode "According to Standard" both states are fixed to "On".

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:IFSignal:CW:STATe` on page 549

`[:SOURce] :BB:W3GPp:TS25141:IFSignal:MODulated:STATe` on page 551

Interferer 1 and 2 Frequency Offset - Test Case 7.6

Enters the frequency offset of the interfering signals versus the wanted signal.

In edit mode "According to Standard" the value is fixed to a value determined by the selected "Interferer Bandwidth".

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:IFSignal:CW:FOFFset` on page 548

`[:SOURce] :BB:W3GPp:TS25141:IFSignal:MODulated:FOFFset` on page 550

Interferer 1 and 2 Power Level - Test Case 7.6

Enters the level of the interfering signals..

In edit mode "According to Standard" the value is fixed to a value determined by the selected "Interferer Bandwidth Type".

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:IFSignal:CW:POWer` on page 549

`[:SOURce] :BB:W3GPp:TS25141:IFSignal:MODulated:POWer` on page 550

Interferer 2 Modulation - Test Case 7.6

Selects the type of modulation for the interfering modulation signal in the second path.

In edit mode "According to Standard" the value is fixed to a value determined by the selected "Interferer Bandwidth".

"W-CDMA (3GPP FDD)"

A 3GPP FDD uplink signal with the following characteristic is generated for path B.

- DPCCH + DPDCH mode
- DPDCH with 240 ksps, 0 dB relative power, PRBS23 data source
- DPCCH with -5.46 dB relative power and slot format 2
- Same scrambling code as the wanted signal ("3GPP FDD" dialog)

"GMSK (270833 kHz)"

A GMSK signal (270.833 kHz bandwidth, PRBS9 data source) is generated for path B ("Custom Dig Mod" dialog).

"QPSK (3.84 MHz, Root Cosine 0.22)"

A QPSK signal (3.84 MHz bandwidth, root cosine filter 0.22, PRBS9 data source) is generated for path B ("Custom Dig Mod" dialog).

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:IFSignal:MODulated:TYPE` on page 551

7.2.2.6 Test Case 7.8 - Verification of Internal BER

The test case requires the basic configuration and is performed using the standard test setup for one path.

The signal generator outputs a corrupted reference measurement channel signal (= wanted signal) at output RF A. The signal is fed into the base station Rx port.

The signal generator will start signal generation at the first received BS frame trigger.

The measurement must be made at the three frequencies B, M and T.

The following table lists the settings on the base station:

Parameter	Value
Frequency	B, M and T
RMC	12.2 kbps
Scrambling code	Any


Test Purpose and Test Settings - Test Case 7.8

The test case verifies that a BS receiver has the capability to calculate the BER of a signal where erroneous bits are inserted in the data stream by the signal generator.


The test is passed when the calculated BER is within $\pm 10\%$ of the BER simulated by the signal generator the test frequencies B, M and T. Note TS 25.141 Annex C: General Rules for Statistical Testing, where test conditions in terms of test methods and test conditions are defined.

Quotation from TS 25.141:

Base Station System with internal BER calculation can synchronize its receiver to known pseudo-random data sequence and calculates bit error ratio from the received data. This test is performed only if Base Station System has this kind of feature. This test is performed by feeding measurement signal with known BER to the input of the receiver. Locations of the erroneous bits shall be randomly distributed within a frame. Erroneous bits shall be inserted to the data bit stream as shown in the following figure.

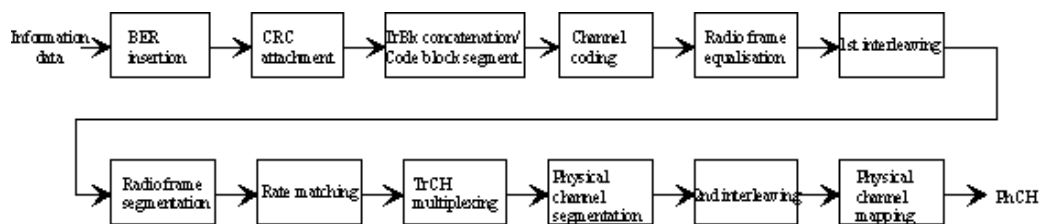

3GPP FDD: Test Case Wizard (TS 25.141)

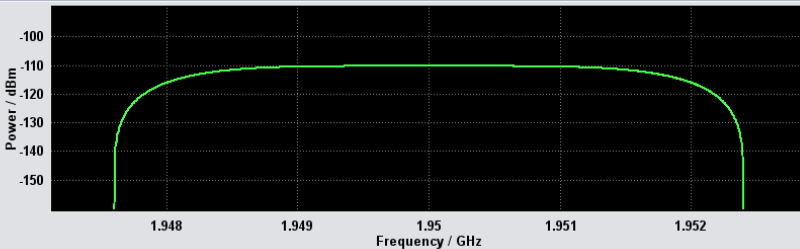

General Base Station **Wanted Signal**

Test Case 7.8 Verification of Internal BER

Edit Mode According to Standard Marker Configuration Auto

Trigger Configuration Auto (Ext. Trigger 1)

Baseband A Signal Routing To Path and RF Port A

7.8 Verification of Internal BER ✓ Apply

General **Base Station** **Wanted Signal**

Scrambling Code (hex) 0000 00

Scrambling Mode Long Scrambling Code

Power Class Wide Area BS

General Base Station **Wanted Signal**

State ☐ Off ☒ On Reference Measurement Channel RMC 12.2 kbps

RF Frequency 1.950 000 000 00 GHz Power Level -110.3 dBm

Bit Error Rate 0.00

Besides the settings described for all receiver test, Bit Error Rate and Block Error Rate selection is possible in edit mode "User Definable". In edit mode "According to Standard" only the Bit Error Rate setting is possible.

Bit Error Rate - Test Case 7.8

Sets the bit error rate. In edit mode "According to Standard" only values 0.00 (no bit errors are inserted) and 0.01 (1 percent bit errors are inserted) are available.

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:WSIGnal:DPDCh:DERRor:BIT:RATE`

on page 560

Block Error Rate - Test Case 7.8

Sets the block error rate in edit mode "User Definable".

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:WSIGnal:DPDCh:DERRor:BLOCK:RATE`

on page 560

7.2.3 Performance Requirements

7.2.3.1 Test Case 8.2.1 - Demodulation of DCH in Static Propagation Conditions

For **non-diversity measurements**, the test case requires Additional White Gaussian Noise (AWGN) (K62) in addition to the basic configuration.

The measurement is performed using the standard test setup for one path.

The signal generator outputs a reference measurement channel signal (= wanted signal) that is superimposed by a AWGN signal at output RF A. The signal is fed into the base station Rx port.

The signal generator will start signal generation at the first received BS frame trigger.

The measurement must be made at the three frequencies B, M and T. The RMC data rates are 12.2 kbps, 64 kbps, 144 kbps and 384 kbps.

For **diversity measurements**, in addition to the standard configuration, this test case requires:

- option R&S SMW-B20x
- option R&S SMW-B10
- option R&S SMW-B13T
- option R&S SMW-K62
- option R&S SMW-K42

It is performed using the standard test setup for diversity measurement.

The signal generator outputs the reference measurement channel signal (= wanted signal) at output RF A and output RF B. The wanted signal is superimposed by a AWGN signal. The signals are fed into the base station Rx ports.

The signal generator will start signal generation at the first BS frame trigger sent to input Trigger 1.

The measurement must be made at the three frequencies B, M and T. The RMC data rates are 12.2 kbps, 64 kbps, 144 kbps and 384 kbps.

Table 7-4: The following table lists the settings on the base station:

Parameter	Value(s)
Frequency	B, M and T
RMC	12.2 kbps, 64 kbps, 144 kbps, 384 kbps
Scrambling code	Any


Test Purpose and Test Settings - Test Case 8.2.1

The test case shall verify that a BS receiver has the capability to demodulate a signal that is sent by the signal generator and is superimposed by a heavy AWGN signal.

The test is passed when the resulting BLER (calculated internally by the BS) does not exceed the required BLER settings. Note TS 25.141 Annex C: General Rules for Statistical Testing, where test conditions in terms of test methods and test conditions are defined.

Quotation from TS 25.141:

The performance requirement of DCH in static propagation conditions is determined by the maximum Block Error Ratio (BLER) allowed when the receiver input signal is at a specified E_b/N_0 limit. The BLER is calculated for each of the measurement channels supported by the base station.

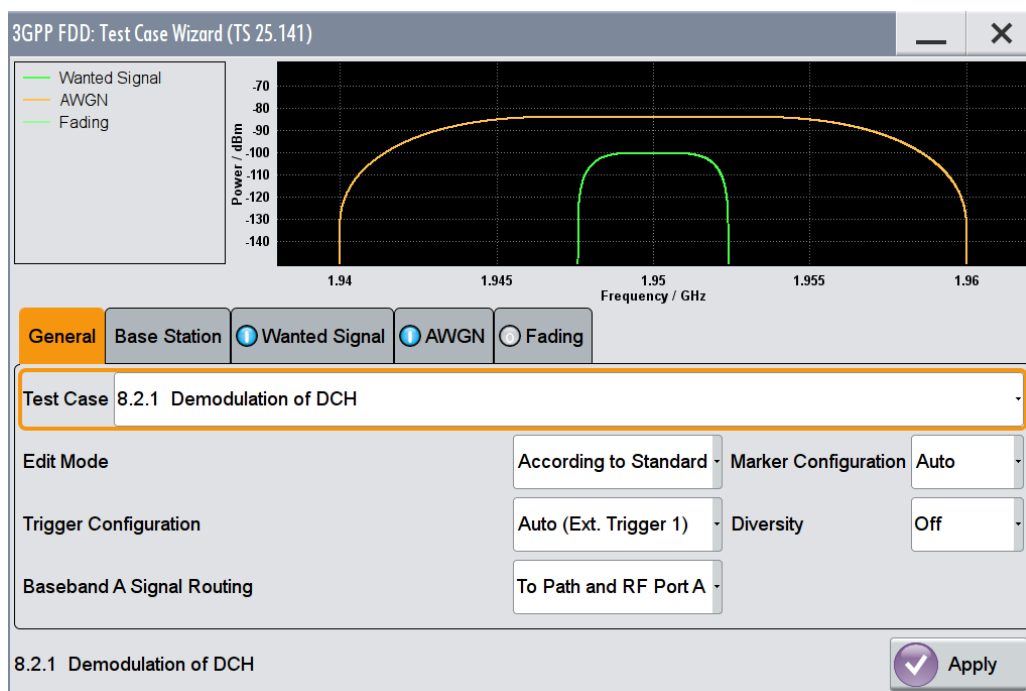

General	Base Station	<input checked="" type="radio"/> Wanted Signal	<input checked="" type="radio"/> AWGN	<input type="radio"/> Fading
Scrambling Code (hex)		0000 00		
Scrambling Mode		Long Scrambling Code		
Power Class		Wide Area BS		

General	Base Station	<input checked="" type="radio"/> Wanted Signal	<input checked="" type="radio"/> AWGN	<input type="radio"/> Fading
State		Off <input checked="" type="checkbox"/> On	Reference Measurement Channel	RMC 12.2 kbps
RF Frequency		1.950 000 000 00 GHz	Power Level	-100.3 dBm

General	Base Station	<input checked="" type="radio"/> Wanted Signal	<input checked="" type="radio"/> AWGN	<input type="radio"/> Fading
State		Off <input checked="" type="checkbox"/> On	Required BLER	< 0.01
Power Level (within 3.84 MHz BW)		-84.00 dBm	Eb/N0	8.70 dB

General	Base Station	<input checked="" type="radio"/> Wanted Signal	<input checked="" type="radio"/> AWGN	<input checked="" type="radio"/> Fading
State		Off <input type="checkbox"/> On		

Besides the settings described for all receiver test, AWGN Configuration is possible in edit mode "User Definable". In edit mode "According to Standard" only the Required BLER setting is possible. Fading is always off.

AWGN State - Test Case 8.x

Enables/disables the generation of the AWGN signal.

In edit mode "According to Standard" the state is fixed to "On".

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:AWGN:STATE](#) on page 546

Required BLER - Test Case 8.x

Sets the required Block Error Rate in edit mode "According to Standard".

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:AWGN:RBLock:RATE](#) on page 545

Power Level - Test Case 8.x

Sets the AWGN level in edit mode "User Definable".

In edit mode "According to Standard" the AWGN level is determined by the selected "Power Class".

- "-84 dBm" for "Wide Area BS"
- "-74 dBm" for "Medium Range BS"

- "-70 dBm" for "Local Area BS"

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:AWGN:POWer:NOISe](#) on page 545

E_b to N_0 - Test Case 8.x

Sets the ratio of bit energy to noise power density.

In edit mode "According to Standard" the value depends on the E_b/N_0 test requirements (see [table 7-5](#)).

Table 7-5: E_b/N_0 test requirements in AWGN channel

Measurement channel	Received E_b to N_0 for BS with Rx diversity	Received E_b to N_0 for BS without Rx diversity	Required BLER
12.2 kbps	n.a. (5.5 dB)	n.a. (8.7 dB)	$< 10^{-1}$
	5.5 dB	8.7 dB	$< 10^{-2}$
64 kbps	1.9 dB	5.1 dB	$< 10^{-1}$
	2.1 dB	5.2 dB	$< 10^{-2}$
144 kbps	1.2 dB	4.2 dB	$< 10^{-1}$
	1.3 dB	4.4 dB	$< 10^{-2}$
384 kbps	1.3 dB	4.4 dB	$< 10^{-1}$
	1.4 dB	4.5 dB	$< 10^{-2}$

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:AWGN:ENRatio](#) on page 544

Fading State - Test Case 8.2.1

Indicates the state of the Fader.

The state is fixed to 'Off'.

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:FSIMulator:STATe](#) on page 547

7.2.3.2 Test Case 8.3.1 - Demodulation of DCH in Multipath Fading Case 1 Conditions

For **non-diversity measurements**, in addition to the standard configuration, this test case requires:

- option R&S SMW-K62
- option R&S SMW-B14/K71

The measurement is performed using the standard test setup for one path.

The signal generator outputs a reference measurement channel signal (= wanted signal) that is disturbed by an AWGN signal and multipath fading effects at output RF A(B). The signal is fed into the base station Rx port.

The signal generator will start signal generation at the first received BS frame trigger.

The measurement must be made at the three frequencies B, M and T. The RMC data rates are 12.2 kbps, 64 kbps, 144 kbps and 384 kbps.

For **diversity measurements**, in addition to the standard configuration, this test case requires:

- option R&S SMW-B20x
- option R&S SMW-B13T
- option R&S SMW-K62
- option R&S SMW-B14/K71

It is performed using the standard test setup for diversity measurement.

The signal generator outputs the reference measurement channel signal (= wanted signal) that is disturbed by an AWGN signal and multipath fading effects at output RF A and output RF B. The signals are fed into the base station Rx ports.

The signal generator will start signal generation at the first received BS frame trigger.

The measurement must be made at the three frequencies B, M and T. The RMC data rates are 12.2 kbps, 64 kbps, 144 kbps and 384 kbps.

The following table lists the settings on the base station:


Parameter	Value(s)
Frequency	B, M and T
RMC	12.2 kbps, 64 kbps, 144 kbps, 384 kbps
Scrambling code	Any

Test Purpose and Test Settings - Test Case 8.3.1

The test case shall verify that a BS receiver has the capability to demodulate a signal that is sent by the signal generator but superimposed by a heavy AWGN signal and disturbed by multipath fading effects.

The test is passed when the resulting BLER (calculated internally by the BS) does not exceed the required BLER settings. Note TS 25.141 Annex C: General Rules for Statistical Testing, where test conditions in terms of test methods and test conditions are defined.

3GPP FDD: Test Case Wizard (TS 25.141)

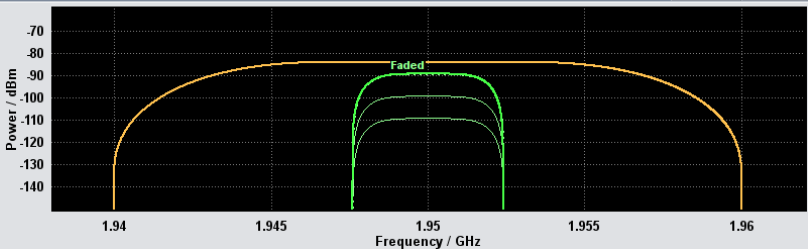

Legend: Wanted Signal (green), AWGN (orange), Fading (blue)

Power / dBm: -70, -80, -90, -100, -110, -120, -130, -140

Frequency / GHz: 1.94, 1.945, 1.95, 1.955, 1.96

General Base Station ☒ Wanted Signal ☒ AWGN ☒ Fading

Test Case 8.3.1 Multipath Fading Case 1

Edit Mode According to Standard Marker Configuration Auto

Trigger Configuration Auto (Ext. Trigger 1) Diversity Off

Baseband A Signal Routing To Path and RF Port A

8.3.1 Multipath Fading Case 1 ☒ Apply

General Base Station ☒ Wanted Signal ☒ AWGN ☒ Fading

Scrambling Code (hex) 0000 00

Scrambling Mode Long Scrambling Code

Power Class Wide Area BS

General Base Station ☒ Wanted Signal ☒ AWGN ☒ Fading

State Off ☒ On Reference Measurement Channel RMC 12.2 kbps

RF Frequency 1.950 000 000 GHz Power Level -89.28 dBm

General Base Station ☒ Wanted Signal ☒ AWGN ☒ Fading

State Off ☒ On Required BLER < 0.01

Power Level (within 3.84 MHz BW) -84.00 dBm Eb/N0 19.70 dB

General Base Station ☒ Wanted Signal ☒ AWGN ☒ Fading

State Off ☒ On

This test case settings are identical to test case 8.2.1 except from the channel simulation that is set to "Multipath Fading Case 1" ("Fading > Standard > 3GPP Case 1 UE/BS" and the specific E_b/N_0 test requirements (see [table 7-6](#)).

Table 7-6: E_b/N_0 Test requirements in multipath Case 1 channel

Measurement channel	Received E_b/N_0 for BS with Rx diversity	Received E_b/N_0 for BS without Rx diversity	Required BLER
12.2 kbps	n.a. (12.5 dB)	n.a. (19.7 dB)	$< 10^{-1}$
	12.5 dB	19.7 dB	$< 10^{-2}$
64 kbps	6.8 dB	12.2 dB	$< 10^{-1}$
	9.8 dB	16.5 dB	$< 10^{-2}$
144 kbps	6.0 dB	11.4 dB	$< 10^{-1}$
	9.0 dB	15.6 dB	$< 10^{-2}$
384 kbps	6.4 dB	11.8 dB	$< 10^{-1}$
	9.4 dB	16.1 dB	$< 10^{-2}$

Fading State - Test Case 8.x

Indicates the state of the Fader.

The state is fixed to "On". The "Fading" dialog is preset with the required settings for the test case.

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:FSIMulator:STATe` on page 547

7.2.3.3 Test Case 8.3.2 - Demodulation of DCH in Multipath Fading Case 2 Conditions

This test case is identical to test case 8.3.1 except from the channel simulation that is set to "Multipath Fading Case 2" ("Fading" dialog: Standard = 3GPP Case 2 UE/BS) and the E_b/N_0 test requirements (see [table 7-7](#)).

Table 7-7: E_b/N_0 Test requirements in Multipath Case 2 channel

Measurement channel	Received E_b to N_0 for BS with Rx diversity	Received E_b to N_0 for BS without Rx diversity	Required BLER
12.2 kbps	n.a. (9.6 dB)	n.a. (15.6 dB)	$< 10^{-1}$
	9.6 dB	15.6 dB	$< 10^{-2}$
64 kbps	4.9 dB	9.8 dB	$< 10^{-1}$
	7.0 dB	12.9 dB	$< 10^{-2}$
144 kbps	4.3 dB	8.8 dB	$< 10^{-1}$
	6.2 dB	12.1 dB	$< 10^{-2}$

Measurement channel	Received E_b to N_0 for BS with Rx diversity	Received E_b to N_0 for BS without Rx diversity	Required BLER
384 kbps	4.7 dB	9.3 dB	$< 10^{-1}$
	6.7 dB	12.7 dB	$< 10^{-2}$

7.2.3.4 Test Case 8.3.3 - Demodulation of DCH in Multipath Fading Case 3 Conditions

This test case is identical to test case 8.3.1 except from the channel simulation that is set to 'Multipath Fading Case 3' ("> 3GPP Case 3 UE/BS") and the E_b/N_0 test requirements (see [table 7-8](#)).

Table 7-8: E_b/N_0 Test requirements in multipath Case 3 channel

Measurement channel	Received E_b to N_0 for BS with Rx diversity	Received E_b to N_0 for BS without Rx diversity	Required BLER
12.2 kbps	n.a. (7.8 dB)	n.a. (11.4 dB)	$< 10^{-1}$
	7.8 dB	11.4 dB	$< 10^{-2}$
	8.6 dB	12.3 dB	$< 10^{-3}$
64 kbps	4.0 dB	7.7 dB	$< 10^{-1}$
	4.4 dB	8.3 dB	$< 10^{-2}$
	4.7 dB	9.1 dB	$< 10^{-3}$
144 kbps	3.4 dB	6.6 dB	$< 10^{-1}$
	3.8 dB	7.3 dB	$< 10^{-2}$
	4.2 dB	7.8 dB	$< 10^{-3}$
384 kbps	3.8 dB	7.1 dB	$< 10^{-1}$
	4.2 dB	7.8 dB	$< 10^{-2}$
	4.8 dB	8.5 dB	$< 10^{-3}$

7.2.3.5 Test Case 8.3.4 - Demodulation of DCH in Multipath Fading Case 4 Conditions

This test case is identical to test case 8.3.1 except from the channel simulation that is set to "Multipath Fading Case 4" ("Fading > Standard > 3GPP Case 4 UE") and the E_b/N_0 test requirements (see following table).

Table 7-9: E_b/N_0 Test requirements in multipath Case 4 channel

Measurement channel	Received E_b to N_0 for BS with Rx diversity	Received E_b to N_0 for BS without Rx diversity	Required BLER
12.2 kbps	n.a. (10.8 dB)	n.a. (14.4 dB)	$< 10^{-1}$
	10.8 dB	14.4 dB	$< 10^{-2}$

Measurement channel	Received E_b to N_0 for BS with Rx diversity	Received E_b to N_0 for BS without Rx diversity	Required BLER
	11.6 dB	15.3 dB	$< 10^{-3}$
64 kbps	7.0 dB	10.7 dB	$< 10^{-1}$
	7.4 dB	11.3 dB	$< 10^{-2}$
	7.7 dB	12.1 dB	$< 10^{-3}$
144 kbps	6.4 dB	9.6 dB	$< 10^{-1}$
	6.8 dB	10.3 dB	$< 10^{-2}$
	7.2 dB	10.8 dB	$< 10^{-3}$
384 kbps	6.8 dB	10.1 dB	$< 10^{-1}$
	7.2 dB	10.8 dB	$< 10^{-2}$
	7.8 dB	11.5 dB	$< 10^{-3}$

Table 7-10: E_b/N_0 Test requirements in multipath Case 4 channel

Measurement channel	Received E_b to N_0 for BS with Rx diversity	Received E_b to N_0 for BS without Rx diversity	Required BLER
12.2 kbps	n.a. (10.8 dB)	n.a. (14.4 dB)	$< 10^{-1}$
	10.8 dB	14.4 dB	$< 10^{-2}$
	11.6 dB	15.3 dB	$< 10^{-3}$
64 kbps	7.0 dB	10.7 dB	$< 10^{-1}$
	7.4 dB	11.3 dB	$< 10^{-2}$
	7.7 dB	12.1 dB	$< 10^{-3}$
144 kbps	6.4 dB	9.6 dB	$< 10^{-1}$
	6.8 dB	10.3 dB	$< 10^{-2}$
	7.2 dB	10.8 dB	$< 10^{-3}$
384 kbps	6.8 dB	10.1 dB	$< 10^{-1}$
	7.2 dB	10.8 dB	$< 10^{-2}$
	7.8 dB	11.5 dB	$< 10^{-3}$

Table 7-11: E_b/N_0 Test requirements in multipath Case 4 channel

Measurement channel	Received E_b to N_0 for BS with Rx diversity	Received E_b to N_0 for BS without Rx diversity	Required BLER
12.2 kbps	n.a. (10.8 dB)	n.a. (14.4 dB)	$< 10^{-1}$
	10.8 dB	14.4 dB	$< 10^{-2}$
	11.6 dB	15.3 dB	$< 10^{-3}$

Measurement channel	Received E_b to N_0 for BS with Rx diversity	Received E_b to N_0 for BS without Rx diversity	Required BLER
64 kbps	7.0 dB	10.7 dB	$< 10^{-1}$
	7.4 dB	11.3 dB	$< 10^{-2}$
	7.7 dB	12.1 dB	$< 10^{-3}$
144 kbps	6.4 dB	9.6 dB	$< 10^{-1}$
	6.8 dB	10.3 dB	$< 10^{-2}$
	7.2 dB	10.8 dB	$< 10^{-3}$
384 kbps	6.8 dB	10.1 dB	
	7.2 dB	10.8 dB	$< 10^{-2}$
	7.8 dB	11.5 dB	$< 10^{-3}$

7.2.3.6 Test Case 8.4 - Demodulation of DCH in Moving Propagation Conditions

This test case is identical to test case 8.3.1 except from the channel simulation that is set to "Moving Propagation" ("Fading > Standard > Moving Propagation") and the E_b/N_0 test requirements.

Table 7-12: E_b/N_0 Test requirements in moving channel

Measurement channel	Received E_b to N_0 for BS with Rx diversity	Received E_b to N_0 for BS without Rx diversity	Required BLER
12.2 kbps	n.a. (6.3 dB)	n.a. (9.3 dB)	$< 10^{-1}$
	6.3 dB	9.3 dB	$< 10^{-2}$
64 kbps	2.7 dB	5.9 dB	$< 10^{-1}$
	2.8 dB	6.1 dB	$< 10^{-2}$

7.2.3.7 Test Case 8.5 - Demodulation of DCH in Birth/Death Propagation Conditions

This test case is identical to test case 8.3.1 except from the channel simulation that is set to "Birth/Death Propagation" ("Fading > Standard > Birth/Death Propagation") and the E_b/N_0 test requirements.

Measurement channel	Received E_b to N_0 for BS with Rx diversity	Received E_b to N_0 for BS without Rx diversity	Required BLER
12.2 kbps	n.a. (8.3 dB)	n.a. (11.4 dB)	$< 10^{-1}$
	8.3 dB	11.4 dB	$< 10^{-2}$

Measurement channel	Received E_b to N_0 for BS with Rx diversity	Received E_b to N_0 for BS without Rx diversity	Required BLER
64 kbps	4.7 dB	8.0 dB	$< 10^{-1}$
	4.8 dB	8.1 dB	$< 10^{-2}$

7.2.3.8 Test Case 8.6 - Verification of Internal BLER

For **non-diversity measurements**, the test case requires the basic configuration and is performed using the standard test setup for one path.

The signal generator outputs a corrupted reference measurement channel signal (= wanted signal) at output RF A. The signal is fed into the base station Rx port.

The signal generator will start signal generation at the first received BS frame trigger.

The measurement must be made at the three frequencies B, M and T. The RMC data rates are 12.2 kbps, 64 kbps, 144 kbps and 384 kbps.

For **diversity measurements**, the test case requires option Second RF path (B20x) and a second option Baseband Main Module (B13) in addition to the basic configuration.

For **diversity measurements**, in addition to the standard configuration, this test case requires:

- option R&S SMW-B20x
- option R&S SMW-B13T

It is performed using the standard test setup for diversity measurement.

The signal generator outputs the corrupted reference measurement channel signal (= wanted signal) at output RF A and output RF B. The signals are fed into the base station Rx ports.

The signal generator will start signal generation at the first received BS frame trigger.

The measurement must be made at the three frequencies B, M and T. The RMC data rates are 12.2 kbps, 64 kbps, 144 kbps and 384 kbps.

The following table lists the settings on the base station

Parameter	Value
Frequency	B, M and T
RMC	12.2 kbps, 64 kbps, 144 kbps, 384 kbps
Scrambling code	Any



Test Purpose and Test Settings - Test Case 8.6

The test case verifies that a BS receiver has the capability to calculate the BLER of a signal where erroneous blocks are inserted in the data stream by the signal generator.

The test is passed when the calculated BLER is within $\pm 10\%$ of the BLER simulated by the signal generator the test frequencies B, M and T. Note TS 25.141 Annex C: General Rules for Statistical Testing, where test conditions in terms of test methods and test conditions are defined.

Quotation from TS 25.141:

Base Station System with internal BLER calculates block error rate from the CRC blocks of the received. This test is performed only if Base Station System has this kind of feature. All data rates which are used in clause 8 Performance requirement testing shall be used in verification testing. This test is performed by feeding measurement signal with known BLER to the input of the receiver. Locations of the erroneous blocks shall be randomly distributed within a frame. Erroneous blocks shall be inserted into the UL signal as shown in the following figure.

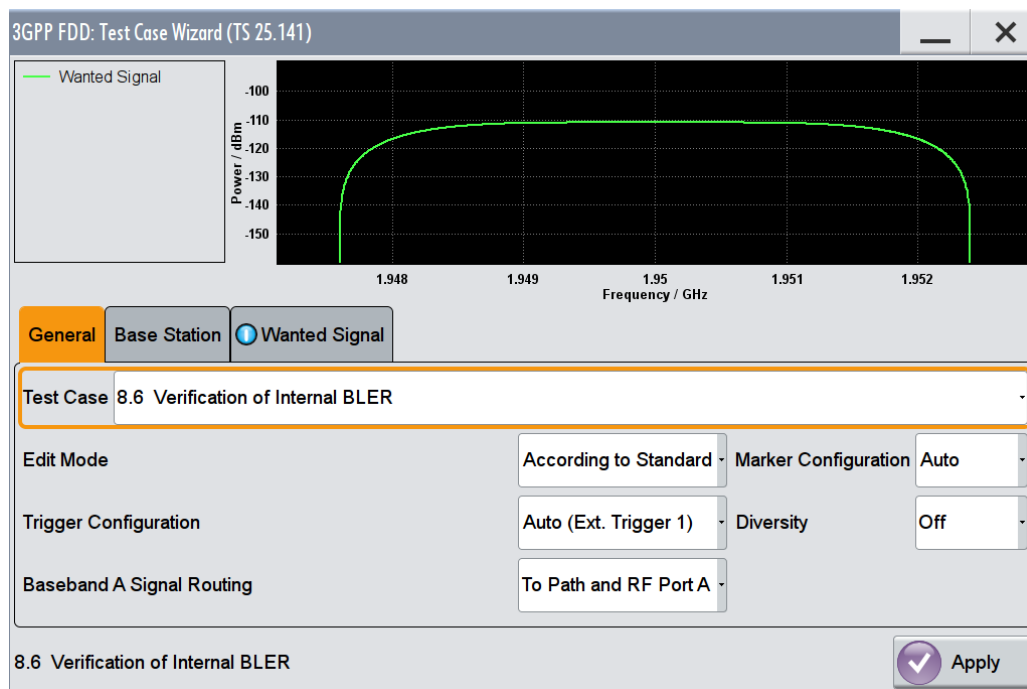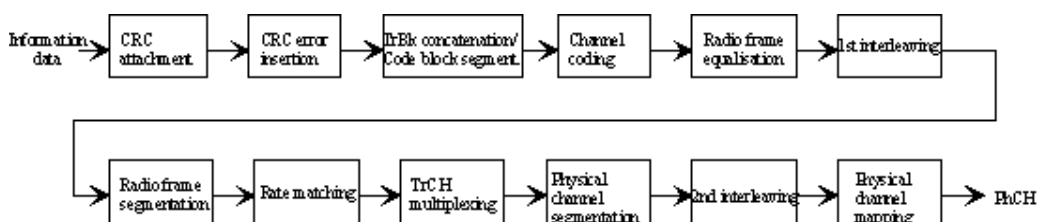

The screenshot shows the 'Base Station' tab of the '3GPP FDD: Test Case Wizard (TS 25.141)'. The 'Wanted Signal' tab is also visible. The 'Test Case' is '8.6 Verification of Internal BLER'. The 'Edit Mode' is 'According to Standard'. The 'Marker Configuration' is 'Auto'. The 'Trigger Configuration' is 'Auto (Ext. Trigger 1)'. The 'Diversity' is 'Off'. The 'Baseband A Signal Routing' is 'To Path and RF Port A'. The 'Apply' button is visible at the bottom right.

The screenshot shows the 'Wanted Signal' configuration window. It includes a 'State' toggle set to 'On', a 'Reference Measurement Channel' dropdown set to 'RMC 12.2 kbps', an 'RF Frequency' input field set to '1.950 000 000 00 GHz', a 'Power Level' dropdown set to '-111.0 dBm', and a 'Block Error Rate' input field set to '0.00'.

Besides the settings described for all receiver test, Bit Error Rate and Block Error Rate selection is possible in edit mode "User Definable". In edit mode "According to Standard" only the Block Error Rate setting is possible.

Table 7-13: UL signal levels for different data rates

Data rate	Signal level for Wide Area BS	Signal level for Medium Range BS	Signal level for Local Area BS	Unit
12,2 kbps	-111	-101	-97	dBm/3.84 MHz
64 kbps	-107	-97	-93	dBm/3.84 MHz
144 kbps	-104	-94	-90	dBm/3.84 MHz
384 kbps	-100	-90	-86	dBm/3.84 MHz

Block Error Rate - Test Case 8.6

Sets the block error rate. In edit mode "According to Standard" only values 0.00 (no block errors are inserted) and 0.01 (1 percent block errors are inserted) are available.

Remote command:

`[:SOURCE] :BB:W3GPp:TS25141:WSIGnal:DPDCh:DERRor:BLOCK:RATE`
on page 560

Bit Error Rate - Test Case 8.6

Sets the bit error rate in edit mode "User Definable".

Remote command:

`[:SOURCE] :BB:W3GPp:TS25141:WSIGnal:DPDCh:DERRor:BIT:RATE`
on page 560

7.2.3.9 Test Case 8.8.1 - RACH Preamble Detection in Static Propagation Conditions

For **non-diversity measurements**, the test case requires option K62 - Additional White Gaussian Noise (AWGN) in addition to the basic configuration.

The measurement is performed using the standard test setup for one path.

The signal generator outputs a continuous sequence of preambles (wanted signal) that is superimposed by a AWGN signal at output RF A(B). The signal is fed into the base station Rx port.

The signal generator will start signal generation at the first BS frame trigger sent to input "Trigger 1".

The measurement must be made at the three frequencies B, M and T.

For **diversity measurements**, in addition to the standard configuration, this test case requires:

- option R&S SMW-B20x
- option R&S SMW-B13T
- 2xoption R&S SMW-K62

It is performed using the standard test setup for diversity measurement.

The signal generator outputs a continuous sequence of preambles (wanted signal) that is superimposed by a AWGN signal at output RF A and output RF B. The signals are fed into the base station Rx ports.

The signal generator will start signal generation at the first received BS frame trigger.

The measurement must be made at the three frequencies B, M and T.

The following table lists the settings on the base station:

Parameter	Value(s)
Frequency	B, M and T
RMC	RACH
Scrambling code	Any

Test Purpose and Test Settings - Test Case 8.8.1

The test case verifies that a BS receiver has the capability to detect the RACH preamble that is sent by the signal generator and is superimposed by a heavy AWGN signal.

The test is passed when internally calculated Pd is equal or above the required Pd settings at the test frequencies B, M and T. Note TS 25.141 Annex C: General Rules for Statistical Testing, where test conditions in terms of test methods and test conditions are defined.

Quotation from TS 25.141:

The performance requirement of RACH for preamble detection in static propagation conditions is determined by the two parameters probability of false detection of the preamble (P_{fa}) and the probability of detection of preamble (P_d). The performance is measured by the required at probability of detection, P_d of 0.99 and 0.999. P_{fa} is defined as a conditional probability of erroneous detection of the preamble when input is only noise (+interference). P_d is defined as conditional probability of detection of the preamble when the signal is present. P_{fa} shall be 10^{-3} or less. Only one signature is used and it is known by the receiver.



The Probability of false detection of the preamble (P_{fa}) test is not supported.

3GPP FDD: Test Case Wizard (TS 25.141)

☐ Wanted Signal
☒ AWGN
☐ Fading

General Base Station ☒ Wanted Signal ☒ AWGN ☐ Fading

Test Case 8.8.1 RACH Preamble Detection in Static Propagation Conditions

Edit Mode According to Standard Marker Configuration Auto

Trigger Configuration Auto (Ext. Trigger 1) Diversity Off

Baseband A Signal Routing To Path and RF Port A

8.8.1 RACH Preamble Detection in Static Propagation Conditions ☒ Apply

General Base Station ☒ Wanted Signal ☒ AWGN ☐ Fading

Scrambling Code (hex) 0000 00

Scrambling Mode Long Scrambling Code

Power Class Wide Area BS

General Base Station ☒ Wanted Signal ☒ AWGN ☐ Fading

State Off ☒ On

RF Frequency 1.950 000 000 00 GHz Power Level -101.2 dBm

General Base Station ☒ Wanted Signal ☒ AWGN ☐ Fading

State Off ☒ On Required Pd ≥ 0.99

Power Level (within 3.84 MHz BW) -84.00 dBm Ec/N0 -17.20 dB

General Base Station ☒ Wanted Signal ☒ AWGN ☐ Fading

State Off ☐ On

Besides the settings described for all receiver test, AWGN and Fading Configuration is possible in edit mode "User Definable". In edit mode "According to Standard" only the "Required Pd" setting is possible.

AWGN State - Test Case 8.x

Enables/disables the generation of the AWGN signal.

In edit mode "According to Standard" the state is fixed to "On".

Remote command:

[:SOURce] :BB:W3GPp:TS25141:AWGN:STATE on page 546

Required Pd - Test Case 8.x

Sets the Required Probability of Detection of Preamble (Required Pd) in edit mode "According to Standard":

- ≥ 0.99
- ≥ 0.999

This figure determines the ratio E_c/N_0 according to the following table of E_c/N_0 test requirements.

Table 7-14: Preamble detection test requirements in AWGN channel

	E_c/N_0 for required Pd (0.99	E_c/N_0 for required Pd (0.999
"BS with Rx Diversity"	-20.1 dB	-19.7 dB
"BS without Rx Diversity"	-17.2 dB	-16.4 dB

Remote command:

[:SOURce] :BB:W3GPp:TS25141:AWGN:RPDetection:RATE on page 545

Power Level - Test Case 8.x

Sets the AWGN level in edit mode "User Definable".

In edit mode "According to Standard" the AWGN level is determined by the selected "Power Class" .

- "-84 dBm" for "Wide Area BS"
- "-74 dBm" for "Medium Range BS"
- "-70 dBm" for "Local Area BS"

Remote command:

[:SOURce] :BB:W3GPp:TS25141:AWGN:POWER:NOISE on page 545

E_b/N_0 - Test Case 8.x

Sets the ratio of bit energy to noise power density.

In edit mode "According to Standard" the value depends on the selected "Required Pd".

Remote command:

[:SOURce] :BB:W3GPp:TS25141:AWGN:ENRatio on page 544

Fading State - Test Case 8.x.1

Indicates the state of the Fader.

The state is fixed to "Off".

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:FSIMulator:STATe` on page 547

7.2.3.10 Test Case 8.8.2 - RACH Preamble Detection in Multipath Fading Case 3

For **non-diversity measurements**, in addition to the standard configuration, this test case requires:

- option R&S SMW-K62
- option R&S SMW-B14/K71

The measurement is performed using the standard test setup for one path.

The signal generator outputs a continuous sequence of preambles (= wanted signal) that is disturbed by an AWGN signal and multipath fading effects at output RF A(B). The signal is fed into the base station Rx port.

The signal generator will start signal generation at the first BS frame trigger sent to input "Trigger 1".

The measurement must be made at the three frequencies B, M and T. The RMC data rates are 12.2 kbps, 64 kbps, 144 kbps and 384 kbps.

For **diversity measurements**, in addition to the standard configuration, this test case requires:

- option R&S SMW-B20x
- option R&S SMW-B13T
- option R&S SMW-K62
- option R&S SMW-B14/K71

It is performed using the standard test setup for diversity measurement.

The signal generator outputs a continuous sequence of preambles (= wanted signal) that is disturbed by an AWGN signal and multipath fading effects at output RF A and output RF B. The signals are fed into the base station Rx ports.

The signal generator will start signal generation at the first received BS frame trigger.

The measurement must be made at the three frequencies B, M and T. The RMC data rates are 12.2 kbps, 64 kbps, 144 kbps and 384 kbps.


The following table lists the settings on the base station:

Parameter	Value(s)
Frequency	B, M and T
RMC	12.2 kbps, 64 kbps, 144 kbps, 384 kbps
Scrambling code	Any

Test Purpose and Test Settings - Test Case 8.8.2

The test case shall verify that a BS receiver has the capability to detect the RACH preamble that is sent by the signal generator and is superimposed by a heavy AWGN signal and disturbed by multipath fading effects.

The test is passed when internally calculated Pd is equal or above the required Pd settings at the test frequencies B, M and T. Note TS 25.141 Annex C: General Rules for Statistical Testing, where test conditions in terms of test methods and test conditions are defined.

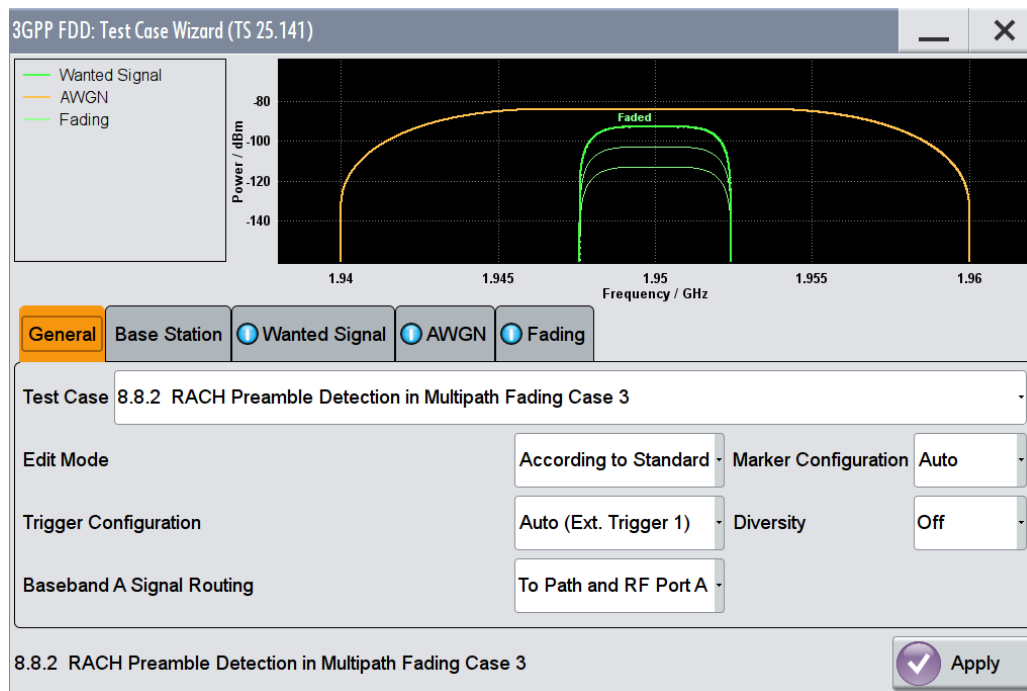

General Base Station ☒ Wanted Signal ☒ AWGN ☒ Fading

Scrambling Code (hex) 0000 00

Scrambling Mode Long Scrambling Code

Power Class Wide Area BS

General Base Station ☒ Wanted Signal ☒ AWGN ☒ Fading

State Off ☒ On

RF Frequency 1.950 000 000 GHz Power Level -92.80 dBm

General Base Station ☒ Wanted Signal ☒ AWGN ☒ Fading

State Off ☒ On Required Pd >=0.99

Power Level (within 3.84 MHz BW) -84.00 dBm Ec/N0 -8.80 dB

8.8.2 RACH Preamble Detection in Multipath Fading Case 3 ✓ Apply

This test case is identical to test case 8.8.1 except from the channel simulation that is set to "Multipath Fading Case 3" ("Fading > Standard = 3GPP Case 3 UE/BS") by default and the specific E_c/N_0 ratio requirements (see following table).

	E_c/N_0 for required Pd (0.99	E_c/N_0 for required Pd (0.999
"BS with Rx Diversity"	-14.9 dB	-12.8 dB
"BS without Rx Diversity"	-8.8 dB	-5.8 dB

Fading State - Test Case 8.x

Indicates the state of the Fader.

The state is fixed to "On". The "Fading" dialog is preset with the required settings for the test case.

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:FSIMulator:STAt` on page 547

7.2.3.11 Test Case 8.8.3 - RACH Demodulation of Message Part in Static Propagation Conditions

For **non-diversity** measurements, the test case requires option K62 - Additional White Gaussian Noise (AWGN) in addition to the basic configuration.

The measurement is performed using the standard test setup for one path.

The signal generator outputs a RACH message signal (= wanted signal) that is superimposed by a AWGN signal at output RF A(B). The signal is fed into the base station Rx port.

The signal generator will start signal generation at the first BS frame trigger sent to input "Trigger 1".

The measurement must be made at the three frequencies B, M and T. The Transport Block Sizes are 168 bits and 360 bits.

For **diversity measurements**, in addition to the standard configuration, this test case requires:

- option R&S SMW-B20x

- option R&S SMW-B13T
- 2x option R&S SMW-K62

It is performed using the standard test setup for diversity measurement.

The signal generator outputs the RACH message signal (= wanted signal) that is superimposed by a AWGN signal at output RF A and output RF B. The signals are fed into the base station Rx ports.

The signal generator will start signal generation at the first received BS frame trigger.

The measurement must be made at the three frequencies B, M and T. The Transport Block Sizes are 168 bits and 360 bits.

The following table lists the settings on the base station:

Parameter	Value(s)
Frequency	B, M and T
Transport Block Size	168 bits, 360 bits
RMC	RACH
Scrambling code	Any

Test Purpose and Test Settings - Test Case 8.8.3

The test case shall verify that a BS receiver has the capability to demodulate the RACH message sent by the signal generator but superimposed by AWGN.

The test is passed when the resulting BLER (calculated internally by the BS) does not exceed the required BLER settings. Note TS 25.141 Annex C: General Rules for Statistical Testing, where test conditions in terms of test methods and test conditions are defined.

Quotation from TS 25.141:

The performance requirement of RACH in static propagation conditions is determined by the maximum Block Error Ratio (BLER) allowed when the receiver input signal is at a specified E_b/N_0 limit. The BLER is calculated for each of the measurement channels supported by the base station.

The preamble threshold factor is chosen to fulfil the requirements on Pfa and Pd in subclauses 8.8.1 and 8.8.2. Only one signature is used and it is known by the receiver.

3GPP FDD: Test Case Wizard (TS 25.141)

☐ Wanted Signal
☐ AWGN
☐ Fading

Power / dBm

Frequency / GHz

☒ General ☐ Base Station ☒ Wanted Signal ☒ AWGN ☐ Fading

Test Case 8.8.3 Demodulation of RACH Message in Static Propagation Conditions

Edit Mode According to Standard Marker Configuration Auto

Trigger Configuration Auto (Ext. Trigger 1) Diversity Off

Baseband A Signal Routing To Path and RF Port A

8.8.3 Demodulation of RACH Message in Static Propagation Conditions ☒ Apply

☒ General ☐ Base Station ☒ Wanted Signal ☒ AWGN ☐ Fading

Scrambling Code (hex) 0000 00

Scrambling Mode Long Scrambling Code

Power Class Wide Area BS

☒ General ☐ Base Station ☒ Wanted Signal ☒ AWGN ☐ Fading

State Off ☒ On Transport Block Size 168 bits

RF Frequency 1.950 000 000 00 GHz Power Level -103.0 dBm

☒ General ☐ Base Station ☒ Wanted Signal ☒ AWGN ☐ Fading

State Off ☒ On Required BLER <0.1

Power Level (within 3.84 MHz BW) -84.00 dBm Eb/N0 7.60 dB

☒ General ☐ Base Station ☒ Wanted Signal ☒ AWGN ☐ Fading

State Off ☐ On

Besides the settings described for all receiver test, selection of "Transport Block Size" of the wanted signal and AWGN Configuration is possible in edit mode "According to Standard".

Transport Block Size - Test Case 8.8.x

Sets the Transport Block Size:

- 168 bits
- 360 bits

Remote command:

[:SOURce] :BB:W3GPp:TS25141:WSIGnal:PRACH:CCODing:TYPE on page 562

AWGN State - Test Case 8.8.3

Enables/disables the generation of the AWGN signal.

In edit mode "According to Standard" the state is fixed to "On".

Remote command:

[:SOURce] :BB:W3GPp:TS25141:AWGN:STATe on page 546

Required BLER - Test Case 8.x

Sets the required Block Error Rate in edit mode "According to Standard".

- < 0.1
- < 0.01

This figure determines the ratio E_b/N_0 according to the list of E_b/N_0 test requirements (see following table).

E_b/N_0 requirements in AWGN channel

Table 7-15: Transport Block size TB and TTI in frames: 168 bits, TTI = 20 ms / 360 bits, TTI = 20 ms

	E_b/N_0 for required BLER < 10^{-1}	E_b/N_0 for required BLER < 10^{-2}	E_b/N_0 for required BLER < 10^{-1}	E_b/N_0 for required BLER < 10^{-2}
"BS with Rx Diversity"	4.5 dB	5.4 dB	4.3 dB	5.2 dB
"BS without Rx Diversity"	7.6 dB	8.5 dB	7.3 dB	8.2 dB

Remote command:

[:SOURce] :BB:W3GPp:TS25141:AWGN:RBLock:RATE on page 545

Power Level - Test Case 8.8.3

Sets the AWGN level in edit mode "User Definable".

In edit mode "According to Standard" the AWGN level is determined by the selected "Power Class" .

"-84 dBm" for "Wide Area BS"

"-74 dBm" for "Medium Range BS"

"-70 dBm" for "Local Area BS"

Remote command:

[:SOURce] :BB:W3GPp:TS25141:AWGN:POWER:NOISe on page 545

E_b/N_0 - Test Case 8.8.3

Sets the ratio of bit energy to noise power density.

In edit mode "According to Standard" the value depends on the selected "Required BLER".

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:AWGN:ENRatio` on page 544

Fading State - Test Case 8.8.3

Indicates the state of the Fader.

The state is fixed to "Off".

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:FSIMulator:STaTe` on page 547

7.2.3.12 Test Case 8.8.4 - RACH Demodulation of Message Part in Multipath Fading Case 3

For **non-diversity measurements**, in addition to the standard configuration, this test case requires:

- option R&S SMW-K62
- option R&S SMW-B14/K71

The measurement is performed using the standard test setup for one path.

The signal generator outputs a RACH message signal (= wanted signal) that is disturbed by an AWGN signal and multipath fading effects at output RF A. The signal is fed into the base station Rx port.

The signal generator will start signal generation at the first BS frame trigger sent to input "Trigger 1".

The measurement must be made at the three frequencies B, M and T. The Transport Block Sizes are 168 bits and 360 bits.

For **diversity measurements**, in addition to the standard configuration, this test case requires:

- option R&S SMW-B20x
- option R&S SMW-B13T
- option R&S SMW-K62
- option R&S SMW-B14/K71

It is performed using the standard test setup for diversity measurement.

The signal generator outputs a RACH message signal (= wanted signal) that is disturbed by an AWGN signal and multipath fading effects at output RF A and output RF B. The signals are fed into the base station Rx ports.

The signal generator will start signal generation at the first received BS frame trigger.

The measurement must be made at the three frequencies B, M and T. The Transport Block Sizes are 168 bits and 360 bits.

Test Purpose and Test Settings - Test Case 8.8.4

The test case shall verify that a BS receiver has the capability to demodulate the RACH message sent by the signal generator but superimposed by AWGN and disturbed by multipath fading effects.

The test is passed when the resulting BLER (calculated internally by the BS) does not exceed the required BLER settings. Note TS 25.141 Annex C: General Rules for Statistical Testing, where test conditions in terms of test methods and test conditions are defined.

3GPP FDD: Test Case Wizard (TS 25.141)



Legend: Wanted Signal (green), AWGN (orange), Fading (green)

Frequency / GHz: 1.94, 1.945, 1.95, 1.955, 1.96

Power / dBm: -80, -100, -120, -140

Buttons: General, Base Station, ☒ Wanted Signal, ☒ AWGN, ☒ Fading

Test Case: 8.8.4 Demodulation of RACH Message in Multipath Fading Case 3

Edit Mode: According to Standard

Marker Configuration: Auto

Trigger Configuration: Auto (Ext. Trigger 1)

Diversity: Off

Baseband A Signal Routing: To Path and RF Port A

8.8.4 Demodulation of RACH Message in Multipath Fading Case 3 ☒ Apply

Buttons: General, Base Station, ☒ Wanted Signal, ☒ AWGN, ☐ Fading

Scrambling Code (hex): 0000 00

Scrambling Mode: Long Scrambling Code

Power Class: Wide Area BS

Buttons: General, Base Station, ☒ Wanted Signal, ☒ AWGN, ☒ Fading

State: Off ☒ On Reference Measurement Channel RMC 12.2 kbps

RF Frequency: 1.950 000 000 GHz Power Level: -99.68 dBm

The top screenshot shows the 'General' tab selected. Under 'Base Station', 'Wanted Signal' and 'AWGN' are selected. The 'Fading' option is unselected. The 'State' is 'On' for 'Required BLER' with a value of '< 0.01'. The 'Power Level (within 3.84 MHz BW)' is '-84.00 dBm' and 'Eb/N0' is '9.30 dB'.

The bottom screenshot shows the 'General' tab selected. Under 'Base Station', 'Wanted Signal' and 'AWGN' are selected. The 'Fading' option is selected. The 'State' is 'Off'.

This test case is identical to test case 8.8.3 except from the channel simulation that is set to "Multipath Fading Case 3" ("Fading > Standard > 3GPP Case 3 UE/BS") and the specific E_b/N_0 ratio requirements.

E_b/N_0 test requirements in fading case 3 channel

Transport Block size TB and TTI in frames: 168 bits, TTI = 20 ms / 360 bits, TTI = 20 ms

	E_b/N_0 for required BLER < 10^{-1}	E_b/N_0 for required BLER < 10^{-2}	E_b/N_0 for required BLER < 10^{-1}	E_b/N_0 for required BLER < 10^{-2}
"BS with Rx Diversity"	8.0 dB	9.1 dB	7.9 dB	8.9 dB
"BS without Rx Diversity"	11.7 dB	13.0 dB	11.6 dB	12.7 dB

7.2.3.13 Test Case 8.9.1 - CPCH Access Preamble and Collision Detection Preamble Detection in Static Propagation Conditions

This test case is identical to test case 8.8.1 except that the CPCH Preamble is used instead of the RACH preamble.

7.2.3.14 Test Case 8.9.2 - CPCH Access Preamble and Collision Detection Preamble Detection in Multipath Fading Case 3

This test case is identical to test case 8.8.2 except that the CPCH Preamble is used instead of the RACH preamble.

7.2.3.15 Test Case 8.9.3 - Demodulation of CPCH Message in Static Propagation Conditions

This test case is identical to test case 8.8.3 except from differing E_b/N_0 ratio requirements and the demodulation of CPCH Message instead of the RACH Message.

Test requirements in AWGN channel

Transport Block size TB and TTI in frames: 168 bits, TTI = 20 ms / 360 bits, TTI = 20 ms

	E_b/N_0 for required BLER < 10^{-1}	E_b/N_0 for required BLER < 10^{-2}	E_b/N_0 for required BLER < 10^{-1}	E_b/N_0 for required BLER < 10^{-2}
"BS with Rx Diversity"	4.5 dB	5.4 dB	4.3 dB	5.2 dB
"BS without Rx Diversity"	7.5 dB	8.4 dB	7.3 dB	8.2 dB

Transport Block Size (TB) - Test Case 8.9.3

Sets the Transport Block Size:

168 bits

360 bits

Remote command:

[:SOURce] :BB:W3GPp:TS25141:WSIGnal:PCPCh:CCODing:TYPE on page 561

7.2.3.16 Test Case 8.9.4 - Demodulation of CPCH Message in Multipath Fading Case 3

This test case is identical to test case 8.8.4 except from differing E_b/N_0 ratio requirements and the demodulation of the CPCH Message instead of the RACH Message.

Test requirements in fading case 3 channel

Transport Block size TB and TTI in frames: 168 bits, TTI = 20 ms / 360 bits, TTI = 20 ms

	E_b/N_0 for required BLER < 10^{-1}	E_b/N_0 for required BLER < 10^{-2}	E_b/N_0 for required BLER < 10^{-1}	E_b/N_0 for required BLER < 10^{-2}
"BS with Rx Diversity"	8.1 dB	9.1 dB	7.9 dB	8.7 dB
"BS without Rx Diversity"	11.4 dB	12.6 dB	11.3 dB	12.3 dB

7.3 Transmitter Tests

7.3.1 Basic Configuration

The test cases for transmitter tests require at least the following equipment layout for the signal generator:

- Digital Standard 3GPP FDD (R&S SMW-K42)

- Arbitrary Waveform Generator (R&S SMW-B10),
- Baseband Main module (R&S SMW-B13),
- Frequency option (R&S SMWB10x).

Transmitter tests always require a separate measuring equipment to perform the tests, e.g. the Vector Signal Analyzer R&S FSQ.

Test cases where the signal generator hardware equipment is not sufficient are shown in grey color but are not selectable. RF power and frequency limitations of the hardware equipment restrict the setting ranges.

7.3.2 Test Case 6.4.2 - Power Control Steps

The test case requires the basic configuration.

It can be performed using the standard test setup according to TS 25.141. A vector signal analyzer is required, e.g. the Vector Signal Analyzer R&S FSQ.


For the signal generator, in case of two-path instruments signal routing to path A is assumed.

Output RF A of the signal generator is connected to the Rx port of the base station. The Tx signal of the base station is connected to the RF input of the analyzer via an attenuator.

The signal generator will start signal generation at the first received BS frame trigger. The analyzer is triggered by a marker signal ("Marker 1") of the generator.

The signal generator provides an uplink link signal with a precisely defined TPC bit sequence. The base station responds to the TPC bits by controlling the transmitted power of the data channel which is checked by the analyzer.

The analyzer measures the base station transmit power in the code domain to verify the transmitter power control step tolerance and aggregated power control step range.

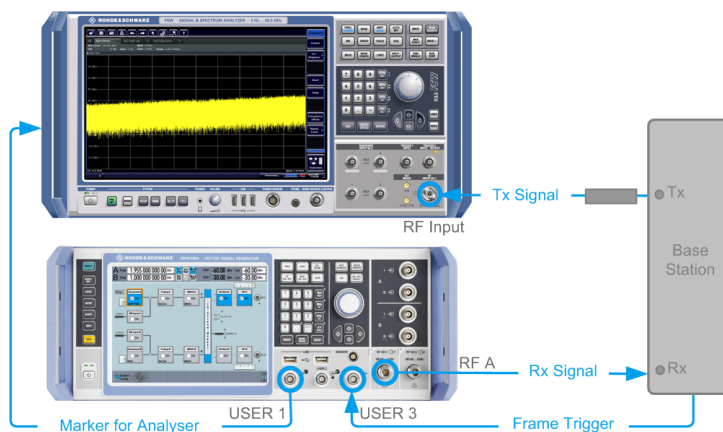

7.3.2.1 Test Purpose and Test Settings - Test Case 6.4.2


The test case verifies that a BS receiver has the capability to adjust its transmit power in response to the uplink TPC pattern. The cumulative power change as a result of ten successive (identical) TPC bits is also checked (aggregated transmit power).

The test is passed when the single or aggregated power control steps are within tolerance throughout the total dynamic range at the test frequencies B, M, and T.

Quotation from TS 25.141

The power control step is the required step change in the code domain power of a code channel in response to the corresponding power control command. The combined output power change is the required total change in the DL transmitter output power of a code channel in response to multiple consecutive power control commands corresponding to that code channel.

3GPP FDD: Test Case Wizard (TS 25.141)

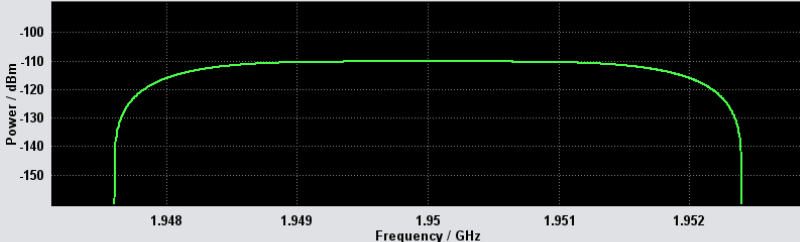

General Base Station **Wanted Signal**

Test Case: 6.4.2 Power Control Steps

Edit Mode: According to Standard Marker Configuration: Auto

Trigger Configuration: Auto (Ext. Trigger 1)

Baseband A Signal Routing: To Path and RF Port A

6.4.2 Power Control Steps ✓ Apply

General **Base Station** **Wanted Signal**

Scrambling Code (hex): 0000 00

Scrambling Mode: Long Scrambling Code

Power Class: Wide Area BS

The image displays two screenshots of the R&S SMW-K42/-K83 software interface, specifically the 'Wanted Signal' tab. The top screenshot shows the 'State' toggle set to 'On', 'RF Frequency' at 1.950 000 000 GHz, and 'Power Level' at -110.3 dBm. The bottom screenshot shows the same tab with various parameters: Slot Format DPCCH # 0, Overall Symbol Rate DPDCH 60 kps, Pow Ratio DPC/DPDCH 0.00 dB, Propagation Delay 0.00 Chips, TPC Start Pattern Max. Pow. Less N Steps, Power Up Steps 1, Power Dn Steps 1, and TPC Repeat Pattern Single Power Steps.

Wanted Signal State - Test Case 6.4.2

Enables/disables the signal generation of the wanted 3GPP signal.

In edit mode "According to Standard" the state is fixed to On.

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:WSIGnal:STAtE](#) on page 562

Wanted Signal Frequency - Test Case 6.4.2

Sets the RF frequency of the wanted signal.

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:WSIGnal:FREQuency](#) on page 561

Wanted Signal Level - Test Case 6.4.2

Sets the RF level in edit mode "User Definable".

In edit mode "According to Standard" the RF level is determined by the selected "Power Class".

It is always 10 dBm above the reference sensitivity:

- "-120.3 dB + 10 dBm" when "Wide Area BS"
- "-110.3 dB + 10 dBm" when "Medium Range BS"
- "-106.3 dB + 10 dBm" when "Local Area BS"

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:WSIGnal:POWer](#) on page 562

Slot Format DPCCH - Test Case 6.4.2

Selects the slot format.

Slot formats 0 to 5 are available for the DPCCH channel. The slot format defines the FBI mode and the TFCI status.

"Slot format 0" no FBI field / TFCI on

"Slot format 1" no FBI field / TFCI off

"Slot format 2" 1 FBI field / TFCI on

"Slot format 3" 1 FBI field / TFCI off

"Slot format 4" 2 FBI field / TFCI off

"Slot format 5" 2 FBI field / TFCI on

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:WSIGnal:DPCCh:SFOrmAt` on page 556

Overall Symbol Rate - Test Case 6.4.2

Sets the overall symbol rate of all the DPDCH channels.

The structure of the DPDCH channel table depends on this parameter. The overall symbol rate determines which DPDCHs are active, which symbol rate they have and which channelization codes they use.

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:WSIGnal:DPDCh:ORATe` on page 560

Power Ratio DPCCH to DPDCH - Test Case 6.4.2

Sets the channel power ratio of DPCCH to DPDCH.

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:WSIGnal:DCRatio` on page 556

Propagation Delay - Test Case 6.4.2

Sets an additional propagation delay besides the fixed DL-UL timing offset of 1024 chip periods.

Note: The additional propagation delay is achieved by charging the start trigger impulse with the respective delay (= entering the value as an "External Delay" in the 3GPP "Trigger /Marker" dialog).

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:WSIGnal:TRIGger[:EXTeRnal]:DELay`
on page 563

TPC Start Pattern - Test Case 6.4.2

Sets the TPC pattern for initialization of the base stations power level in edit mode "User Definable". The TPC start pattern is sent before the TPC repeat pattern.

In edit mode "According to Standard" the pattern is fixed to "Maximum Power Less n Steps".

Note: In edit mode "According to Standard", the TPC bits are read out of predefined data lists.

The TPC start pattern ensures that the base station responds reliably to the TPC bits from the generator. It sets the base station to a defined initial state for the actual recording of the measurement data. The analyzer is only triggered after the generation of the start pattern using marker 1 of the generator.

"Maximum Power Less n Steps"

A sequence of power up steps (TPC bits "1") is followed by a number of power down steps (TPC bits "0").

A sufficiently long sequence of TPC bits "1" ('power up' commands) forces the base station to maximum transmit power. By the n 'power down' commands the base station is set to a defined number of n power steps (e.g. 1 dB or 0.5 dB) below its maximum transmit power at the beginning of the measurement.

"Data List"

The TPC start pattern is taken from a user defined data list. When "Data List" is selected, a button appears for calling the "File Select" window.

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:SDATa` on page 558

`[:SOURce] :BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:SDATa:DSElect`

on page 559

TPC Power Up Steps - Test Case 6.4.2

If "TPC Start Pattern > Max. Pow. Less N Steps", sets the number of power up bits ('1') in the TPC start pattern. The total TPC start pattern length is the number of 'power up' bits plus the number of n 'power down' bits.

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:SDATa:PUSSteps`

on page 559

TPC Power Down Steps - Test Case 6.4.2

If "TPC Start Pattern > Max. Pow. Less N Steps", sets the number of power down bits ('0') in the TPC start pattern. The total TPC start pattern length is the number of 'power up' ('1') bits plus the number of n 'power down' ('0') bits.

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:SDATa:PDSTeps`

on page 559

TPC Repeat Pattern - Test Case 6.4.2

Sets the TPC pattern for verification of the base stations power control steps.

In edit mode "According to Standard" the selection is limited.

"Single Power Steps"

A 01 pattern is sent periodically for measurement of the transmitter power control step tolerance.

"Aggregated Power Steps"

A 00000000001111111111 pattern is sent periodically for measurement of the transmitter aggregated power control step range. The power of the base station is measured after 10 consecutive equal TPC bits ('1' or '0').

"(All 1) Maximum Power"

A all 1 pattern is sent continuously. The base station is forced to maximum power. This selection is only available in edit mode "User Definable"

"(All 0) Minimum Power"

A all 0 pattern is sent continuously. The base station is forced to minimum power. This selection is only available in edit mode "User Definable"

"User Defined Pattern"

The TPC repeat pattern can be input. When "User Defined Pattern" is selected, an input field appears for entering the pattern. The maximum bit pattern length is 64 bits. This selection is only available in edit mode "User Definable"

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:RDATa:PATtern`

on page 558

"Data List"

The TPC repeat pattern is taken from a data list. When "Data List" is selected, a button appears for calling the "File Select" window.

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:RDATa:DSElect`

on page 557

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:RDATa` on page 557

7.3.2.2 Carrying Out the Test Case 6.4.2 Measurement

For the preset Marker Configuration "Auto", Marker 1 starts delayed by the TPC start pattern length.

Each slot takes 0.625 ms and consists of 2560 chips. Depending on the slot format 1 or 2 TPC bits are sent for each slot.

Table 7-16: The following table lists the settings on the base station:

Parameter	Value
Frequency	B, M and T
Test Model	2
Transmit power	Any
Scrambling Code	Any

1. Set the base station to the basic state
 - a) Initialize the base station,
 - b) Set the scrambling scheme,
 - c) Set the base station to test model 2,
 - d) Set the frequency
2. Set the signal generator to the basic state
 - a) Preset the signal generator unless some settings (e.g. in terms of I/Q and RF blocks) have to be kept.
3. Set the analyzer to the basic state

- a) Set the test case wizard
 - b) Open the 3GPP FDD menu in the baseband block
 - c) Open the Test Case Wizard and select Test Case 6.4.2.
The General Settings parameters are preset according to TS 25.141
 - d) Enter scrambling code and scrambling mode according to the base station scrambling scheme.
 - e) Enter the power class of the base station under test. The RF level is automatically adjusted to the selected power class.
 - f) Enter the test frequency (e.g. M). It must be the same as the base station has been set to.
 - g) Enter the Wanted Signal parameters.
 - h) Activate the settings with the "Apply Settings" button.
The signal generator is now ready to start signal generation
4. Set the analyzer to the measurement frequency
 5. Switch on RF output
 6. Start the measurement
 - a) Send a start trigger impulse from the base station to the signal generator and to the analyzer.
Signal generation and measurement procedures are started.
 7. Calculate the result
The analyzer calculates the resulting code domain power of the BS downlink channel.


7.3.3 Test Case 6.6 - Transmit Intermodulation

The test case requires the basic configuration.

It can be performed using the standard test setup according to TS 25.141. A vector signal analyzer is required, e.g. the Vector Signal Analyzer R&S FSQ.

For the signal generator, in case of two-path instruments signal routing to path A is assumed.

RF port A is connected to the RF input of the analyzer via a circulator and an external attenuator. The Tx Signal of the base station is connected to the RF input of the analyzer via a circulator.

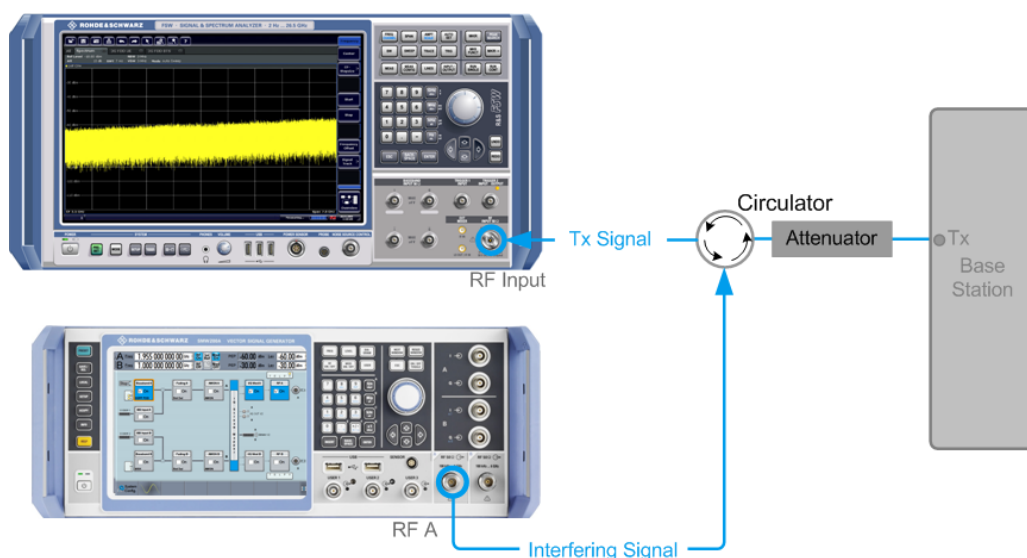

The signal generator outputs the test model interfering signal with different frequency offsets in relation to the BS carrier frequency and provides the trigger for the analyzer ("Marker 1").

7.3.3.1 Test Purpose and Test Settings - Test Case 6.6

The test case verifies that a BS transmitter has the capability to inhibit intermodulation products of non linear elements caused by the presence of an interfering signal at the adjacent frequency channels from the signal generator.

The test is passed when the transmit intermodulation level is below an upper out of band emission and spurious emission threshold at the test frequencies B, M, and T.

Quotation from TS 25.141

The transmit intermodulation performance is a measure of the capability of the transmitter to inhibit the generation of signals in its non linear elements caused by presence of the wanted signal and an interfering signal reaching the transmitter via the antenna

The transmit intermodulation level is the power of the intermodulation products when a WCDMA modulated interference signal is injected into an antenna connector at a mean power level of 30 dB lower than that of the mean power of the wanted signal. The frequency of the interference signal shall be 5 MHz, 10 MHz and 15 MHz offset from the subject signal carrier frequency, but exclude interference frequencies that are outside of the allocated frequency band for UTRA-FDD downlink specified in subclause 3.4.1.

The requirements are applicable for single carrier.

3GPP FDD: Test Case Wizard (TS 25.141)



General Base Station **Interferer**

Test Case 6.6 Transmit Intermodulation

Edit Mode According to Standard Marker Configuration Auto

Trigger Configuration Auto (Ext. Trigger 1)

Baseband A Signal Routing To Path and RF Port A

6.6 Transmit Intermodulation ✓ Apply

General **Base Station** Interferer

Scrambling Code (hex) 0000

Scrambling Mode On

RF Frequency 1.950 000 000 00 GHz

Power Level -30.00 dBm

General Base Station **Interferer**

State Off ☒ On Frequency Offset +10 MHz

Interference Model Test Model 1, 64 DPCHs Interferer Level / Wanted Signal Level -30.00 dB

BS Frequency - Test Case 6.6

Enters the RF frequency of the base station.

Note: In this test case the signal generator generates no wanted signal, but just the interfering signal.

Remote command:

[\[:SOURce\]:BB:W3GPp:TS25141:BSSignal:FREQuency](#) on page 546

BS RF Power - Test Case 6.6

Enters the RF power of the base station.

Note: In this test case the signal generator generates no wanted signal, but just the interfering signal.

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:BSSignal:POWer` on page 546

Interferer State - Test Case 6.6

Enables/disables the signal generation of the interfering 3GPP signal.

In edit mode "According to Standard" the state is fixed to "On".

Note In this test case the signal generator generates no wanted signal, but just the interfering signal .

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:IFSignal:STATe` on page 552

Interferer Mode - Test Case 6.6

Selects the interfering signal from a list of test models in accordance with TS 25.141.

All test models refer to the predefined downlink configurations. In edit mode "According to Standard" Test Model 1, 64 DPCHs is fixed.

The following test models are available for selection in edit mode "User Definable":

- Test Model 1; 64 DPCHs
- Test Model 1; 16 Channels
- Test Model 1; 32 Channels
- Test Model 2
- Test Model 3; 16 Channels
- Test Model 3; 32 Channels
- Test Model 4
- Test Model 5; 38 Channels
- Test Model 5; 28 Channels
- Test Model 5; 8 Channels

Remote-control command: TM164

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:IFSignal:SETTing:TMODeI:BSTation`
on page 552

Frequency Offset - Test Case 6.6

Enters the frequency offset of the interfering signal versus the wanted signal.

In edit mode "According to Standard" the choice is limited to values between +/- 15 MHz in 5 MHz steps:

Remote-control command: -15 MHz

Remote command:

`[:SOURce] :BB:W3GPp:TS25141:IFSignal:FOFFset` on page 550

Interferer Level to Signal Level - Test Case 6.6

Enters the ratio of interfering signal level versus wanted signal level.

In edit mode "According to Standard" the value is fixed to - 30 dB:

Remote-control command: -30

Remote command:

[:SOURce] :BB:W3GPP:TS25141:IFSignal:CNRatio on page 548

7.3.3.2 Carrying Out a Test Case 6.6 Measurement

The signal generator outputs the test model interfering signal.

Table 7-17: The following table lists the settings on the base station:

Parameter	Value
Frequency	B, M and T
Test Model	1
Transmit power	Maximum
Scrambling Code	any

1. Set the base station to the basic state
 - a) Initialize the base station,
 - b) Set the scrambling scheme,
 - c) Set the base station to test model 1,
 - d) Set maximum transmit power,
 - e) Set the frequency
2. Set the signal generator to the basic state
 - a) Preset the signal generator unless some settings (e.g. in terms of I/Q and RF blocks) have to be kept.
3. Set the analyzer to the basic state
4. Set the test case wizard
 - a) Open the 3GPP FDD menu in the baseband block
 - b) Open the Test Case Wizard and select Test Case 6.6.
The "General Settings" parameters are preset according to TS 25.141
 - c) Enter scrambling code and scrambling mode according to the base station scrambling scheme.
 - d) Enter the power class of the base station under test. The RF level is automatically adjusted to the selected power class.
 - e) Enter the test frequency (e.g. M). It must be the same as the base station has been set to.
 - f) Enter the Interfering Signal parameters.
 - g) Activate the settings with the "Apply Settings" button.
The signal generator is now ready to start signal generation
5. Set the analyzer to the measurement frequency
6. Switch on RF output
7. Start the measurement

- a) Send a start trigger impulse from the base station to the signal generator and to the analyzer.
Signal generation and measurement procedures are started.
8. Calculate the result
The analyzer calculates the out of band emission and the spurious emission.

8 Remote-Control Commands

The following commands are required to perform signal generation with the 3GPP FDD options in a remote environment. We assume that the R&S SMW has already been set up for remote operation in a network as described in the R&S SMW documentation. Knowledge about the remote control operation and the SCPI command syntax are assumed.



Conventions used in SCPI command descriptions

For a description of the conventions used in the remote command descriptions, see section "Remote Control Commands" in the R&S SMW user manual.

Common Suffixes

The following common suffixes are used in remote commands:

Suffix	Value range	Description
ENTity<ch>	1 .. 4	entity in a multiple entity configuration with separate baseband sources ENTity3 4 require option R&S SMW-K76
SOURce<hw>	[1] 4	available baseband signals only SOURce1 possible, if the keyword ENTity is used
OUTPut<ch>	1 .. 3	available markers
BSTation<st>	1 .. 4	Base station If the suffix is omitted, BS1 is selected.
CHANnel<ch>	0 .. 138	channel If the suffix is omitted, Channel1 is selected.
MSTation<st>	1 .. 4	user equipment. If the suffix is omitted, MS1 is selected.



Using SCPI command aliases for advanced mode with multiple entities

You can address multiple entities configurations by using the SCPI commands starting with the keyword `SOURce` or the alias commands starting with the keyword `ENTity`.

Note that the meaning of the keyword `SOURce<hw>` changes in the second case.

For details, see section "SCPI Command Aliases for Advanced Mode with Multiple Entities" in the R&S SMW user manual.

The commands in the `SOURce:BB:W3GPp` subsystem are described in several sections, separated into general remote commands, commands for base station settings and commands for user equipment settings.

This subsystem contains commands for the primary and general settings of the 3GPP FDD standard. These settings concern activation and deactivation of the standard, set-

ting the transmission direction, filter, clock, trigger and clipping settings, defining the chip rate and the sequence length, as well as the preset and power adjust setting.

The commands for setting the base station and the user equipment, the enhanced channels of the base and user equipment, as well as the commands for selecting the test models and the test setups, are described in separate sections. The commands are divided up in this way to make the extremely comprehensive `SOURce:BB:W3GPp` subsystem clearer.

The following commands specific to the 3GPP FDD options are described here:

• General Commands.....	349
• Filter/Clipping Settings.....	355
• Trigger Settings.....	359
• Marker Settings.....	366
• Clock Settings.....	369
• Test Models and Predefined Settings.....	370
• Setting Base Stations.....	375
• Enhanced Channels of Base Station 1.....	423
• User Equipment Settings.....	444
• Enhanced Channels of the User Equipment.....	529
• Setting up Test Cases according to TS 25.141.....	542

8.1 General Commands

<code>[SOURce<hw>]:BB:W3GPp:PRESet</code>	349
<code>[SOURce<hw>]:BB:W3GPp:SETTing:CATalog?</code>	350
<code>[SOURce<hw>]:BB:W3GPp:SETTing:DELeTe</code>	350
<code>[SOURce<hw>]:BB:W3GPp:SETTing:LOAD</code>	350
<code>[SOURce<hw>]:BB:W3GPp:SETTing:STORe</code>	351
<code>[SOURce<hw>]:BB:W3GPp:SLENGth</code>	351
<code>[SOURce<hw>]:BB:W3GPp:STATe</code>	351
<code>[SOURce<hw>]:BB:W3GPp:WAVEform:CREate</code>	352
<code>[SOURce]:BB:W3GPp:GPP3:VERSion?</code>	352
<code>[SOURce<hw>]:BB:W3GPp:BSTation:PRESet</code>	352
<code>[SOURce<hw>]:BB:W3GPp:COPY:COFFset</code>	352
<code>[SOURce<hw>]:BB:W3GPp:COPY:DESTination</code>	353
<code>[SOURce<hw>]:BB:W3GPp:COPY:EXECute</code>	353
<code>[SOURce<hw>]:BB:W3GPp:COPY:SOURce</code>	354
<code>[SOURce<hw>]:BB:W3GPp:LINK</code>	354
<code>[SOURce<hw>]:BB:W3GPp:POWer:ADJust</code>	354
<code>[SOURce<hw>]:BB:W3GPp:POWer[:TOTal]?</code>	355

`[SOURce<hw>]:BB:W3GPp:PRESet`

Sets the parameters of the digital standard to their default values (*RST values specified for the commands).

Not affected is the state set with the command `SOURce<hw>:BB:W3GPp:STATe`

Example: SOURce1:BB:W3GPp:PRESet

Usage: Event

Manual operation: See ["Set to default"](#) on page 55

[SOURce<hw>]:BB:W3GPp:SETting:CATalog?

This command reads out the files with 3GPP FDD settings in the default directory. The default directory is set using command `MMEM:CDIRectory`. Only files with the file extension `*.3g` will be listed.

Return values:

<Catalog> string

Example: `MMEM:CDIR '/var/user/temp/3gpp`
sets the default directory.
`BB:W3GP:SETT:CAT?`
reads out all the files with 3GPP FDD settings in the default directory.
Response: UPLINK, DOWNLINK
the files UPLINK and DOWNLINK are available.

Usage: Query only

Manual operation: See ["Save/Recall"](#) on page 55

[SOURce<hw>]:BB:W3GPp:SETting:DELeTe <Filename>

This command deletes the selected file with 3GPP FDD settings. The directory is set using command `MMEM:CDIRectory`. A path can also be specified, in which case the files in the specified directory are read. The file extension may be omitted. Only files with the file extension `*.3g` will be deleted.

Setting parameters:

<Filename> <file_name>

Example: `BB:W3GP:SETT:DEL 'UPLINK'`
deletes file UPLINK.

Usage: Setting only

Manual operation: See ["Save/Recall"](#) on page 55

[SOURce<hw>]:BB:W3GPp:SETting:LOAD <Filename>

This command loads the selected file with 3GPP FDD settings. The directory is set using command `MMEM:CDIRectory`. A path can also be specified, in which case the files in the specified directory are read. The file extension may be omitted. Only files with the file extension `*.3g` will be loaded.

Setting parameters:

<Filename> <file_name>

Example: BB:W3GP:SETT:LOAD 'UPLINK'
loads file UPLINK.

Usage: Setting only

Manual operation: See ["Save/Recall"](#) on page 55

[:SOURce<hw>]:BB:W3GPp:SETTing:STORe <Filename>

This command stores the current 3GPP FDD settings into the selected file. The directory is set using command `MMEM:CDIRectory`. A path can also be specified, in which case the files in the specified directory are read. Only the file name has to be entered. 3GPP FDD settings are stored as files with the specific file extensions *.3g.

Setting parameters:

<Filename> string

Example: BB:W3GP:SETT:STOR 'UPLINK'
stores the current 3GPP FDD settings into file UPLINK.

Usage: Setting only

Manual operation: See ["Save/Recall"](#) on page 55

[:SOURce<hw>]:BB:W3GPp:SLENgth <SLength>

Defines the sequence length of the arbitrary waveform component of the 3GPP signal in the number of frames. This component is calculated in advance and output in the arbitrary waveform generator. It is added to the realtime signal components (Enhanced Channels).

When working in Advanced Mode (`W3GP:BST1:CHAN:HSDP:HSET:AMOD ON`), it is recommended to adjust the current ARB sequence length to the suggested one.

Parameters:

<SLength> integer

Range: 1 to Max. No. of Frames = Arbitrary waveform
memory size/(3.84 Mcps x 10 ms).

*RST: 1

Example: BB:W3GP:SLEN 10
sets the sequence length to 10 frames.

Manual operation: See ["Current ARB sequence length"](#) on page 105

[:SOURce<hw>]:BB:W3GPp:STATe <State>

Activates the standard and deactivates all the other digital standards and digital modulation modes in the same path.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: 0

Example: SOURce1:BB:W3GPp:STATe ON

Manual operation: See ["State"](#) on page 54

[SOURce<hw>]:BB:W3GPp:WAVEform:CREate <Filename>

This command creates a waveform using the current settings of the 3GPP FDD menu. The file name is entered with the command. The file is stored with the predefined file extension *.wv. The file name and the directory it is stored in are user-definable.

Setting parameters:

<Filename> <file_name>

Example: MMEM:CDIR '/var/user/temp/waveform'
sets the default directory to /var/user/temp/waveform.
BB:W3GP:WAV:CRE 'gpp3_bs'
creates the waveform file gpp3_bs.wv in the default directory.

Usage: Setting only

Manual operation: See ["Generate Waveform"](#) on page 55

[SOURce]:BB:W3GPp:GPP3:VERSion?

The command queries the version of the 3GPP standard underlying the definitions.

Return values:

<Version> string

Example: BB:W3GP:GPP3:VERS?
queries the 3GPP version.

Usage: Query only

Manual operation: See ["3GPP Version"](#) on page 56

[SOURce<hw>]:BB:W3GPp:BSTation:PRESet

The command produces a standardized default for all the base stations. The settings correspond to the *RST values specified for the commands.

All base station settings are preset.

Example: BB:W3GP:BST:PRESet
resets all the base station settings to default values.

Usage: Event

Manual operation: See ["Reset all Base Stations"](#) on page 67

[SOURce<hw>]:BB:W3GPp:COPY:COFFset <COffset>

Sets the offset for the channelization code in the destination base station.

Parameters:

<COffset> integer
 Range: 0 to 511
 *RST: 0

Example:

BB:W3GP:COPY:COFF 10
 the channelization code is shifted by 10 when the source base station is copied to the destination base station.

Manual operation: See ["Copy Basestation/Copy User Equipment..."](#) on page 68

[:SOURce<hw>]:BB:W3GPp:COPY:DESTination <Destination>

The command selects the station to which data is to be copied. Whether the data is copied to a base station or a user equipment depends on which transmission direction is selected (command W3GPp:LINK UP | DOWN).

Parameters:

<Destination> 1 | 2 | 3 | 4
 Range: 1 to 4
 *RST: 2

Example:

BB:W3GP:LINK DOWN
 selects the downlink transmit direction (base station to user equipment).
 BB:W3GP:COPY:SOUR 1
 selects base station 1 as the source.
 BB:W3GP:COPY:DEST 4
 selects base station 4 as the destination.
 BB:W3GP:COPY:EXEC
 starts copying the parameter set of base station 1 to base station 4.

Manual operation: See ["Copy Basestation/Copy User Equipment..."](#) on page 68

[:SOURce<hw>]:BB:W3GPp:COPY:EXECute

The command starts the copy process. The dataset of the source station is copied to the destination station. Whether the data is copied to a base station or a user equipment depends on which transmission direction is selected (command W3GPp:LINK UP | DOWN).

Example:

BB:W3GP:COPY:EXEC
 starts copying the parameter set of the selected source station to the selected destination station.

Usage: Event

Manual operation: See ["Copy Basestation/Copy User Equipment..."](#) on page 68

[[:SOURce<hw>]:BB:W3GPp:COPY:SOURce <Source>

The command selects the station that has data to be copied. Whether the station copied is a base or user equipment depends on which transmission direction is selected (command `W3GPp:LINK UP | DOWN`).

Parameters:

<Source> 1 | 2 | 3 | 4
 Range: 1 to 4
 *RST: 1

Example:

`BB:W3GP:LINK UP`
 selects the uplink transmit direction (user equipment to base station).
`BB:W3GP:COPY:SOUR 1`
 selects user equipment 1 as the source.
`BB:W3GP:COPY:DEST 4`
 selects user equipment 4 as the destination.
`BB:W3GP:COPY:EXEC`
 starts copying the parameter set of user equipment 1 to user equipment 4.

Manual operation: See "[Copy Basestation/Copy User Equipment...](#)" on page 68

[[:SOURce<hw>]:BB:W3GPp:LINK <Link>

The command defines the transmission direction. The signal either corresponds to that of a base station (`FORWARD | DOWN`) or that of a user equipment (`REVERSE | UP`).

Parameters:

<Link> DOWN | UP | FORWARD | REVERSE
 *RST: FORWARD|DOWN

Example:

`BB:W3GP:LINK DOWN`
 the transmission direction selected is base station to user equipment. The signal corresponds to that of a base station.

Manual operation: See "[Link Direction](#)" on page 56

[[:SOURce<hw>]:BB:W3GPp:POWER:ADJust

The command sets the power of the active channels in such a way that the total power of the active channels is 0 dB. This will not change the power ratio among the individual channels.

Example:

`BB:W3GP:POW:ADJ`
 the total power of the active channels is set to 0 dB, the power ratio among the individual channels is unchanged.

Usage: Event

Manual operation: See "[Adjust Total Power to 0dB](#)" on page 69

[[:SOURce<hw>]:BB:W3GPp:POWer[:TOTal]]?

The command queries the total power of the active channels. After "Power Adjust", this power corresponds to 0 dB.

Return values:

<Total> float

Example:

BB:W3GP:POW?

queries the total power of the active channels.

Response: -22.5

the total power is -25 dB.

Usage: Query only

Manual operation: See "Total Power" on page 69

8.2 Filter/Clipping Settings

[[:SOURce<hw>]:BB:W3GPp:CLIPping:LEVel.....	355
[[:SOURce<hw>]:BB:W3GPp:CLIPping:MODE.....	356
[[:SOURce<hw>]:BB:W3GPp:CLIPping:STATe.....	356
[[:SOURce<hw>]:BB:W3GPp:CRATe?.....	356
[[:SOURce<hw>]:BB:W3GPp:CRATe:VARiation.....	357
[[:SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:APCO25.....	357
[[:SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:COSine.....	357
[[:SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:GAUSs.....	358
[[:SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:LPASs.....	358
[[:SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:LPASSEVM.....	358
[[:SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:RCOSine.....	358
[[:SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:SPHase.....	359
[[:SOURce<hw>]:BB:W3GPp:FILTer:TYPE.....	359

[[:SOURce<hw>]:BB:W3GPp:CLIPping:LEVel <Level>

The command sets the limit for level clipping (Clipping). This value indicates at what point the signal is clipped. It is specified as a percentage, relative to the highest level. 100% indicates that clipping does not take place.

Level clipping is activated with the command SOUR:BB:W3GP:CLIP:STAT ON

Parameters:

<Level> integer
 Range: 1 to 100
 *RST: 100

Example:

BB:W3GP:CLIP:LEV 80PCT

sets the limit for level clipping to 80% of the maximum level.

BB:W3GP:CLIP:STAT ON

activates level clipping.

Manual operation: See "Clipping Level" on page 260

[:SOURce<hw>]:BB:W3GPp:CLIPping:MODE <Mode>

The command sets the method for level clipping (Clipping).

Parameters:

<Mode> VECTor | SCALar

VECTor

The reference level is the amplitude $|i+jq|$

SCALar

The reference level is the absolute maximum of the I and Q values.

*RST: VECTor

Example:

BB:W3GP:CLIP:MODE SCAL

selects the absolute maximum of all the I and Q values as the reference level.

BB:W3GP:CLIP:LEV 80PCT

sets the limit for level clipping to 80% of this maximum level.

BB:W3GP:CLIP:STAT ON

activates level clipping.

Manual operation: See ["Clipping Mode"](#) on page 260

[:SOURce<hw>]:BB:W3GPp:CLIPping:STATe <State>

The command activates level clipping (Clipping). The value is defined with the command BB:W3GPp:CLIPping:LEVel, the mode of calculation with the command BB:W3GPp:CLIPping:MODE.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: 0

Example:

BB:W3GP:CLIP:STAT ON

activates level clipping.

Manual operation: See ["Clipping State"](#) on page 259

[:SOURce<hw>]:BB:W3GPp:CRATe?

The command queries the set system chip rate. The output chip rate can be set with the command SOUR:BB:W3GP:CRAT:VAR.

Return values:

<CRate> R3M8

*RST: R3M8

Example:

BB:W3GP:CRAT?

queries the system chip rate.

Response: R3M8

the system chip rate is 3.8 Mcps.

Usage: Query only

Manual operation: See ["Chip Rate"](#) on page 56

[[:SOURce<hw>]:BB:W3GPp:CRATe:VARiation <Variation>

Sets the output chip rate.

The chip rate entry changes the output clock and the modulation bandwidth, as well as the synchronization signals that are output. It does not affect the calculated chip sequence.

Parameters:

<Variation> float
 Range: 400 to 5E6
 Increment: 0.001
 *RST: 3.84 MCps

Example: BB:W3GP:CRAT:VAR 4086001
 sets the chip rate to 4.08 Mcps.

Manual operation: See ["Chip Rate Variation"](#) on page 258

[[:SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:APCO25 <Apco25>

The command sets the roll-off factor for filter type APCO25.

Parameters:

<Apco25> float
 Range: 0.05 to 0.99
 Increment: 0.01
 *RST: 0.2

Example: BB:W3GP:FILT:PAR:APCO25 0.2
 sets the roll-off factor to 0.2 for filter type APCO25.

Manual operation: See ["Roll Off Factor or BxT"](#) on page 258

[[:SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:COSSine <Cosine>

The command sets the roll-off factor for the Cosine filter type.

Parameters:

<Cosine> float
 Range: 0 to 1
 Increment: 0.01
 *RST: 0.35

Example: BB:W3GP:FILT:PAR:COSS 0.35
 sets the roll-off factor to 0.35 for filter type Cosine.

Manual operation: See ["Roll Off Factor or BxT"](#) on page 258

[[:SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:GAUSs <Gauss>

The command sets the roll-off factor for the Gauss filter type.

Parameters:

<Gauss> float
 Range: 0.15 to 2.5
 Increment: 0.01
 *RST: 0.5

Example: BB:W3GP:FILT:PAR:GAUS 0.5
 sets B x T to 0.5 for the Gauss filter type.

Manual operation: See ["Roll Off Factor or BxT"](#) on page 258

[[:SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:LPASs <LPass>

Sets the cut off frequency factor for the Lowpass (ACP opt.) filter type. The minimum/maximum values depend on the current symbol rate:

Parameters:

<LPass> float
 Range: 0.05 to 2
 Increment: 0.01
 *RST: 0.5

Example: BB:W3GP:FILT:PAR:LPAS 0.5
 the cut of frequency factor is set to 0.5.

Manual operation: See ["Cut Off Frequency Factor"](#) on page 258

[[:SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:LPASSEVM <LPassEvm>

Sets the cut off frequency factor for the Lowpass (EVM opt.) filter type.

Parameters:

<LPassEvm> float
 Range: 0.05 to 2
 Increment: 0.01
 *RST: 0.5

Example: BB:W3GP:FILT:PAR:LPASSEVM 0.5
 the cut of frequency factor is set to 0.5.

Manual operation: See ["Cut Off Frequency Factor"](#) on page 258

[[:SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:RCOSine <RCosine>

The command sets the roll-off factor for the Root Cosine filter type.

Parameters:

<RCosine> float
 Range: 0 to 1.0
 Increment: 0.01
 *RST: 0.22

Example:

BB:W3GP:FILT:PAR:RCOS 0.22
 sets the roll-off factor to 0.22 for filter type Root Cosine.

Manual operation: See ["Roll Off Factor or BxT"](#) on page 258

[:SOURce<hw>]:BB:W3GPp:FILT:PAR:SPHase <SPHase>

The command sets B x T for the Split Phase filter type.

Parameters:

<SPHase> float
 Range: 0.15 to 2.5
 Increment: 0.01
 *RST: 2

Example:

BB:W3GP:FILT:PAR:SPH 0.5
 sets B x T to 0.5 for the Split Phase filter type.

Manual operation: See ["Roll Off Factor or BxT"](#) on page 258

[:SOURce<hw>]:BB:W3GPp:FILT:TYPE <Type>

The command selects the filter type.

Parameters:

<Type> RCOSine | COSine | GAUSSs | LGAuss | CONE | COF705 |
 COEQUALizer | COFEQUALizer | C2K3x | APCO25 | SPHase |
 RECTangle | LPASs | DIRac | ENPShape | EWPSHape |
 LPASSEVM | PGAuss
 *RST: RCOSine

Example:

BB:W3GP:FILT:TYPE COS
 sets the filter type COSine.

Manual operation: See ["Filter"](#) on page 258

8.3 Trigger Settings

This section lists the remote control commands, necessary to configure the trigger.

[:SOURce<hw>]:BB:W3GPp:TRIGger:ARM:EXECute	360
[:SOURce<hw>]:BB:W3GPp:TRIGger:EXECute	360
[:SOURce<hw>]:BB:W3GPp:TRIGger:EXTeRnal:SYNChronize:OUTPut	360
[:SOURce<hw>]:BB:W3GPp:TRIGger:OBASeband:DELay	361
[:SOURce<hw>]:BB:W3GPp:TRIGger:OBASeband:INHibit	361

<code>[SOURce<hw>]:BB:W3GPp:TRIGger:RMODE?</code>	362
<code>[SOURce<hw>]:BB:W3GPp:TRIGger:SLENGth</code>	362
<code>[SOURce<hw>]:BB:W3GPp:TRIGger:SLUNit</code>	363
<code>[SOURce<hw>]:BB:W3GPp:TRIGger:SOURce</code>	363
<code>[SOURce<hw>]:BB:W3GPp:TRIGger[:EXTernal]:DELay</code>	364
<code>[SOURce<hw>]:BB:W3GPp:TRIGger[:EXTernal]:INHibit</code>	365
<code>[SOURce<hw>]:BB:W3GPp[:TRIGger]:SEQuence</code>	365

`[SOURce<hw>]:BB:W3GPp:TRIGger:ARM:EXECute`

The command stops signal generation for trigger modes Armed_Auto and Armed_Retrigger. A subsequent internal or external trigger event restart signal generation.

Example:

```
BB:W3GP:TRIG:SOUR INT
sets internal triggering.
BB:W3GP:TRIG:SEQ ARET
sets Armed_Retrigger mode, i.e. every trigger event causes signal
generation to restart.
BB:W3GP:TRIG:EXEC
executes a trigger, signal generation is started.
BB:W3GP:TRIG:ARM:EXEC
signal generation is stopped.
BB:W3GP:TRIG:EXEC
executes a trigger, signal generation is started again.
```

Usage: Event

Manual operation: See "Arm" on page 59

`[SOURce<hw>]:BB:W3GPp:TRIGger:EXECute`

The command executes a trigger. The internal trigger source must be selected using the command `BB:W3GP:TRIG:SOUR INT` and a trigger mode other than `AUTO` must be selected using the command `:BB:W3GP:TRIG:SEQ`.

Example:

```
BB:W3GP:TRIG:SOUR INT
sets internal triggering.
BB:W3GP:TRIG:SEQ RETR
sets Retrigger mode, i.e. every trigger event causes signal gen-
eration to restart.
BB:W3GP:TRIG:EXEC
executes a trigger.
```

Usage: Event

Manual operation: See "Execute Trigger" on page 59

`[SOURce<hw>]:BB:W3GPp:TRIGger:EXTernal:SYNChronize:OUTPut <Output>`

Enables/disables output of the signal synchronous to the external trigger event.

Parameters:

<Output> 0 | 1 | OFF | ON
 *RST: 1

Example:

BB:W3GPp:TRIG:SOUR EXT
 sets external triggering.
 BB:W3GPp:TRIG:EXT:SYNC:OUTP ON
 enables synchronous output to external trigger

Manual operation: See ["Sync. Output to External Trigger"](#) on page 59

[[:SOURce<hw>]:BB:W3GPp:TRIGger:OBASeband:DELay <Delay>

Specifies the trigger delay (expressed as a number of samples) for triggering by the trigger signal from the second path.

Parameters:

<Delay> float
 Range: 0 to 16777215
 Increment: 0.01
 *RST: 0

Example:

BB:W3GP:TRIG:SOUR OBAS
 sets for path A the internal trigger executed by the trigger signal from the second path (path B).
 BB:W3GP:TRIG:OBAS:DEL 50
 sets a delay of 50 symbols for the trigger.

Manual operation: See ["Trigger Delay"](#) on page 61

[[:SOURce<hw>]:BB:W3GPp:TRIGger:OBASeband:INHibit <Inhibit>

Specifies the number of chips by which a restart is to be inhibited following a trigger event. This command applies only for triggering by the second path (two-path instruments only).

Parameters:

<Inhibit> integer
 Range: 0 to 67108863
 *RST: 0

Example:

BB:W3GP:TRIG:SOUR OBAS
 sets for path A the internal trigger executed by the trigger signal from the second path (path B).
 BB:W3GP:TRIG:INH 200
 sets a restart inhibit for 200 chips following a trigger event.

Manual operation: See ["External Trigger Inhibit"](#) on page 60

[:SOURce<hw>]:BB:W3GPp:TRIGger:RMODe?

The command queries the current status of signal generation for all trigger modes with 3GPP FDD modulation on.

Return values:

<RMode>

STOP | RUN

STOP

the signal is not generated. A trigger event did not occur in the triggered modes, or signal generation was stopped by the command :BB:W3GP:TRIG:ARM:EXECute (armed trigger modes only).

RUN

the signal is generated. A trigger event occurred in the triggered mode.

*RST: STOP

Example:

BB:W3GP:TRIG:SOUR EXT

sets external triggering.

BB:W3GP:TRIG:MODE ARET

selects the Armed_Retrigger mode.

BB:W3GP:TRIG:RMOD?

queries the current status of signal generation.

Response: RUN

the signal is generated, an external trigger was executed.

Usage:

Query only

Manual operation: See ["Running/Stopped"](#) on page 58

[:SOURce<hw>]:BB:W3GPp:TRIGger:SEnGth <SLength>

Defines the length of the signal sequence to be output in the Single trigger mode.

Parameters:

<SLength>

integer

Range: 1 to 4293120000

*RST: 1

Example:

SOURce1:BB:W3GPp:TRIGger:SEquence SINGLE

sets trigger mode Single.

SOURce1:BB:W3GPp:TRIGger:SLUNit CHIP

sets unit chips for the entry of sequence length.

SOURce1:BB:W3GPp:TRIGger:SEnGth 200

sets a sequence length of 200 chips. The first 200 chips of the current frame will be output after the next trigger event.

Manual operation: See ["Trigger Signal Duration"](#) on page 58

[:SOURce<hw>]:BB:W3GPp:TRIGger:SLUnit <SLunit>

The command defines the unit for the entry of the length of the signal sequence (SOUR:BB:W3GPp:TRIG:SLen) to be output in the Single trigger mode (SOUR:BB:W3GPp:SEQ SING).

Parameters:

<SLunit> CHIP | FRAMe | SLOt | SEQuence
 *RST: SEQuence

Example:

BB:W3GP:SEQ SING
 sets trigger mode Single.
 BB:W3GP:TRIG:SLUN FRAM
 sets unit frames for the entry of sequence length.
 BB:W3GP:TRIG:SLen 2
 sets a sequence length of 2 frames. The current frame will be output twice after the next trigger event.

Manual operation: See ["Signal Duration Unit"](#) on page 58

[:SOURce<hw>]:BB:W3GPp:TRIGger:SOURce <Source>

Selects the trigger signal source and determines the way the triggering is executed. Provided are internal triggering by means of a command, external trigger signal via one of the provided local or global connectors and triggering by a signal from the other paths.

Parameters:

<Source>

INTB | INTernal | OBASeband | EGT1 | EGT2 | EGC1 | EGC2 |
ELTRigger | INTA | ELClock | BEXternal | EXternal**INTernal**

Internal

INTA | INTB

Internal trigger from the other baseband

EGT1 | EGT2

External global trigger

EGC1 | EGC2

External global clock

ELTRigger

External local trigger

ELClock

External local clock

OBASeband|BEXternal|EXternal

Provided only for backward compatibility with other R&S signal generators.

The R&S SMW accepts these values und maps them automatically as follow:

EXternal = EGT1, BEXternal = EGT2, OBASeband = INTA or INTB (depending on the current baseband)

*RST: INTernal

Example:BB:W3GP:TRIG:SOUR INT
selects an internal trigger source**Manual operation:** See ["Trigger Source"](#) on page 59**[[:SOURce<hw>]:BB:W3GPp:TRIGger[:EXTERNAL]:DELay <Delay>**

Sets the trigger delay.

Parameters:

<Delay>

float

Range: 0 to 16777215

Increment: 0.01

*RST: 0

Default unit: samples

Example:

BB:W3GP:TRIG:SOUR EXT

sets an external trigger.

BB:W3GP:TRIG:EXT:DEL 50

sets a delay of 50 symbols for the trigger.

Manual operation: See ["Trigger Delay"](#) on page 61

[[:SOURce<hw>]:BB:W3GPp:TRIGger[:EXTernal]:INHibit <Inhibit>

Specifies the number of samples by which a restart is to be inhibited following an external trigger event.

Parameters:

<Inhibit> integer
 Range: 0 to 21.47*chipRate
 *RST: 0

Example:

BB:W3GP:TRIG:SOUR EXT
 selects an external trigger.
 BB:W3GP:TRIG:EXT:INH 200
 sets a restart inhibit for 200 samples following a trigger event.

Manual operation: See ["External Trigger Inhibit"](#) on page 60

[[:SOURce<hw>]:BB:W3GPp:TRIGger]:SEQuence <Sequence>

The command selects the trigger mode.

Parameters:

<Sequence> AUTO | RETRigger | AAUTo | ARETrigger | SINGLE

AUTO

The modulation signal is generated continuously.

RETRigger

The modulation signal is generated continuously. A trigger event (internal or external) causes a restart.

AAUTo

The modulation signal is generated only when a trigger event occurs. After the trigger event the signal is generated continuously. Signal generation is stopped with command SOUR:BB:W3GP:TRIG:ARM:EXEC and started again when a trigger event occurs.

ARETrigger

The modulation signal is generated only when a trigger event occurs. The device automatically toggles to RETRIG mode. Every subsequent trigger event causes a restart. Signal generation is stopped with command SOUR:BB:W3GP:TRIG:ARM:EXEC and started again when a trigger event occurs.

SINGLE

The modulation signal is generated only when a trigger event occurs. Then the signal is generated once to the length specified with command SOUR:BB:W3GP:TRIG:SLen. Every subsequent trigger event causes a restart.

*RST: AUTO

Example: `BB:W3GP:SEQ AAUT`
sets the Armed_auto trigger mode; the device waits for the first trigger (e.g. with *TRG) and then generates the signal continuously.

Manual operation: See ["Trigger Mode"](#) on page 58

8.4 Marker Settings

This section lists the remote control commands, necessary to configure the markers.

OUTPut<ch>

The numeric suffix to OUTPut distinguishes between the available markers.

<code>[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut:DELay:FIXed</code>	366
<code>[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:DELay</code>	366
<code>[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:DELay:MAXimum?</code>	367
<code>[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:DELay:MINimum?</code>	367
<code>[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:MODE</code>	368
<code>[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:ONTime</code>	368
<code>[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:OFFTime</code>	368
<code>[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:PERiod</code>	369

`[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut:DELay:FIXed <Fixed>`

The command restricts the marker delay setting range to the dynamic range. In this range the delay can be set without restarting the marker and signal. If a delay is entered in setting ON but is outside this range, the maximum possible delay is set and an error message is generated.

The numeric suffix in OUTPut has no significance for this command, since the setting always affects every marker.

Parameters:

<Fixed> ON | OFF
*RST: OFF

Example: `BB:W3GP:TRIG:OUTP:DEL:FIX ON`
restricts the marker signal delay setting range to the dynamic range.

Manual operation: See ["Marker x Delay"](#) on page 63

`[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:DELay <Delay>`

Defines the delay between the signal on the marker outputs and the start of the signal, expressed in terms of chips.

Parameters:

<Delay> float
 Range: 0 to 16777215
 Increment: 1E-3
 *RST: 0

Example:

BB:W3GP:TRIG:OUTP2:DEL 16000
 sets a delay of 16000 chips for the corresponding marker signal.

Manual operation: See "[Marker x Delay](#)" on page 63

[[:SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:DELay:MAXimum?

The command queries the maximum marker delay for setting :BB:W3GPp:TRIG:OUTP:DEL:FIX ON.

Return values:

<Maximum> float
 Increment: 0.001

Example:

BB:W3GP:TRIG:OUTP:DEL:FIX ON
 restricts the marker signal delay setting range to the dynamic range.
 BB:W3GP:TRIG:OUTP:DEL:MAX
 queries the maximum of the dynamic range.
 Response: 20000
 the maximum for the marker delay setting is 20000 chips.

Usage: Query only

Manual operation: See "[Marker x Delay](#)" on page 63

[[:SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:DELay:MINimum?

The command queries the minimum marker delay for setting :BB:W3GPp:TRIGger:OUTPut:DELay:FIXed ON.

Return values:

<Minimum> float
 Increment: 0.001

Example:

BB:W3GP:TRIG:OUTP:DEL:FIX ON
 restricts the marker signal delay setting range to the dynamic range.
 BB:W3GP:TRIG:OUTP:DEL:MIN
 queries the minimum of the dynamic range.
 Response: 0
 the minimum for the marker delay setting is 0 chips.

Usage: Query only

Manual operation: See "[Marker x Delay](#)" on page 63

[:SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:MODE <Mode>

Defines the signal for the selected marker output.

Parameters:

<Mode>

SLOT | RFRame | CSPeriod | SFNR | RATio | USER

SLOT

A marker signal is generated at the start of each slot (every 2560 chips or 0.667 ms).

RFRame

A marker signal is generated at the start of each frame (every 38400 chips or 10 ms).

CSPeriod

A marker signal is generated at the start of every arbitrary waveform sequence (depending on the selected arbitrary waveform sequence length, see [:SOURce<hw>]:BB:W3GPp:SLENgth). If the signal does not contain an arbitrary waveform component, a radio frame trigger is generated.

SFNR

A marker signal is generated at the start of every SFN period (every 4096 frames).

RATio

A marker signal corresponding to the Time Off / Time On specifications in the commands [:SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:OFFTime and [:SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:ONTime is generated.

USER

A marker signal is generated at the beginning of every user-defined period. The period is defined with command [:SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:PERiod.

*RST: RFRame

Example:

SOURce1:BB:W3GPp:TRIGger:OUTPut2:MODE SLOT
selects the slot marker for the corresponding marker signal.

Manual operation: See "Marker Mode" on page 62

[:SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:ONTime <OnTime>

[:SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:OFFTime <OffTime>

Sets the number of chips in a period (ON time + OFF time) during which the marker signal in setting SOURce:BB:W3GPp:TRIGger:OUTPut:MODE RATio on the marker outputs is OFF.

Parameters:

<OffTime>

integer

Range: 1 to 16777215

*RST: 1

Default unit: chip

Example: `BB:W3GP:TRIG:OUTP2:OFFT 2000`
sets an OFF time of 2000 chips for marker signal 2.

Manual operation: See "[Marker Mode](#)" on page 62

[[:SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:PERiod <Period>

For user marker, sets the repetition rate for the signal at the marker outputs, expressed in terms of chips.

Parameters:

<Period> integer
Range: 2 to $2^{32}-1$ chips
Increment: 1 chip
*RST: 1 Frame (38 400 Chips)

Example: `BB:W3GP:TRIG:OUTP2:MODE USER`
selects the user marker for the corresponding marker signal
`BB:W3GP:TRIG:OUTP2:PER 1600`
sets a period of 1600 chips, i.e. the marker signal is repeated every 1600th chip.

Manual operation: See "[Marker Mode](#)" on page 62

8.5 Clock Settings

[[:SOURce<hw>]:BB:W3GPp:CLOCK:MODE <Mode>

Sets the type of externally supplied clock.

Parameters:

<Mode> CHIP | MCHip
*RST: CHIP

Example: `SOURce1:BB:W3GPp:CLOCK:MODE CHIP`
selects clock type Chip, i.e. the supplied clock is a chip clock.

Manual operation: See "[Clock Mode](#)" on page 65

[[:SOURce<hw>]:BB:W3GPp:CLOCK:MULTIplier <Multiplier>

Sets the multiplier for clock type Multiplied.

Parameters:

<Multiplier> integer
Range: 1 to 64
*RST: 4

Example: `SOURce1:BB:W3GPP:CLOCK:SOURce EGC1`
 selects the external clock source.
`SOURce1:BB:W3GPP:CLOCK:MODE MCHip`
 selects clock type multiplied, i.e. the supplied clock has a rate which is a multiple of the chip rate.
`SOURce1:BB:W3GPP:CLOCK:MULTIplier 12`
 the multiplier for the external clock rate is 12.

Manual operation: See ["Chip Clock Multiplier"](#) on page 65

[:SOURce<hw>]:BB:W3GPP:CLOCK:SOURce <Source>

Selects the clock source.

Parameters:

<Source> INTernal | EGC1 | EGC2 | ELCLock | EXTERNAL

INTernal
 The instrument uses its internal clock reference

EGC1|EGC2
 External global clock

ELCLock
 External local clock

EXTERNAL
`EXTERNAL = EGC1`
 Setting only; provided for backward compatibility with other R&S signal generators.

***RST:** INTernal

Example: `SOURce1:BB:W3GPP:CLOCK:SOURce INTernal`
 selects an internal clock reference.

Manual operation: See ["Clock Source"](#) on page 65

8.6 Test Models and Predefined Settings

The provided commands gives you the opportunity to generate standardized or predefined test settings:

- Test Models:
 - selection of test models for the downlink in accordance with 3GPP standard 25.141.
 - Selection of non-standardized test models for the uplink.
- Predefined Settings:

Definition of Predefined Settings for base station 1 which enable the creation of highly complex scenarios for the downlink by presetting the channel table of base station 1. The settings take effect only after execution of command `BB:W3GPP:PPARameter:EXECute`.

[SOURce<hw>]:BB:W3GPp:PPARameter:CRESt.....	371
[SOURce<hw>]:BB:W3GPp:PPARameter:DPCH:COUNT.....	372
[SOURce<hw>]:BB:W3GPp:PPARameter:DPCH:SRATe.....	372
[SOURce<hw>]:BB:W3GPp:PPARameter:EXECute.....	372
[SOURce<hw>]:BB:W3GPp:PPARameter:SCCPch:SRATe.....	372
[SOURce<hw>]:BB:W3GPp:PPARameter:SCCPch:STATe.....	373
[SOURce<hw>]:BB:W3GPp:PPARameter:SCHannels.....	373
[SOURce<hw>]:BB:W3GPp:SETTing:TMODeI:BSTation.....	373
[SOURce<hw>]:BB:W3GPp:SETTing:TMODeI:BSTation:CATalog?.....	374
[SOURce<hw>]:BB:W3GPp:SETTing:TMODeI:MSTation.....	374
[SOURce<hw>]:BB:W3GPp:SETTing:TMODeI:MSTation:CATalog?.....	375

[SOURce<hw>]:BB:W3GPp:PPARameter:CRESt <Crest>

This commands selects the desired range for the crest factor of the test scenario. The crest factor of the signal is kept in the desired range by automatically setting appropriate channelization codes and timing offsets.

The setting takes effect only after execution of command

BB:W3GPp:PPARameter:EXECute.

The settings of commands

- BB:W3GP:BST<n>:CHAN<n>:CCODE and
- BB:W3GP:BST<n>:CHAN<n>:TOFFset

are adjusted according to the selection.

Parameters:

<Crest>

MINimum | AVERage | WORSt

MINimum

The crest factor is minimized. The channelization codes are distributed uniformly over the code domain. The timing offsets are increased by 3 per channel.

AVERage

An average crest factor is set. The channelization codes are distributed uniformly over the code domain. The timing offsets are all set to 0.

WORSt

The crest factor is set to an unfavorable value (i.e. maximum). The channelization codes are assigned in ascending order. The timing offsets are all set to 0.

*RST: MINimum

Example:

BB:W3GP:PPAR:CRESt WORSt

sets the crest factor to an unfavorable value.

Manual operation: See "Crest Factor" on page 77

[:SOURce<hw>]:BB:W3GPp:PPARameter:DPCH:COUNT <Count>

Sets the number of activated DPCHs. The maximum number is the ratio of the chip rate and the symbol rate (maximum 512 at the lowest symbol rate of 7.5 ksps).

Parameters:

<Count> integer
 Range: 0 to 512 (Max depends on other settings)
 *RST: 10

Example: BB:W3GP:PPAR:DPCH:COUN 21
 the predefined signal contains 21 DPCHs.
 BB:W3GPp:PPARameter:EXECute

Manual operation: See ["Number of DPCH"](#) on page 76

[:SOURce<hw>]:BB:W3GPp:PPARameter:DPCH:SRATe <SRate>

This command sets the symbol rate of DPCHs.

The setting takes effect only after execution of command

BB:W3GPp:PPARameter:EXECute.

Parameters:

<SRate> D7K5 | D15K | D30K | D60K | D120k | D240k | D480k | D960k
 *RST: D30K

Example: BB:W3GP:PPAR:DPCH:SRAT D240K
 sets the symbol rate of the DPCHs to 240ksps.

Manual operation: See ["Symbol Rate DPCH"](#) on page 77

[:SOURce<hw>]:BB:W3GPp:PPARameter:EXECute

This command presets the channel table of base station 1 with the parameters defined by the PPARameter commands.

Example: BB:W3GP:PPAR:EXEC
 configures the signal sequence as defined by the :PPARameter
 commands.

Usage: Event

Manual operation: See ["Accept"](#) on page 77

[:SOURce<hw>]:BB:W3GPp:PPARameter:SCCPch:SRATe <SRate>

The command sets the symbol rate of S-CCPCH.

The setting takes effect only after execution of command

BB:W3GPp:PPARameter:EXECute.

Parameters:

<SRate> D15K | D30K | D60K | D120k | D240k | D480k | D960k
 *RST: D30K

Example:

BB:W3GP:PPAR:SCCP:SRAT D240K
 'sets the SCCPCH to 240 kps.

Manual operation: See ["Symbol Rate S-CCPCH"](#) on page 76

[:SOURce<hw>]:BB:W3GPp:PPARameter:SCCPch:STATe <State>

Activates/deactivates the S-CCPCH.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

BB:W3GP:PPAR:SCCP:STAT ON
 S-CCPCH is activated.
 BB:W3GPp:PPARameter:EXECute

Manual operation: See ["Use S-CCPCH"](#) on page 76

[:SOURce<hw>]:BB:W3GPp:PPARameter:SCHannels <SChannels>

The command activates/deactivates the PCPICH, PSCH, SSCH and PCCPCH. These "special channels" are required by a user equipment for synchronization.

The setting takes effect only after execution of command

BB:W3GPp:PPARameter:EXECute.

Parameters:

<SChannels> 0 | 1 | OFF | ON
 *RST: 0

Manual operation: See ["Use Channels"](#) on page 76

[:SOURce<hw>]:BB:W3GPp:SETTing:TMODeI:BSTation <BStation>

Selects a standard test model for the downlink.

Parameters:

<BStation> string

Example:

SOURce1:BB:W3GPp:SETTing:TMODeI:BSTation:
 CATalog?
 queries the list of available test models for the downlink trans-
 mission direction.
 Response: Test_Model_1_16channels,...
 SOURce1:BB:W3GPp:SETTing:TMODeI:BSTation:
 "Test_Model_1_64channels"
 selects the test model Measurement: Spectrum emission mask
 ACLR; 64 Channels.

Manual operation: See ["Test Models Downlink"](#) on page 72

[:SOURce<hw>]:BB:W3GPp:SETTing:TMODeL:BSTation:CATalog?

Queries the list of test models defined by the standard for the downlink.

Return values:

<Catalog> string

Example: see [\[:SOURce<hw>\]:BB:W3GPp:SETTing:TMODeL:BSTation](#) on page 373

Usage: Query only

Manual operation: See ["Test Models Downlink"](#) on page 72

[:SOURce<hw>]:BB:W3GPp:SETTing:TMODeL:MSTation <MStation>

he command selects a test model that is not defined by the standard for the uplink.

Parameters:

<MStation> string

DPCCH_DPDCH_60ksps

Preset, Uplink, UE1 on, DPDCH + DPCCH, Overall symbol rate 60 ksps.

DPCCH_DPDCH960ksps

Preset, Uplink, UE1 on, DPDCH + DPCCH, Overall symbol rate 960 ksps

TS34121_R6_Table_C_10_1_4_Subtest4

Uplink test model according to 3GPP TS 34.121 Release 6, Table C.10.1.4.

TS34121_R8_Table_C_10_1_4_Subtest3

Uplink test models for transmitter characteristics tests with HS-DPCCH according to 3GPP TS 34.121 Release 8, Table C.10.1.4.

TS34121_R8_Table_C_11_1_3_Subtest2

Uplink test models for transmitter characteristics tests with HS-DPCCH and E-DCH according to 3GPP TS 34.121 Release 8, Table C.11.1.3.

TS34121_R8_Table_C_11_1_4_Subtest1

Uplink test model for transmitter characteristics tests with HS-DPCCH and E-DCH with 16QAM according to 3GPP TS 34.121 Release 8, Table C.11.1.4.

Example: `BB:W3GP:SETT:TMOD:MST 'DPCCH_DPDCH960ksps'`
selects the test model with a symbol rate of 960 ksps.

Manual operation: See ["Test Models Uplink"](#) on page 73

[:SOURce<hw>]:BB:W3GPp:SETting:TMOdel:MSTation:CATalog?

The command queries the list of non-standardized test models for the uplink.

Return values:

<Catalog> string

Example:

BB:W3GP:SETT:TMOD:MST:CAT?

queries the list of available test models

Response: DPCCH_DPDCH960ksps,DPCCH_DPDCH_60ksps

Usage: Query only

Manual operation: See ["Test Models Uplink"](#) on page 73

8.7 Setting Base Stations

The `SOURce:BB:W3GPp:BSTation` system contains commands for setting base stations. The commands of this system only take effect if the 3GPP FDD standard is activated, the `DOWN` transmission direction is selected and the particular base station is enabled:

`SOURce:BB:W3GPp:STATe ON`

`SOURce:BB:W3GPp:LINK DOWN`

`SOURce:BB:W3GPp:BSTation2:STATe ON`

BSTation<st>

The numeric suffix to `BSTation` determines the base station. The value range is 1 .. 4. If the suffix is omitted, BS1 is selected.

CHANnel<ch>

In case of remote control, suffix counting for channels corresponds to the suffix counting with 3GPP FDD (channel 0 to channel 138). SCPI prescribes that suffix 1 is the default state and used when no specific suffix is specified. Therefore, channel 1 (and not channel 0) is selected when no suffix is specified.

The commands for setting the enhanced channels of base station 1 are described in [chapter 8.8, "Enhanced Channels of Base Station 1"](#), on page 423.

[:SOURce<hw>]:BB:W3GPp:BSTation:OCNS:STATe <State>

The command activates OCNS channels, as defined in the standard.

Four different OCNS scenarios are defined in the standard; one standard scenario, two scenarios for testing HSDPA channels and one for enhanced performance type 3i tests. The required scenario can be selected with the command `[:SOURce<hw>]:BB:W3GPp:BSTation:OCNS:MODE`.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

BB:W3GP:BST:OCNS:MODE STAN
 selects the standard scenario.
 BB:W3GP:BST:OCNS:STAT ON
 activates the OCNS channels with the settings defined in the standard.

Manual operation: See ["OCNS On"](#) on page 82

[:SOURce<hw>]:BB:W3GPp:BSTation:OCNS:MODE <Mode>

The command selects the scenario for setting the OCNS channels.

Four different OCNS scenarios are defined in the standard; one standard scenario, two scenarios for testing HSDPA channels and one for enhanced performance type 3i tests.

Parameters:

<Mode> STANDard | HSDPa | HSDP2 | M3I
 *RST: STANDard

Example:

BB:W3GP:BST:OCNS:MODE HSDP
 selects the scenario for testing the high-speed channels.
 BB:W3GP:BST:OCNS:STAT ON
 activates the OCNS channels with the settings defined in the standard.

Options: R&S SMW-K83

Manual operation: See ["OCNS Mode"](#) on page 82

[:SOURce<hw>]:BB:W3GPp:BSTation:OCNS:SEED <Seed>

In "3i" OCNS mode, sets the seed for both the random processes, the power control simulation process and the process controlling the switch over of the channelization codes.

Parameters:

<Seed> integer
 Range: 0 to 65535
 *RST: dynamic

Options: R&S SMW-K83

Manual operation: See ["OCNS Seed"](#) on page 82

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel:HSDPa:HSET:PRESet

Sets the default settings of the channel table for the HSDPA H-Set mode. Channels 12 to 17 are preset for HSDPA H-Set 1.

Example: SOURce1:BB:W3GPp:BSTation1:CHANnel12:HSDPa:MODE
HSET
selects H-Set mode.
SOURce1:BB:W3GPp:BSTation1:CHANnel12:HSDPa:
HSET:PRES
presets the H-Set.
SOURce1:BB:W3GPp:BSTation1:CHANnel12:TYPE?
Response: HSSC
SOURce1:BB:W3GPp:BSTation1:CHANnel12:HSDPa:
HSET:PREDeFined?
Response: P1QPSK

Usage: Event

Manual operation: See ["Preset HSDPA H-Set"](#) on page 84

[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel:PRESet

The command calls the default settings of the channel table.

Example: BB:W3GP:BST:CHAN:PRES
presets all channels of the base station.

Usage: Event

Manual operation: See ["Reset All Channels"](#) on page 84

[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:AICH:ASLOt <ASlot>

Selects the slot in which the burst is transmitted.

Suffix:
<ch0> 7..7

Parameters:
<ASlot> integer
Range: 0 to 15
*RST: 0

Example: SOURce1:BB:W3GPp:BSTation1:CHANnel7:AICH:ASLOt
5
defines the slot to transmit the burst.

Manual operation: See ["Access Slot"](#) on page 139

[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:AICH:SAPattern <SaPattern>

Enters the 16 bit pattern for the ACK/NACK field.

Parameters:
<SaPattern> <16 bit pattern>
*RST: +000000000000

Example: `SOURce1:BB:W3GPp:BSTation1:CHANnel<ch0>:AICH:SAPattern "+00000000000000"`
sets the bit pattern to "+00000000000000" (ACK).

Manual operation: See ["Signature ACK/NACK Pattern"](#) on page 138

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:APAIch:ASLOt<ASlot>

Selects the slot in which the burst is transmitted.

Suffix:
<ch0> 8..8

Parameters:
<ASlot> integer
Range: 0 to 15
*RST: 0

Example: `SOURce1:BB:W3GPp:BSTation1:CHANnel8:APAIch:ASLOt 5`
defines the slot to transmit the burst.

Manual operation: See ["Access Slot"](#) on page 139

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:APAIch:SAPattern<SaPattern>

Enters the 16 bit pattern for the ACK/NACK field.

This field is used by the base station to acknowledge, refuse or ignore requests of up to 16 user equipments.

Parameters:
<SaPattern> <16 bit pattern>
*RST: "+00000000000000"

Example: `SOUR:BB:W3GP:BST1:CHAN8:APAI:SAP "+00000000000000"`
sets the bit pattern to "+" (ACK).

Manual operation: See ["Signature ACK/NACK Pattern"](#) on page 138

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:CCODE <CCode>

The command sets the channelization code (formerly the spreading code number). The range of values of the channelization code depends on the symbol rate of the channel. The standard assigns a fixed channelization code to some channels (P-CPICH, for example, always uses channelization code 0).

$[\text{chip-rate}(=3.84\text{Mcps}) / \text{symbol_rate}] - 1$

The slot format determines the symbol rate (and thus the range of values for the channelization code), the TFCI state and the pilot length. If the value of any one of the four parameters is changed, all the other parameters will be adapted as necessary.

In the case of enhanced channels with active channel coding, the selected channel coding also affects the slot format and thus the remaining parameters. If these parameters are changed, the channel coding type is set to user.

Parameters:

<CCode> integer
 Range: 0 to 511
 Increment: 1
 *RST: depends on channel type

Example: BB:W3GP:BST1:CHAN15:CCOD 123
 sets channelization code 123 for channel 15 of base station 1.

Manual operation: See "[Channelization Code](#)" on page 86

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DATA <Data>

The command determines the data source for the data fields of the specified channel.

For enhanced channels with channel coding, the data source is set with the command [\[:SOURce<hw>\]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:DATA](#) on page 431.

Parameters:

<Data> PN9 | PN11 | PN15 | PN16 | PN20 | PN21 | PN23 | DLISt |
 ZERO | ONE | PATTErn

PNxx

The pseudo-random sequence generator is used as the data source. Different random sequence lengths can be selected.

DLISt

A data list is used. The data list is selected with the command :BB:W3GPp:BST:CHANnel:DATA:DSElect.

ZERO | ONE

Internal 0 and 1 data is used.

PATTErn

Internal data is used. The bit pattern for the data is defined by the command :BB:W3GPp:BST:CHANnel:DATA:PATTErn.

*RST: PN9

Example: BB:W3GP:BST2:CHAN13:DATA PATT
 selects as the data source for the data fields of channel 13 of base station 2, the bit pattern defined with the following command.

BB:W3GP:BST2:CHAN13:DATA:PATT #H3F,8
 defines the bit pattern.

Manual operation: See "[Data](#)" on page 86

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DATA:DSElect
<DSelect>

The command selects the data list for the DLIS data source selection.

The lists are stored as files with the fixed file extensions *.dm_iqd in a directory of the user's choice. The directory applicable to the following commands is defined with the command `MMEMory:CDIR`. To access the files in this directory, you only have to give the file name, without the path and the file extension.

Parameters:

<DSelect> string

Example:

BB:W3GP:BST2:CHAN13:DATA DLIS
 selects the Data Lists data source.
 MMEM:CDIR '/var/user/temp/IqData'
 selects the directory for the data lists.
 BB:W3GP:BST2:CHAN13:DATA:DSEL '3gpp_list1'
 selects file '3gpp_list1' as the data source. This file must be
 in the directory /var/user/temp/IqData and have the file
 extension *.dm_iqd.

Manual operation: See ["Data"](#) on page 86

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DATA:PATTern
<Pattern>

The command determines the bit pattern for the PATTern selection. The maximum length is 64 bits.

Parameters:

<Pattern> 64 bits
 *RST: #H0,1

Example:

BB:W3GP:BST2:CHAN13:DATA:PATT #H3F,8
 defines the bit pattern.

Manual operation: See ["Data"](#) on page 86

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:MCODE
<MCode>

The command activates multicode transmission for the selected channel (ON) or deactivates it (OFF). The multicode channels are destined for the same receiver, that is to say, are part of a radio link. The first channel of this group is used as the master channel. The common components (Pilot, TPC and TCFI) for all the channels are then spread using the spreading code of the master channel.

Parameters:

<MCode> 0 | 1 | OFF | ON
 *RST: 0

Example: `BB:W3GP:BST2:CHAN12:DPCC:MCOD ON`
 activates the simulation in multicode mode for channel 12 of base station 2.
`BB:W3GP:BST2:CHAN13:DPCC:MCOD ON`
 activates the simulation in multicode mode for channel 13 of base station 2. Channel 12 is the master channel.

Manual operation: See ["Multicode State \(DPCCH\)"](#) on page 141

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:PLENgtH
<PLength>

Sets the length of the pilot fields.

The range of values for this parameter depends on the channel type and the symbol rate. The slot format determines the symbol rate (and thus the range of values for the channelization code), the TFCI state and the pilot length. If the value of any one of the four parameters is changed, all the other parameters will be adapted as necessary.

In the case of enhanced channels with active channel coding, the selected channel coding also affects the slot format and thus the remaining parameters. If these parameters are changed, the channel coding type is set to user.

Parameters:

<PLength> BIT2 | BIT4 | BIT8 | BIT16 | BIT0
***RST:** BIT4, bei S-CCPCH 0

Example: `SOURce1:W3GPp:BSTation1:CHANnel12:DPCCh:PLENgtH`
`BIT8`
 sets the length of the pilot fields for channel 12 of base station 1.

Manual operation: See ["Pilot Length"](#) on page 138

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:POFFset:
PILot <Pilot>

Sets an offset to the set channel power for the pilot field.

Parameters:

<Pilot> float
Range: -10 to 10
Increment: 0.01
***RST:** 0

Example: `BB:W3GP:BST2:CHAN12:DPCC:POFF:PIL -2 dB`
 in the pilot field, sets an offset of -2 dB relative to the channel power.

Manual operation: See ["Power Offset Pilot \(DPCCH\)"](#) on page 145

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:POFFset:TFCI <Tfci>

The command sets an offset to the set channel power for the TFCI field.

Parameters:

<Tfci> float
 Range: -10 to 10
 Increment: 0.01
 *RST: 0

Example: BB:W3GP:BST2:CHAN12:DPCC:POFF:PIL -2 dB
 in the TFCI field, sets an offset of -2 dB relative to the channel power.

Manual operation: See ["Power Offset TFCI \(DPCCH\)"](#) on page 145

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:POFFset:TPC <Tpc>

The command sets an offset to the set channel power for the TPC field.

This setting is only valid for the DPCHs.

Parameters:

<Tpc> float
 Range: -10 to 10
 Increment: 0.01
 *RST: 0

Example: BB:W3GP:BST2:CHAN12:DPCC:POFF:TPC -2 dB
 in the TPC field, sets an offset of -2 dB relative to the channel power.

Manual operation: See ["Power Offset TPC \(DPCCH\)"](#) on page 145

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TFCI <Tfci>

The command enters the value of the TFCI field (Transport Format Combination Indicator) for the selected channel of the specified base station. The TFCI field is always filled with exactly 10 bits with leading zeros.

Parameters:

<Tfci> integer
 Range: 0 to 1023
 *RST: 0

Example: BB:W3GP:BST2:CHAN12:DPCC:TFCI 22
 sets the value 22 for the TFCI field of channel 12 of base station 2.

Manual operation: See ["TFCI Value"](#) on page 138

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TFCI:STATe<State>

The command activates the TFCI field (Transport Format Combination Identifier) for the selected channel of the specified base station.

The slot format determines the symbol rate (and thus the range of values for the channelization code), the TFCI state and the pilot length. If the value of any one of the four parameters is changed, all the other parameters will be adapted as necessary.

In the case of enhanced channels with active channel coding, the selected channel coding also affects the slot format and thus the remaining parameters. If these parameters are changed, the channel coding type is set to user.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: BB:W3GP:BST2:CHAN12:DPCCh:TFCI:STAT OFF
 sets that the TFCI field of channel 12 of base station 2 is not used.

Manual operation: See ["Use TFCI"](#) on page 137

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:DATA<Data>

Determines the data source for the TPC field of the channel.

Parameters:

<Data> ZERO | ONE | PATtern | DLISt
DLISt
 A data list is used. Use the command `[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:DATA:DSElect` to define the data list file.
ZERO | ONE
 Internal 0 and 1 data is used.
PATtern
 Internal data is used. Use the command `[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:DATA:PATtern` to define the bit pattern.
 *RST: ZERO

Example: SOURce1:BB:W3GPp:BSTation2:CHANnel13:DPCCh:TPC:DATA PATtern
 selects as the data source for the TPC field of channel 13 of base station 2
 SOURce1:BB:W3GPp:BSTation2:CHANnel13:DPCCh:TPC:DATA:PATtern #H3F,8
 defines the bit pattern.

Example: `SOURce1:BB:W3GPp:BSTation2:CHANnel13:DPCCh:TPC:`
 `DATA DLIS`
 selects the data source.
 `MMEM:CDIR '/var/user/temp/IqData'`
 selects the directory for the data lists.
 `SOURce1:BB:W3GPp:BSTation2:CHANnel13:DPCCh:TPC:`
 `DATA:DSElect 'tpc_ch4'`
 selects the file `tpc_ch4` as the data source.

Manual operation: See ["TPC Data Source \(DPCCH\)"](#) on page 142

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:DATA:
 DSElect <DSelect>**

Selects the data list for the `DLIS` data source selection.

The lists are stored as files with the fixed file extensions `*.dm_iqd` in a directory of the user's choice. The directory is defined with the command `MMEMory:CDIR`. To access the files in this directory, you only have to give the file name, without the path and the file extension.

Parameters:

<DSelect> <data list name>

Example: see [\[:SOURce<hw>\]:BB:W3GPp:BSTation<st>:
 CHANnel<ch0>:DPCCh:TPC:DATA](#) on page 383

Manual operation: See ["TPC Data Source \(DPCCH\)"](#) on page 142

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:DATA:
 PATtern <Pattern>**

Determines the bit pattern.

Parameters:

<Pattern> 64 bits
 *RST: #H0,1

Example: see [\[:SOURce<hw>\]:BB:W3GPp:BSTation<st>:
 CHANnel<ch0>:DPCCh:TPC:DATA](#) on page 383

Manual operation: See ["TPC Data Source \(DPCCH\)"](#) on page 142

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:MISuse
 <MisUse>**

The command activates "mis-" use of the TPC field (Transmit Power Control) of the selected channel for controlling the channel powers of these channels of the specified base station.

The bit pattern (see commands `:W3GPp:BSTation<n>:CHANnel<n>:DPCCh:TPC...`) of the TPC field of each channel is used to control the channel power. A "1" leads to an increase of channel powers, a "0" to a reduction of channel powers. Channel power is limited to the range 0 dB to -60 dB. The step width of the change is defined with the command `[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:PSTep`.

Parameters:

<MisUse> ON | OFF
 *RST: 0

Manual operation: See ["Misuse TPC for Output Power Control \(DPCCH\)"](#) on page 143

[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:PSTep
 <PowerStep>

The command defines the step width for the change of channel powers in the case of "mis-" use of the TPC field.

Parameters:

<PowerStep> float
 Range: -10 to 10
 Increment: 0.01
 *RST: 0

Example: BB:W3GP:BST2:CHAN13:DPCC:TPC:PST 1 dB
 sets the step width for the change of channel powers for channel 13 of base station 2 to 1 dB.

Manual operation: See ["TPC Power Step \(DPCCH\)"](#) on page 144

[:SOURce<hw>] :BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:READ
 <Read>

The command sets the read out mode for the bit pattern of the TPC field.

The bit pattern is defined with the commands `:BB:W3GPp:BST<i>:CHANnel<n>:DPCCh:TPC...`

Parameters:

<Read>

CONTInuous | S0A | S1A | S01A | S10A

CONTInuous

The bit pattern is used cyclically.

S0A

The bit pattern is used once, then the TPC sequence continues with 0 bits.

S1A

The bit pattern is used once, then the TPC sequence continues with 1 bits.

S01A

The bit pattern is used once and then the TPC sequence is continued with 0 and 1 bits alternately (in multiples, depending on by the symbol rate, for example, 00001111).

S10A

The bit pattern is used once and then the TPC sequence is continued with 1 and 0 bits alternately (in multiples, depending on by the symbol rate, for example, 11110000).

*RST: CONTInuous

Example:

BB:W3GP:BST2:CHAN13:DPCC:TPC:READ S0A

the bit pattern is used once, after which a 0 sequence is generated (applies to channel 13 of base station 2).

Manual operation: See "TPC Read Out Mode (DPCCH)" on page 143

```
[ :SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCCCh:TPC:
DATA <Data>
```

The command determines the data source for the TPC field of the channel.

Parameters:

<Data>

DLISt | ZERO | ONE | PATTErn

DLISt

A data list is used. The data list is selected with the command

```
[ :SOURce<hw>]:BB:W3GPp:BSTation<st>:
CHANnel<ch0>:FDPCh:DPCCCh:TPC:DATA:DSElect
```

ZERO | ONE

Internal 0 and 1 data is used.

PATTErn

Internal data is used. The bit pattern for the data is defined by the command

```
[ :SOURce<hw>]:BB:W3GPp:BSTation<st>:
CHANnel<ch0>:FDPCh:DPCCCh:TPC:DATA:PATTErn.
```

*RST: PATTErn

Example: BB:W3GP:BST1:CHAN11:FDPC:DPCC:TPC:DATA PATT
 selects as the data source for the TPC field of channel 11 of base station 1, the bit pattern defined with the following command:
 BB:W3GP:BST1:CHAN11:FDPC:DPCC:TPC:DATA:PATT
 #H3F, 8
 defines the bit pattern.

Manual operation: See "TPC Source" on page 151

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCCCh:TPC:DATA:DSElect <DSelect>

The command selects the data list for the DLIS data source selection.

The lists are stored as files with the fixed file extensions *.dm_iqd in a directory of the user's choice. The directory applicable to the following commands is defined with the command MMEemory:CDIR. To access the files in this directory, you only have to give the file name, without the path and the file extension.

Parameters:

<DSelect> <data list name>

Example: BB:W3GP:BST1:CHAN11:FDPC:DPCC:TPC:DATA DLIS
 selects the "Data Lists" data source.
 MMEemory:CDIR '/var/user/temp/IqData'
 selects the directory for the data lists.
 BB:W3GP:BST1:CHAN11:FDPC:DPCC:TPC:DATA:DSEL
 'tpc_ch4'
 selects the file 'tpc_ch4' as the data source. This file must be in the directory /var/user/temp/IqData and have the file extension *.dm_iqd.

Manual operation: See "TPC Source" on page 151

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCCCh:TPC:DATA:PATtern <Pattern>

The command determines the bit pattern for the PATtern selection. The maximum bit pattern length is 32 bits.

Parameters:

<Pattern> 64 bits
 *RST: #H0,1

Example: BB:W3GP:BST1:CHAN11:FDPC:DPCC:TPC:DATA:PATT
 #H3F, 8
 defines the bit pattern for the TPC field of channel 11 of base station 1.

Manual operation: See "TPC Source" on page 151

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCCCh:TPC: MISuse <Misuse>

The command activates "mis-" use of the TPC field (Transmit Power Control) of the selected channel for controlling the channel powers of these channels of the specified base station.

The bit pattern (see command `[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCCCh:TPC:DATA:PATtern`) of the TPC field of each channel is used to control the channel power. A "1" leads to an increase of channel powers, a "0" to a reduction of channel powers. Channel power is limited to the range 0 dB to -60 dB. The step width of the change is defined with the command `[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCCCh:TPC:PSTep`.

Parameters:

<Misuse> ON | OFF
 *RST: 0

Example:

BB:W3GP:BST1:CHAN11:FDPC:DPCC:TPC:MIS ON
 activates regulation of channel power for channel 11 of base station 1 via the bit pattern of the associated TPC field.
 BB:W3GP:BST1:CHAN11:FDPC:DPCC:TPC:PST 1dB
 sets the step width for the change of channel powers for channel 11 of base station 1 to 1 dB.

Manual operation: See ["TPC For Output Power Control \(Mis-\) Use"](#) on page 152

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCCCh:TPC: PSTep <PStep>

The command defines the step width for the change of channel powers in the case of "mis-" use of the TPC field.

Suffix:

<ch0> 11..138

Parameters:

<PStep> float
 Range: -10.0 dB to 10.0 dB
 Increment: 0.01 dB
 *RST: 0 dB

Example:

BB:W3GP:BST1:CHAN11:FDPC:DPCC:TPC:PST 1.5dB
 sets the step width for the change of channel powers for channel 11 of base station 1 to 1.5 dB.

Manual operation: See ["TPC Power Step \(F-DPCH\)"](#) on page 153

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCCCh:TPC: READ <Read>

The command sets the read out mode for the bit pattern of the TPC field.

Parameters:

<Read>

CONTInuous | S0A | S1A | S01A | S10A

CONTInuous

The bit pattern is used cyclically.

S0A

The bit pattern is used once, then the TPC sequence continues with 0 bits.

S1A

The bit pattern is used once, then the TPC sequence continues with 1 bits.

S01A

The bit pattern is used once and then the TPC sequence is continued with 0 and 1 bits alternately (in multiples, depending on by the symbol rate, for example, 00001111).

S10A

The bit pattern is used once and then the TPC sequence is continued with 1 and 0 bits alternately (in multiples, depending on by the symbol rate, for example, 11110000).

*RST: CONTInuous

Example:

BB:W3GP:BST1:CHAN11:FDPC:DPCC:TPC:READ S0A

the bit pattern is used once, after which a 0 sequence is generated (applies to channel 11 of base station 1).

Manual operation: See ["TPC Read Out Mode \(F-DPCH\)"](#) on page 152**[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:BMODE[:STATE] <State>**

The command activates/deactivates burst mode. The signal is bursted when on, otherwise dummy data are sent during transmission brakes.

Parameters:

<State>

ON | OFF

*RST: 1

Example:

BB:W3GP:BST1:CHAN12:HSDP:BMOD OFF

deactivates burst mode, dummy data are sent during the transmission brakes.

Manual operation: See ["Burst Mode"](#) on page 99**[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:CVPB <Cvpb>**

The command switches the order of the constellation points of the 16QAM and 64QAM mapping. The re-arrangement is done according to 3GPP TS25.212.

Parameters:

<Cvpb> integer
 Range: 0 to 3
 *RST: 0

Example:

BB:W3GP:BST1:CHAN12:HSDP:CVPB 1
 selects interchange of MSBs with LSBs.

Manual operation: See ["Constellation Version Parameter b - BS"](#) on page 100

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:AMODE
 <AMode>**

Activates/deactivates the advanced mode in which the H-Set will be generated by the ARB.

The parameter can be configured only for H-Sets 1 - 5.

For H-Sets 6 - 12 and User it is always enabled.

Parameters:

<AMode> ON | OFF
 *RST: OFF (H-Sets 1..5); ON (H-Sets 6..12, User);

Example:

BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
 selects H-Set mode.
 BB:W3GP:BST1:CHAN12:HSDP:HSET:PRED P1QAM16
 selects H-Set 1 (16QAM).
 BB:W3GP:BST1:CHAN12:HSDP:HSET:AMOD ON
 enables advanced mode for the selected H-Set.

Manual operation: See ["Advanced Mode \(requires ARB\)"](#) on page 104

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
 ACLength <AcLength>**

Sets the alternative number of HS-PDSCH channelization codes (see [chapter 4.13.9, "Randomly Varying Modulation And Number Of Codes \(Type 3i\) Settings"](#), on page 117).

Parameters:

<AcLength> integer
 Range: 1 to 15 (max depends on other values)
 *RST: 5

Example:

SOURce:BB:W3GP:BST1:CHANnel12:HSDPa:HSET:
 CLENgth 8
 SOURce:BB:W3GP:BST1:CHANnel12:HSDPa:HSET:
 ACLength 8

Options:

R&S SMW-K83

Manual operation: See ["Alternative Number of HS-PDSCH Channelization Codes"](#) on page 119

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:ALTModulation <ALTModulation>

Sets the alternative modulation (see [chapter 4.13.9, "Randomly Varying Modulation And Number Of Codes \(Type 3i\) Settings"](#), on page 117).

Parameters:

<ALTModulation> QPSK | QAM16 | QAM64
 *RST: QAM16

Example: :SOURce:BB:W3GPp:BSTation1:CHANnel12:HSDPa:HSET:ALTModulation QPSK

Options: R&S SMW-K83

Manual operation: See ["Alternative HS-PDSCH Modulation"](#) on page 119

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:BCBTti<di>?

Displays the binary channel bits per TTI and per stream.

The value displayed is calculated upon the values sets with the commands:

- [\[:SOURce<hw>\]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:MODulation<di>](#),
- [\[:SOURce<hw>\]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:SRATe](#) and
- [\[:SOURce<hw>\]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:HSCCode](#).

Return values:

<Bcbtti> float

Example: BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
 selects H-Set mode.
 BB:W3GP:BST1:CHAN12:HSDP:HSET:TYPE MIMO
 sets the H-set type.
 BB:W3GP:BST1:CHAN12:HSDP:HSET:BCBT2?
 queries the binary channel bits per TTI for stream 2.
 Response: "4800"

Usage: Query only

Manual operation: See ["Binary Channel Bits per TTI \(Physical Layer\) Stream1/2"](#) on page 112

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:BPAYload<di>?

The command queries the payload of the information bit. This value determines the number of transport layer bits sent in each subframe.

Return values:

<BPayload> float
Range: 1 to 5000

Example:

BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
selects H-Set mode.
BB:W3GP:BST1:CHAN12:HSDP:HSET:BPAY2?
queries the payload of the information bit.
Response: "256"

Usage: Query only

Manual operation: See ["Information Bit Payload \(TB-Size\) Stream 1/2"](#) on page 112

**[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
CLENgth <CLength>**

The command queries the number of physical HS-PDSCH data channels assigned to the HS-SCCH.

Parameters:

<CLength> integer
Range: 1 to 15
*RST: 5

Example:

BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
selects H-Set mode.
BB:W3GP:BST1:CHAN12:HSDP:HSET:CLEN?
queries the number of physical HS-PDSCH data channels
assigned to the HS-SCCH.
Response: "4"

Manual operation: See ["Number of HS-PDSCH Channelization Codes"](#)
on page 109

**[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
CRATe<di>?**

Queries the resulting coding rate per stream.

The coding rate is calculated as a relation between the "Information Bit Payload" and "Binary Channel Bits per TTI".

Return values:

<CRate> float

Example:

BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
selects H-Set mode.
BB:W3GP:BST1:CHAN12:HSDP:HSET:CRAT2?
queries the coding rate of stream 2.
Response: "0.658"

Usage: Query only

Manual operation: See ["Coding Rate Stream 1/2"](#) on page 112

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:DATA
<Data>**

Selects the data source for the transport channel.

Parameters:

<Data>

ZERO | ONE | PATtern | PN9 | PN11 | PN15 | PN16 | PN20 |
PN21 | PN23 | DLISt

ZERO | ONE

Internal 0 and 1 data is used.

PATtern

Internal data is used. Use the command `[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:DATA:PATtern` to set the pattern.

DLISt

A data list is used. Use the command `[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:DATA:DSElect` to select the data list file.

*RST: PN9

Example:

BB:W3GP:BST1:CHAN11:HSDP:HSET:DATA PATT
selects as the data source for the transport channel
BB:W3GP:BST1:CHAN11:HSDP:HSET:DATA:PATT #H3F,8
defines the bit pattern.

Manual operation: See ["Data Source \(HS-DSCH\)"](#) on page 108

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:DATA:
DSElect <DSelect>**

The command selects the data list for the DLISt data source selection.

The lists are stored as files with the fixed file extensions *.dm_iqd in a directory of the user's choice. The directory applicable to the following commands is defined with the command `MMEMory:CDIR`. To access the files in this directory, you only have to give the file name, without the path and the file extension.

Parameters:

<DSelect>

string

Example: BB:W3GP:BST1:CHAN11:HSDP:HSET:DATA DLIS
 selects the Data Lists data source.
 MMEM:CDIR '/var/user/temp/H-Sets'
 selects the directory for the data lists.
 BB:W3GP:BST1:CHAN11:HSDP:HSET:DATA:DSEL
 'hset_ch11'
 selects the file hset_ch11 as the data source. This file must be
 in the directory /var/user/temp/H-Sets and have the file
 extension *.dm_iqd.

Manual operation: See ["Data Source \(HS-DSCH\)"](#) on page 108

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:DATA:
 PATtern <Pattern>**

Determines the bit pattern for the PATtern selection.

Parameters:

<Pattern> 64 bits
 *RST: #H0,1

Example: BB:W3GP:BST1:CHAN11:HSDP:HSET:DATA PATT
 selects as the data source for the H-set
 BB:W3GP:BST1:CHAN11:HSDP:HSET:DATA:PATT #H3F, 8
 defines the bit pattern for the H-set.

Manual operation: See ["Data Source \(HS-DSCH\)"](#) on page 108

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:HARQ:
 LENGth <Length>**

Sets the number of HARQ processes. This value determines the distribution of the
 payload in the subframes.

Parameters:

<Length> integer
 Range: 1 to 6
 *RST: 0

Example: SOURce1:BB:BB:W3GPp:BSTation1:CHANnel12:HSDPa:
 HSET:HARQ:MODE HSET
 selects H-Set mode.
 SOURce1:BB:BB:W3GPp:BSTation1:CHANnel12:HSDPa:
 HSET:HARQ:LENGth?
 queries the number of HARQ processes.
 Response:2

Manual operation: See ["Number of HARQ Processes per Stream"](#) on page 114

```
[ :SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:HARQ:
MODE <Mode>
```

Sets the HARQ Simulation Mode.

Parameters:

<Mode> CACK | CNACK

CACK

New data is used for each new TTI.

CNACK

Enables NACK simulation, i.e. depending on the sequence selected for the parameter Redundancy Version Parameter Sequence packets are retransmitted.

*RST: CACK

Example:

```
BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
selects H-Set mode.
```

```
BB:W3GP:BST1:CHAN12:HSDP:HSET:AMOD ON
enables advanced mode.
```

```
BB:W3GP:BST1:CHAN12:HSDP:HSET:HARQ:MODE CNAC
sets Constant NACK HARQ Mode.
```

Manual operation: See ["Mode \(HARQ Simulation\)"](#) on page 115

```
[ :SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
HSCCode <HsCCode>
```

Sets the channelization code of the HS-SCCH.

Parameters:

<HsCCode> float

Range: 0 to 127

Example:

```
BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
selects H-Set mode.
```

```
BB:W3GP:BST1:CHAN12:HSDP:HSET:HSCC 10
sets channelization code 10 for the HS-SCCH.
```

Manual operation: See ["Channelization Code HS-SCCH \(SF128\)"](#) on page 109

```
[ :SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
MODulation<di> <Modulation>
```

Sets the modulation for stream 1 and stream 2 to QPSK, 16QAM or 64QAM.

The modulation 64QAM is available for instruments equipped with option R&S SMW-K83 only.

For HS-SCCH Type 2, the available modulation scheme is QPSK only.

Parameters:

<Modulation> QPSK | QAM16 | QAM64
 *RST: QPSK

Example:

BB:W3GP:BST1:CHAN12:HSDP:HSET:TYPE MIMO
 sets MIMO operation mode.
 BB:W3GP:BST1:CHAN12:HSDP:HSET:MOD1 QAM64
 sets the modulation of stream 2 to 64QAM

Manual operation: See ["HS-PDSCH Modulation Stream1/2"](#) on page 111

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
 NAIBitrate?**

Queries the average data rate on the transport layer (Nominal Average Information Bitrate).

Return values:

<NaiBitrate> float
 Range: 1 to 5000
 Increment: 0.1
 *RST: 0

Example:

BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
 selects H-Set mode.
 BB:W3GP:BST1:CHAN12:HSDP:HSET:NAIB?
 queries the average data rate on the transport layer.
 Response: "455"

Usage: Query only

Manual operation: See ["Nominal Average Information Bitrate"](#) on page 105

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
 PREDefined <Predefined>**

The command selects the H-Set and the modulation according to TS 25.101 Annex A. 7.

Parameters:

<Predefined> P1QPSK | P1QAM16 | P2QPSK | P2QAM16 | P3QPSK |
 P3QAM16 | P4QPSK | P5QPSK | P6QPSK | P6QAM16 |
 P7QPSK | P8QAM64 | P9QAM16QPSK | P10QPSK |
 P10QAM16 | P11QAM64QAM16 | P12QPSK | USER
 *RST: P1QPSK

Example:

BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
 selects H-Set mode.
 BB:W3GP:BST1:CHAN12:HSDP:HSET:PRE P3QPSK
 selects H-Set 3 (QPSK).

Manual operation: See ["Predefined H-Set"](#) on page 103

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
PWPatten <PwPattern>**

Sets the precoding weight parameter w2 for MIMO precoding.

The values of the weight parameters w1, w3 and w4 are calculated based on the value for w2 (see [chapter 3.1.15, "MIMO in HSPA+",](#) on page 36).

Parameters:

<PwPattern> string
 *RST: 0

Example: BB:W3GP:BST1:CHAN12:HSDP:HSET:PWP "0,1,3"
 selects the pattern.

Manual operation: See ["Precoding Weight Pattern \(w2\)"](#) on page 107

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
RVParameter<di> <RvParameter>**

The parameter is enabled for "HARQ Simulation Mode" set to Constant ACK.

The command sets the Redundancy Version Parameter. This value determines the processing of the Forward Error Correction and Constellation Arrangement (QAM16 and 64QAM modulation), see TS 25.212 4.6.2.

For HS-SCCH Type 2 (less operation), the Redundancy Version Parameter is always 0.

Parameters:

<RvParameter> integer
 Range: 0 to 7
 *RST: 0

Example: BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
 selects H-Set mode.
 BB:W3GP:BST1:CHAN12:HSDP:HSET:HARQ:MODE CACK
 sets Constant ACK HARQ Mode.
 BB:W3GP:BST1:CHAN12:HSDP:HSET:RVP 7
 sets the Redundancy Version Parameter to 7.
 BB:W3GP:BST1:TDIV ANT1
 enables transmit diversity
 BB:W3GP:BST1:CHAN12:HSDP:HSET:TYPE MIMO
 selects HS-SCCH Type 3 (MIMO).
 BB:W3GP:BST1:CHAN12:HSDP:HSET:RVP2 4
 sets the Redundancy Version Parameter of stream 2.

Manual operation: See ["Redundancy Version Stream1/2"](#) on page 115

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
RVSequence<di> <RvpSequence>**

The parameter is enabled for "HARQ Simulation Mode" set to Constant NACK.

Enters a sequence of Redundancy Version Parameters per stream. The value of the RV parameter determines the processing of the Forward Error Correction and Constellation Arrangement (16/64QAM modulation), see TS 25.212 4.6.2.

The sequence has a length of maximum 30 values. The sequence length determines the maximum number of retransmissions. New data is used after reaching the end of the sequence.

For HS-SCCH Type 2 (less operation), the Redundancy Version Parameter Sequence is a read-only parameter.

Parameters:

<RvpSequence> string

Example:

```
BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
selects H-Set mode.
BB:W3GP:BST1:CHAN12:HSDP:HSET:AMOD ON
enables advanced mode.
BB:W3GP:BST1:CHAN12:HSDP:HSET:HARQ:MODE CNAC
sets Constant NACK HARQ Mode.
BB:W3GP:BST1:TDIV ANT1
enables transmit diversity
BB:W3GP:BST1:CHAN12:HSDP:HSET:TYPE MIMO
selects HS-SCCH Type 3 (MIMO).
BB:W3GP:BST1:CHAN12:HSDP:HSET:RVPS2
'0,1,3,2,0,1,2,3'
sets the Redundancy Version Parameter sequence of stream 2.
```

Example:

```
BB:W3GP:BST1:CHAN12:HSDP:HSET:TYPE LOP
selects HS-SCCH Type 2 (less operation).
BB:W3GP:BST1:CHAN12:HSDP:HSET:RVPS?
queries the Redundancy Version Parameter sequence.
Response: 0,3,4
```

Manual operation: See ["Redundancy Version Sequence Stream 1/2"](#) on page 116

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:RVSTate <RvState>

Enables/disables the random variation of the modulation and number of codes (see [chapter 4.13.9, "Randomly Varying Modulation And Number Of Codes \(Type 3i\) Settings"](#), on page 117).

Parameters:

<RvState> 0 | 1 | OFF | ON
*RST: OFF

Example:

```
SOURce:BB:W3GPp:BST1:CHAN12:HSDPa:HSET:RVSTate
ON
```

Options:

R&S SMW-K83

Manual operation:

See ["Randomly Varying Modulation And Number Of Codes"](#) on page 119

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:SEED
<Seed>**

Sets the seed for the random process deciding between the four option (see [chapter 4.13.9, "Randomly Varying Modulation And Number Of Codes \(Type 3i\) Settings"](#), on page 117).

Parameters:

<Seed> integer
 Range: 0 to 65535
 *RST: 0 for path A, 1 for path B

Example: SOURce:BB:W3GPp:BST1:CHANnel12:HSDPa:HSET:SEED
 5

Options: R&S SMW-K83

Manual operation: See "[Random Seed](#)" on page 119

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
S64Qam <S64qam>**

Enables/disables UE support of 64QAM.

This command is enabled only for HS-SCCH Type 1 (normal operation) and 16QAM modulation.

In case this parameter is disabled, i.e. the UE does not support 64QAM, the xccs,7 bit is used for channelization information.

Parameters:

<S64qam> ON | OFF
 *RST: OFF

Example: BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
 selects H-Set mode.
 BB:W3GP:BST1:CHAN12:HSDP:HSET:TYPE NORM
 selects HS-SCCH Type 1 (normal operation).
 BB:W3GP:BST1:CHAN12:HSDP:HSET:MOD QAM16
 sets 16QAM modulation.
 BB:W3GP:BST1:CHAN12:HSDP:HSET:S64Q ON
 enables UE to support 64QAM

Manual operation: See "[UE Supports 64QAM](#)" on page 111

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:SCCode
<SCcode>**

Sets the channelization code of the first HS-PDSCH channel in the H-Set. The channelization codes of the rest of the HS-PDSCHs in this H-Set are set automatically.

Note: To let the instrument generate a signal equal to the one generated by an instrument equipped with an older firmware, set the same Channelization Codes as the codes used for your physical channels.

Parameters:

<SCcode> integer
 Range: 1 to 15
 *RST: 8

Example:

BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
 selects H-Set mode.
 BB:W3GP:BST1:CHAN12:HSDP:HSET:SCC 10
 sets channelization code of the first HS-PDSCH.

Manual operation: See ["Start Channelization Code HS-PDSCH \(SF16\)"](#) on page 109

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET: SLENgth?

Queries the suggested ARB sequence length.

Return values:

<SLength> integer
 Range: 1 to max

Example:

see [\[:SOURce<hw>\]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:SLENgth:ADJust](#) on page 400

Usage: Query only

Manual operation: See ["Advanced Mode \(requires ARB\)"](#) on page 104

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET: SLENgth:ADJust

Sets the ARB sequence length to the suggested value.

Example:

```
BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
selects H-Set mode.
BB:W3GP:BST1:CHAN12:HSDP:HSET:AMOD ON
enables advanced mode.
BB:W3GP:BST1:CHAN12:HSDP:HSET:SLEN?
queries the suggested ABR sequence length.
Response: 21
BB:W3GP:SLEN?
queries the current ABR sequence length.
Response: 12
BB:W3GP:BST1:CHAN12:HSDP:HSET:SLEN:ADJ
sets the ARB sequence length to the suggested value.
BB:W3GP:SLEN?
queries the current ABR sequence length.
Response: 21
```

Usage: Event

Manual operation: See ["Adjust"](#) on page 105

**[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
SPATtern<di>?**

Queries the distribution of packets over time. A "-" indicates no packet

Return values:

<SPattern> string

Example:

```
BB:W3GP:BST1:CHAN15:HSDP:TTID 3
sets the TTI
BB:W3GP:BST1:CHAN12:HSDP:HSET:HARQ:LENG 2
sets the number of HARQ processes
BB:W3GP:BST1:CHAN12:HSDP:HSET:SPAT1?
queries the signaling pattern for stream 1
Response: 0,-,-1,-,-
```

Usage: Query only

Manual operation: See ["Signaling Pattern Stream1/2"](#) on page 114

**[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
STAPattern <StaPattern>**

Enables/disables a temporal deactivation of Stream 2 per TTI in form of sending pattern.

The stream 2 sending pattern is a sequence of max 16 values of "1" (enables Stream 2 for that TTI) and "-" (disabled Stream 2 for that TTI).

Parameters:

<StaPattern> string
*RST: 1

Example: BB:W3GP:BST1:CHAN12:HSDP:HSET:STAP "11-"
selects the pattern.

Manual operation: See ["Stream 2 Active Pattern"](#) on page 107

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:TPOWer
<Tpower>

Sets the total power of the HS-PDSCH channels in the H-Set.

The individual power levels of the HS-PDSCHs are calculated automatically and can be queried with the command **[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:POWer**.

Parameters:

<Tpower> float
The min/max values depend on the number of HS-PDSCH channelization codes (**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:CLENgth**) and are calculated as follow:
min = -80 dB + 10*log₁₀(NumberOfHS-PDSCHChannelizationCodes)
max = 0 dB + 10*log₁₀(NumberOfHS-PDSCHChannelizationCodes)
Range: dynamic to dynamic
Increment: 0.01
*RST: -13.01

Example: :SOURce:BB:W3GPp:BST1:CHAN12:HSDPa:MODE HSET
:SOURce:BB:W3GPp:BST1:CHAN12:HSDPa:HSET:
CLENgth?
Response: 5
:SOURce:BB:W3GPp:BST1:CHAN13:POWer -10
:SOURce:BB:W3GPp:BST1:CHAN12:HSDPa:HSET:TPOWer?
Response: -3.01029995663981 dB
:SOURce:BB:W3GPp:BST1:CHAN12:HSDPa:HSET:TPOWer
-5
:SOURce:BB:W3GPp:BST1:CHAN13:POWer?
Response: -11.9897000433602 dB

Manual operation: See ["Total HS-PDSCH Power"](#) on page 110

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:TBS:
INDEX<di> <Index>

Selects the Index ki for the corresponding table and stream, as described in in 3GPP TS 25.321.

Parameters:

<Index> integer
Range: 0 to 62

Example: BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
selects H-Set mode.
BB:W3GP:BST1:CHAN12:HSDP:HSET:TBS:TABL2 TAB0
selects Table 0 for stream 2.
BB:W3GP:BST1:CHAN12:HSDP:HSET:TBS:IND2 25
sets the Index ki

Manual operation: See ["Transport Block Size Index Stream1/2"](#) on page 112

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:TBS:REFerence <Reference>

While working in less operation mode, this command is signaled instead of the command BB:W3GP:BST:CHAN:HSDP:HSET:TBS:IND.

Parameters:
<Reference> integer
Range: 0 to 3
*RST: 0

Example: BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
selects H-Set mode.
BB:W3GP:BST1:CHAN12:HSDP:HSET:TYPE LOP
selects less operation mode.
BB:W3GP:BST1:CHAN12:HSDP:HSET:TBS:TABL2 TAB0
selects Table 0 for stream 2.
BB:W3GP:BST1:CHAN12:HSDP:HSET:TBS:REF 2
sets the reference.

Manual operation: See ["Transport Block Size Reference Stream1/2"](#) on page 112

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:TBS:TABLE<di> <Table>

Selects Table 0 or Table 1 as described in in 3GPP TS 25.321.

For HS-PDSCH Modulation set to 64QAM, only Table 1 is available.

Parameters:
<Table> TAB0 | TAB1
*RST: TAB0

Example: BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
selects H-Set mode.
BB:W3GP:BST1:CHAN12:HSDP:HSET:TBS:TABL2 TAB0
selects Table 0 for stream 2.

Manual operation: See ["Transport Block Size Table Stream1/2"](#) on page 112

```
[ :SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:TYPE
<Type>
```

Sets the HS-SCCH type.

Parameters:

<Type> NORMal | LOPeration | MIMO

NORMal
Normal operation mode.

LOPeration
HS-SCCH less operation mode.

MIMO
HS-SCCH Type 3 mode is defined for MIMO operation.
Enabling this operation mode, enables the MIMO parameters [:
SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:
HSDPa:MIMO:CVPB<di>, [:SOURce<hw>]:BB:W3GPp:
BSTation<st>:CHANnel<ch0>:HSDPa:MIMO:
MODulation<di>, [:SOURce<hw>]:BB:W3GPp:
BSTation<st>:CHANnel<ch0>:HSDPa:MIMO:PWPpattern
and [:SOURce<hw>]:BB:W3GPp:BSTation<st>:
CHANnel<ch0>:HSDPa:MIMO:STAPattern and all Stream 2
parameters.

*RST: NORMal

Example: BB:W3GP:BST1:TDIV ANT1
enables transmit diversity and antenna 1.
BB:W3GP:BST1:CHAN12:HSDP:HSET:TYPE MIMO
sets MIMO operation mode.

Manual operation: See "[HS-SCCH Type](#)" on page 105

```
[ :SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
UECategory?
```

Queries the UE category number.

Return values:

<UeCategory> integer
Range: 0 to 5000

Example: BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
selects H-Set mode.
BB:W3GP:BST1:CHAN12:HSDP:HSET:PRED P3QPSK
selects H-Set 3 (QPSK).
BB:W3GP:BST1:CHAN12:HSDP:HSET:UEC?
queries the UE Category.
Response: 5

Usage: Query only

Manual operation: See "[UE Category](#)" on page 105

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:UEID
<Ueid>

The command sets the UE identity which is the HS-DSCH Radio Network Identifier (H-RNTI) defined in 3GPP TS 25.331: "Radio Resource Control (RRC); Protocol Specification".

Parameters:

<Ueid> integer
 Range: 0 to 65535
 *RST: 0

Example: BB:W3GP:BST1:CHAN12:HSDP:MODE HSET
 selects H-Set mode.
 BB:W3GP:BST1:CHAN12:HSDP:HSET:UEID 256
 sets the UE identity.

Manual operation: See "UEID (H-RNTI)" on page 109

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:
VIBSize<di> <VibSize>

Sets the size of the Virtual IR Buffer (Number of SMLs per HARQ-Process) per stream.

Parameters:

<VibSize> integer
 Range: 800 to 304000
 Increment: 800
 *RST: 9600

Example: SOURce1:BB:W3GPp:BSTation1:TDIV ANT1
 SOURce1:BB:W3GPp:BSTation1:CHANnel12:HSDPa:
 HSET:TYPE MIMO
 SOURce1:BB:W3GPp:BSTation1:CHANnel12:HSDPa:
 HSET:VIBSize1?
Response: 9600
 SOURce1:BB:W3GPp:BSTation1:CHANnel12:HSDPa:
 HSET:VIBSize1 300000
 SOURce1:BB:W3GPp:BSTation1:CHANnel12:HSDPa:
 HSET:VIBSize2 300000

Manual operation: See "Virtual IR Buffer Size (per HARQ Process) Stream1/2" on page 113

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:MIMO:
CVPB<di> <Cvpb>

The command switches the order of the constellation points of the 16QAM and 64QAM mapping.

The re-arrangement is done according to 3GPP TS25.212.

Parameters:

<Cvpb> 0 | 1 | 2 | 3
 Range: 0 to 3
 *RST: 0

Example:

BB:W3GP:BST1:CHAN12:HSDP:MIMO:CVPB2 1
 selects interchange of MSBs with LSBs for stream 2.

Manual operation:

See ["Constellation Version Parameter b Stream 1/2 - BS"](#) on page 101

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:MIMO:
 MODulation<di> <Modulation>**

Sets the modulation for stream 1 and stream 2 to QPSK, 16QAM or 64QAM.

The modulation 64QAM is available for instruments equipped with option R&S SMW-K83 only.

Parameters:

<Modulation> QPSK | QAM16 | QAM64
 *RST: HSQP

Example:

BB:W3GP:BST1:CHAN12:HSDP:MIMO:MOD1 HS64Q
 sets the modulation of stream 2 to 64QAM

Manual operation:

See ["Modulation Stream 1/2 \(HS-PDSCH MIMO\)"](#) on page 101

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:MIMO:
 PWPattern <PwPattern>**

Sets the precoding weight parameter w2 for MIMO precoding.

The values of the weight parameters w1, w3 and w4 are calculated based on the value for w2 (see [chapter 3.1.15, "MIMO in HSPA+",](#) on page 36).

Parameters:

<PwPattern> string
 *RST: 0

Example:

BB:W3GP:BST1:CHAN12:HSDP:MIMO:PWP "0,1,3"
 selects the pattern.

Manual operation:

See ["Precoding Weight Pattern \(w2\)"](#) on page 101

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:MIMO:
 STAPattern <StaPattern>**

Enables/disables a temporal deactivation of Stream 2 per TTI in form of sending pattern.

The stream 2 sending pattern is a sequence of max 16 values of "1" (enables Stream 2 for that TTI) and "-" (disabled Stream 2 for that TTI).

Parameters:

<StaPattern> string
 *RST: 1

Example:

BB:W3GP:BST1:CHAN12:HSDP:MIMO:STAP "11-"
 selects the pattern.

Manual operation: See ["Stream 2 Active Pattern"](#) on page 101

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:MODE <Mode>

The command selects the HSDPA mode.

Parameters:

<Mode> CONTinuous | PSF0 | PSF1 | PSF2 | PSF3 | PSF4 | HSET

CONTinuous

The high speed channel is generated continuously. This mode is defined in test model 5.

PSFx

The high speed channel is generated in packet mode. The start of the channel is set by selecting the subframe in which the first packet is sent.

HSET

The high speed channels are preset according to TS 25.1401 Annex A.7, H-Set.

*RST: CONTinuous

Example:

BB:W3GP:BST1:CHAN12:HSDP:MODE PSF1
 selects packet mode for channel 12. The first packet is sent in packet subframe 1 (PSF1).

Manual operation: See ["HSDPA Mode"](#) on page 99

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:TTIDistance <TtiDistance>

The command selects the distance between two packets in HSDPA packet mode. The distance is set in number of sub-frames (3 slots = 2 ms). An "Inter TTI Distance" of 1 means continuous generation.

Parameters:

<TtiDistance> integer
 Range: 1 to 16
 *RST: 5

Example:

BB:W3GP:BST1:CHAN12:HSDP:TTID 2
 selects an Inter TTI Distance of 2 subframes.

Manual operation: See ["Inter TTI Distance \(H-Set\)"](#) on page 99

[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:POWer <Power>

Sets the channel power relative to the powers of the other channels. This setting also determines the starting power of the channel for Misuse TPC, Dynamic Power Control and the power control sequence simulation of OCNS mode 3i channels.

With the command `SOURce:BB:W3GPp:POWer:ADJust`, the power of all the activated channels is adapted so that the total power corresponds to 0 dB. This will not change the power ratio among the individual channels.

Parameters:

<Power> float
 Range: -80 to 0
 Increment: 0.01
 *RST: depends on channel

Example:

`BB:W3GP:BST2:CHAN12:POW -10dB`
 sets the channel power of channel 12 of base station 2 to -10 dB relative to the power of the other channels.

Manual operation: See ["Power"](#) on page 86

[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:SFORmat <SFormat>

The command sets the slot format of the selected channel. The value range depends on the selected channel.

The slot format determines the symbol rate (and thus the range of values for the channelization code), the TFCI state and the pilot length. If the value of any one of the four parameters is changed, all the other parameters will be adapted as necessary.

In the case of enhanced channels with active channel coding, the selected channel coding also affects the slot format and thus the remaining parameters. If these parameters are changed, the channel coding type is set to user.

Parameters:

<SFormat> integer
 Range: 0 to dynamic
 *RST: 0

Example:

`BB:W3GP:BST2:CHAN12:SFOR 8`
 selects slot format 8 for channel 12 of base station 2.

Manual operation: See ["Slot Format"](#) on page 85

[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:SRATe <SRate>

The command sets the symbol rate of the selected channel. The value range depends on the selected channel and the selected slot format.

The slot format determines the symbol rate (and thus the range of values for the channelization code), the TFCI state and the pilot length. If the value of any one of the four parameters is changed, all the other parameters will be adapted as necessary.

In the case of enhanced channels with active channel coding, the selected channel coding also affects the slot format and thus the remaining parameters. If these parameters are changed, the channel coding type is set to user.

Parameters:

<SRate> D7K5 | D15K | D30K | D60K | D120k | D240k | D480k | D960k
 *RST: DPCHs D30K; CHAN1..10 D15K; DL-DPCCH (CHAN11) D7K5;

Example:

BB:W3GP:BST2:CHAN12:SRAT D120K
 sets the symbol rate for channel 12 of base station 2 to 120 ksps.

Manual operation: See ["Symbol Rate"](#) on page 86

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:STATe <State>

The command activates the selected channel.

Parameters:

<State> ON | OFF
 *RST: 0

Example:

BB:W3GP:BST2:CHAN12:STAT OFF
 deactivates channel 12 of base station 2.

Manual operation: See ["Channel State"](#) on page 88

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:TOFFset <TOffset>

Sets the timing offset.

Parameters:

<TOffset> integer
 For F-DPCH channels, the value range is 0 to 9.
 *RST: 0

Example:

BB:W3GP:BST2:CHAN12:TOFF 20
 defines a frame shift relative to the scrambling code sequence of 20*256 chips.

Manual operation: See ["Timing Offset"](#) on page 87

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:TYPE <Type>

Sets the channel type.

Parameters:

<Type>

PCPich | SCPich | PSCH | SSCH | PCCPch | SCCPch | PICH |
 APAich | AICH | PDSCch | DPCCh | DPCH | HSSCch | HSQPsk |
 HSQam | HS64Qam | HSMimo | EAGCh | ERGCh | EHICH |
 FDPCh | HS16Qam

The channels types of CHANnel0 to CHANnel18 are predefined.
 For the remaining channels, you can select a channel type from
 the relevant standard channels and the high-speed channels

Example:

SOURcel:BB:W3GPp:BSTation1:CHANnel12:TYPE
 HSQPsk
 selects channel type HS-PDS, QPSK for channel 12

Manual operation: See ["Channel Type"](#) on page 84

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EAGCh:
 IFCoding <IfCoding>**

Enables/disables the information coding.

Parameters:

<IfCoding>

0 | 1 | OFF | ON

0|OFF

corresponds to a standard operation; no coding is performed
 and the data is sent uncoded.

1|ON

you can configure the way the data is coded

*RST: 0

Example:

SOURcel:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
 EAGCh:IFCoding 1
 SOURcel:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
 EAGCh:TTIEdch 2
 SOURcel:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
 EAGCh:TTICount 2
 SOURcel:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
 EAGCh:TTI0:UEID 100
 SOURcel:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
 EAGCh:TTI0:AGVIndex 20
 SOURcel:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
 EAGCh:TTI0:AGSCope PER
 SOURcel:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
 EAGCh:TTI1:UEID 10000
 SOURcel:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
 EAGCh:TTI1:AGVIndex 1
 SOURcel:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
 EAGCh:TTI1:AGSCope ALL

Manual operation: See ["E-AGCH Information Field Coding"](#) on page 146

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EAGCh:
TTI<di0>:AGScope <AGScope>**

Sets the scope of the selected grant. According to the TS 25.321, the impact of each grant on the UE depends on this parameter.

For E-DCH TTI = 10ms, the absolute grant scope is always **ALL** (All HARQ Processes).

Parameters:

<AGScope> ALL | PER

Example:

see [:SOURce<hw>]:BB:W3GPp:BSTation<st>:
CHANnel<ch0>[:HSUPa]:EAGCh:IFCoding on page 410

Manual operation: See "Absolute Grant Scope" on page 147

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EAGCh:
TTI<di0>:AGVIndex <AgvIndex>**

Sets the Index for the selected TTI. According to the TS 25.212 (4.10.1A.1), there is a cross-reference between the grant's index and the grant value.

Parameters:

<AgvIndex> integer
Range: 0 to 31

Example:

see [:SOURce<hw>]:BB:W3GPp:BSTation<st>:
CHANnel<ch0>[:HSUPa]:EAGCh:IFCoding on page 410

Manual operation: See "Absolute Grant Value Index" on page 147

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EAGCh:
TTI<di0>:UEID <Ueid>**

Sets the UE Id for the selected TTI.

Parameters:

<Ueid> integer
Range: 0 to 65535

Example:

see [:SOURce<hw>]:BB:W3GPp:BSTation<st>:
CHANnel<ch0>[:HSUPa]:EAGCh:IFCoding on page 410

Manual operation: See "UEID (A-GCH)" on page 147

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EAGCh:
TTICount <TtiCount>**

Sets the number of configurable TTIs.

Parameters:

<TtiCount> integer
Range: 1 to 10

Example:

```
SOURce1:BB:W3GPp:BSTation1:CHANnel9:TYPE EAGCh
SOURce1:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
EAGCh:TTICount 5
```

Manual operation: See ["Number of Configurable TTIs"](#) on page 147

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EAGCh:TTIEdch <Ttiedch>

Sets the processing duration.

Parameters:

<Ttiedch> 2ms | 10ms
*RST: 2ms

Example:

see [\[:SOURce<hw>\]:BB:W3GPp:BSTation<st>:CHANnel<ch0>\[:HSUPa\]:EAGCh:IFCoding](#) on page 410

Manual operation: See ["E-DCH TTI"](#) on page 146

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:CTYPE <CType>

Sets the cell type.

Parameters:

<CType> SERVing | NOSERVing
*RST: SERVing

Example:

```
SOURce1:BB:W3GPp:BSTation1:CHANnel9:TYPE EHICH
SOURce1:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
EHICH:CTYPE SERVing
SOURce1:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
EHICH:TTIEdch 2ms
SOURce1:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
EHICH:SSINDEX 2
SOURce1:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
EHICH:DTAU 2
SOURce1:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
EHICH:ETAU?
```

Response: 5

```
SOURce1:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
EHICH:RGPattern "+-+-"
SOURce1:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
EHICH:CTYPE NOSERVing
SOURce1:BB:W3GPp:BSTation1:CHANnel9:HSUPa:
EHICH:RGPattern "+0+0"
```


Manual operation: See ["Type of Cell"](#) on page 148

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:DTAU<Dtau>

Sets the offset of the downlink dedicated offset channels.

Suffix:

<ch0> 9..138

Parameters:

<Dtau> integer
Range: 0 to 149
*RST: 0

Example: see [\[:SOURce<hw>\]:BB:W3GPp:BSTation<st>:CHANnel<ch0>\[:HSUPa\]:EHICH:CTYPE](#) on page 412

Manual operation: See ["Tau DPCH"](#) on page 149

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:ETAU?

Queries the offset of the P-CCPCH frame boundary.

Return values:

<Etau> integer
Range: 0 to 149

Example: see [\[:SOURce<hw>\]:BB:W3GPp:BSTation<st>:CHANnel<ch0>\[:HSUPa\]:EHICH:CTYPE](#) on page 412

Usage: Query only

Manual operation: See ["Tau E-RGCH/E-HICH"](#) on page 149

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:RGPattern <RgPattern>

Sets the bit pattern for the ACK/NACK field.

Parameters:

<RgPattern> <32-bit long pattern>
"+" (ACK) and "0" (no signal)
For the non serving cell
"+" (ACK) and "-" (NACK)
For the serving cell
*RST: +

Example: see [\[:SOURce<hw>\]:BB:W3GPp:BSTation<st>:CHANnel<ch0>\[:HSUPa\]:EHICH:CTYPE](#) on page 412

Manual operation: See ["ACK/NACK Pattern"](#) on page 149

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:
SSIndex <SsIndex>**

Sets the value that identifies the user equipment. The values are defined in TS 25.211.

Suffix:

<ch0> 9..138

Parameters:

<SsIndex> integer
Range: 0 to 39
*RST: 0

Example: see [\[:SOURce<hw>\]:BB:W3GPp:BSTation<st>:
CHANnel<ch0>\[:HSUPa\]:EHICH:CTYPe](#) on page 412

Manual operation: See ["Signature Hopping Pattern Index – HSUPA BS"](#)
on page 149

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:
TTIEDch <Ttiedch>**

Sets the processing duration.

Parameters:

<Ttiedch> 2ms | 10ms
*RST: 2ms

Example: see [\[:SOURce<hw>\]:BB:W3GPp:BSTation<st>:
CHANnel<ch0>\[:HSUPa\]:EHICH:CTYPe](#) on page 412

Manual operation: See ["E-DCH TTI"](#) on page 148

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:
CTYPe <CType>**

The command selects the cell type.

Parameters:

<CType> SERVing | NOSERVing
*RST: SERVing

Example: SOUR:BB:W3GP:BST1:CHAN9:HSUP:ERGC:CTYP SERV
selects the serving cell type.

Manual operation: See ["Type of Cell"](#) on page 148

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:DTAU <Dtau>

The command sets the offset of the downlink dedicated offset channels.

Parameters:

<Dtau> integer
 Range: 0 to 149
 *RST: 0

Example: SOUR:BB:W3GP:BST1:CHAN12:HSUP:ERGC:DTAU 5
 sets the offset of the downlink dedicated offset channels.

Manual operation: See ["Tau DPCH"](#) on page 149

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:ETAU?

The command queries the offset of the P-CCPCH frame boundary.

Return values:

<Etau> integer
 Range: 0 to 149

Example: SOUR:BB:W3GP:BST1:CHAN12:HSUP:ERGC:ETAU?
 queries the offset of the P-CCPCH frame boundary.

Usage: Query only

Manual operation: See ["Tau E-RGCH/E-HICH"](#) on page 149

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:RGPattern <RgPattern>

The command sets the bit pattern for the Relative Grant Pattern field.

Parameters:

<RgPattern> string

Example: SOUR:BB:W3GP:BST1:CHAN10:HSUP:ERGC:RGPA "-"
 sets the bit pattern to "-" (Down).

Manual operation: See ["Relative Grant Pattern"](#) on page 149

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:SSIndex <SsIndex>

The command sets the value that identifies the user equipment. The values are defined in TS 25.211.

Parameters:

<SsIndex> integer
 Range: 0 to 39
 *RST: 0

Example:

SOUR:BB:W3GP:BST1:CHAN9:HSUP:ERGC:SSIN 0
 sets the value to identify the user equipment.

Manual operation:

See ["Signature Hopping Pattern Index – HSUPA BS"](#) on page 149

[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:TTIEdch <Ttiedch>

The command sets processing duration.

Parameters:

<Ttiedch> 2ms | 10ms
 *RST: 2ms

Example:

SOUR:BB:W3GP:BST1:CHAN10:HSUP:ERGC:TTIE 2ms
 sets the processing duration to 2 ms.

Manual operation:

See ["E-DCH TTI"](#) on page 148

[SOURce<hw>]:BB:W3GPp:BSTation<st>:CMODE:DLFStructure <DlfStructure>

The command selects the frame structure. The frame structure determines the transmission of TPC and pilot field in the transmission gaps.

Parameters:

<DlfStructure> A | B
A
 Type A, the pilot field is sent in the last slot of each transmission gap.
B
 Type B, the pilot field is sent in the last slot of each transmission gap. The first TPC field of the transmission gap is sent in addition.
 *RST: A

Example:

BB:W3GP:BST2:CMOD:DLFS A
 selects frame structure of type A.

Manual operation:

See ["DL Frame Structure - BS"](#) on page 94

[SOURce<hw>]:BB:W3GPp:BSTation<st>:CMODE:METHod <Method>

The command selects compressed mode method.

Parameters:

<Method>

PUNCTuring | HLSCheduling | SF2

PUNCTuring

The data is compressed by reducing error protection.

HLSCheduling

The data is compressed by stopping the transmission of the data stream during the transmission gap.

SF2

The data is compressed by halving the spreading factor.

*RST: SF2

Example:

BB:W3GP:BST2:CMOD:METH HLSC

selects compressed mode method High Layer Scheduling.

Manual operation: See ["Compressed Mode Method - BS"](#) on page 94**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CMODE:PATtern<ch>:TGD <Tgd>**

Sets the transmission gap distances.

Parameters:

<Tgd>

integer

Range: 3 to 100

*RST: 15

Example:

BB:W3GP:BST2:CMOD:PATT2:TGD 7

sets transmission gap distance of pattern 2 to 7 slots.

Manual operation: See ["Distance"](#) on page 96**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CMODE:PATtern<ch>:TGL<di> <Tgl>**

Sets the transmission gap lengths.

Parameters:

<Tgl>

integer

Range: 3 to 14

*RST: 3

Example:

BB:W3GP:BST2:CMOD:PATT2:TGL1 4

sets transmission gap length of gap 1 of pattern 2 to 4 slots.

Manual operation: See ["Gap Len:"](#) on page 96**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CMODE:PATtern<ch>:TGPL <Tgpl>**

The command sets the transmission gap pattern lengths. Setting 0 is available only for pattern 2.

The transmission gap pattern length of the user equipment with the same suffix as the selected base station is set to the same value.

Parameters:

<Tgpl> integer
 Range: 0 to 100
 *RST: 2

Example:

BB:W3GP:BST2:CMOD:PATT2:TGPL 7
 sets transmission gap pattern length of pattern 2 to 7 frames.

Manual operation: See ["Pattern Len:"](#) on page 97

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:CMODE:PATtern<ch>:TGSN <Tgsn>

Sets the transmission gap slot number of pattern 1.

Parameters:

<Tgsn> integer
 Range: 0 to 14
 *RST: 7

Example:

BB:W3GP:BST2:CMOD:PATT:TGSN 4
 sets slot number of pattern 1 to slot 4.

Manual operation: See ["At Slot:"](#) on page 96

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>|MSTation<st>:CMODE:POFFset
 <POffset>**

The command sets the power offset for mode USER.

Parameters:

<POffset> float
 Range: 0 dB to 10 dB
 Increment: 0.01 dB
 *RST: 0 dB

Example:

BB:W3GP:BST2|UE2:CMOD:POFF 4
 sets the power offset value to 4 dB.
 BB:W3GP:BST2|UE2:CMOD:POM USER
 selects power offset mode USER

Manual operation: See ["Power Offset"](#) on page 95

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>|MSTation<st>:CMODE:POMode
 <PoMode>**

The command selects the power offset mode.

Parameters:

<PoMode> AUTO | USER

AUTO

The power offset is obtained by pilot bit ratio as follows:

Number of pilots bits of non-compressed slots / Number of pilot bits by compressed slots.

USERThe power offset is defined by command `[:SOURce<hw>] :BB:W3GPp:BSTation<st> | MSTation<st> :CMODE:POFFset.``*RST: AUTO`**Example:**`BB:W3GP:BST2 | UE2:CMOD:POFF 4`

sets the power offset value to 4 dB.

`BB:W3GP:BST2 | UE2:CMOD:POM USER`

selects power offset mode USER.

Manual operation: See ["Power Offset Mode"](#) on page 95**[:SOURce<hw>] :BB:W3GPp:BSTation<st> :CMODE:STATe <State>**

The command activates/deactivates the compressed mode.

Parameters:

<State> ON | OFF

`*RST: 0`**Example:**`BB:W3GP:BST2:CMOD:STAT ON`

activates compressed mode for base station 2.

Manual operation: See ["Compressed Mode State"](#) on page 93**[:SOURce<hw>] :BB:W3GPp:BSTation<st> :DCONflict:RESolve**

The command resolves existing domain conflicts by modifying the Channelization Codes of the affected channels.

Example:`BB:W3GP:BST2:DCON:STAT?`

queries whether a code domain conflict exists for base station 2.

Response: 1

there is a conflict.

`BB:W3GP:BST2:DCON:RES`

resolves the code domain error by modifying the Channelization codes of the affected channels.

Usage:

Event

Manual operation: See ["Domain Conflict, Resolving Domain Conflicts"](#) on page 88

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:DCONflict[:STATe]?]

The command queries whether there is (response 1) or is not (response 0) a conflict (overlap) in the hierarchically-structured channelization codes. The cause of a possible domain conflict can be ascertained by manual operation in the "BS > Code Domain" dialog.

Return values:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

BB:W3GP:BST2:DCON:STAT?
 queries whether a code domain conflict exists for base station 2.
 Response: 0
 there is no conflict.

Usage: Query only

Manual operation: See ["Domain Conflict, Resolving Domain Conflicts"](#) on page 88

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:OLTDiversity <OltDiversity>]

Activates/deactivates open loop transmit diversity.

The antenna whose signal is to be simulated is selected with the command [:
[SOURce<hw>\]:BB:W3GPp:BSTation<st>:TDIVersity.](#)

Parameters:

<OltDiversity> ON | OFF
 *RST: OFF

Example:

BB:W3GP:BST2:TDIV ANT2
 calculates and applies the output signal for antenna 2 of one
 two-antenna system.
 BB:W3GP:BST2:OLTD ON
 enables open loop transmit diversity.

Manual operation: See ["Open Loop Transmit Diversity"](#) on page 81

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:PINDicator:COUNT <Count>]

The command sets the number of page indicators (PI) per frame in the page indicator channel (PICH).

Parameters:

<Count> D18 | D36 | D72 | D144
 *RST: D18

Example:

BB:W3GP:BST2:PIND:COUN D36
 sets the number of page indicators (PI) per frame in the page
 indicator channel (PICH) to 36.

Manual operation: See ["Page Indicators/Frame"](#) on page 80

[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:SCODE <SCode>

Sets the identification for the base station. This value is simultaneously the initial value of the scrambling code generator.

Parameters:

<SCode> integer
 Range: #H0 to #H5FFF
 *RST: #H0

Example: BB:W3GP:BST2:SCOD #H1FFF
 sets the scrambling code

Manual operation: See ["Scrambling Code"](#) on page 80

[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:SCODE:STATe <State>

The command makes it possible to deactivate base station scrambling for test purposes.

Parameters:

<State> ON | OFF
 *RST: ON

Example: BB:W3GP:BST2:SCOD:STAT OFF
 deactivates scrambling for base station 2.

Manual operation: See ["Scrambling Code"](#) on page 80

[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:SCPich:PREFere[nce[:STATe] <State>

The command activates or deactivates the use of S-CPICH as reference phase.

Parameters:

<State> ON | OFF
 *RST: 0

Example: BB:W3GP:BST2:SCP:REF ON
 activates the use of S-CPICH as reference phase for base station 2.

Manual operation: See ["S-CPICH as Phase Reference"](#) on page 81

[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:SSCG?

The command queries the secondary synchronization code group. This parameter is specified in the table defined by the 3GPP standard "Allocation of SSCs for secondary SCH". This table assigns a specific spreading code to the synchronization code symbol for every slot in the frame. The value is calculated from the scrambling code.

Return values:

<Sscg> integer
 Range: 0 to 63

Example: `BB:W3GP:BST2:SSCG?`
 queries the 2nd search code group for base station 2.
 Response: 24
 the base station is part of second search group 24.

Usage: Query only

Manual operation: See ["2nd Search Code Group"](#) on page 80

[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:STATe <State>

Activates and deactivates the specified base station.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1 (BSTation1), 0 (all other)

Example: `BB:W3GP:BST2:STAT OFF`
 deactivates base station 2.

Manual operation: See ["Select Basestation/User Equipment"](#) on page 69

[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:TDElay <Tdelay>

The command sets the time shift of the selected base station compared to base station 1 in chips.

Parameters:

<Tdelay> integer
 Range: 0 chips to 38400 chips
 *RST: 0 chips

Example: `BB:W3GP:BST2:TDEL 256`
 shifts base station 2 by 256 chips compared to base station 1.

Manual operation: See ["Time Delay"](#) on page 80

[[:SOURce<hw>]:BB:W3GPp:BSTation<st>:TDIVersity <TDiversity>

Selects the antenna and the antenna configuration to be simulated.

To simulate transmit diversity, a two-antenna system has to be selected and Open Loop Transmit Diversity has to be activated (command `BB:W3GP:BST:OLTD ON`).

Parameters:

<TDiversity> SANT | ANT1 | ANT2 | OFF
 SANT = single-antenna system
 *RST: SANT

Example: `BB:W3GP:BST2:TDIV ANT2`
 the signal of antenna 2 of one two-antenna system is simulated.

Manual operation: See ["Diversity / MIMO"](#) on page 80

8.8 Enhanced Channels of Base Station 1

The `SOURce:BB:W3GPp:BSTation:ENHanced` subsystem contains the commands for setting the enhanced channels of base station 1. The commands of this system only take effect when the 3GPP FDD standard is activated, the downlink transmission direction is selected, base station 1 is enabled and enhanced channels are activated:

```
SOURce:BB:W3GPp:STATe ON
```

```
SOURce:BB:W3GPp:LINK DOWN
```

```
SOURce:BB:W3GPp:BST1:STATe ON
```

```
SOURce:BB:W3GPp:BST:ENHanced:CHANnel<11...13>:DPCH:STATe ON
```

or

```
SOURce:BB:W3GPp:BST:ENHanced:PCCPch:STATe ON
```

BSTation<st>

The numeric suffix to `BSTation` determines the base station. Enhanced channels are enabled for base station 1 only.

CHANnel<ch0>

The value range is `CHANnel<11|12|13>` for enhanced DPCHs and `CHANnel<4>` for P-CCPCH.

TCHannel<di>

The transport channel designations for remote control are `TCHannel0` for DCCH, `TCHannel1` to `TCHannel6` for DTCH1 to DTCH6.

8.8.1 General Settings

<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:STATe</code>	423
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:PCCPch:STATe</code>	424
<code>[SOURce<hw>]:BB:W3GPp:BSTation<st>:ENHanced:PCPich:PATtern</code>	424

`[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:STATe`
`<State>`

The command switches the selected channel to the enhanced state.

Parameters:

`<State>` ON | OFF
*RST: 0

Example: `BB:W3GP:BST:ENH:CHAN13:DPCH:STAT ON`
switches DPCH 13 to Enhanced State.

Manual operation: See ["Enhanced State"](#) on page 123

[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:PCCPch:STATe <State>

The command activates or deactivates the enhanced state of the P-CCPCH (BCH).

Parameters:

<State> ON | OFF
 *RST: OFF

Example: BB:W3GP:BST:ENH:PCCP:STAT ON
 switches the P-CCPCH to Enhanced State.

Manual operation: See ["State \(Enhanced P-CCPCH\)"](#) on page 121

[:SOURce<hw>]:BB:W3GPp:BSTation<st>:ENHanced:PCPich:PATtern <Pattern>

Sets the P-CPICh pattern (channel 0).

Parameters:

<Pattern> ANT1 | ANT2
 *RST: ANT1

Example: BB:W3GP:BST2:ENH:PCP:PATT ANT2
 sets the P-CPICH Pattern to Antenna 2.

Manual operation: See ["P-CPICH Pattern "](#) on page 120

8.8.2 Channel Coding

[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel:DPCH:CCODing:USER:DELeTe.....	425
[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:BPFRame?.....	425
[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:SFORmat.....	426
[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:SRATe?.....	426
[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:STATe.....	427
[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:TYPE.....	427
[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel:DPCH:CCODing:USER:CATalog?.....	429
[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:USER:LOAD.....	429
[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:USER:STORe.....	429
[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:INTerleaver2.....	430
[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:CRCSiZe.....	430
[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:DATA.....	431
[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:DATA:DSElect.....	431

<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:</code>	
<code> TCHannel<di0>:DATA:PATtern.....</code>	432
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:</code>	
<code> TCHannel<di0>:DTX.....</code>	432
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:</code>	
<code> TCHannel<di0>:EPRotectiOn.....</code>	432
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:</code>	
<code> TCHannel<di0>:INTerleaver.....</code>	433
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:</code>	
<code> TCHannel<di0>:RMAtributE.....</code>	433
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:</code>	
<code> TCHannel<di0>:STATe.....</code>	434
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:</code>	
<code> TCHannel<di0>:TBCount.....</code>	434
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:</code>	
<code> TCHannel<di0>:TBSiZe.....</code>	434
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:</code>	
<code> TCHannel<di0>:TTINterval.....</code>	435
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:PCCPch:CCODing:INTerleaver<di>.....</code>	435
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:PCCPch:CCODing:STATe.....</code>	435
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:PCCPch:CCODing:TYPE?</code>	435

`[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel:DPCH:CCODing:`
`USER:DELeTe <Filename>`

Deletes the specified files with stored user channel codings.

The files are stored with the fixed file extensions `*.3g_ccod_dl` in a directory of the user's choice. The directory applicable to the commands is defined with the command `MMEMory:CDIR`. To access the files in this directory, you only have to give the file name, without the path and the file extension.

Setting parameters:

`<Filename>` string

Example: `MMEM:CDIR '/var/user/temp/CcodDpchUser'`
 selects the directory for the user channel coding files.
 `BB:W3GP:BST:ENH:CHAN:DPCH:CCOD:USER:DEL`
 `'user_cc1'`
 deletes the specified file with user coding.

Usage: Setting only

`[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:`
`CCODing:BPFRame?`

Queries the number of data bits in the DPDCH component of the frame at the physical layer.

Return values:

<BpFrame> integer
 Range: 30 to 20000
 *RST: 510

Example:

BB:W3GP:BST:ENH:CHAN13:DPCH:CCOD:BPFR?
 queries the number of data bits.
 Response: 1
 the number of data bits is 1.

Usage:

Query only

Manual operation: See "Bits per Frame (DPDCH)" on page 127

[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:SFORmat <SFormat>

The command sets the slot format for the selected enhanced DPCH of base station 1. The slot format is fixed for channel-coded measurement channels conforming to the standard - "Reference Measurement Channel". Changing the slot format automatically activates User coding (W3GP:BST:ENH:CHAN<11...13>:DPCH:CCOD:TYPE USER). The slot format also fixes the symbol rate, bits per frame, pilot length and TFCI state parameters.

When a channel coding type conforming to the standard is selected ([:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:TYPE) and channel coding is activated, the slot format is ([:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:STATE) automatically set to the associated value.

Changing the slot format automatically activates User coding (W3GP:BST:ENH:CHAN<11...13>:DPCH:CCOD:TYPE USER).

The command sets the symbol rate (W3GP:BST:ENH:CHAN:DPCH:CCOD:SRAT), the bits per frame (W3GP:BST:ENH:CHAN:DPCH:CCOD:BPFR), the pilot length (W3GP:BST1:CHAN:DPCC:PLEN), and the TFCI state (W3GP:BST1:CHAN:DPCC:TFCI STAT) to the associated values.

Parameters:

<SFormat> integer
 Range: 0 to dynamic
 *RST: 0

Example:

BB:W3GP:BST:ENH:CHAN13:DPCH:CCOD:SFOR 4
 sets slot format 4 for Enhanced DPCH13.

Manual operation: See "Slot Format (DPDCH)" on page 127

[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:SRATe?

The command queries the symbol rate.

The symbol rate depends on the selected slot format (`[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:SFOFormat`), and if the slot format changes, this changes automatically as well.

Return values:

`<SRate>` D7K5 | D15K | D30K | D60K | D120k | D240k | D480k | D960k |
D1920k | D2880k | D3840k | D4800k | D5760k | D2X1920K |
D2X960K2X1920K
*RST: D30K

Example:

BB:W3GP:BST:ENH:CHAN13:DPCH:CCOD:SRAT?
queries the symbol rate.
Response: 'D30K'
the symbol rate of Enhanced DPCH 13 is 30 ksp/s.

Usage: Query only

Manual operation: See "[Symbol Rate \(DPDCH\)](#)" on page 127

[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:STATe <State>

The command activates or deactivates channel coding for the selected enhanced DPCH.

When channel coding is activated and a channel coding type conforming to the standard is selected, (`BB:W3GP:BST:ENH:CHAN:DPCH:CCOD:TYPE`) the slot format, (`BB:W3GP:BST:ENH:CHAN:DPCH:CCOD:SFOR`) and thus the symbol rate, (`BB:W3GP:BST:ENH:CHAN:DPCH:CCOD:SRAT`) the bits per frame, (`BB:W3GP:BST:ENH:CHAN:DPCH:CCOD:BPFR`), the pilot length (`BB:W3GP:BST1:CHAN:DPCC:PLEN`) and the TFCI state (`BB:W3GP:BST1:CHAN:DPCC:TFCI STAT`) are set to the associated values.

Parameters:

`<State>` ON | OFF
*RST: OFF

Example:

BB:W3GP:BST:ENH:CHAN13:DPCH:CCOD:TYPE M12K2
selects channel coding type RMC 12.2 kbps for Enhanced DPCH 13.
BB:W3GP:BST:ENH:CHAN13:DPCH:CCOD:STAT ON
activates channel coding.

Manual operation: See "[Channel Coding State](#)" on page 125

[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:TYPE <Type>

The command selects the channel coding scheme in accordance with the 3GPP specification.

The 3GPP specification defines 4 reference measurement channel coding types, which differ in the input data bit rate to be processed (12.2, 64, 144 and 384 kbps). The additional AMR CODER coding scheme generates the coding of a voice channel. The BTFD coding types with different data rates are also defined in the 3GPP specification (TS 34.121). They are used for the receiver quality test Blind Transport Format Detection.

When a channel coding type conforms to the standard and channel coding is activated, (:BB:W3GP:BST:ENH:CHAN<n>:DPCH:CCOD:STAT) the slot format (:BB:W3GP:BST:ENH:CHAN<n>:DPCH:CCOD:SFOR) and thus the symbol rate (:BB:W3GP:BST:ENH:CHAN<n>:DPCH:CCOD:SRAT), the bits per frame, (:BB:W3GP:BST:ENH:CHAN<n>:DPCH:CCOD:BPFR), the pilot length (:BB:W3GP:BST1:CHAN<n>:DPCC:PLEN) and the TFCI state (:BB:W3GP:BST1:CHAN<n>:DPCC:TFCI:STAT) are set to the associated values.

Parameters:

<Type>	M12K2 M64K M144k M384k AMR BTFD1 BTFD2 BTFD3
M12K2	Measurement channel with an input data bit rate of 12.2 kbps.
M64K	Measurement channel with an input data bit rate of 64 kbps.
M144k	Measurement channel with an input data bit rate of 144 kbps.
M384k	Measurement channel with an input data bit rate of 384 kbps.
AMR	Channel coding for the AMR Coder (coding a voice channel).
USER	This parameter cannot be set. USER is returned whenever a user-defined channel coding is active, that is to say, after a channel coding parameter has been changed or a user coding file has been loaded. The file is loaded by the command [:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:USER:LOAD.
BTFD1	Blind Transport Format Detection Rate 1 (12.2 kbps).
BTFD2	Blind Transport Format Detection Rate 2 (7.95 kbps).
BTFD3	Blind Transport Format Detection Rate 3 (1.95 kbps).
*RST:	M12K2
Example:	BB:W3GP:BST:ENH:CHAN13:DPCH:CCOD:TYPE M144 selects channel coding scheme RMC 144 kbps.
Manual operation:	See "Channel Coding Type" on page 126

[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel:DPCH:CCODing:USER:CATalog?

Queries existing files with stored user channel codings.

The files are stored with the fixed file extensions *.3g_ccod_d1 in a directory of the user's choice. The directory applicable to the commands is defined with the command `MMEMory:CDIR`.

Return values:

<Catalog> string

Example:

```
MMEM:CDIR '/var/user/temp/CcodDpchUser'
selects the directory for the user channel coding files.
BB:W3GP:BST:ENH:CHAN:DPCH:CCOD:USER:CAT?
queries the existing files with user coding.
Response: user_cc1
there is one file with user coding.
```

Usage: Query only

Manual operation: See ["User Coding"](#) on page 126

[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:USER:LOAD <Filename>

The command loads the specified files with stored user channel codings.

The files are stored with the fixed file extensions *.3g_ccod_d1 in a directory of the user's choice. The directory applicable to the commands is defined with the command `MMEMory:CDIR`. To access the files in this directory, you only have to give the file name, without the path and the file extension.

Setting parameters:

<Filename> <user_coding>

Example:

```
MMEM:CDIR '/var/user/temp/CcodDpchUser'
selects the directory for the user channel coding files.
BB:W3GP:BST:ENH:CHAN13:DPCH:CCOD:USER:LOAD
'user_cc1'
loads the specified file with user coding.
```

Usage: Setting only

Manual operation: See ["User Coding"](#) on page 126

[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:USER:STORe <Filename>

The command saves the current settings for channel coding as user channel coding in the specified file.

The files are stored with the fixed file extensions *.3g_ccod_d1 in a directory of the user's choice. The directory in which the file is stored is defined with the command `MMEMory:CDIR`. To store the files in this directory, you only have to give the file name, without the path and the file extension.

Setting parameters:

<Filename> string

Example:

```
MMEM:CDIR '/var/user/temp/CcodDpchUser'
selects the directory for the user channel coding files.
BB:W3GP:BST:ENH:CHAN13:DPCH:CCOD:USER:STOR
'user_cc1'
saves the current channel coding setting in file user_cc1 in
directory /var/user/temp/CcodDpchUser.
```

Usage: Setting only

Manual operation: See ["User Coding"](#) on page 126

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
INTerleaver2 <Interleaver2>**

The command activates or deactivates channel coding interleaver state 2 for the selected channel.

Interleaver state 2 is activated or deactivated for all the transport channels together. Interleaver state 1 can be activated and deactivated for each transport channel individually (command `[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:INTerleaver`).

Note: The interleaver states do not cause the symbol rate to change.

Parameters:

<Interleaver2> ON | OFF
*RST: ON

Example:

```
BB:W3GP:BST:ENH:CHAN13:DPCH:INT OFF
deactivates channel coding interleaver state 2 for all the TCHs of
DPCH13.
```

Manual operation: See ["Interleaver 2 State"](#) on page 130

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
TCHannel<di0>:CRCSize <CrcSize>**

The command defines the CRC length for the selected transport channel. It is also possible to deactivate checksum determination.

Parameters:

<CrcSize> NONE | 8 | 12 | 16 | 24
*RST: 16

Example:

```
BB:W3GP:BST:ENH:CHAN13:DPCH:TCH0:CRCS NONE
deactivates checksum determination for the DCCH of DPCH13.
```

Manual operation: See "Size of CRC" on page 129

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
TCHannel<di0>:DATA <Data>**

The command determines the data source for the data fields of enhanced channels with channel coding. If channel coding is not active, the DPCH data source is used (:SOURce:BB:W3GPp:BST:CHANnel:DATA).

Parameters:

<Data>

PN9 | PN11 | PN15 | PN16 | PN20 | PN21 | PN23 | DLISt |
ZERO | ONE | PATTErn |

PNxx

The pseudo-random sequence generator is used as the data source. Different random sequence lengths can be selected.

DLISt

A data list is used. The data list is selected with the command

[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:
CHANnel<ch0>:DPCH:TCHannel<di0>:DATA:DSElect.

ZERO | ONE

Internal 0 and 1 data is used.

PATTErn

Internal data is used. The bit pattern for the data is defined with the command [:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:DATA:PATTErn.

*RST: PN9

Example:

BB:W3GP:BST:ENH:CHAN13:DPCH:TCH1:DATA PATT
selects the Pattern data source for the data fields of DTCH1 of DPCH13. The bit pattern is defined with the following command.
BB:W3GP:BST:ENH:CHAN13:DPCH:TCH1:DATA:PATT
#H3F, 8
defines the bit pattern.

Manual operation: See "Data Source" on page 128

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
TCHannel<di0>:DATA:DSElect <DSelect>**

The command selects the data list for enhanced channels for the DLISt selection.

The files are stored with the fixed file extensions *.dm_iqd in a directory of the user's choice. The directory applicable to the commands is defined with the command MME-Mory:CDIR. To access the files in this directory, you only have to give the file name, without the path and the file extension.

Parameters:

<DSelect>

string

Example: BB:W3GP:BST:ENH:CHAN13:DPCH:TCH1:DATA DLIS
 selects the Data Lists data source for DTCH1 of DPCH13.
 MMEM:CDIR '/var/user/temp/IQData'
 selects the directory for the data lists.
 BB:W3GP:BST:ENH:CHAN13:DPCH:TCH1:DATA:DSEL
 'bts_tch'
 selects the file bts_tch as the data source.

Manual operation: See ["Data Source"](#) on page 128

**[[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
 TCHannel<di0>:DATA:PATtern <Pattern>**

The command determines the bit pattern for the PATtern selection. The maximum length is 64 bits.

Parameters:

<Pattern> 64 bits
 *RST: #H0,1

Example: BB:W3GP:BST:ENH:CHAN13:DPCH:TCH1:DATA:PATT
 #H3F, 8
 defines the bit pattern.

Manual operation: See ["Data Source"](#) on page 128

**[[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
 TCHannel<di0>:DTX <Dtx>**

The command sets the number of DTX (Discontinuous Transmission) bits. These bits are entered in the data stream between rate matching and interleaver 1 and used for the BTFD reference measurement channels rate 2 and rate 3.

Parameters:

<Dtx> integer
 Range: 0 to 1024
 *RST: 0

Example: BB:W3GP:BST:ENH:CHAN13:DPCH:TCH1:DTX 257
 257 bits are entered in the data stream between rate matching and interleaver 1.

Manual operation: See ["DTX Indication Bits"](#) on page 130

**[[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
 TCHannel<di0>:EPProtection <EProtection>**

The command determines the error protection.

Note:

The transport channel designations for remote control are TCHannel0 for DCCH, TCHannel1 to TCHannel6 for DTCH1 to DTCH6.

Parameters:

<EProtection> NONE | TURBo3 | CON2 | CON3

NONE
No error protection

TURBo3
Turbo Coder of rate 1/3 in accordance with the 3GPP specifications.

CON2 | CON3
Convolution Coder of rate ½ or 1/3 with generator polynomials defined by 3GPP.

*RST: CON3

Example:

BB:W3GP:BST:ENH:CHAN13:DPCH:TCH1:EPR NONE
error protection for transport channel DTCH1 of DPCH13 is deactivated.

Manual operation: See "Error Protection" on page 130

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
TCHannel<di0>:INTerleaver <Interleaver>**

The command activates or deactivates channel coding interleaver state 1 for the selected channel.

Interleaver state 1 can be activated and deactivated for each transport channel individually. The channel is selected via the suffix at TCHannel.

Interleaver state 2 can only be activated or deactivated for all the transport channels together ([:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:INTerleaver2).

Note: The interleaver states do not cause the symbol rate to change.

Parameters:

<Interleaver> ON | OFF

*RST: ON

Manual operation: See "Interleaver 1 State" on page 130

The transport channel designations for remote control are TCHannel0 for DCCH, TCHannel1 to TCHannel6 for DTCH1 to DTCH6.

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
TCHannel<di0>:RMAtribute <RmAttribute>**

Sets data rate matching.

Parameters:

<RmAttribute> integer
 Range: 1 to 1024
 *RST: 256

Example:

BB:W3GP:BST:ENH:CHAN13:DPCH:TCH1:RMAT 1024
 sets the rate matching attribute for DTCH1 of DPCH13 to 1024.

Manual operation: See ["Rate Matching Attribute"](#) on page 129

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
 TCHannel<di0>:STATe <State>**

The command activates/deactivates the selected transport channel.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

BB:W3GP:BST:ENH:CHAN13:DPCH:TCH1:STAT ON
 activates DTCH1 of DPCH13.

Manual operation: See ["Transport Channel State"](#) on page 128

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
 TCHannel<di0>:TBCount <TbCount>**

Defines the number of blocks used for the selected transport channel.

Parameters:

<TbCount> integer
 Range: 1 to 24
 *RST: 1

Example:

BB:W3GP:BST:ENH:CHAN13:DPCH:TCH:TBC 4
 sets 4 transport blocks for DTCH1 of DPCH13.

Manual operation: See ["Transport Block"](#) on page 129

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
 TCHannel<di0>:TBSize <TbSize>**

Sets the size of the data blocks.

Parameters:

<TbSize> integer
 Range: 0 to 4096

Example:

BB:W3GP:BST:ENH:CHAN13:DPCH:TCH:TBS 1024
 sets the length of the transport blocks for DTCH1 of DPCH13 to 1024.

Manual operation: See ["Transport Block Size"](#) on page 129

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
TCHannel<di0>:TTInterval <TtInterval>**

Sets the number of frames into which a TCH is divided. This setting also defines the interleaver depth.

Parameters:

<TtInterval> 10MS | 20MS | 40MS

Example:

SOURce1:BB:W3GPp:BSTation:ENHanced:CHANnel13:
DPCH:TCHannel1:TTInterval 20ms
sets that DTCH1 of DPCH13 is divided into 2 frames.

Manual operation: See ["Transport Time Interval"](#) on page 129

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:PCCPch:CCODing:
INTerleaver<di> <Interleaver>**

The command activates or deactivates channel coding interleaver state 1 or 2 for the P-CCPCH.

Note: The interleaver states do not cause the symbol rate to change.

Parameters:

<Interleaver> ON | OFF

*RST: ON

Example:

BB:W3GP:BST:ENH:PCCP:CCOD:INT1 OFF
deactivates channel coding interleaver state 1 for the P-CCPCH.

Manual operation: See ["Interleaver"](#) on page 122

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:PCCPch:CCODing:STATe
<State>**

The command activates or deactivates channel coding for the enhanced P-CCPCH. The coding scheme of the P-CCPCH (BCH) is defined in the standard.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

BB:W3GP:BST:ENH:PCCP:CCOD:STAT ON
activates channel coding for the enhanced P-CCPCH.

Manual operation: See ["Channel Coding State"](#) on page 122

[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:PCCPch:CCODing:TYPE?

The command queries the channel coding scheme in accordance with the 3GPP specification. The coding scheme of the P-CCPCH (BCH) is defined in the standard. The channel is generated automatically with the counting system frame number (SFN). The system information after the SFN field is completed from the selected data source.

Return values:

<Type> BCHSfn
 *RST: BCHSfn

Example:

BB:W3GPp:BSTation:ENHanced:PCCP:CCOD:TYPE?
 queries the channel coding scheme of the P-CCPCH.
 Response: 'BCHS'
 the channel coding scheme with SFN is used.

Usage:

Query only

Manual operation: See "Channel Coding Type" on page 122

8.8.3 Dynamic Power Control Settings

(not supported in Baseband C/D)

Suffixes

SOURce<hw>: value range [1]|2

Example: Configuring the Dynamic Power Control Settings

The following is a simple programming example with the purpose to show **all** commands for this task. In real application, some of the commands may be omitted.

```
SOURce:BB:W3GPp:BSTation:ENHanced:CHAN11:DPCH:DPControl:DIRection UP
// selects direction up, a high level of the control signals
// leads to an increase of the channel power
SOURce:BB:W3GPp:BSTation:ENHanced:CHAN11:DPCH:DPControl:STEP 1 dB
// selects a step width of 1 dB.
// A high level of the control signal leads to
// an increase of 1 dB of the channel power,
// a low level to a decrease of 1 dB.
SOURce:BB:W3GPp:BSTation:ENHanced:CHAN11:DPCH:DPControl:RANGe:DOWN 10 dB
// selects a dynamic range of 10 dB for ranging up the channel power
SOURce:BB:W3GPp:BSTation:ENHanced:CHAN11:DPCH:DPControl:RANGe:UP 50 dB
// selects a dynamic range of 50 dB for ranging up the channel power
// The overall increase and decrease of channel power,
// i.e. the dynamic range is limited to 60 dB
SOURce:BB:W3GPp:BSTation:ENHanced:CHAN11:DPCH:DPControl:MODE TPC
// selects the source of the power control signal
SOURce:BB:W3GPp:BSTation:ENHanced:CHAN11:DPCH:DPControl:STATe ON
// activates Dynamic Power Control for DPCH 11
SOURce:BB:W3GPp:BSTation:ENHanced:CHAN11:DPCH:DPControl:POWER?
// queries the deviation of the channel power of DPCH 11
```

[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DPControl:
 DIRection.....437

[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DPControl:
 CONNector..... 437

[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DPControl:MODE.438

<code>[SOURce<hw>]:BB:W3GPp:BSTation<st>:ENHanced:CHANnel<ch0>:DPCH:</code>	
<code>DPControl:RANGe:UP.....</code>	438
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DPControl:</code>	
<code>RANGe:DOWN.....</code>	438
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DPControl:</code>	
<code>STATe.....</code>	438
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DPControl:</code>	
<code>STEP:MANual.....</code>	439
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DPControl:</code>	
<code>STEP[:EXTernal].....</code>	439
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DPControl[:</code>	
<code>POWER]?</code>	439

`[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:`
`DPControl:DIRection <Direction>`

The command selects the Dynamic Power Control direction. The selected mode determines if the channel power is increased (UP) or decreased (DOWN) by a control signal with high level.

Parameters:

`<Direction>` UP | DOWN
 *RST: UP

Example: see [example "Configuring the Dynamic Power Control Settings"](#) on page 436

Manual operation: See ["Direction"](#) on page 135

`[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:`
`DPControl:CONNector <Connector>`

Determines the input connector at that the instrument expects the external control signal.

Parameters:

`<Connector>` LOCAL | GLOBAL
 *RST: LOCAL

Example: External control signal at the local TM3 connector of Baseband A.

```
SOURce1:INPut:TM3:DIRection INPut
SOURce1:INPut:TM3:SIGNAL FEEDback
SOURce1:BB:W3GPp:BSTation:ENHanced:CHANnel12:
DPCH:DPControl:CONNector LOCAL
```

Example: External control signal at the global USER6 connector.

```
SOURce:INPut:USER6:DIRection INPut
SOURce:INPut:USER6:SIGNAL FEEDback
SOURce1:BB:W3GPp:BSTation:ENHanced:CHANnel12:
DPCH:DPControl:CONNector GLOBAL
```

Manual operation: See ["Connector"](#) on page 135

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
DPControl:MODE <Mode>**

The command selects the control signal source for Dynamic Power Control.

Parameters:

<Mode> TPC | MANual
*RST: TPC

Example: see [example "Configuring the Dynamic Power Control Settings"](#)
on page 436

Manual operation: See ["Mode"](#) on page 135

**[:SOURce<hw>]:BB:W3GPp:BSTation<st>:ENHanced:CHANnel<ch0>:DPCH:
DPControl:RANGE:UP <Up>**
**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
DPControl:RANGE:DOWN <Down>**

The command selects the dynamic range for ranging down the channel power.

Parameters:

<Down> float
Range: 0 to 60
Increment: 0.01
*RST: 10
Default unit: dB

Example: see [example "Configuring the Dynamic Power Control Settings"](#)
on page 436

Manual operation: See ["Up Range/Down Range"](#) on page 136

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
DPControl:STATe <State>**

The command activates/deactivates Dynamic Power Control.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: see [example "Configuring the Dynamic Power Control Settings"](#)
on page 436

Manual operation: See ["Dynamic Power Control State"](#) on page 134

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
DPControl:STEP:MANual <Manual>**

This command provides the control signal for manual mode of Dynamic Power Control.

Setting parameters:

<Manual> MAN0 | MAN1
 *RST: MAN0

Example: BB:W3GP:BST:ENH:CHAN11:DPCH:DPC:MODE MAN
 BB:W3GP:BST:ENH:CHAN11:DPCH:DPC:STEP 0.5 dB
 BB:W3GP:BST:ENH:CHAN11:DPCH:DPC:STAT ON
 BB:W3GP:BST:ENH:CHAN11:DPCH:DPC:STEP:MAN MAN0

Usage: Setting only

Manual operation: See ["Mode"](#) on page 135

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
DPControl:STEP[:EXTernal] <External>**

This command sets step width by which – with Dynamic Power Control being switched on - the channel power of the selected enhanced channel is increased or decreased.

Parameters:

<External> float
 Range: 0.5 to 6
 Increment: 0.01
 *RST: 1
 Default unit: dB

Example: see [example "Configuring the Dynamic Power Control Settings"](#)
 on page 436

Manual operation: See ["Power Step"](#) on page 135

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:
DPControl[:POWER]?**

The command queries the deviation of the channel power (delta POW) from the set power start value of the corresponding enhanced channels.

Return values:

<Power> float
 Range: -60 to 60
 Increment: 0.01
 *RST: 0

Example: see [example "Configuring the Dynamic Power Control Settings"](#)
 on page 436

Usage: Query only

Manual operation: See ["Power Control Graph"](#) on page 136

8.8.4 Error Insertion

<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:BIT:LAYer</code>	440
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:BIT:RATE</code>	440
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:BIT:STATe</code>	441
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:BLOCK:RATE</code>	441
<code>[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:BLOCK:STATe</code>	442
<code>[SOURce<hw>]:BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:DERRor:BIT:LAYer</code>	442
<code>[SOURce<hw>]:BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:DERRor:BIT:RATE</code>	442
<code>[SOURce<hw>]:BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:DERRor:BIT:STATe</code>	443
<code>[SOURce<hw>]:BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:DERRor:BLOCK:RATE</code>	443
<code>[SOURce<hw>]:BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:DERRor:BLOCK:STATe</code>	443

`[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:BIT:LAYer <Layer>`

The command selects the layer in the coding process in which bit errors are inserted.

Parameters:

<code><Layer></code>	TRANsport PHYSical
	TRANsport
	Transport Layer (Layer 2). This layer is only available when channel coding is active.
	PHYSical
	Physical layer (Layer 1).
	*RST: PHYSical

Example: `BB:W3GP:BST:ENH:CHAN13:DPCH:DERR:BIT:LAY PHYS`
selects layer 1 for entering bit errors.

Manual operation: See ["Insert Errors On"](#) on page 131

`[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:BIT:RATE <Rate>`

The command sets the bit error rate.

Parameters:

<Rate> float
 Range: 1E-7 to 0.5
 Increment: 1E-7
 *RST: 0.001

Example: BB:W3GP:BST:ENH:CHAN13:DPCH:DERR:BIT:RATE 1E-4
 sets a bit error rate of 0.0001.

Manual operation: See ["Bit Error Rate"](#) on page 131

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:
 BIT:STATe <State>**

The command activates bit error generation or deactivates it.

Bit errors are inserted into the data fields of the enhanced channels. When channel coding is active, it is possible to select the layer in which to insert the errors (the physical or the transport layer, [:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:BIT:LAYer). When the data source is read out, individual bits are deliberately inverted at random points in the data bit stream at the specified error rate in order to simulate an invalid signal.

Parameters:

<State> ON | OFF
 *RST: 0

Example: BB:W3GP:BST:ENH:CHAN13:DPCH:DERR:BIT:STAT ON
 activates bit error generation.

Manual operation: See ["Bit Error State \(Enhanced DPCHs\)"](#) on page 131

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:
 BLOCK:RATE <Rate>**

Sets the block error rate.

Parameters:

<Rate> float
 Range: 1E-4 to 0.5
 Increment: 1E-4
 *RST: 0.1

Example: BB:W3GP:BST:ENH:CHAN13:DPCH:DERR:BLOC:RATE 1E-2
 sets the block error rate to 0.01.

Manual operation: See ["Block Error Rate"](#) on page 132

**[:SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:
BLOCK:STATe <State>**

The command activates or deactivates block error generation. Block error generation is only possible when channel coding is activated.

During block error generation, the CRC checksum is determined and then the last bit is inverted at the specified error probability in order to simulate a defective signal.

Parameters:

<State> ON | OFF
*RST: 0

Example:

BB:W3GP:BST:ENH:CHAN13:DPCH:CCOD:STAT ON
activates channel coding.
BB:W3GP:BST:ENH:CHAN13:DPCH:DERR:BLOC:RATE 5E-1
sets the block error rate to 0.1.
BB:W3GP:BST:ENH:CHAN13:DPCH:DERR:BLOC:STAT ON
activates block error generation.

Manual operation: See ["Block Error State"](#) on page 132

**[:SOURce<hw>]:BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:
DERRor:BIT:LAYer <Layer>**

The command selects the layer in the coding process in which bit errors are inserted.

Parameters:

<Layer> TRANsport | PHYSical
TRANsport
Transport Layer (Layer 2)
PHYSical
Physical layer (Layer 1)
*RST: PHYSical

Example:

BB:W3GP:BST:ENH:CHAN12:HSDP:DERR:BIT:LAY PHYS
selects layer 1 for entering bit errors.

Manual operation: See ["Insert Errors On \(HSDPA H-Set\)"](#) on page 117

**[:SOURce<hw>]:BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:
DERRor:BIT:RATE <Rate>**

Sets the bit error rate.

Parameters:

<Rate> float
*RST: 1E-3

Example:

BB:W3GP:BST:ENH:CHAN12:HSDP:DERR:BIT:RATE 1E-4
sets a bit error rate of 0.0001.

Manual operation: See ["Bit Error Rate \(HSDPA H-Set\)"](#) on page 117

**[:SOURce<hw>]:BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:
DERRor:BIT:STATe <State>**

The command activates bit error generation or deactivates it.

Bit errors are inserted into the data stream of the coupled HS-PDSCHs. It is possible to select the layer in which the errors are inserted (physical or transport layer). When the data source is read out, individual bits are deliberately inverted at random points in the data bit stream at the specified error rate in order to simulate an invalid signal.

Parameters:

<State> ON | OFF
*RST: 0

Example: BB:W3GP:BST:ENH:CHAN12:HSDP:DERR:BIT:STAT ON
 activates bit error generation.

Manual operation: See ["Bit Error State \(HSDPA H-Set\)"](#) on page 116

**[:SOURce<hw>]:BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:
DERRor:BLOCK:RATE <Rate>**

The command sets the block error rate.

Parameters:

<Rate> float
Range: 1E-4 to 5E-1
*RST: 5E-1

Example: BB:W3GP:BST:ENH:CHAN12:HSDP:DERR:BLOC:RATE 1E-2
 sets the block error rate to 0.01.

Manual operation: See ["Block Error Rate \(HSDPA H-Set\)"](#) on page 117

**[:SOURce<hw>]:BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:
DERRor:BLOCK:STATe <State>**

The command activates or deactivates block error generation. During block error generation, the CRC checksum is determined and then the last bit is inverted at the specified error probability in order to simulate a defective signal.

Parameters:

<State> ON | OFF
*RST: 0

Example: BB:W3GP:BST:ENH:CHAN12:HSDP:DERR:BLOC:RATE 5E-1
 sets the block error rate to 0.1.
BB:W3GP:BST:ENH:CHAN12:HSDP:DERR:BLOC:STAT ON
 activates block error generation.

Manual operation: See ["Block Error State \(HSDPA H-Set\)"](#) on page 117

8.9 User Equipment Settings

The `SOURce:BB:W3GPp:MSTation` system contains commands for setting the user equipment. The commands of this system only take effect when the 3GPP FDD standard is activated, the UP transmission direction is selected and the particular user equipment is enabled:

`SOURce:BB:W3GPp:STATe ON`

`SOURce:BB:W3GPp:LINK UP`

`SOURce:BB:W3GPp:MSTation2:STATe ON`

MSTation<st>

The numeric suffix to `MSTation` determines the user equipment. The value range is 1 .. 4. If the suffix is omitted, MS1 is selected.

• General Settings	444
• Compressed Mode Settings	449
• DPCCH Settings	451
• HS-DPCCH Settings	458
• DPDCH Settings	476
• PCPCH Settings	480
• PRACH Settings	491
• HSUPA Settings	499
• UL-DTX and Uplink Scheduling Settings	520
• Dynamic Power Control Settings	525

8.9.1 General Settings

[:SOURce<hw>]:BB:W3GPp:MSTation:ADDITIONal:COUNT	444
[:SOURce<hw>]:BB:W3GPp:MSTation:ADDITIONal:POWER:OFFSet	445
[:SOURce<hw>]:BB:W3GPp:MSTation:ADDITIONal:SCODE:STEP	445
[:SOURce<hw>]:BB:W3GPp:MSTation:ADDITIONal:STATe	446
[:SOURce<hw>]:BB:W3GPp:MSTation:ADDITIONal:TDElay:STEP	446
[:SOURce<hw>]:BB:W3GPp:MSTation:PRESet	446
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:MODE	446
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:SCODE	447
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:SCODE:MODE	448
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:STATe	448
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:TDElay	448
[:SOURce<hw>]:BB:W3GPp:LREference	449

[:SOURce<hw>]:BB:W3GPp:MSTation:ADDITIONal:COUNT <Count>

The command sets the number of additional user equipment.

Up to 128 additional user equipment can be simulated - corresponding to a receive signal for a base station with high capacity utilization. The fourth user equipment (UE4) serves as a template for all other stations. The only parameters of the additional user equipment to be modified are the scrambling code and the power.

Parameters:

<Count> integer
 Range: 1 to 128
 *RST: 4

Example:

BB:W3GP:MST:ADD:COUN 20
 sets 20 additional user equipment.
 BB:W3GP:MST:ADD:POW:OFFS -3.0
 sets the power offset to -3 dB.
 BB:W3GP:MST:ADD:SCOD:STEP 1
 sets the step width for increasing the scrambling code to 1.
 BB:W3GP:MST:ADD:STAT ON
 connects the 20 user equipment to the 3GPP FDD signal.

Manual operation: See ["Number of Additional UE"](#) on page 78

[[:SOURce<hw>]:BB:W3GPp:MSTation:ADDITIONal:POWER:OFFSet <Offset>

Sets the power offset of the active channels of the additional user equipment relative to the power of the active channels of the reference station UE4.

The offset applies to all the additional user equipment. The resultant overall power must fall within the range 0 ... - 80 dB. If the value is above or below this range, it is limited automatically.

Parameters:

<Offset> float
 Range: -80 to 0
 Increment: 0.01
 *RST: 0

Example:

BB:W3GP:MST:ADD:POW:OFFS -3.0
 sets the offset to -3 dB.

Manual operation: See ["Power Offset"](#) on page 78

[[:SOURce<hw>]:BB:W3GPp:MSTation:ADDITIONal:SCODE:STEP <Step>

Sets the step width for increasing the scrambling code of the additional user equipment. The start value is the scrambling code of UE4.

Parameters:

<Step> integer
 Range: 0 to #FFFFFFF

Example:

BB:W3GP:MST:ADD:SCOD:STEP #H55
 sets the step width for increasing the scrambling code to #H55.

Manual operation: See ["Scrambling Code Step"](#) on page 78

[:SOURce<hw>]:BB:W3GPp:MSTation:ADDITIONal:STATe <State>

Activates additional user equipment.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: SOURce1:BB:W3GPp:MSTation:ADDITIONal:STATe ON
 connects the additional user equipment to the 3GPP FDD signal.

Manual operation: See ["State"](#) on page 78

[:SOURce<hw>]:BB:W3GPp:MSTation:ADDITIONal:TDELay:STEP <Step>

The command sets the step width for the time delay of the additional user equipment to one another. The start value is the time delay of UE4. Entry is made in chips and can be a maximum of 1 frame.

Parameters:

<Step> integer
 Range: 0 to 38400
 *RST: 0

Example: BB:W3GP:MST:ADD:TDEL:STEP 256
 shifts each of the user equipment 256 chips apart, starting from
 the time delay of UE4.

Manual operation: See ["Time Delay Step"](#) on page 79

[:SOURce<hw>]:BB:W3GPp:MSTation:PRESet

The command produces a standardized default for all the user equipment. The settings correspond to the *RST values specified for the commands.

All user equipment settings are preset.

Example: BB:W3GP:MST:PRESet
 resets all the user equipment settings to default values.

Usage: Event

Manual operation: See ["Reset User Equipment"](#) on page 67

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:MODE <Mode>

The command selects the operating mode for the user equipment.

Parameters:

<Mode>

PRACH | PCPCh | DPCDch | PPRach | PPCPch

PRACH

The user equipment only generates a signal with a physical random access channel (PRACH). This channel is used to set up the user equipment connection with the base station. The channel-specific parameters of the PRACH can be set with the commands :SOURce:BB:W3GPp:MSTation<n>:PRACH:....

PPRach

The user equipment only generates a signal with the preamble component of a physical random access channel (PRACH). The parameters of the PRACH preamble can be set with the commands :SOURce:BB:W3GPp:MSTation<n>:PRACH:....

PCPCh

The user equipment only generates a signal with a physical common packet channel (PCPCH). This channel is used to transmit packet-oriented services (e.g. SMS). The channel-specific parameters of the PCPCH can be set with the commands :SOURce:BB:W3GPp:MSTation<n>:PCPCh:....

PPCPch

The user equipment only generates a signal with the preamble component of a physical common packet channel (PCPCH). The parameters of the PCPCH preamble can be set with the commands :SOURce:BB:W3GPp:MSTation<n>:PCPCh:....

DPCDch

The user equipment generates a signal with a dedicated physical control channel (DPCCH), up to 6 dedicated physical data channels (DPDCH), up to one HS-DPCCH channel, up to one E-DPCCH channel and up to four E-DPDCH channels. This signal is used for voice and data transmission.

*RST: DPCDch

Example:

BB:W3GP:MST1:MODE DPCD

switches the user equipment to standard mode - transmission of voice and data.

Manual operation: See "Mode" on page 159

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:SCODE <SCode>

The command sets the scrambling code. Long or short scrambling codes can be generated (command [:SOURce<hw>]:BB:W3GPp:MSTation<st>:SCODE:MODE).

Parameters:

<SCode>

integer

Range: #H0 to #FFFFFFF

*RST: #H0

Example: `BB:W3GP:MST2:SCOD #H12`
sets scrambling code #12.

Manual operation: See ["Scrambling Code \(hex\)"](#) on page 159

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:SCODE:MODE <Mode>

The command sets the type for the scrambling code. The scrambling code generator can also be deactivated for test purposes.

SHORT is only standardized for the selection `:BB:W3GP:MST:MODE DPCDh` and `:BB:W3GP:MST:MODE PCPCh`. But it can also be generated for the PCPCH for test purposes.

Parameters:
<Mode> LONG | SHORT | OFF
*RST: LONG

Example: `BB:W3GP:MST2:SCODE:MODE OFF`
deactivates the scrambling code generator.

Manual operation: See ["Scrambling Mode"](#) on page 160

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:STATE <State>

The command activates and deactivates the specified user equipment.

Parameters:
<State> 0 | 1 | OFF | ON
*RST: ON

Example: `BB:W3GP:MST2:STAT OFF`
deactivates user equipment 2.

Manual operation: See ["Select Basestation/User Equipment"](#) on page 69

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:TDElay <TDelay>

The command sets the time shift of the selected user equipment compared to user equipment 1 in chips.

Parameters:
<TDelay> integer
Range: 0 to 38400
*RST: 0

Example: `BB:W3GP:MST2:TDEL 256`
shifts user equipment 2 by 256 chips compared to user equipment 1.

Manual operation: See ["Time Delay"](#) on page 160

[[:SOURce<hw>]:BB:W3GPp:LREference <Reference>

Determines the power reference for the calculation of the output signal power in uplink direction.

Parameters:

<Reference>

RMS | DPCC | PMP | LPP | EDCH | HACK | PCQI

RMS = RMS Power, DPCC = First DPCCH, PMP = PRACH Message Part, LPP = Last PRACH Preamble, EDCH = First E-DCH, HACK = First HARQ-ACK, PCQI = First PCI/CQI

*RST: RMS

Example:

SOURce1:BB:W3GPp:LREference RMS

Manual operation: See ["Power Reference"](#) on page 70

8.9.2 Compressed Mode Settings

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:METHod	449
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:PATtern<ch>:TGD	449
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:PATtern<ch>:TGL<di>	450
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:PATtern<ch>:TGPL	450
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:PATtern<ch>:TGSN	450
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:STATe	451

[[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:METHod <Method>

The command selects compressed mode method.

Parameters:

<Method>

HLSCScheduling | SF2

SF2

The data is compressed by halving the spreading factor.

HLSCScheduling

The data is compressed by stopping the transmission of the data stream during the transmission gap.

*RST: SF2

Example:

BB:W3GP:MST2:CMOD:METH HLSC

selects compressed mode method High Layer Scheduling.

Manual operation: See ["Compressed Mode Method - UE"](#) on page 94

[[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:PATtern<ch>:TGD <Tgd>

Sets the transmission gap distances.

Parameters:

<Tgd> integer
 Range: 3 to 100
 *RST: 15

Example:

BB:W3GP:MST2:CMOD:PATT2:TGD 7
 sets transmission gap distance of pattern 2 to 7 slots.

Manual operation: See ["Distance"](#) on page 96

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:PATTern<ch>:TGL<di> <Tgl>

Sets the transmission gap lengths.

Parameters:

<Tgl> integer
 Range: 3 to 14
 *RST: 3

Example:

BB:W3GP:MST2:CMOD:PATT2:TGL1 4
 sets transmission gap length of gap 1 of pattern 2 to 4 slots.

Manual operation: See ["Gap Len:"](#) on page 96

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:PATTern<ch>:TGPL <Tgpl>

The command sets the transmission gap pattern lengths. Setting 0 is available only for pattern 2.

The transmission gap pattern lengths of the base station with the same suffix as the selected user equipment is set to the same value.

Parameters:

<Tgpl> integer
 Range: 0 to 100
 *RST: 2

Example:

BB:W3GP:MST2:CMOD:PATT2:TGPL 7
 sets transmission gap pattern length of pattern 2 to 7 frames.

Manual operation: See ["Pattern Len:"](#) on page 97

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:PATTern<ch>:TGSN <Tgsn>

Sets the transmission gap slot number of pattern 1.

Parameters:

<Tgsn> integer
 Range: 0 to 14
 *RST: 7

Example:

BB:W3GP:MST2:CMOD:PATT:TGSN 4
 sets slot number of pattern 1 to slot 4.

Manual operation: See ["At Slot:"](#) on page 96

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:STATe <State>

The command activates/deactivates the compressed mode.

Parameters:

<State> ON | OFF
*RST: 0

Example: BB:W3GP:MST2:CMOD:STAT ON
activates compressed mode for user equipment 2.

Manual operation: See ["Compressed Mode State"](#) on page 93

8.9.3 DPCCH Settings

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:CCODE?	451
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:FBI:MODE	452
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:FBI:PATtern	452
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:POWer	452
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:SFOrmAt	453
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TFCI	453
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TFCI:STATe	453
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TOFFset	454
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:DATA	454
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:DATA:DSElect	455
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:DATA:PATtern	455
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:MISuse	455
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:MODE	456
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:PSTep	456
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:READ	457

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:CCODE?

Queries the channelization code and the modulation branch of the specified channel.
The value is fixed.

Return values:

<CCode> integer
Range: 0 to max

Example: BB:W3GP:MST1:DPCCh:CCOD?
queries the channelization code for DPCCH of user equipment 1.
Response: Q, 64

Usage: Query only

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:FBI:MODE <Mode>

The command sets the number of bits for the FBI field. With OFF, the FBI field is not used.

Note: The former 2-bits long FBI Mode "D2B" according to 3GPP Release 4 specification TS 25.211 is not supported any more.

The command sets the slot format (`[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:SFOFormat`) in conjunction with the set TFCI status (`[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TFCI:STATE`) and the TPC Mode (`[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:MODE`) to the associated values.

Parameters:

<Mode> OFF | D1B
 *RST: OFF

Example: BB:W3GP:MST1:DPCC:FBI:MODE OFF
 an FBI field is not used.

Manual operation: See "FBI Mode" on page 177

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:FBI:PATtern <Pattern>

The command determines the bit pattern when the PATtern data source is selected for the FBI field.

Parameters:

<Pattern> 32 bits
 The first parameter determines the bit pattern (choice of hexadecimal, octal or binary notation), the second specifies the number of bits to use.
 *RST: #H0,1

Example: BB:W3GP:MST1:DPCC:FBI:PATT #H3F,8
 defines the bit pattern of the data for the FBI field.

Manual operation: See "FBI Pattern (bin)" on page 177

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:POWer <Power>

The command defines the channel power for the DPCCH.

Parameters:

<Power> float
 Range: -80 dB to 0 dB
 Increment: 0.1 dB
 *RST: 0 dB

Example: BB:W3GP:MST1:DPCC:POW -10 dB
 sets the channel power to -10 dB.

Manual operation: See "Power" on page 174

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:SFORmat <SFormat>

The command sets the slot format for the DPCCH. The slot format defines the structure of the DPCCH slots and the control fields.

Slot Format # 4 is available only for instruments equipped with R&S SMW-K83.

Slot formats 0 to 4 are available for the DPCCH channel as defined in the 3GPP Release 7 specification TS 25.211.

Note:

The former slot formats 4 and 5 according to 3GPP Release 4 specification TS 25.211 are not supported any more.

The command sets the FBI mode ([:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:FBI:MODE), the TFCI status ([:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TFCI:STATe) and the TPC Mode ([:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:MODE) to the associated values.

Parameters:

<SFormat>	integer
Range:	0 to 4
*RST:	0

Example: BB:W3GP:MST2:DPCC:SFOR 3
selects slot format 3 for the DPCCH of user equipment 2.

Manual operation: See "Slot Format #" on page 175

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TFCI <Tfci>

Sets the value of the TFCI (Transport Format Combination Indicator) field. This value selects a combination of 30 bits, which are divided into two groups of 15 successive slots.

Parameters:

<Tfci>	integer
Range:	0 to 1023
*RST:	0

Example: BB:W3GP:MST1:DPCC:TFCI 21
sets the TFCI value to 21.

Manual operation: See "TFCI" on page 177

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TFCI:STATe <State>

The command activates the TFCI (Transport Format Combination Indicator) field for the DPCCH.

The command sets the slot format (`[:SOURCE<hw>]:BB:W3GPp:MSTation<st>:DPCCh:SFormat`) in conjunction with the set FBI mode (`[:SOURCE<hw>]:BB:W3GPp:MSTation<st>:DPCCh:FBI:MODE`) and the TPC Mode (`[:SOURCE<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:MODE`) to the associated values.

Parameters:

<State> ON | OFF
*RST: 1

Example:

BB:W3GP:MST1:DPCC:TFCI:STAT ON
activates the TFCI field.

Manual operation: See "Use TFCI" on page 176

`[:SOURCE<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TOFFset <TOffset>`

Sets the timing offset.

Parameters:

<TOffset> integer
Range: 0 to 1024
Increment: 1024

Example:

BB:W3GP:MST1:DPCC:TOFF?
queries the timing offset.

Manual operation: See "DL-UL Timing Offset" on page 175

`[:SOURCE<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:DATA <Data>`

The command determines the data source for the TPC field of the DPCCH.

Parameters:

<Data> DLISt | ZERO | ONE | PATTErn |

DLISt

A data list is used. The data list is selected with the command `[:SOURCE<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:DATA:DSElect`.

ZERO | ONE

Internal 0 and 1 data is used.

PATTErn

Internal data is used. The bit pattern for the data is defined by the command `[:SOURCE<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:DATA:PATTErn`. The maximum length is 64 bits.

*RST: ZERO

Example:

BB:W3GP:MST2:DPCC:TPC:DATA PATT
selects as the data source for the TPC field of user equipment 2 the bit pattern defined with the following command.
BB:W3GP:MST2:DPCC:TPC:DATA:PATT #H48D0,16
defines the bit pattern.

Manual operation: See ["TPC Data Source"](#) on page 177

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:DATA:DSElect
<DSelect>

The command selects the data list when the DLIS data source is selected for the TPC field of the DPCCH.

The files are stored with the fixed file extensions *.dm_iqd in a directory of the user's choice. The directory applicable to the commands is defined with the command `MMEMory:CDIR`. To access the files in this directory, you only have to give the file name, without the path and the file extension.

Parameters:

<DSelect> string

Example:

```
BB:W3GP:MST1:DPCC:TPC:DATA DLIS
selects the Data Lists data source.
MMEM:CDIR '/var/user/temp/IQData'
selects the directory for the data lists.
BB:W3GP:MST1:DPCC:TPC:DATA:DSEL 'dpcch_tpc_1'
selects the data list dpcch_tpc1.
```

Manual operation: See ["TPC Data Source"](#) on page 177

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:DATA:PATtern <Pattern>

The command determines the bit pattern for the PATtern data source selection. The maximum length of the bit pattern is 64 bits.

Parameters:

<Pattern> 64 bits
 *RST: #H0,1

Example:

```
BB:W3GP:MST1:DPCC:TPC:DATA:PATT #B11110000,8
defines the bit pattern of the data for the TPC field.
```

Manual operation: See ["TPC Data Source"](#) on page 177

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:MISe <MisUse>

The command activates "mis-" use of the TPC field (Transmit Power Control) for controlling the channel power of the user equipment.

The bit pattern (see commands `:SOURce:BB:W3GPp:MSTation:DPCC:TPC:DATA...`) of the TPC field of the DPCCH is used to control the channel power. A "1" leads to an increase of channel powers, a "0" to a reduction of channel powers. Channel power is limited to the range 0 dB to -60 dB. The step width for the change is defined by the command [\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:TPC:PSTep](#).

Note: "Mis-"using the TPC field is available for UE2, UE3,UE4 only.

Parameters:

<MisUse> ON | OFF
 *RST: 0

Example:

BB:W3GP:MST2:DPCC:TPC:MIS ON
 activates regulation of the channel power via the bit pattern of the TPC field.
 BB:W3GP:MST2:DPCC:TPC:PST 1 dB
 sets the step width for the change of channel power to 1 dB.

Manual operation: See ["Misuse TPC for Output Power Control"](#) on page 178

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:TPC:MODE <Mode>

Selects the TPC (Transmit Power Control) mode.

The command sets the slot format ([\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:DPCCCh:SFormat](#)) in conjunction with the set TFCI status ([\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:DPCCCh:TFCI:STATE](#)) and the FBI Mode ([\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:DPCCCh:FBI:MODE](#)) to the associated values.

Parameters:

<Mode> D2B | D4B
D2B
 A TPC field with a length of 2 bits is used.
D4B
 (enabled only for instruments equipped with R&S SMW-K83)
 A TPC field with a length of 4 bits is used.
 A 4 bits long TPC field can be selected, only for Slot Format 4 and disabled FBI and TFCI fields.
 *RST: D2B

Example:

BB:W3GP:MST1:DPCC:TPC:MODE D2B
 an TPC field with a length of 2 bits is used.

Manual operation: See ["TPC Mode"](#) on page 177

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:TPC:PSTep <PStep>

The command sets the level of the power step in dB for controlling the transmit power via the data of the TPC field.

Parameters:

<PStep> float
 Range: -10 to 10
 Increment: 0.01
 *RST: 0

Example: `BB:W3GP:MST:DPCC:TPC:MIS ON`
 activates regulation of the channel power via the bit pattern of the TPC field.
`BB:W3GP:MST:DPCC:TPC:PST 1 dB`
 sets the step width for the change of channel power to 1 dB.

Manual operation: See ["TPC Power Step"](#) on page 179

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:READ <Read>

The command sets the read out mode for the bit pattern of the TPC field of the DPCCH.

The bit pattern is selected with the command

`SOUR:BB:W3GPp:MST:DPCC:TPC:DATA:PATT.`

Parameters:

<Read>

CONTinuous | S0A | S1A | S01A | S10A

CONTinuous

The bit pattern is used cyclically.

S0A

The bit pattern is used once, then the TPC sequence continues with 0 bits.

S1A

The bit pattern is used once, then the TPC sequence continues with 1 bits.

S01A

The bit pattern is used once and then the TPC sequence is continued with 0 and 1 bits alternately (in multiples, depending on by the symbol rate, for example, 00001111).

S10A

The bit pattern is used once and then the TPC sequence is continued with 1 and 0 bits alternately (in multiples, depending on by the symbol rate, for example, 11110000).

*RST: CONTinuous

Example: `BB:W3GP:MST2:DPCC:TPC:READ CONT`
 the selected bit pattern is repeated continuously for the TPC sequence.

Manual operation: See ["TPC Read Out Mode"](#) on page 178

8.9.4 HS-DPCCH Settings

8.9.4.1 Common Settings

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:STATe.....	458
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:POWer.....	458
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:COMPatibility.....	458
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:CCODE?.....	459
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SDELaY.....	459
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:TTIDistance.....	459

`[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:STATe <State>`

This command activates or deactivates the HS-DPCCH.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: BB:W3GP:MST1:DPCC:HS:STAT ON
 activates HS-DPCCH.

Manual operation: See ["State \(HS-DPCCH\)"](#) on page 187

`[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:POWer <Power>`

The command sets the channel power in dB. The power entered is relative to the powers of the other channels. If "Adjust Total Power to 0 dB" is executed ([\[:SOURce<hw>\]:BB:W3GPp:POWer:ADJust](#)), the power is normalized to a total power for all channels of 0 dB. The power ratios of the individual channels remains unchanged.

Parameters:

<Power> float
 Range: -80 dB to 0 dB
 Increment: 0.01
 *RST: 0 dB

Example: BB:W3GP:MST1:DPCC:HS:POW -30
 sets the channel power to -30 dB.

Manual operation: See ["Power \(HS-DPCCH\)"](#) on page 187

`[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:COMPatibility <Compatibility>`

The concept of the graphical user interface for the configuration of HS-DPCCH has been adapted to support simultaneous DC-HSDPA and MIMO operation, as required in 3GPP Release 9 onwards.

This command enables the configuration of the HS-DPCCH settings provided for backwards compatibility ("Up to Release 7").

Parameters:

<Compatibility> REL7 | REL8 | REL8RT
 *RST: REL8

Example:

BB:W3GP:MST1:DPCC:HS:COMP REL8
 sets the compatibility mode to Release 8 and Later.

Manual operation: See ["Compatibility Mode \(HS-DPCCH\)"](#) on page 188

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCC:HS:CCODE?

Queries the channelization code and the modulation branch of the HS-DPCCH.

Return values:

<CCode> integer
 Range: 1 to 64
 *RST: 64

Example:

BB:W3GP:MST1:DPCC:HS:CCOD?
 queries the channelization code.
 Response: Q, 32
 the channelization code is 32 and the modulation branch is Q.

Usage: Query only

Manual operation: See ["Channelization Code"](#) on page 174

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCC:HS:SDElay <SDelay>

Sets the delay between the uplink HS-DPCCH and the frame of uplink DPCH.

Parameters:

<SDelay> integer
 a multiple m of 256 chips according to TS 25.211 7.7
 Range: 0 to 250
 *RST: 101
 Default unit: * 256 Chips

Example:

BB:W3GP:MST1:DPCC:HS:SDEL 101
 sets a start delay of 101 x 256 chips.

Manual operation: See ["Start Delay"](#) on page 188

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCC:HS:TTIDistance <TtiDistance>

Selects the distance between two packets in HSDPA packet mode.

Parameters:

<TtiDistance> integer
 Range: 1 to 16
 *RST: 5

Example:

BB:W3GP:MST1:DPCC:HS:TTID 4
 selects an Inter TTI Distance of 4 subframes.

Manual operation: See "Inter TTI Distance (Interval)" on page 189

8.9.4.2 Up to Release 7 Settings

[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:POACK.....	460
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:PONACK.....	460
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:HAPattern.....	461
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:CQI:PLENgt.....	461
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:CQI<ch>[:VALues].....	462
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:MIMO[:MODE].....	462
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:MIMO:POAAck.....	462
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:MIMO:POANack.....	463
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:MIMO:PONAck.....	464
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:MIMO:PONNack.....	464
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:MIMO:POCA.....	465
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:MIMO:TTICount.....	465
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:MIMO:TTI<ch0>:HACK.....	466
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:MIMO:TTI<ch0>:PCI.....	466
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:MIMO:TTI<ch0>:CQIType.....	466
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:MIMO:TTI<ch0>:CQI<di>.....	467

[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:POACK <Poack>

(Up to Release 7)

The command sets the channel power part of the ACK in dB.

Parameters:

<Poack> float
 Range: -10 to 10 dB
 Increment: 0.1
 *RST: 0 dB

Example:

BB:W3GP:MST1:DPCC:HS:POAC -2.5dB
 sets the channel power part of the ACK to 2.5 dB.

Manual operation: See "Power Offset ACK" on page 200

[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:PONACK <PoNack>

(Up to Release 7)

The command sets the channel power part of the NACK in dB.

Parameters:

<PoNack> float
 Range: -10 dB to 10 dB
 Increment: 0.1
 *RST: 0 dB

Example:

BB:W3GP:MST1:DPCC:HS:PONA -2.5dB
 sets the channel power part of the NACK to 2.5 dB.

Manual operation: See ["Power Offset NACK"](#) on page 201

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:HAPattern <HaPattern>

(Up to Release 7)

The command enters the pattern for the HARQ-ACK field (Hybrid-ARQ Acknowledgement). One bit is used per HS-DPCCH packet.

Parameters:

<HaPattern> string
 The pattern is entered as string, the maximum number of entries is 32. Three different characters are permitted.
1
 The HARQ ACK is sent (ACK). Transmission was successful and correct.
0
 The NACK is sent (NACK). Transmission was not correct. With an NACK, the UE requests retransmission of the incorrect data.
-
 Nothing is sent. Transmission is interrupted (Discontinuous Transmission, DTX).
 *RST: <empty>

Example:

BB:W3GP:MST1:DPCC:HS:COMP REL7
 BB:W3GP:MST1:DPCC:HS:HAP "110--110-0"
 enters the pattern for the HARQ-ACK field.

Manual operation: See ["ACK/NACK Pattern"](#) on page 201

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:CQI:PLENgtH <PLength>

Sets the length of the CQI sequence.

The values of the CQI sequence are defined with command [\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:DPCCCh:HS:CQI<ch>\[:VALues\]](#). The pattern is generated cyclically.

Parameters:

<PLength> integer
 Range: 1 to 10
 *RST: 1

Example: BB:W3GP:MST1:DPCC:HS:CQI:PLEN 2
the CQI sequence length is 2 values.
BB:W3GP:MST1:DPCC:HS:CQI1 -1
the first CQI value is -1.
BB:W3GP:MST1:DPCC:HS:CQI2 2
the second CQI value is 2.

Manual operation: See "CQI Pattern Length" on page 201

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:CQI<ch>[:VALues]
<Values>**

Sets the values of the CQI sequence.

The length of the CQI sequence is defined with command [:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:CQI:PLEN<gth>. The pattern is generated cyclically.

Parameters:

<Values> integer
Value -1 means that no CQI is sent (DTX - Discontinuous Transmission).
Range: -1 to 30
*RST: 1

Example: BB:W3GP:MST1:DPCC:HS:CQI:PLEN 2
the CQI sequence length is 2 values.
BB:W3GP:MST1:DPCC:HS:CQI1 1
the first CQI value is -1.
BB:W3GP:MST1:DPCC:HS:CQI2 2
the second CQI value is 2.

Manual operation: See "CQI Values" on page 201

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:MIMO[:MODE] <Mode>

Enables/disables working in MIMO mode for the selected UE.

Parameters:

<Mode> 0 | 1 | OFF | ON
*RST: 0

Example: BB:W3GP:MST1:DPCC:HS:MIMO:MODE ON
enables MIMO mode for UE 1.

Options: R&S SMW-K83

Manual operation: See "MIMO Mode (Up to Release 7)" on page 202

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCCh:HS:MIMO:POAAck <PoaAck>
(up to Release 7)**

Sets the power offset $P_{\text{off_ACK/ACK}}$ of an ACK/ACK response to two scheduled transport blocks relative to the CQI Power P_{CQI} (`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:POWER`).

The power $P_{\text{ACK/ACK}}$ used during the HARQ-ACK slots is calculated as:

$$P_{\text{ACK/ACK}} = P_{\text{CQI}} + P_{\text{off_ACK/ACK}}$$

Parameters:

<PoaAck> float
 Range: -10 to 10 dB
 Increment: 0.1
 *RST: 0 dB

Example:

BB:W3GP:MST1:DPCC:HS:MIMO:MODE ON
 enables MIMO mode for UE 1.
 BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:HACK AACK
 sets the HARQ-ACK to ACK/ACK.
 BB:W3GP:MST1:DPCC:HS:MIMO:POAA -2.5dB
 sets the power offset to -2.5 dB.

Options: R&S SMW-K83

Manual operation: See "Power Offset ACK/ACK" on page 203

`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:POANack
 <PoaNack>`

(up to Release 7)

Sets the power offset $P_{\text{off_ACK/NACK}}$ of an ACK/NACK response to two scheduled transport blocks relative to the CQI Power P_{CQI} (`[:SOURce<hw>] :BB:W3GPp:MSTation<st>:DPCCh:HS:POWER`).

The power $P_{\text{ACK/NACK}}$ used during the HARQ-ACK slots is calculated as:

$$P_{\text{ACK/NACK}} = P_{\text{CQI}} + P_{\text{off_ACK/NACK}}$$

Parameters:

<PoaNack> float
 Range: -10 to 10 dB
 Increment: 0.1
 *RST: 0 dB

Example:

BB:W3GP:MST1:DPCC:HS:MIMO:MODE ON
 enables MIMO mode for UE 1.
 BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:HACK ANAC
 sets the HARQ-ACK to ACK/NACK.
 BB:W3GP:MST1:DPCC:HS:MIMO:POAN -1.5dB
 sets the power offset to -1.5 dB.

Options: R&S SMW-K83

Manual operation: See "Power Offset ACK/NACK" on page 203

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:PONack <PoNack>

(up to Release 7)

Sets the power offset $P_{\text{off_NACK/ACK}}$ of an NACK/ACK response to two scheduled transport blocks relative to the CQI Power P_{CQI} (**[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:POWER**).

The power $P_{\text{NACK/ACK}}$ used during the HARQ-ACK slots is calculated as:

$$P_{\text{NACK/ACK}} = P_{\text{CQI}} + P_{\text{off_NACK/ACK}}$$

Parameters:

<PoNack> float
 Range: -10 to 10 dB
 Increment: 0.1
 *RST: 0 dB

Example:

BB:W3GP:MST1:DPCC:HS:MIMO:MODE ON
 enables MIMO mode for UE 1.
 BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:HACK NACK
 sets the HARQ-ACK to NACK/ACK.
 BB:W3GP:MST1:DPCC:HS:MIMO:PONA -1dB
 sets the power offset to -1dB.

Options: R&S SMW-K83

Manual operation: See ["Power Offset NACK/ACK"](#) on page 204

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:PONNack <PonNack>

(up to Release 7)

Sets the power offset $P_{\text{off_NACK/NACK}}$ of an NACK/NACK response to two scheduled transport blocks relative to the CQI Power P_{CQI} (**[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:POWER**).

The power $P_{\text{NACK/NACK}}$ used during the HARQ-ACK slots is calculated as:

$$P_{\text{NACK/NACK}} = P_{\text{CQI}} + P_{\text{off_NACK/NACK}}$$

Parameters:

<PonNack> float
 Range: -10 to 10 dB
 Increment: 0.1
 *RST: 0 dB

Example:

BB:W3GP:MST1:DPCC:HS:MIMO:MODE ON
 enables MIMO mode for UE 1.
 BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:HACK NNAC
 sets the HARQ-ACK to NACK/NACK.
 BB:W3GP:MST1:DPCC:HS:MIMO:PONN -3dB
 sets the power offset to -3dB.

Options: R&S SMW-K83

Manual operation: See ["Power Offset NACK/NACK"](#) on page 204

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:POCA <Poca>

(up to Release 7)

Sets the power offset $P_{\text{off_CQI Type A}}$ of the PCI/CQI slots in case a CQI Type A report is sent relative to the CQI Power P_{CQI} ([\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:HS:POWer](#)).

The power $P_{\text{CQI Type A}}$ used during the PCI/CQI slots is calculated as:

$$P_{\text{CQI Type A}} = P_{\text{CQI}} + P_{\text{off_CQI Type A}}$$

Since the CQI Type B reports are used in a single stream transmission, the power $P_{\text{CQI Type B}} = P_{\text{CQI}}$.

Parameters:

<Poca> float
 Range: -10 dB to 10 dB
 Increment: 0.1
 *RST: 0 dB

Example:

BB:W3GP:MST1:DPCC:HS:MIMO:MODE ON
 enables MIMO mode for UE 1.
 BB:W3GP:MST1:DPCC:HS:MIMO:MODE:TT2:CQIT TADT
 selects CQI Type A Dual TB report for TTI2.
 BB:W3GP:MST1:DPCC:HS:MIMO:POCA -4dB
 sets the power offset to -4dB.

Options: R&S SMW-K83

Manual operation: See ["Power Offset CQI Type A"](#) on page 204

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:TTICount <TtiCount>

Selects the number of configurable TTI's.

Parameters:

<TtiCount> integer
 Range: 1 to 32
 *RST: 1

Example:

BB:W3GP:MST1:DPCC:HS:MIMO:MODE ON
 enables MIMO mode for UE 1.
 BB:W3GP:MST1:DPCC:HS:MIMO:TTIC 4
 sets the number of configurable TTI's to 4.

Options: R&S SMW-K83

Manual operation: See ["Number of TTIs \(Up to Release 7\)"](#) on page 204

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:TTI<ch0>:HACK
<Hack>

Selects the information transmitted during the HARQ-ACK slot of the corresponding TTI.

Suffix:
 <ch0> 0..Number of TTI -1

Parameters:
 <Hack> DTX | SACK | SNACK | AACK | ANACK | NACK | NNACK
 *RST: AACK (for TTI 1)

Example: BB:W3GP:MST1:DPCC:HS:MIMO:MODE ON
 enables MIMO mode for UE 1.
 BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:HACK SACK
 sets the HARQ-ACK to single ACK.

Options: R&S SMW-K83

Manual operation: See "[HARQ-ACK \(Up to Release 7\)](#)" on page 205

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:TTI<ch0>:PCI <Pci>

Selects the PCI value transmitted during the PCI/CQI slots of the corresponding TTI.

Suffix:
 <ch0> 0..Number of TTI -1

Parameters:
 <Pci> integer
 Range: 0 to 3
 *RST: 0

Example: BB:W3GP:MST1:DPCC:HS:MIMO:MODE ON
 enables MIMO mode for UE 1.
 BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:HACK SACK
 sets the HARQ-ACK to single ACK.
 BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:PCI 2
 sets the PCI.

Options: R&S SMW-K83

Manual operation: See "[PCI \(Up to Release 7\)](#)" on page 205

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:TTI<ch0>:CQIType
<CqiType>

Selects the type of the CQI report.

Suffix:
 <ch0> 0..Number of TTI -1

Parameters:

<CqiType> TAST | TADT | TB
 *RST: TADT

Example:

BB:W3GP:MST1:DPCC:HS:MIMO:MODE ON
 enables MIMO mode for UE 1.
 BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:HACK SACK
 sets the HARQ-ACK to single ACK.
 BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:CQIT TADT
 selects CQI Type A dual TB report for TTI2.

Options: R&S SMW-K83

Manual operation: See "CQI Type (Up to Release 7)" on page 205

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCC:HS:MIMO:TTI<ch0>:CQI<di>
 <Cqi>**

Selects the CQI report transmitted during the PCI/CQI slots of the corresponding TTI.

For single stream transmission (BB:W3GP:MST:DPCC:HS:MIMO:TTI:CQI1), this command set the CQI values of the following cases:

- The CQI (the value for CQI Type B report)
- The CQI_S (the CQI value in case a CQI Type A report when 1 transport block is preferred)

For dual stream transmission (BB:W3GP:MST:DPCC:HS:MIMO:TTI:CQI2), this command sets:

- The CQI₁, the first of the two CQI values of CQI Type A report when 2 transport blocks are preferred
- the CQI₂, the second of the two CQI values of CQI Type A report when 2 transport blocks are preferred. The CQI then is calculated as follow:

$$CQI = 15 * CQI_1 + CQI_2 + 31$$

Suffix:

<ch0> 0..Number of TTI -1
 TTI
 <di> 1|2
 The suffix CQI<1 | 2> distinguishes between CQI/CQI_S/CQI₁ and CQI₂.

Parameters:

<Cqi> integer
 Range: 0 to 30
 *RST: 0

- Example:** BB:W3GP:MST1:DPCC:HS:MIMO:MODE ON
enables MIMO mode for UE 1.
BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:HACK SACK
sets the HARQ-ACK to single ACK.
BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:CQIT TADT
selects CQI Type A dual TB report for TTI2.
BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:CQI1 1.5
sets CQI1
BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:CQI2 2
sets CQI2
- Example:** BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:CQIT TAST
selects CQI Type A single TB report for TTI2.
BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:CQI1 3
sets CQIS
- Example:** BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:CQIT TB
selects CQI Type B
BB:W3GP:MST1:DPCC:HS:MIMO:TTI2:CQI1 0
sets CQI
- Options:** R&S SMW-K83
- Manual operation:** See "CQI/CQIS/CQI₁/CQI₂ (Up to Release 7)" on page 205

8.9.4.3 Release 8 and Later (RT) Settings

Example: HS-DPCCH Scheduling

The following is a simple example intended to explain the principle. Configured is an HS-DPCCH scheduling in MIMO Mode and with "Secondary Cell Enabled = 1".

```
BB:W3GP:MST1:DPCC:HS:COMP REL8
BB:W3GP:MST1:DPCC:HS:TTID 5
BB:W3GP:MST1:DPCC:HS:MMOD ON
BB:W3GP:MST1:DPCC:HS:SC:ENABled 1
BB:W3GP:MST1:DPCC:HS:SC:ACT 0
BB:W3GP:MST1:DPCC:HS:HACK:ROWS 2
BB:W3GP:MST1:DPCC:HS:HACK:REPeat 4
BB:W3GP:MST1:DPCC:HS:ROW0:HACK:FROM 0
BB:W3GP:MST1:DPCC:HS:ROW0:HACK:TO 1
BB:W3GP:MST1:DPCC:HS:ROW0:HACK1 MS_AA_D
BB:W3GP:MST1:DPCC:HS:ROW1:HACK:FROM 3
BB:W3GP:MST1:DPCC:HS:ROW1:HACK:TO 3
BB:W3GP:MST1:DPCC:HS:ROW1:HACK1 MS_NN_NN
BB:W3GP:MST1:DPCC:HS:PCQI:ROWS 2
BB:W3GP:MST1:DPCC:HS:PCQI:REPeat 3
BB:W3GP:MST1:DPCC:HS:ROW0:PCQI:FROM 0
BB:W3GP:MST1:DPCC:HS:ROW0:PCQI:TO 0
BB:W3GP:MST1:DPCC:HS:ROW1:PCQI1:TYPE DTX
BB:W3GP:MST1:DPCC:HS:ROW1:PCQI:FROM 1
```



```

BB:W3GP:MST1:DPCC:HS:ROW1:PCQI:TO 1
BB:W3GP:MST1:DPCC:HS:ROW1:PCQI1:TYPE TADT
BB:W3GP:MST1:DPCC:HS:ROW1:PCQI1:CQI1 10
BB:W3GP:MST1:DPCC:HS:ROW1:PCQI1:CQI2 20
BB:W3GP:MST1:DPCC:HS:ROW1:PCQI1:PCI 2
BB:W3GP:MST1:DPCC:HS:STAT ON

```

[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SFormat?	469
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MMODE	469
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SC:ENABled	470
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SC:ACTive	470
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:HACK:ROWS	470
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:PCQI:ROWS	470
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:HACK:FROM	471
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:HACK:TO	471
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:HACK<di>	471
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:POHACK	472
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI:FROM	473
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI:TO	473
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI<di>:TYPE	473
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI<di>:CQI<us>	474
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI<di>:PCI	474
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:POPCqi	474
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:HACK:REPeat	475
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:PCQI:REPeat	475
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SLENgth?	475
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SLENgth:ADJust	476

[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SFormat?

Queries the used slot format.

Return values:

<SlotFormat> integer
 Range: 0 to 1
 *RST: 0

Usage: Query only

Options: R&S SMW-K83

Manual operation: See "Slot Format" on page 191

[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MMODE <MMode>

(Release 8 and Later, Release 8 and Later (RT))

Enables/disables working in MIMO mode for the selected UE.

Parameters:

<MMode> 0 | 1 | OFF | ON
 *RST: 0

Example: see [example "HS-DPCCH Scheduling"](#) on page 468

Options: R&S SMW-K83

Manual operation: See ["MIMO Mode"](#) on page 192

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SC:ENABLEd
 <SecCellEnabled>

Enables the selected number of secondary cells for the selected UE.

Parameters:

<SecCellEnabled> integer
 Range: 0 to 7
 *RST: 0

Example: see [example "HS-DPCCH Scheduling"](#) on page 468

Options: R&S SMW-K83

Manual operation: See ["Secondary Cell Enabled"](#) on page 193

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SC:ACTIVE
 <SecCellActive>

(Release 8 and Later)

Sets the number of active secondary cells for the selected UE.

Parameters:

<SecCellActive> integer
 Range: 0 to 7
 *RST: 0

Example: see [example "HS-DPCCH Scheduling"](#) on page 468

Options: R&S SMW-K83

Manual operation: See ["Secondary Cell Active"](#) on page 193

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:HACK:ROWS <RowCount>
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:PCQI:ROWS <RowCount>

Determines the number of the rows in the HARQ-ACK respectively in the PCI/CQI scheduling table.

Parameters:

<RowCount> integer
 Range: 1 to 32
 *RST: 1

Example: see [example "HS-DPCCH Scheduling"](#) on page 468

Options: R&S SMW-K83

Manual operation: See ["Number of Rows"](#) on page 196

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:HACK:FROM
 <HackFrom>

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:HACK:TO
 <HackTo>

(Release 8 and Later)

Defines the beginning / end of the HARQ-ACK transmissions inside the HARQ-ACK cycle (specified by HARQ ACK Repeat After). The range is specified in multiples of intervals (Inter TTI distance).

Suffix:

<ch0> 0..<RowCount>

Parameters:

<HackTo> integer
 Range: 0 to dynamic
 *RST: row index

Example: see [example "HS-DPCCH Scheduling"](#) on page 468

Options: R&S SMW-K83

Manual operation: See ["HARQ-ACK From Interval/ HARQ-ACK To Interval"](#) on page 193

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:HACK<di>
 <HarqAck>

(Release 8 and Later)

Sets the information transmitted during the HARQ-ACK slots of the TTIs during the corresponding specified HARQ-ACK From/To range.

For detailed description, see ["HS-DPCCH 1/2, HARQ-ACK 1/2/3/4"](#) on page 194. The [table 8-1](#) provides the necessary cross-reference information.

Table 8-1: Cross-reference between the used GUI terms and abbreviations in the SCPI command

Value name	Parameter value
"DTX"	DTX D_DTX
"PRE, POST"	PRE POST
"A, N"	A N
"AA, AN, NA, NN"	M_A M_N M_AA M_AN M_NA M_NN
"A/D, N/A, ... " (different combinations possible)	S_A_D S_N_A ... (different combinations possible)

Value name	Parameter value
"A/D/D, N/D/D, ... " (different combinations possible)	S2_N_N_N S2_N_N_A ... (different combinations possible)
"AN/NN, D/AA, ... " (different combinations possible)	MS_AA_AA MS_D_AA ... (different combinations possible)

Suffix:

<ch0> 0..<RowCount>

Parameters:

<HarqAck>

DTX | PRE | POST | A | N | M_A | M_N | M_AA | M_AN | M_NA |
M_NN | S_A_D | S_N_D | S_D_A | S_D_N | S_A_A | S_A_N |
S_N_A | S_N_N | MS_A_D | MS_N_D | MS_AA_D | MS_AN_D |
MS_NA_D | MS_NN_D | MS_D_A | MS_D_N | MS_D_AA |
MS_D_AN | MS_D_NA | MS_D_NN | MS_A_A | MS_A_N |
MS_N_A | MS_N_N | MS_A_AA | MS_A_AN | MS_A_NA |
MS_A_NN | MS_N_AA | MS_N_AN | MS_N_NA | MS_N_NN |
MS_AA_A | MS_AA_N | MS_AN_A | MS_AN_N | MS_NA_A |
MS_NA_N | MS_NN_A | MS_NN_N | MS_AA_AA |
MS_AA_AN | MS_AA_NA | MS_AA_NN | MS_AN_AA |
MS_AN_AN | MS_AN_NA | MS_AN_NN | MS_NA_AA |
MS_NA_AN | MS_NA_NA | MS_NA_NN | MS_NN_AA |
MS_NN_AN | MS_NN_NA | MS_NN_NN | S2_A_D_D |
S2_N_D_D | S2_D_A_D | S2_D_N_D | S2_D_D_A |
S2_D_D_N | S2_A_A_D | S2_A_N_D | S2_N_A_D |
S2_N_N_D | S2_A_D_A | S2_A_D_N | S2_N_D_A |
S2_N_D_N | S2_D_A_A | S2_D_A_N | S2_D_N_A |
S2_D_N_N | S2_A_A_A | S2_A_A_N | S2_A_N_A |
S2_A_N_N | S2_N_A_A | S2_N_A_N | S2_N_N_A |
S2_N_N_N | D_DTX

Example: see [example "HS-DPCCH Scheduling"](#) on page 468**Options:** R&S SMW-K83**Manual operation:** See ["HS-DPCCH 1/2, HARQ-ACK 1/2/3/4"](#) on page 194

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:POHACK
<PoHack>

(Release 8 and Later)

Sets the power offset of a HARQ-ACK response relative to the [\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:HS:POWER](#).

Suffix:

<ch0> 0..<RowCount>

Parameters:

<PoHack> float
 Range: -10 to 10
 Increment: 0.1
 *RST: 0

Options: R&S SMW-K83

Manual operation: See ["Power Offset HARQ-ACK"](#) on page 195

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI:FROM
 <PcqiFrom>
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI:TO
 <PcqiTo>

(Release 8 and Later)

Defines the beginning / end of the PCI/CQI transmissions inside the PCI/CQI cycle (specified by PCI/CQI Repeat After). The range is specified in multiples of intervals (Inter TTI distance).

Suffix:

<ch0> 0..<RowCount>

Parameters:

<PcqiTo> integer
 Range: 0 to dynamic
 *RST: row index

Example: see [example "HS-DPCCH Scheduling"](#) on page 468

Options: R&S SMW-K83

Manual operation: See ["PCI-CQI From Interval/ PCI-CQI To Interval"](#) on page 196

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI<di>:
TYPE <CqiType>

Selects the type of the PCI/CQI report.

Suffix:

<ch0> 0..<RowCount>

Parameters:

<CqiType> DTX | CQI | TAST | TADT | TB | CCQI
TAST|TADT
 Type A Single TB, Type A Double TB
TB
 Type B
CCQI
 Composite CQI

Example: see [example "HS-DPCCH Scheduling"](#) on page 468

Options: R&S SMW-K83

Manual operation: See ["HS-DPCCH 1/2, PCI/CQI 1/2/3/4 Type"](#) on page 197

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI<di>:CQI<us> <Cqi>

Parameters:

<Cqi> integer
Range: 0 to 30
*RST: 0

Example: see [example "HS-DPCCH Scheduling"](#) on page 468

Options: R&S SMW-K83

Manual operation: See ["CQI/CQI₃/CQI₁/CQI₂"](#) on page 198

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI<di>:PCI<PCI>

Suffix:

<ch0> 0..[<RowCount>](#)

Parameters:

<PCI> integer
Range: 0 to 3
*RST: 0

Example: see [example "HS-DPCCH Scheduling"](#) on page 468

Manual operation: See ["PCI"](#) on page 198

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:POPCqi<PoPcqi>

(Release 8 and Later)

Sets the power offset $P_{\text{off_PCI/CQI}}$ of all PCI/CQI slots during the corresponding specified PCI/CQI From/To range relative to the [\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:HS:POWER](#).

Suffix:

<ch0> 0..[<RowCount>](#)

Parameters:

<PoPcqi> float
Range: -10 to 10
Increment: 0.1
*RST: 0

Options: R&S SMW-K83

Manual operation: See ["Power Offset PCI/CQI"](#) on page 197

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:HACK:REPeat <HackRep>

Defines the cycle length after that the information in the HS-DPCCH scheduling table is read out again from the beginning.

Parameters:

<HackRep> integer
Range: 1 to dynamic

Example: see [example "HS-DPCCH Scheduling"](#) on page 468

Manual operation: See ["HARQ-ACK Repeat After"](#) on page 193

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:PCQI:REPeat <PcqiRep>

(Release 8 and Later)

Defines the cycle length after that the information in the HS-DPCCH scheduling table is read out again from the beginning.

Parameters:

<PcqiRep> integer
Range: 1 to dynamic
*RST: 1

Example: see [example "HS-DPCCH Scheduling"](#) on page 468

Manual operation: See ["PCI/CQI Repeat After"](#) on page 196

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SLENgth?

(Release 8 and Later)

Queries the suggested and current ARB sequence length.

The current ARB sequence length is adjusted with the command [\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:DPCCh:HS:SLENgth:ADJust](#) on page 476.

Return values:

<SLength> float

Example: BB:W3GP:MST1:DPCCh:HS:SLEN?
queries the ARB sequence length

Usage: Query only

Options: R&S SMW-K83

Manual operation: See ["Suggested / Current ARB Seq. Length \(HS-DPCCH\)"](#) on page 198

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SLENgth:ADJust

(Release 8 and Later)

Sets the current ARB sequence length to the suggested value.

Example: BB:W3GP:MST1:DPCC:HS:SLEN:ADJ
adjusts the ARB sequence length

Usage: Event

Options: R&S SMW-K83

Manual operation: See "[Adjust ARB Sequence Length \(HS-DPCCH\)](#)" on page 200

8.9.5 DPDCH Settings

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:CCODE?	476
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:DATA	476
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:DATA:DSElect	477
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:DATA:PATtern	477
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:SRATe?	478
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPDCh:FCIO	478
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPDCh:ORATe	478
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPDCh:POWer	479
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPDCh:STATe	479

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:CCODE?

The command queries the channelization code of the specified channel. The value is fixed and depends on the overall symbol rate of the user equipment.

Return values:

<CCode> float

Example: BB:W3GP:MST1:CHAN:DPDC:CCOD?
queries the channelization code for DPDCH 1 of user equipment 1.

Usage: Query only

Manual operation: See "[Channelization Code](#)" on page 182

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:DATA <Data>

The command determines the data source for the selected DPDCH.

For the enhanced channels of user equipment 1 (UE1), this entry is valid when channel coding is deactivated. When channel coding is active, data sources are selected for the transport channels with the commands :BB:W3GPp:MST:CHANnel:DPDCh:DCCH:DATA and :BB:W3GPp:MST:ENHanced:TChannel:DATA.

Parameters:

<Data>

PN9 | PN11 | PN15 | PN16 | PN20 | PN21 | PN23 | DLIS |
ZERO | ONE | PATtern**PNxx**

The pseudo-random sequence generator is used as the data source. Different random sequence lengths can be selected.

DLIS

A data list is used. The data list is selected with the command

```
[ :SOURce<hw> ] :BB:W3GPp:MSTation<st> :  
CHANnel<ch> :DPDCh:DATA:DSElect.
```

ZERO | ONE

Internal 0 and 1 data is used.

PATtern

Internal data is used. The bit pattern for the data is defined by the command `[:SOURce<hw>] :BB:W3GPp:MSTation<st> :
CHANnel<ch> :DPDCh:DATA:PATtern.`

*RST: PN9

Example:

```
BB:W3GP:MST1:CHAN:DPDC:DATA PN11
```

selects internal PRBS data with period length $2^{11}-1$ as the data source.

Manual operation: See "[DPDCH Data Source](#)" on page 183

```
[ :SOURce<hw> ] :BB:W3GPp:MSTation<st> :CHANnel<ch> :DPDCh:DATA:DSElect  
<DSelect>
```

The command selects the data list for the DLIS data source selection.

The files are stored with the fixed file extensions `*.dm_iqd` in a directory of the user's choice. The directory applicable to the commands is defined with the command `MMEMory:CDIR`. To access the files in this directory, you only have to give the file name, without the path and the file extension.

Parameters:

<DSelect>

<data list name>

Example:

```
BB:W3GP:MST1:CHAN1:DPDC:DATA DLIS
```

selects the Data Lists data source.

```
MMEM:CDIR '/var/user/temp/IQData'
```

selects the directory for the data lists.

```
BB:W3GP:MST1:CHAN1:DPDC:DATA:DSEL 'dpdch_13'
```

selects the file `dpdch_13` as the data source.

```
[ :SOURce<hw> ] :BB:W3GPp:MSTation<st> :CHANnel<ch> :DPDCh:DATA:PATtern  
<Pattern>
```

The command enters the bit pattern for the PATtern data source selection. The first parameter determines the bit pattern (choice of hexadecimal, octal or binary notation), the second specifies the number of bits to use.

Parameters:

<Pattern> 64 bits
 *RST: #H0,1

Example:

BB:W3GP:MST1:CHAN1:DPDC:DATA PATT
 selects the Pattern data source.
 BB:W3GP:MST1:CHAN1:DPDC:DATA:PATT #H3F, 8
 defines the bit pattern.

Manual operation: See ["DPDCH Data Source"](#) on page 183

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:SRATe?

The command queries the symbol rate of the DPDCH. The symbol rate depends on the overall symbol rate set and cannot be modified.

Return values:

<SRate> D15K | D30K | D60K | D120k | D240k | D480k | D960k

Example:

BB:W3GP:MST4:CHAN2:DPDC:SRAT?
 queries the symbol rate of DPDCH 2 of user equipment 4.
 Response: 960
 the symbol rate is 960 ksps.

Note:

DPDCH 2 is only active once the overall symbol rate is 2 x 960 ksps or more. When overall symbol rates are less, the error message "???" is returned.

Usage: Query only

Manual operation: See ["Symbol Rate / State"](#) on page 182

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPDCh:FCIO <Fcio>

The command sets the channelization code to I/O. This mode can only be activated if the overall symbol rate is < 2 x 960 kbps.

Parameters:

<Fcio> ON | OFF
 *RST: OFF

Example:

BB:W3GP:MST1:DPDC:FCIO ON
 sets the channelization code to I/O.

Manual operation: See ["Force Channelization Code To I/O"](#) on page 181

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPDCh:ORATe <ORate>

The command sets the overall symbol rate. The overall symbol rate determines the number of DPDCHs as well as their symbol rate and channelization codes.

Parameters:

<ORate> D15K | D30K | D60K | D120k | D240k | D480k | D960k |
 D1920k | D2880k | D3840k | D4800k | D5760k
D15K ... D5760K
 15 ksps ... 6 x 960 ksps
 *RST: D60K

Example:

BB:W3GP:MST1:DPDC:ORAT D15K
 sets the overall symbol rate to 15 ksps. Only DPDCH1 is active,
 the symbol rate is 15 ksps and the channelization code is 64.

Manual operation: See ["Overall Symbol Rate"](#) on page 181

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPDCh:POWer <Power>

The command defines the channel power of the DPDCHs. The power entered is relative to the powers of the other channels. If "Adjust Total Power to 0 dB" is executed ([\[:SOURce<hw>\]:BB:W3GPp:POWer:ADJust](#)), the power is normalized to a total power for all channels of 0 dB. The power ratios of the individual channels remains unchanged.

Note: The uplink channels are not blanked in this mode (duty cycle 100%).

Parameters:

<Power> float
 Range: -80 dB to 0 dB
 Increment: 0.01 dB
 *RST: 0 dB

Example:

BB:W3GP:MST4:DPDC:POW -60dB
 sets the channel power for DPDCH 2 of user equipment 4 to -60 dB. The channel power relates to the power of the other channels.
 BB:W3GP:POW:ADJ
 the channel power relates to 0 dB.

Manual operation: See ["Channel Power"](#) on page 180

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPDCh:STATe <State>

The command activates or deactivates DPDCHs. This always activates or deactivates all the channels. The number of channels (1...6) is determined by the overall symbol rate.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

BB:W3GP:MST1:DPDC:STAT ON
 activates all the DPDCHs.

Manual operation: See ["State \(DPDCH\)"](#) on page 180

8.9.6 PCPCH Settings

[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:CPOWer.....	480
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:CPSFormat.....	480
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:DATA.....	481
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:DATA:DSElect.....	481
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:DATA:PATtern.....	482
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:DPOWer.....	482
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:FBI:MODE.....	482
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:FBI:PATtern.....	483
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:MLENgtH.....	483
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:PLENgtH.....	483
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:PPOWer.....	484
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:PPOWer:STEP.....	484
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:PREPetition.....	484
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:RAFTer.....	485
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:RARb.....	485
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:SIGNature.....	486
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:SRATe.....	486
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TFCI.....	486
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:DPOWer:MPART?.....	486
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:DPOWer:PREAmble?.....	487
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:SOFFset.....	487
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:SPERiod?.....	488
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:TIME:PREMp.....	488
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:TIME:PREPre.....	488
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TPC:DATA.....	489
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TPC:DATA:DSElect.....	489
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TPC:DATA:PATtern.....	490
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TPC:READ.....	490

[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:CPOWer <CPower>

The command defines the power of the control component of the PCPCH.

Parameters:

<CPower> float

Range: -80 dB to 0 dB

Increment: 0.1 dB

*RST: 0 dB

Example: BB:W3GP:MST1:PCPC:CPOW -10 dB
sets the power to -10 dB.

Manual operation: See "Control Power" on page 253

[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:CPSFormat <CpSFormat>

The command defines the slot format of the control component of the PCPCH.

The slot format sets the associated FBI mode automatically:

- Slot format 0 = FBI OFF
- Slot format 1 = FBI 1 bit
- Slot format 2 = FBI 2 bits

Parameters:

<CpSFormat> integer
 Range: 0 to 2
 *RST: 0

Example: BB:W3GP:MST1:PCPC:CPSF 2
 sets slot format 2.

Manual operation: See "Slot Format" on page 253

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:DATA <Data>

The command determines the data source for the PCPCH.

Parameters:

<Data> ZERO | ONE | PATtern | PN9 | PN11 | PN15 | PN16 | PN20 |
 PN21 | PN23 | DLISt

PNxx

The pseudo-random sequence generator is used as the data source. Different random sequence lengths can be selected.

DLISt

A data list is used. The data list is selected with the command
 SOURce:BB:W3GPp:MST:PCPCh:DATA:DSElect [:
 SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:DATA:
 DSElect.

ZERO | ONE

Internal 0 and 1 data is used.

PATtern

Internal data is used. The bit pattern for the data is defined by
 the command [:SOURce<hw>]:BB:W3GPp:MSTation<st>:
 PCPCh:DATA:PATtern.

*RST: PN9

Example: BB:W3GP:MST1:PCPC:DATA PN11
 selects internal PRBS data with period length $2^{11}-1$ as the data source.

Manual operation: See "Data Source" on page 254

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:DATA:DSElect <DSelect>

The command selects the data list for the DLISt data source.

The files are stored with the fixed file extensions `*.dm_iqd` in a directory of the user's choice. The directory applicable to the commands is defined with the command `MMEMory:CDIR`. To access the files in this directory, you only have to give the file name, without the path and the file extension.

Parameters:

<DSelect> string

Example:

```
BB:W3GP:MST1:PCPC:DATA DLIS
selects data lists as the data source.
MMEM:CDIR '/var/user/temp/IQData'
selects the directory for the data lists.
BB:W3GP:MST1:PCPC:DATA:DSEL 'pcpch_data'
selects the data list pcpch_data.
```

Manual operation: See ["Data Source"](#) on page 254

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:DATA:PATtern <Pattern>

The command determines the bit pattern for the data component when the `PATtern` data source is selected. The first parameter determines the bit pattern (choice of hexadecimal, octal or binary notation), the second specifies the number of bits to use.

Parameters:

<Pattern> 64 bits
 *RST: #H0,1

Example:

```
BB:W3GP:MST:PCPC:DATA:PATT #H3F,8
defines the bit pattern of the data for the DATA component.
```

Manual operation: See ["Data Source"](#) on page 254

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:DPOWER <DPower>

The command defines the power of the data component of the PCPCH.

Parameters:

<DPower> float
 Range: -80 dB to 0 dB
 Increment: 0.1 dB
 *RST: 0 dB

Example:

```
BB:W3GP:MST1:PCPC:DPOW -10 dB
sets the power to -10 dB.
```

Manual operation: See ["Data Power"](#) on page 252

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:FBI:MODE <Mode>

The command sets the number of bits (1 or 2) for the FBI field. With OFF, the field is not used.

The FBI pattern automatically sets the associated slot format:

- FBI OFF = Slot format 0
- FBI 1 bit = Slot format 1
- FBI 2 bits = Slot format 2

Parameters:

<Mode> OFF | D1B | D2B
 *RST: OFF

Example:

BB:W3GP:MST2:PCPC:FBI:MODE OFF
 the FBI field is not used.

Manual operation: See "FBI Mode" on page 253

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:FBI:PATtern <Pattern>

The command determines the bit pattern for the FBI field when the PATtern data source is selected. The maximum length of the pattern is 32 bits. The first parameter determines the bit pattern (choice of hexadecimal, octal or binary notation), the second specifies the number of bits to use.

Parameters:

<Pattern> 32 bits
 *RST: #H0,1

Example:

BB:W3GP:MST1:PCPC:FBI:PATT #H3F,8
 defines the bit pattern of the data for the FBI field.

Manual operation: See "FBI Pattern" on page 253

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:MLENght <MLength>

The command sets the length of the message component as a number of frames.

Parameters:

<MLength> 1 | 2 Frames
 Range: 1 to 2
 *RST: 1 Frame

Example:

BB:W3GP:MST4:PCPC:MLEN 2
 the length of the message component is 2 frames.

Manual operation: See "Message Length" on page 253

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:PLENght <PLength>

The command defines the length of the power control preamble of the PCPCH as a number of slots.

Parameters:

<PLength> S0 | S8
 *RST: S8

Example: `BB:W3GP:MST1:PCPC:PLEN S8`
sets a length of 8 slots for the power control preamble.

Manual operation: See ["Power Control Preamble Length"](#) on page 251

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:PPower <PPower>

The command defines the power of the preamble component of the PCPCH. If the preamble is repeated and the power increased with each repetition, this setting specifies the power achieved during the last repetition.

Parameters:

<PPower> float
Range: -80 dB to 0 dB
Increment: 0.1 dB
*RST: 0 dB

Example: `BB:W3GP:MST1:PCPC:PPOW -10 dB`
sets the power to -10 dB.
`BB:W3GP:MST1:PCPC:PPOW:STEP 1 dB`
sets an increase in power of 1 dB per preamble repetition.
`BB:W3GP:MST1:PCPC:PREP 2`
sets a sequence of 2 preambles. The power of the first preamble is -9 dB, the power of the second, -1 dB.

Manual operation: See ["Preamble Power"](#) on page 251

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:PPower:STEP <Step>

The command defines the step width of the power increase, by which the preamble component of the PCPCH is increased from repetition to repetition. The power during the last repetition corresponds to the power defined by the command [:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:PPower.

Parameters:

<Step> float
Range: 0 dB to 10 dB
Increment: 0.1 dB
*RST: 0 dB

Example: `BB:W3GP:MST1:PCPC:PPOW:STEP 2dB`
the power of the PCPCH preamble is increased by 2 dB with every repetition.

Manual operation: See ["Preamble Power Step"](#) on page 251

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:PREPetition <PRepetition>

The command defines the number of PCPCH preamble components.

Parameters:

<PRepetition> integer
 Range: 1 to 10
 *RST: 1

Example:

BB:W3GP:MST1:PCPC:PREP 3
 sets three preamble components.

Manual operation: See ["Preamble Repetition"](#) on page 251

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:RAFTer <Repeatafter>

Sets the number of access slots after that the PCPCH structure will be repeated.

Parameters:

<Repeatafter> integer
 Range: 1 to 1000
 *RST: 18

Example:

see [\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:PCPCh:RARb](#) on page 485

Manual operation: See ["Repeat Structure After \(x Acc. Slots\)"](#) on page 250

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:RARb <State>

Enables/disables repeating the selected PCPCH structure during one ARB sequence.

Parameters:

<State> 0 | 1 | OFF | ON

ON

Within one ARB sequence, the selected PCPCH structure is repeated once.

OFF

The selected PCPCH structure can be repeated several time, depending on the structure length ([\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:PRCh:TIMing:SPERiod?](#)) and the [\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:PCPCh:RAFTer](#).

*RST: 1

Example:

SOURce1:BB:W3GPp:SLenGth 4
 SOURce1:BB:W3GPp:MSTation3:PCPCh:TIMing:SPERiod?
 Response: 14
 SOURce1:BB:W3GPp:MSTation1:PCPCh:RARb OFF
 SOURce1:BB:W3GPp:MSTation1:PCPCh:RAFTer 20

Manual operation: See ["Repeat Structure After ARB Sequence Length"](#) on page 250

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:SIGNature <Signature>

The command selects the signature of the PCPCH (see Table 3 in 3GPP TS 25.213 Version 3.4.0 Release 1999).

Parameters:

<Signature> integer
 Range: 0 to 15
 *RST: 0

Example: BB:W3GP:MST1:PCPC:SIGN 5
 selects signature 5.

Manual operation: See "Signature" on page 252

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:SRATe <SRate>

The command sets the symbol rate of the PCPCH.

User Equipment 1: When channel coding is active, the symbol rate is limited to the range between 15 and 120 ksps. Values above this limit are automatically set to 120 ksps.

Parameters:

<SRate> D15K | D30K | D60K | D120k | D240k | D480k | D960k
 *RST: D30K

Example: BB:W3GP:MST1:PCPC:SRAT D15K
 sets the symbol rate of the PCPCH of user equipment 1 to 15 ksps.

Manual operation: See "Symbol Rate" on page 253

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TFCI <Tfci>

Sets the value of the TFCI (Transport Format Combination Indicator) field. This value selects a combination of 30 bits, which are divided into two groups of 15 successive slots.

Parameters:

<Tfci> integer
 Range: 0 to 1023
 *RST: 0

Example: BB:W3GP:MST1:PCPC:TFCI 21
 sets the TFCI value to 21.

Manual operation: See "TFCI" on page 254

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:DPOWer:MPARt?

Queries the level correction value for the message part. In case of one UE active, the power of the message part can be calculated by adding the set RF level.

Return values:

<MPart> float
 Range: -80 to 0
 Increment: 0.01
 *RST: 0

Example:

BB:W3GP:MST3:PCPC:TIM:DPOW:MPAR?
 queries the level correction value for the message part.
 Response: 1.2
 the correction value is 1.2 dB.
 POW?
 queries the RF level.
 Response: 2
 the RF output level is 2 dBm. The message part power is 3.2 dBm

Usage: Query only

Manual operation: See ["Delta Power \(Message Part\)"](#) on page 248

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:DPOWer:PREamble?

Queries level correction value for the last AICH preamble before the message part. This value is identical to the correction value for the CD preamble. The level of the other preambles can be calculated by subtracting the set Preamble Power Step.

Return values:

<PRreamble> float
 Range: -80 to 0
 Increment: 0.01
 *RST: 0

Example:

BB:W3GP:MST3:PCPC:TIM:DPOW:PRE?
 queries the level correction value for the last AICH preamble before the message part.

Usage: Query only

Manual operation: See ["Delta Power \(Preamble\)"](#) on page 248

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:SOFFset <SOffset>

This command defines the start offset of the PCPCH in access slots. The starting time delay in timeslots is calculated according to: 2 x Start Offset.

Parameters:

<SOffset> integer
 Range: 1 to 14
 *RST: 0

Example:

BB:W3GP:MST3:PCPC:TIM:SOFF 1
 the start offset of the PCPCH of UE 3 is 2 access slots.

Manual operation: See ["Start Offset #"](#) on page 248

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:SPERiod?

Queries the structure length.

Return values:

<SPeriod> float

Example: see [\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:PCPCh:RARB](#) on page 485

Usage: Query only

Manual operation: See ["Structure Length"](#) on page 249

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:TIME:PREMp <Premp>

This command defines the AICH Transmission Timing. This parameter defines the time difference between the preamble and the message part. Two modes are defined in the standard. In mode 0, the preamble to message part difference is 3 access slots, in mode 1 it is 4 access slots.

Parameters:

<Premp> integer
Range: 1 to 14
*RST: 3

Example: BB:W3GP:MST3:PCPC:TIM:TIME:PREM 3
the difference between the preamble and the message part is 3 access slots.

Manual operation: See ["Transmission Timing \(Message Part\)"](#) on page 249

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:TIME:PREPre <Prepre>

This command defines the time difference between two successive preambles in access slots.

Parameters:

<Prepre> integer
Range: 1 to 14
*RST: 3

Example: BB:W3GP:MST3:PCPC:TIM:TIME:PREP 3
the time difference between two successive preambles is 3 access slots.

Manual operation: See ["Transmission Timing \(Preamble\)"](#) on page 249

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TPC:DATA <Data>

The command determines the data source for the TPC field of the PCPCH.

Parameters:

<Data> ZERO | ONE | PATTErn | DLISt

DLISt

A data list is used. The data list is selected with the command
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TPC:
DATA:DSElect.

ZERO | ONE

Internal 0 and 1 data is used.

PATTErn

Internal data is used. The bit pattern for the data is defined by
the command [:SOURce<hw>]:BB:W3GPp:MSTation<st>:
PCPCh:TPC:DATA:PATTErn. The maximum length is 64 bits.

*RST: PATTErn

Example:

BB:W3GP:MST2:PCPC:TPC:DATA PATT
selects as the data source for the TPC field of user equipment 2
the bit pattern defined with the following command.
BB:W3GP:MST2:PCPC:TPC:DATA:PATT #H48D0,16
defines the bit pattern.

Manual operation: See "TPC Data Source" on page 254

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TPC:DATA:DSElect
<DSelect>**

The command selects the data list when the DLISt data source is selected for the TPC
field of the PCPCH.

The files are stored with the fixed file extensions *.dm_iqd in a directory of the user's
choice. The directory applicable to the commands is defined with the command
MMEMory:CDIR. To access the files in this directory, you only have to give the file
name, without the path and the file extension.

Parameters:

<DSelect> string

Example:

BB:W3GP:MST1:PCPC:TPC:DATA DLIS
selects data lists as the data source.
MMEM:CDIR '/var/user/temp/IQData'
selects the directory for the data lists.
BB:W3GP:MST1:PCPC:TPC:DATA:DSEL 'dpcch_tpc_1'
selects the data list dpcch_tpc1.

Manual operation: See "TPC Data Source" on page 254

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TPC:DATA:PATtern <Pattern>

The command determines the bit pattern for the PATtern data source selection. The maximum length of the bit pattern is 64 bits.

Parameters:

<Pattern> 64 bits
 *RST: #H0,1

Example: BB:W3GP:MST1:PCPC:DATA:PATT #H3F,8
 defines the bit pattern of the data for the FBI field.

Manual operation: See ["TPC Data Source"](#) on page 254

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TPC:READ <Read>

The command sets the read out mode for the bit pattern of the TPC field of the PCPCH.

The bit pattern is selected with the command [\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:PCPCh:TPC:DATA](#).

Parameters:

<Read> CONTinuous | S0A | S1A | S01A | S10A

CONTinuous

The bit pattern is used cyclically.

S0A

The bit pattern is used once, then the TPC sequence continues with 0 bits.

S1A

The bit pattern is used once, then the TPC sequence continues with 1 bits.

S01A

The bit pattern is used once and then the TPC sequence is continued with 0 and 1 bits alternately (in multiples, depending on by the symbol rate, for example, 00001111).

S10A

The bit pattern is used once and then the TPC sequence is continued with 1 and 0 bits alternately (in multiples, depending on by the symbol rate, for example, 11110000).

*RST: CONTinuous

Example: BB:W3GP:MST2:PCPC:TPC:READ CONT
 the selected bit pattern is repeated continuously for the TPC sequence.

Manual operation: See ["Read Out Mode"](#) on page 255

8.9.7 PRACH Settings

[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:ATTiming.....	491
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:CPOwer.....	491
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:DATA.....	492
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:DATA:DSElect.....	492
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:DATA:PATtern.....	493
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:DPOwer.....	493
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:MLENgt.....	493
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:PPOwer.....	493
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:PPOwer:STEP.....	494
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:PREPetition.....	494
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:RAFTer.....	494
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:RARb.....	495
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:SFOrmAt.....	495
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:SIGNature.....	496
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:SRATe.....	496
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TFCI.....	496
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:DPOwer:MPART?.....	497
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:DPOwer:MPART:CONTRol?.....	497
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:DPOwer:MPART:DATA?.....	497
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:DPOwer:PREAmble?.....	498
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:SOFFset.....	498
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:SPERiod?.....	498
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:TIME:PREMp.....	499
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:TIME:PREPre.....	499

[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:ATTiming <AtTiming>

This command defines which AICH Transmission Timing, time difference between the preamble and the message part or the time difference between two successive preambles in access slots, will be defined.

Parameters:

<AtTiming> ATT0 | ATT1
 *RST: ATT0

Example:

BB:W3GP:MST3:PRAC:ATT ATT1
 selects the AICH Transmission Timing as the difference between the preamble and the message part.

[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:CPOwer <CPower>

The command defines the power of the control component of the PRACH.

Parameters:

<CPower> float
 Range: -80 dB to 0 dB
 Increment: 0.1 dB
 *RST: 0 dB

Example: BB:W3GP:MST1:PRAC:CPOW -10 dB
sets the power to -10 dB.

Manual operation: See "Control Power" on page 242

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:DATA <Data>

The command determines the data source for the PRACH.

Parameters:

<Data> ZERO | ONE | PATtern | PN9 | PN11 | PN15 | PN16 | PN20 |
PN21 | PN23 | DLISt

PNxx

The pseudo-random sequence generator is used as the data source. Different random sequence lengths can be selected.

DLISt

A data list is used. The data list is selected with the command
[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:DATA:
DSElect.

ZERO | ONE

Internal 0 and 1 data is used.

PATtern

Internal data is used. The bit pattern for the data is defined by
the command [:SOURce<hw>]:BB:W3GPp:MSTation<st>:
PRACH:DATA:PATtern.

*RST: PN9

Example: BB:W3GP:MST1:PRAC:DATA PN11
selects internal PRBS data with period length $2^{11}-1$ as the data source.

Manual operation: See "Data Source" on page 243

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:DATA:DSElect <DSelect>

The command selects the data list for the DLISt data source.

The files are stored with the fixed file extensions *.dm_iqd in a directory of the user's choice. The directory applicable to the commands is defined with the command
MMEMory:CDIR. To access the files in this directory, you only have to give the file name, without the path and the file extension.

Parameters:

<DSelect> string

Example: BB:W3GP:MST1:PRAC:DATA DLIS
selects data lists as the data source.
MMEM:CDIR '/var/user/temp/IQData'
selects the directory for the data lists.
BB:W3GP:MST1:PRAC:DATA:DSEL 'pcpch_data'
selects the data list pcpch_data.

Manual operation: See ["Data Source"](#) on page 243

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:DATA:PATtern <Pattern>

The command determines the bit pattern for the data component when the PATtern data source is selected. The first parameter determines the bit pattern (choice of hexadecimal, octal or binary notation), the second specifies the number of bits to use.

Parameters:

<Pattern> 64 bits
 *RST: #H0,1

Example: BB:W3GP:MST1:PRAC:DATA:PATT #H3F,8
 defines the bit pattern of the data for the DATA component.

Manual operation: See ["Data Source"](#) on page 243

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:DPOWER <DPower>

The command defines the power of the data component of the PRACH.

Parameters:

<DPower> float
 Range: -80 dB to 0 dB
 Increment: 0.1 dB
 *RST: 0 dB

Example: BB:W3GP:MST1:PRAC:DPOW -10 dB
 sets the power to -10 dB.

Manual operation: See ["Data Power"](#) on page 242

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:MLENgtH <MLength>

The command sets the length of the message component as a number of frames.

Parameters:

<MLength> 1 | 2 Frames
 *RST: 1

Example: BB:W3GP:MST4:PRAC:MLEN 2
 the length of the message component is 2 frames.

Manual operation: See ["Message Length"](#) on page 243

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:PPOWER <PPower>

The command defines the power of the preamble component of the PRACH. If the preamble is repeated and the power increased with each repetition, this setting specifies the power achieved during the last repetition.

Parameters:

<PPower> float
 Range: -80 dB to 0 dB
 Increment: 0.1 dB
 *RST: 0 dB

Example:

BB:W3GP:MST1:PRAC:PPOW -10 dB
 sets the power to -10 dB.
 BB:W3GP:MST1:PRAC:PPOW:STEP 1 dB
 sets an increase in power of 1 dB per preamble repetition.
 BB:W3GP:MST1:PRAC:PREP 2
 sets a sequence of 2 preambles. The power of the first preamble is -9 dB, the power of the second, -1 dB.

Manual operation: See ["Preamble Power"](#) on page 241

[[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:PPower:STEP <Step>

The command defines the step width of the power increase, by which the preamble component of the PRACH is increased from repetition to repetition. The power defined during the last repetition corresponds to the power defined by the command [\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>:PRACH:PPower](#).

Parameters:

<Step> float
 Range: 0 dB to 10 dB
 Increment: 0.1 dB
 *RST: 0 dB

Example:

BB:W3GP:MST1:PRAC:PPOW:STEP 2 dB
 the power of the PRACH preamble is increased by 2 dB with every repetition.

Manual operation: See ["Preamble Power Step"](#) on page 241

[[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:PREPetition <PREpetition>

The command defines the number of PRACH preamble components.

Parameters:

<PREpetition> integer
 Range: 1 to 10
 *RST: 1

Example:

BB:W3GP:MST1:PRAC:PREP 3
 sets three preamble components.

Manual operation: See ["Preamble Repetition"](#) on page 241

[[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:RAFTer <Repeatafter>

Sets the number of access slots after that the PRACH structure will be repeated.

Parameters:

<Repeatafter> integer
 Range: 1 to 1000
 *RST: 11

Example:

see [:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:
 RARB on page 495

Manual operation: See "Repeat Structure After (x Acc. Slots)" on page 240

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:RARB <State>

Enables/disables repeating the selected PRACH structure during one ARB sequence.

Parameters:

<State> 0 | 1 | OFF | ON

ON

Within one ARB sequence, the selected PRACH structure is repeated once.

OFF

The selected PRACH structure can be repeated several time, depending on the structure length ([:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:SPERiod?) and the [:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:RAFTer.

*RST: 1

Example:

SOURce1:BB:W3GPp:SLENGth 4
 SOURce1:BB:W3GPp:MSTation3:PRACH:TIMing:
 SPERiod?
 Response: 14
 SOURce1:BB:W3GPp:MSTation1:PRACH:RARB OFF
 SOURce1:BB:W3GPp:MSTation1:PRACH:RAFTer 20

Manual operation: See "Repeat Structure After ARB Sequence Length" on page 240

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:SFORmat <SFormat>

Defines the slot format of the PRACH.

A change of slot format leads to an automatic change of symbol rate [:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:SRATe

When channel coding is active, the slot format is predetermined. So in this case, the command has no effect.

Parameters:

<SFormat> 0 | 1 | 2 | 3
 *RST: 1

Example: BB:W3GP:MST:PRAC:SFOR 2
sets slot format 2.

Manual operation: See ["Slot Format"](#) on page 243

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:SIGNature <Signature>

The command selects the signature of the PRACH (see Table 3 in 3GPP TS 25.213 Version 3.4.0 Release 1999).

Parameters:

<Signature> integer
Range: 0 to 15
*RST: 0

Example: BB:W3GP:MST1:PRAC:SIGN 5
selects signature 5.

Manual operation: See ["Signature"](#) on page 242

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:SRATe <SRate>

The command sets the symbol rate of the PRACH.

A change of symbol rate leads to an automatic change of slot format [:
[SOURce<hw>\]:BB:W3GPp:MSTation<st>:PRACH:SFOFormat.](#)

Parameters:

<SRate> D15K | D30K | D60K | D120k
*RST: D30K

Example: BB:W3GP:MST1:PRAC:SRAT D15K
sets the symbol rate of the PRACH of user equipment 1 to 15 kbps.

Manual operation: See ["Symbol Rate"](#) on page 243

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TFCI <Tfci>

Sets the value of the TFCI (Transport Format Combination Indicator) field. This value selects a combination of 30 bits, which are divided into two groups of 15 successive slots.

Parameters:

<Tfci> integer
Range: 0 to 1023
*RST: 0

Example: BB:W3GP:MST1:PRAC:TFCI 21
sets the TFCI value to 21.

Manual operation: See ["TFCI"](#) on page 243

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:DPOWer:MPARt?

Queries the level correction value for the message part. In case of one UE active and "Level Reference" set to "RMS Power", the power of the message part can be calculated by adding the set RF level.

Return values:

<MPart> float
 Range: -80 to 0
 Increment: 0.01
 *RST: 0

Example:

BB:W3GP:MST3:PRAC:TIM:DPOW:MPAR?
 queries the level correction value for the message part.
 Response: 1.2
 the correction value is 1.2 dB.
 POW?
 queries the RF level.
 Response: 2
 the RF output level is 2 dBm. The message part power is 3.2 dBm.

Usage: Query only

Manual operation: See ["Delta Power \(Message Part\)"](#) on page 238

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:DPOWer:MPARt:CONTROL?

Queries the level correction value for the message control part.

Return values:

<Control> float
 Range: -80 to 0
 Increment: 0.01
 *RST: 0

Example:

BB:W3GP:MST3:PRAC:TIM:DPOW:MPAR:CONT?
 queries the level correction value for the message control part.
 Response: -3.24
 the correction value is -3.24 dB.

Usage: Query only

Manual operation: See ["Delta Power \(Message Part\)"](#) on page 238

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:DPOWer:MPARt:DATA?

Queries the level correction value for the message data part.

Return values:

<Data> float
 Range: -80 to 0
 Increment: 0.01
 *RST: 0

Example:

BB:W3GP:MST3:PRAC:TIM:DPOW:MPAR:DATA?
 queries the level correction value for the message data part.
 Response: -3.24
 the correction value is -3.24 dB.

Usage: Query only

Manual operation: See ["Delta Power \(Message Part\)"](#) on page 238

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:DPOWer:PREamble?

Queries level correction value for the preamble before the message part.

Return values:

<Preamble> float
 Range: -80 to 0
 Increment: 0.01
 *RST: 0

Example:

BB:W3GP:MST3:PRAC:TIM:DPOW:PRE?
 queries the level correction value for the last preamble before the message part.

Usage: Query only

Manual operation: See ["Delta Power \(Preamble\)"](#) on page 238

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:SOFFset <SOffset>

This command defines the start offset of the PRACH in access slots. The starting time delay in timeslots is calculated according to: 2 x Start Offset.

Parameters:

<SOffset> integer
 Range: 1 to 50
 *RST: 0

Example:

BB:W3GP:MST3:PRAC:TIM:SOFF 1
 the start offset of the PRACH of UE 3 is 2 access slots.

Manual operation: See ["Start Offset #"](#) on page 239

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:SPERiod?

Queries the structure length.

Return values:

<SPeriod> float

Example:see [:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:
RARB on page 495**Usage:**

Query only

Manual operation: See "Structure Length" on page 239**[[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:TIME:PREMp <Premp>**

This command defines the AICH Transmission Timing. This parameter defines the time difference between the preamble and the message part. Two modes are defined in the standard. In mode 0, the preamble to message part difference is 3 access slots, in mode 1 it is 4 access slots.

Parameters:

<Premp> integer
Range: 1 to 14
*RST: 3

Example:

BB:W3GP:MST3:PRAC:TIM.TIME:PREM 3
the difference between the preamble and the message part is 3 access slots.

Manual operation: See "Time Pre->MP" on page 239**[[:SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:TIME:PREPre <Prepre>**

This command defines the time difference between two successive preambles in access slots.

Parameters:

<Prepre> integer
Range: 1 to 14
*RST: 3

Example:

BB:W3GP:MST3:PRAC:TIM.TIME:PREP 3
the time difference between two successive preambles is 3 access slots.

Manual operation: See "Time Pre->Pre" on page 239

8.9.8 HSUPA Settings

[[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:CCODE?..... 501
[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:DATA..... 501
[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:DATA:
DSElect..... 502

[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:DATA: PATtern.....	503
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:POWer.....	503
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:SRATe?.....	503
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:CHANnel.....	504
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:CRATe?.....	504
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DATA.....	504
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DATA:DSElect.....	505
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DATA:PATtern.....	506
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DERRor:BIT:LAYer.....	506
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DERRor:BIT:RATE.....	506
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DERRor:BIT:STATe....	506
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DERRor:BLOCK: RATE.....	507
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DERRor:BLOCK: STATe.....	507
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DTX:PATtern.....	507
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DTX:STATe.....	508
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:SIMulation: CONNector.....	508
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:SIMulation: ADEFinition.....	508
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:SIMulation: DELay:AUSer.....	509
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:SIMulation: DELay:FEEDback?.....	509
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:SIMulation: MODE.....	509
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:SIMulation: MRETransmissions.....	510
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:SIMulation: RVZero.....	510
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:SIMulation[: STATe].....	511
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ[: SIMulation]:PATtern<ch>.....	511
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HPROcesses?.....	511
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:MIBRate?.....	511
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:MODulation.....	512
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:ORATe.....	512
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:PAYBits?.....	512
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:STATe.....	513
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:TBS:INDex.....	513
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:TBS:TABLe.....	513
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:TTIBits?.....	514
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:TTIEdch.....	515
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:UECategory?.....	515
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:CCODE?.....	515
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:HBIT.....	515
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:POWer.....	516

<code>[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:RSNumber</code>	516
<code>[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:STATE</code>	516
<code>[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:TFCI</code>	516
<code>[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPDCh:E:FCIO</code>	517
<code>[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPDCh:E:MODulation</code>	517
<code>[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPDCh:E:ORATe</code>	517
<code>[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPDCh:E:STATE</code>	518
<code>[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPDCh:E:TTIEdch</code>	518
<code>[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:EDCH:TTIEdch</code>	518
<code>[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:EDCH:REPeat</code>	519
<code>[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:EDCH:ROW<ch0>:FROM</code>	519
<code>[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:EDCH:ROW<ch0>:TO</code>	519
<code>[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:EDCH:ROWCount</code>	519

`[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:CCODE?`

Queries the channelization code and the modulation branch (I or Q) of the E-DPDCH channel.

The channelization code is dependent on the overall symbol rate set and cannot be modified.

Return values:

`<ChannelCode>` integer

Example:

`BB:W3GP:MST4:HSUP:CHAN1:DPDC:E:CCOD?`

queries the channelization code and the modulation branch (I or Q) of E-DPDCH 1 of user equipment 4.

Response: `Q, 32`

Usage: Query only

Manual operation: See "[Channelization Code](#)" on page 222

`[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:DATA <Data>`

The command selects the data source for the E-DPDCH channel.

Parameters:

<Data>

ZERO | ONE | PATtErn | PN9 | PN11 | PN15 | PN16 | PN20 |
PN21 | PN23 | DLISt**PNxx**

The pseudo-random sequence generator is used as the data source. Different random sequence lengths can be selected.

DLIStA data list is used. The data list is selected with the command
SOURce:[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:
HSUPa]:CHANnel<ch>:DPDCh:E:DATA:DSElect.**ZERO | ONE**

Internal 0 and 1 data is used.

PATtErnInternal data is used. The bit pattern for the data is defined by
the command [:SOURce<hw>]:BB:W3GPp:MSTation<st>[:
HSUPa]:CHANnel<ch>:DPDCh:E:DATA:PATtErn.

*RST: PN9

Example:SOUR:BB:W3GP:MST1:HSUP:CHAN1:DPDC:E:DATA PN11
selects internal PRBS data with period length $2^{11}-1$ as the data
source.**Manual operation:** See "E-DPDCH Data Source" on page 222**[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:
DATA:DSElect <DSelect>**

The command selects the data list for the DLISt data source.

The files are stored with the fixed file extensions *.dm_iqd in a directory of the user's
choice. The directory applicable to the commands is defined with the command
MMEMory:CDIR. To access the files in this directory, you only have to give the file
name, without the path and the file extension.**Parameters:**

<DSelect>

string

Example:SOUR:BB:W3GP:MST1:CHAN1:DPDC:E:DATA DLIS
selects data lists as the data source.
MMEM:CDIR '/var/user/temp/IQData'
selects the directory for the data lists.
BB:W3GP:MST1:CHAN1:DPDC:E:DATA:DSEL 'dp1'
selects the data list dp1.**Manual operation:** See "DPDCH Data Source" on page 183

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:DATA:PATtern <Pattern>

The command determines the bit pattern for the data component when the PATtern data source is selected. The first parameter determines the bit pattern (choice of hexa-decimal, octal or binary notation), the second specifies the number of bits to use.

Parameters:

<Pattern> 64 bits
*RST: #H0,1

Example: SOUR:BB:W3GP:MST1:HSUP:CHAN1:DPDC:E:PATT #H3F,8
defines the bit pattern of the data for the DATA component.

Manual operation: See ["E-DPDCH Data Source"](#) on page 222

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:POWER <Power>

The command sets the power of the selected E-DPDCH channel.

Parameters:

<Power> float
Range: -80 dB to 0 dB
Increment: 0.01
*RST: 0 dB

Example: BB:W3GP:MST1:HSUP:CHAN1:DPDC:E:POW -2.5dB
sets the power of E-DPDCH channel 1 to 2.5 dB.

Manual operation: See ["Channel Power"](#) on page 222

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:SRATe?

The command queries the symbol rate and the state of the E-DPDCH channel.

The symbol rate and the state of the channels are dependent on the overall symbol rate set and cannot be modified.

Return values:

<SRate> D15K | D30K | D60K | D120k | D240k | D480k | D960k |
D1920k | D2X1920K | D2X960K2X1920K

Example: BB:W3GP:MST4:HSUP:CHAN1:DPDC:E:SRAT?
queries the symbol rate of E-DPDCH 1 of user equipment 4.
Response: 960
the symbol rate is 960 ksps.

Usage: Query only

Manual operation: See ["Symbol Rate / State"](#) on page 222

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:CHANnel
<Channel>**

The command sets the FRC according to TS 25.141 Annex A.10.

Selection of FRC#8 is enabled only for instruments equipped with option SMW-K83.

Parameters:

<Channel> USER | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8
 *RST: 4

Example: SOUR:BB:W3GP:MST1:HSUP:DPCC:E:FRC:CHAN 4
 sets the FRC to channel 4.

Manual operation: See ["Fixed Reference Channel \(FRC\)"](#) on page 209

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:CRATe?

The command queries the relation between the information bits to binary channel bits.

Return values:

<CRate> float

Example: SOUR1:BB:W3GP:MST1:HSUP:DPCC:E:FRC:CRAT?
 queries the coding rate.
 Response: 0.705
 the coding rate is 0.705.

Usage: Query only

Manual operation: See ["Coding Rate \(Ninf/Nbin\)"](#) on page 213

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DATA <Data>

Selects the data source for the E-DCH channels, i.e. this paramter affects the corresponding paramter of the E-DPDCH.

Parameters:

<Data>

PN9 | PN11 | PN15 | PN16 | PN20 | PN21 | PN23 | DLIS |
ZERO | ONE | PATtern**PNxx**

The pseudo-random sequence generator is used as the data source. Different random sequence lengths can be selected.

DLIS

A data list is used. The data list is selected with the command
[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:
DPCC:h:E:FRC:DATA:DSElect.

ZERO | ONE

Internal 0 and 1 data is used.

PATtern

Internal data is used. The bit pattern for the data is defined by the command [:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCC:h:E:FRC:DATA:PATtern. The maximum length is 64 bits.

*RST: PN9

Example:

BB:W3GP:MST:HSUP:DPCC:E:FRC:DATA PATT
selects as the data source
BB:W3GP:MST:HSUP:DPCC:E:FRC:DATA:PAT #H48D0,16
defines the bit pattern.

Manual operation: See "Data Source (E-DCH)" on page 210

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCC:h:E:FRC:DATA:
DSElect <DSelect>**

The command selects the data list when the DLIS data source is selected for E-DCH channels.

The files are stored with the fixed file extensions *.dm_iqd in a directory of the user's choice. The directory applicable to the commands is defined with the command MMEORY:CDIR. To access the files in this directory, you only have to give the file name, without the path and the file extension.

Parameters:

<DSelect>

string

Example:

BB:W3GP:MST:HSUP:DPCC:E:FRC:DATA DLIS
selects the Data Lists data source.
MMEORY:CDIR '/var/user/temp/IQData'
selects the directory for the data lists.
BB:W3GP:MST:HSUP:DPCC:E:FRC:DATA:DSEL 'frc_1'
selects the data list frc_1.

Manual operation: See "Data Source (E-DCH)" on page 210

**[[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DATA:
PATTern <Pattern>**

The command determines the bit pattern for the PATTern data source selection. The maximum length of the bit pattern is 64 bits.

Parameters:

<Pattern> 64 bits
*RST: #H0,1

Example: BB:W3GP:MST:HSUP:DPCC:E:FRC:DATA:PATT
#B11110000,8
defines the bit pattern of the data for the E-DCH channels.

Manual operation: See ["Data Source \(E-DCH\)"](#) on page 210

**[[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DERRor:BIT:
LAYer <Layer>**

The command sets the layer in the coding process at which bit errors are inserted.

Parameters:

<Layer> TRANsport | PHYSical
*RST: PHYSical

Example: SOUR:BB:W3GP:MST1:HSUP:DPCC:E:FRC:DERR:BIT:LAY
TRAN
sets the bit error insertion to the transport layer.

Manual operation: See ["Insert Errors On"](#) on page 219

**[[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DERRor:BIT:
RATE <Rate>**

Sets the bit error rate.

Parameters:

<Rate> float
Range: 1E-7 to 0.5
Increment: 1E-7
*RST: 0.001

Example: SOUR:BB:W3GP:MST1:HSUP:DPCC:E:FRC:DERR:BIT:RATE
1e-3
sets the bit error rate to 1E-3.

Manual operation: See ["Bit Error Rate"](#) on page 219

**[[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DERRor:BIT:
STATe <State>**

The command activates or deactivates bit error generation.

Parameters:

<State> ON | OFF
 *RST: 0

Example:

SOUR:BB:W3GP:MST1:HSUP:DPCC:E:FRC:DERR:BIT:STAT
 ON
 activates the bit error state.

Manual operation: See ["Bit Error State"](#) on page 218

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DERRor:
 BLOCK:RATE <Rate>**

Sets the block error rate.

Parameters:

<Rate> float
 Range: 1E-4 to 0.5
 Increment: 1E-4
 *RST: 0.1

Example:

SOUR:BB:W3GP:MST1:HSUP:DPCC:E:FRC:DERR:BLOC:
 RATE 1E-3
 sets the block error rate.

Manual operation: See ["Block Error Rate"](#) on page 219

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DERRor:
 BLOCK:STATe <State>**

The command activates or deactivates block error generation.

Parameters:

<State> ON | OFF
 *RST: 0

Example:

SOUR:BB:W3GP:MST1:HSUP:DPCC:E:FRC:DERR:BLOC:
 STAT ON
 activates the block error generation.

Manual operation: See ["Block Error State"](#) on page 219

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DTX:PATTern
 <Pattern>**

The command sets the user-definable bit pattern for the DTX.

Parameters:

<Pattern> string
 *RST: "1"

Example: SOUR:BB:W3GP:MST1:HSUP:DPCC:E:FRC:DTX:PATT
"11-1-"
sets the bit pattern for the DTX.

Manual operation: See ["User Data \(DTX Pattern\)"](#) on page 213

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DTX:STATe
<State>

The command activates or deactivates the DTX (Discontinuous Transmission) mode.

Parameters:

<State> ON | OFF
*RST: 0

Example: SOUR:BB:W3GP:MST1:HSUP:DPCC:E:FRC:DTX:STAT ON
activates the DTX.

Manual operation: See ["State \(DTX\)"](#) on page 213

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:
SIMulation:CONNector <Connector>

Determines the input connector at that the instrument expects the feedback signal.

Parameters:

<Connector> LOCAL | GLOBAL
*RST: LOCAL

Example: External control signal at the local TM3 connector of Baseband A.

```
SOURce1:INPut:TM3:DIRection INPut
SOURce1:INPut:TM3:SIGNAL FEEDback
SOURce1:BB:W3GPp:MSTation1[:HSUPa]:DPCCh:E:FRC:
HARQ:SIMulation:CONNector LOCAL
```

Example: External control signal at the global USER6 connector.

```
SOURce:INPut:USER6:DIRection INPut
SOURce:INPut:USER6:SIGNAL FEEDback
SOURce1:BB:W3GPp:MSTation1[:HSUPa]:DPCCh:E:FRC:
HARQ:SIMulation:CONNector GLOBAL
```

Manual operation: See ["Connector \(HARQ\)"](#) on page 217

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:
SIMulation:ADEFinition <ADefinition>

Selects whether a high level (TTL) is interpreted as an ACK or a low level.

Parameters:

<ADefinition> HIGH | LOW
*RST: HIGH

Example: SOUR1:BB:W3GP:MST1:HSUP:DPCC:E:FRC:HARQ:SIM:
ADEF HIGH
a high level (TTL) is interpreted as an ACK.

Manual operation: See ["ACK Definition \(HARQ\)"](#) on page 217

**[:SOURce<hw>]:BB:W3GP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:
SIMulation:DElay:AUSer <AUser>**

Selects an additional delay to adjust the delay between the HARQ and the feedback.

Parameters:

<AUser> integer
Range: -50 to 60
*RST: 0

Example: SOUR1:BB:W3GP:MST1:HSUP:DPCC:E:FRC:HARQ:SIM:
DEL:AUS 20
sets the additional user delay to 20.

Manual operation: See ["Additional User Delay"](#) on page 218

**[:SOURce<hw>]:BB:W3GP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:
SIMulation:DElay:FEEDback?**

Queries the delay between the HARQ and the feedback.

Return values:

<Feedback> float
Range: 0 to 600
*RST: 378

Example: SOUR1:BB:W3GP:MST1:HSUP:DPCC:E:FRC:HARQ:SIM:
DEL:FEED?
queries the delay between HARQ and feedback.

Usage: Query only

Manual operation: See ["Delay Between HARQ And Feedback \(HARQ\)"](#)
on page 217

**[:SOURce<hw>]:BB:W3GP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:
SIMulation:MODE <Mode>**

Selects the HARQ simulation mode.

Parameters:

<Mode> VHARq

VHARq

This mode simulates basestation feedback. For every HARQ process (either 4 or 8), a bit pattern can be defined to simulate ACKs and NACKs.

*RST: HFE

Example:

```
SOUR1:BB:W3GP:MST1:HSUP:DPCC:E:FRC:HARQ:SIM:
MODE VHAR
sets simulation mode Virtual HARQ.
```

Manual operation: See ["Mode \(HARQ\)"](#) on page 216

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:
SIMulation:MRETransmissions <MRetransmission>**

Sets the maximum number of retransmissions. After the expiration of this value, the next packet is send, regardless of the received feedback.

Parameters:

<MRetransmission> integer

Range: 0 to 20

*RST: 4

Example:

```
SOUR1:BB:W3GP:MST1:HSUP:DPCC:E:FRC:HARQ:SIM:
MRET 10
sets the maximum number of retransmissions to 10.
```

Manual operation: See ["Maximum Number Of Retransmissions \(HARQ\)"](#) on page 217

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:
SIMulation:RVZero <RvZero>**

If activated, the same redundancy version is sent, that is, the redundancy version is not adjusted for the next retransmission in case of a received NACK.

Parameters:

<RvZero> ON | OFF

*RST: 1

Example:

```
SOUR1:BB:W3GP:MST1:HSUP:DPCC:E:FRC:HARQ:SIM:RVZ
ON
the same redundancy version is sent for the next retransmission.
```

Manual operation: See ["Always Use Redundancy Version 0 \(HARQ\)"](#) on page 216

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:
SIMulation[:STATe] <State>**

Activates or deactivates the HARQ simulation mode.

Parameters:

<State> ON | OFF
 *RST: 0

Example: SOUR1:BB:W3GP:MST1:HSUP:DPCC:E:FRC:HARQ:SIM:
 STAT ON
 activates the HARQ simulation mode.

Manual operation: See ["State \(HARQ\)"](#) on page 216

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ[:
SIMulation]:PATTern<ch> <Pattern>**

Sets the HARQ Pattern. The maximum length of the pattern is 32 bits.

Parameters:

<Pattern> string

Example: SOUR1:BB:W3GP:MST1:HSUP:DPCC:E:FRC:HARQ:SIM:
 HARQ:PATT 1010
 sets the HARQ simulation pattern.

Manual operation: See ["HARQ1..8: ACK/NACK"](#) on page 216

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:
HPROcesses?**

The command queries the number of HARQ (Hybrid-ARQ Acknowledgement) process.

Return values:

<HProcesses> integer
 Range: 1 to 8

Example: SOUR:BB:W3GP:MST1:HSUP:DPCC:E:FRC:HPRO?
 queries the number of HARQ processes.
 Response: 5

Usage: Query only

Manual operation: See ["Number Of HARQ Processes"](#) on page 212

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:MIBRate?

Queries the maximum information bit rate.

Return values:

<MiBRate> float
 Increment: 0.1

Example: SOUR:BB:W3GP:MST1:HSUP:DPCC:E:FRC:HPRO?
queries the maximum information bit rate.
Response: 1353.0

Usage: Query only

Manual operation: See ["Maximum Information Bitrate/kbps"](#) on page 209

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:MODulation<Modulation>

Sets the modulation used for the selected FRC.

Two modulation schemes are defined: BPSK for FRC 1 - 7 and 4PAM (4 Pulse-Amplitude Modulation) for FRC 8.

Parameters:
<Modulation> BPSK | PAM4
*RST: BPSK

Example: BB:W3GP:MST1:HSUP:DPCC:E:FRC:CHAN 8
sets the FRC to channel 8.
BB:W3GP:MST1:HSUP:DPCC:E:FRC:MOD 4PAM
sets the modulation.

Manual operation: See ["Modulation"](#) on page 211

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:ORATe<ORate>

Sets the overall symbol rate for the E-DCH channels, i.e. this parameter affects the corresponding parameter of the E-DPDCH.

Parameters:
<ORate> D15K | D30K | D60K | D120k | D240k | D480k | D960k |
D1920k | D2X1920K | D2X960K2X1920K
*RST: D960k

Example: BB:W3GP:MST1:HSUP:DPCC:E:FRC:ORAT D2X1920K
sets the overall symbol rate.

Manual operation: See ["Overall Symbol Rate"](#) on page 211

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:PAYBits?

The command queries the payload of the information bit. This value determines the number of transport layer bits sent in each HARQ process.

Return values:
<PayBits> integer

Example: SOUR:BB:W3GP:MST1:HSUP:DPCC:E:FRC:PAYB?
queries the payload of the information bit.
Response: 2706

Usage: Query only

Manual operation: See "Information Bit Payload (Ninf)" on page 213

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:STATe<State>

The command activates or deactivates the FRC state for the E-DPCCH channels.

Parameters:

<State> ON | OFF
*RST: 0

Example: SOUR:BB:W3GP:MST1:HSUP:DPCC:E:FRC:STAT ON
activates the FRC state for the E-DPCCH channels.

Manual operation: See "State (HSUPA FRC)" on page 208

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:TBS:INDeX<Index>

Selects the Transport Block Size Index (E-TFCI) for the corresponding table, as described in 3GPP TS 25.321, Annex B.

The value range of this parameter depends on the selected Transport Block Size Table ([:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:TBS:TABLE).

Parameters:

<Index> integer
Range: 0 to max
*RST: 41

Example: BB:W3GP:MST:HSUP:DPCC:E:FRC:TBS:TABL TAB0TTI10
sets the transport block size table
BB:W3GP:MST:HSUP:DPCC:E:FRC:TBS:INX 127
sets the transport block size index.

Manual operation: See "Transport Block Size Index (E-TFCI)" on page 212

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:TBS:TABLE<Table>

Selects the Transport Block Size Table from 3GPP TS 25.321, Annex B according to that the transport block size is configured.

The transport block size is determined also by the Transport Block Size Index ([:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:TBS:INDeX).

The allowed values for this command depend on the selected E-DCH TTI (`[[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCC:h:E:FRC:TTIEdch]`) and modulation scheme (`[[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCC:h:E:FRC:MODulation]`).

E-DCH TTI	Modulation	Transport Block Size Table	SCPI Paramater	Transport Block Size Index (E-TFCI)
2ms	BPSK	Table 0	TAB0TTI2	0 .. 127
		Table 1	TAB1TTI2	0 .. 125
	4PAM	Table 2	TAB2TTI2	0 .. 127
		Table 3	TAB3TTI2	0 .. 124
10ms	-	Table 0	TAB0TTI10	0 .. 127
		Table 1	TAB1TTI10	0 .. 120

Parameters:

<Table>

TAB0TTI2 | TAB1TTI2 | TAB2TTI2 | TAB3TTI2 | TAB0TTI10 | TAB1TTI10

*RST: TAB0TTI10

Example:

BB:W3GP:MST:HSUP:DPCC:E:FRC:ORAT D1920
sets the overall symbol rate

BB:W3GP:MST:HSUP:DPCC:E:FRC:MOD BPSK
sets the modulation

BB:W3GP:MST:HSUP:DPCC:E:FRC:TTIE 2
sets the E-DCH TTI

BB:W3GP:MST:HSUP:DPCC:E:FRC:TBS:TABL TAB0TTI2
sets the transport block size table

BB:W3GP:MST:HSUP:DPCC:E:FRC:TBS:IND 25
sets the transport block size index

Manual operation: See ["Transport Block Size Table"](#) on page 212

[[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCC:h:E:FRC:TTIBits?

The command queries the number of physical bits sent in each HARQ process.

Return values:

<TtiBits>

float

Example:

BB:W3GP:MST1:HSUP:DPCC:E:FRC:TTIB?

queries the number of physical bits sent in each HARQ process.

Usage:

Query only

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:TTIEdch
<Ttiedch>**

Sets the TTI size (Transmission Time Interval).

Parameters:

<Ttiedch> 2ms | 10ms
 *RST: 2ms

Example: BB:W3GP:MST1:HSUP:DPCC:E:FRC:TTIE 2ms
 sets the TTI.

Manual operation: See ["E-DCH TTI"](#) on page 211

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:UECategory?

Queries the UE category that is minimum required for the selected FRC.

Return values:

<UeCategory> integer

Example: BB:W3GP:MST1:HSUP:DPCC:E:FRC:UEC?
 queries the UE category.

Usage: Query only

Manual operation: See ["UE Category"](#) on page 209

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:CCODE?

Queries the channelization code.

Return values:

<CCode> integer
 Range: 1 to max
 *RST: 1

Usage: Query only

Manual operation: See ["Channelization Code"](#) on page 207

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:HBIT <Hbit>

The command activates the happy bit.

Parameters:

<Hbit> ON | OFF
 *RST: ON

Example: BB:W3GP:MST1:HSUP:DPCC:E:HBIT ON
 sets the happy bit.

Manual operation: See ["Happy Bit"](#) on page 207

[[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:POWER <Power>

The command sets the power of the E-DPCCH channel.

Parameters:

<Power> float
 Range: -80 dB to 0 dB
 Increment: 0.01
 *RST: 0 dB

Example: BB:W3GP:MST1:HSUP:DPCC:E:POW -2.5dB
 sets the power of the E-DPCCH channel.

Manual operation: See ["Power"](#) on page 206

**[[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:RSNumber
 <RsNumber>**

The command sets the retransmission sequence number.

Parameters:

<RsNumber> integer
 Range: 0 to 3
 *RST: 0

Example: BB:W3GP:MST1:HSUP:DPCC:E:RSN 0
 sets the retransmission sequence number.

Manual operation: See ["Retransmission Sequence Number"](#) on page 207

[[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:STATE <State>

The command activates deactivates the E-DPCCH.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: BB:W3GP:MST1:HSUP:DPCC:E:STAT ON
 activates the E-DPCCH.

Manual operation: See ["State \(E-DPCCH\)"](#) on page 206

[[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:TFCI <Tfci>

The command sets the value for the TFCI (Transport Format Combination Indicator) field.

Parameters:

<Tfci> integer
 Range: 0 to 127
 *RST: 0

Example: `BB:W3GP:MST1:HSUP:DPCC:E:TFCI 0`
sets the value for the TFCI.

Manual operation: See ["E-TFCI Information"](#) on page 207

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPDCh:E:FCIO <Fcio>

The command sets the channelization code to I/O.

Parameters:

<Fcio> ON | OFF
*RST: OFF

Example: `BB:W3GP:MST1:HSUP:DPDC:E:FCIO ON`
sets the channelization code to I/O.

Manual operation: See ["Force Channelization Code To I/O"](#) on page 220

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPDCh:E:MODulation
<Modulation>**

Sets the modulation of the E-DPDCH.

There are two possible modulation schemes specified for this channel, BPSK and 4PAM (4 Pulse-Amplitude Modulation). The latter one is available only for the following Overall Symbol Rates (`[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPDCh:E:ORATe`):

- 2x960 ksps
- 2x1920 ksps
- 2x960 + 2x1920 ksps
- 2x960 ksps, I or Q only
- 2x1920 ksps, I or Q only
- 2x960 + 2x1920 ksps, I or Q only

Parameters:

<Modulation> BPSK | PAM4
*RST: BPSK

Example: `BB:W3GP:MST1:HSUP:DPDC:E:ORAT D2x960K2x1920K`
sets the overall symbol rate
`BB:W3GP:MST1:HSUP:DPDC:E:MOD 4PAM`
sets the modulation to 4PAM

Options: Modulation scheme 4PAM requires the HSPA+ option R&S SMW-K83.

Manual operation: See ["Modulation"](#) on page 221

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPDCh:E:ORATe <ORate>

The command sets the overall symbol rate of all the E-DPDCH channels.

Parameters:

<ORate> D15K | D30K | D60K | D120k | D240k | D480k | D960k |
 D1920k | D2X1920K | D2X960K2X1920K | D2x960KI |
 D2x960KQ | D2X1920KI | D2X1920KQ | D2X960K2X1920KI |
 D2X960K2X1920KQ
 *RST: D60K

Example:

BB:W3GP:MST1:HSUP:DPDC:E:ORAT D60K
 sets the overall symbol rate

Manual operation: See ["Overall Symbol Rate"](#) on page 220

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPDCh:E:STATe <State>

The command activates or deactivates the E-DPDCHs. This always activates or deactivates all the channels.

Parameters:

<State> ON | OFF
 *RST: 0

Example:

BB:W3GP:MST1:HSUP:DPDC:E:STAT ON
 activates all the E-DPDCHs.

Manual operation: See ["State \(E-DPDCH\)"](#) on page 220

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPDCh:E:TTIEdch <Ttiedch>

The command sets the value for the TTI (Transmission Time Interval).

Parameters:

<Ttiedch> 2ms | 10ms
 *RST: 2ms

Example:

BB:W3GP:MST1:HSUP:DPDC:E:TTIE 2ms
 sets the value for the TTI to 2 ms.

Manual operation: See ["E-DCH TTI"](#) on page 225

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:EDCH:TTIEdch <Ttiedch>

Sets the value for the TTI size (Transmission Time Interval).

This command is a query only, if an UL-DTX is enabled ([\[:SOURce<hw>\]:BB:W3GPp:MSTation:UDTX:STATe ON](#)) or an FRC is activated ([\[:SOURce<hw>\]:BB:W3GPp:MSTation<st>\[:HSUPa\]:DPCCh:E:FRC:STATe ON](#)).

Parameters:

<Ttiedch> 2ms | 10ms
 *RST: 2ms

Example: BB:W3GP:MST[:HSUPa]:EDCH:TTIE 10ms
 BB:W3GP:MST:UDTX:TTIE 2ms
 BB:W3GP:MST:UDTX:STAT ON
 BB:W3GP:MST[:HSUPa]:EDCH:TTIE?
 Response: 2ms

Manual operation: See "E-DCH TTI" on page 225

[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:EDCH:REPeat <Repeat>

Determine the number of TTIs after that the E-DCH scheduling is repeated.

Parameters:

<Repeat> integer
 Range: 1 to dynamic
 *RST: 1

Example: [:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:
 EDCH:ROWCount on page 519

Manual operation: See "E-DCH Schedule Repeats After" on page 226

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:EDCH:ROW<ch0>:FROM
 <TtiFrom>**

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:EDCH:ROW<ch0>:TO
 <TtiTo>**

Determines the start/end TTI of the corresponding E-DCH burst.

Parameters:

<TtiTo> integer
 Range: 0 to dynamic
 *RST: row index

Example: [:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:
 EDCH:ROWCount on page 519

Manual operation: See "E-DCH TTI To" on page 226

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:EDCH:ROWCount
 <RowCount>**

Sets the number of the rows in the scheduling table.

Parameters:

<RowCount> integer
 Range: 1 to 32
 *RST: 1

Example:**E-DCH scheduling example**

```

BB:W3GP:MST[:HSUPa]:EDCH:TTIE 2ms
BB:W3GP:MST[:HSUPa]:EDCH:ROWC 2
BB:W3GP:MST[:HSUPa]:EDCH:REP 1000
BB:W3GP:MST[:HSUPa]:EDCH:ROW0:FROM 3
BB:W3GP:MST[:HSUPa]:EDCH:ROW0:TO 6
BB:W3GP:MST[:HSUPa]:EDCH:ROW1:FROM 128
BB:W3GP:MST[:HSUPa]:EDCH:ROW0:TO 156

```

Manual operation: See ["Number of Table Rows"](#) on page 226

8.9.9 UL-DTX and Uplink Scheduling Settings

The following are simple programming examples with the purpose to show **all** commands for this task. In real application, some of the commands may be omitted.

Example: Configuring the UL-DTX settings

```

*****
SOURCE:BB:W3GPp:LINK UP
SOURCE:BB:W3GPp:MSTation:UDTX:MODE UDTX
SOURCE:BB:W3GPp:MSTation:UDTX:TTIEdch 2
SOURCE:BB:W3GPp:MSTation:UDTX:OFFSet 2
SOURCE:BB:W3GPp:MSTation:UDTX:ITHReshold 8
SOURCE:BB:W3GPp:MSTation:UDTX:LPLength 4
SOURCE:BB:W3GPp:MSTation:UDTX:CYCLE1 4
SOURCE:BB:W3GPp:MSTation:UDTX:CYCLE2 8
SOURCE:BB:W3GPp:MSTation:UDTX:BURSt1 1
SOURCE:BB:W3GPp:MSTation:UDTX:BURSt2 1
// SOURCE:BB:W3GPp:MSTation:UDTX:PREamble2?
// SOURCE:BB:W3GPp:MSTation:UDTX:POSTamble1?
SOURCE:BB:W3GPp:MSTation:UDTX:STATE ON

```

Example: Enabling User Scheduling

```

*****
SOURCE:BB:W3GPp:LINK UP
SOURCE:BB:W3GPp:MSTation:UDTX:MODE USCH
SOURCE:BB:W3GPp:MSTation:UDTX:USCH:CAtalog?
// queries the files with user scheduling settings *.3g_sch
// in the default directory
// "example", "ul_sch_dpc", "up_sch_loop"
SOURCE:BB:W3GPp:MSTation:UDTX:USCH:FSElect "up_sch_loop"
SOURCE:BB:W3GPp:MSTation:UDTX:USCH:DElete "example"
SOURCE:BB:W3GPp:MSTation:UDTX:STATE ON

```

```

[:SOURCE<hw>]:BB:W3GPp:MSTation:UDTX:MODE..... 521
[:SOURCE<hw>]:BB:W3GPp:MSTation:UDTX:STATE..... 521
[:SOURCE<hw>]:BB:W3GPp:MSTation:UDTX:TTIEdch..... 521
[:SOURCE<hw>]:BB:W3GPp:MSTation:UDTX:OFFSet..... 522
[:SOURCE<hw>]:BB:W3GPp:MSTation:UDTX:ITHReshold..... 522

```

[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:LPLength.....	522
[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:CYCLE<ch>.....	523
[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:BURSt<ch>.....	523
[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:PREamble<ch>?.....	523
[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:POSTamble<ch>?.....	524
[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:USCH:CATalog?.....	524
[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:USCH:DELeTe.....	524
[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:USCH:FSELeCt.....	525

`[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:MODE <UldtxMode>`

Switches between the UL-DTX and User Scheduling functions.

Parameters:

`<UldtxMode>` UDTX | USCH
 *RST: UDTX

Example: see ["Example: Enabling User Scheduling"](#) on page 520 and ["Example: Configuring the UL-DTX settings"](#) on page 520

Options: R&S SMW-K83

Manual operation: See ["Mode"](#) on page 164

`[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:STATe <State>`

Enables/disables UL-DTX or user scheduling, as selected with the command [\[:SOURce<hw>\]:BB:W3GPp:MSTation:UDTX:MODE](#).

Enabling the UL-DTX deactivates the DPDCH and the HSUPA FRC; enabled user scheduling deactivates the HSUPA FRC.

Parameters:

`<State>` 0 | 1 | OFF | ON
 *RST: 0

Example: see ["Example: Configuring the UL-DTX settings"](#) on page 520

Options: R&S SMW-K83

Manual operation: See ["UL-DTX... / User Scheduling State"](#) on page 164

`[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:TTIEdch <EdchTti>`

Sets the duration of a E-DCH TTI.

Parameters:

`<EdchTti>` 2ms | 10ms
 Range: 2ms to 10ms
 *RST: 2ms

Example: see ["Example: Configuring the UL-DTX settings"](#) on page 520

Options: R&S SMW-K83

Manual operation: See ["E-DCH TTI"](#) on page 165

[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:OFFSet <Offset>

Sets the parameter UE_DTX_DRX_Offset and determines the start offset in subframes of the first uplink DPCCH burst (after the preamble). The offset is applied only for bursts belonging to the DPCCH burst pattern; HS-DPCCH or E-DCH transmissions are not affected.

Parameters:

<Offset> integer
 Range: 0 to 159
 Increment: depends on E-DCH TTI parameter
 *RST: 0

Example: see ["Example: Configuring the UL-DTX settings"](#) on page 520

Options: R&S SMW-K83

Manual operation: See ["UL-DTX Offset"](#) on page 165

[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:ITHReshold <Threshold>

Defines the number of consecutive E-DCH TTIs without an E-DCH transmission, after which the UE shall immediately move from UE-DTX cycle 1 to using UE-DTX cycle 2.

Parameters:

<Threshold> 1 | 4 | 8 | 16 | 32 | 64 | 128 | 256
 *RST: 16

Example: see ["Example: Configuring the UL-DTX settings"](#) on page 520

Options: R&S SMW-K83

Manual operation: See ["Inactivity Threshold for Cycle 2"](#) on page 165

[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:LPLength <LongPreamble>

Determines the length in slots of the preamble associated with the UE-DTX cycle 2.

Parameters:

<LongPreamble> 2 | 4 | 15
 *RST: 2

Example: see ["Example: Configuring the UL-DTX settings"](#) on page 520

Options: R&S SMW-K83

Manual operation: See ["Long Preamble Length"](#) on page 166

[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:CYCLe<ch> <DtxCycle>

Sets the offset in subframe between two consecutive DPCCH bursts within the corresponding UE-DTX cycle, i.e. determines how often the DPCCH bursts are transmitted.

The UE-DTX cycle 2 is an integer multiple of the UE-DTX cycle 1, i.e. has less frequent DPCCH transmission instants.

Note: The allowed values depend on the selected E-DCH TTI.

Suffix:

<ch> 1|2
UL-DTX cycle 1 or 2

Parameters:

<DtxCycle> 1 | 4 | 5 | 8 | 10 | 16 | 20 | 32 | 40 | 64 | 80 | 128 | 160
*RST: 5

Example: see ["Example: Configuring the UL-DTX settings"](#) on page 520

Options: R&S SMW-K83

Manual operation: See ["DTX Cycle 1 / DTX Cycle 2"](#) on page 166

[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:BURSt<ch> <BurstLength>

Determines the uplink DPCCH burst length in subframes without the preamble and postamble, when the corresponding UE-DTX cycle is applied.

Suffix:

<ch> 1|2
UL-DTX cycle 1 or 2

Parameters:

<BurstLength> 1 | 2 | 5
*RST: 1

Example: see ["Example: Configuring the UL-DTX settings"](#) on page 520

Options: R&S SMW-K83

Manual operation: See ["DPCCH Burst Length 1 / DPCCH Burst Length 2"](#)
on page 166

[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:PREAmble<ch>?

Queries the preamble length in slots, when the corresponding UE-DTX cycle is applied.

The preamble length is fixed to 2 slots.

Suffix:

<ch> 1|2
UL-DTX cycle 1 or 2

Return values:

<Preamble> integer
 Range: 2 to 2
 *RST: 2

Example: see ["Example: Configuring the UL-DTX settings"](#) on page 520

Usage: Query only

Options: R&S SMW-K83

Manual operation: See ["Preamble Length 1 / Preamble Length 2"](#) on page 167

[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:POSTamble<ch>?

Queries the postamble length in slots, when the corresponding UE-DTX cycle is applied.

The postamble length is fixed to 1 slot.

Suffix:

<ch> 1|2
 UL-DTX cycle 1 or 2

Return values:

<PostAmble> integer
 Range: 1 to 1

Example: see ["Example: Configuring the UL-DTX settings"](#) on page 520

Usage: Query only

Options: R&S SMW-K83

Manual operation: See ["Postamble Length 1 / Postamble Length 2"](#) on page 167

[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:USCH:CATalog?

Queries the files with uplink user scheduling settings (file extension *.3g_sch) in the default or the specified directory.

Return values:

<Catalog> string

Example: see ["Example: Enabling User Scheduling"](#) on page 520

Usage: Query only

Options: R&S SMW-K83

Manual operation: See ["User Scheduling File"](#) on page 165

[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:USCH:DELeTe <Filename>

Deletes the selected file from the default or specified directory. Deleted are files with the file extension *.3g_sch.

Setting parameters:

<Filename> string

Example: see ["Example: Enabling User Scheduling"](#) on page 520**Usage:** Setting only**Options:** R&S SMW-K83**Manual operation:** See ["User Scheduling File"](#) on page 165**[[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:USCH:FSElect <Filename>**

Loads the selected file from the default or the specified directory. Load are files with extension *.3g_sch.

Parameters:

<Filename> string

Example: see ["Example: Enabling User Scheduling"](#) on page 520**Options:** R&S SMW-K83**Manual operation:** See ["User Scheduling File"](#) on page 165

8.9.10 Dynamic Power Control Settings

Example: Configuring the Dynamic Power Control Settings

The following is a simple programming example with the purpose to show **all** commands for this task. In real application, some of the commands may be omitted.

```
SOURce:BB:W3GPp:MSTation:ENHanced:DPDCh:DPControl:DIRection UP
// selects direction up, a high level of the control signals
// leads to an increase of the channel power
SOURce:BB:W3GPp:MSTation:ENHanced:DPDCh:DPControl:STEP 1 dB
// selects a step width of 1 dB.
// A high level of the control signal leads to
// an increase of 1 dB of the channel power,
// a low level to a decrease of 1 dB.
SOURce:BB:W3GPp:MSTation:ENHanced:DPDCh:DPControl:RANGE:DOWN 10 dB
// selects a dynamic range of 10 dB for ranging up the channel power
SOURce:BB:W3GPp:MSTation:ENHanced:DPDCh:DPControl:RANGE:UP 50 dB
// selects a dynamic range of 50 dB for ranging up the channel power
// The overall increase and decrease of channel power,
// i.e. the dynamic range is limited to 60 dB
SOURce:BB:W3GPp:MSTation:ENHanced:DPDCh:DPControl:MODE TPC
// selects the source of the power control signal
SOURce:BB:W3GPp:MSTation:ENHanced:DPDCh:DPControl:STATE ON
// activates Dynamic Power Control for the enhanced channels of UE1
SOURce:BB:W3GPp:MSTation:ENHanced:DPDCh:DPControl:POWer?
// queries the deviation of the channel power (delta POW)
```

```
// from the set power start value of the DPDCH
```

```
SOURce:BB:W3GPp:MSTation:ENHanced:DPDCh:DPControl:AOUE ON
```

[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:ASSignment.....	526
[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:DIRection.....	526
[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:MODE.....	527
[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:CONNector.....	527
[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl[:POWER]?.....	527
[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:RANGe:DOWN.....	528
[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:RANGe:UP.....	528
[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:STATe.....	528
[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:STEP:MANual.....	528
[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:STEP[:EXTernal].....	529
[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:AOUE.....	529

`[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:ASSignment <ASSignment>`

Enabled for UL-DTX mode only (`[:SOURce<hw>]:BB:W3GPp:MSTation:UDTX:STATe ON`).

The power control recognizes the UL-DPCCH gaps according to 3GPP TS 25.214. Some of the TPC commands sent to the instrument over the external line or by the TPC pattern are ignored, whereas others are summed up and applied later. The processing of the TPC commands depends only on whether the BS sends the TPC bits on the F-DPCH with slot format 0/ slot format 9 or not.

Parameters:

`<ASSignment>` NORMal | FDPCh
 *RST: NORMal

Example:

```
BB:W3GP:MST1:UDTX:STAT ON
BB:W3GP:MST:DPC:ASS FDPCh
```

Manual operation: See ["Assignment Mode for UL-DTX"](#) on page 169

`[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:DIRection <Direction>`

The command selects the Dynamic Power Control direction. The selected direction determines if the channel power is increased (UP) or decreased (DOWN) by control signal with high level.

Parameters:

`<Direction>` UP | DOWN
 *RST: UP

Example:

see [example "Configuring the Dynamic Power Control Settings"](#) on page 525

Manual operation: See ["Direction"](#) on page 168

[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:MODE
<Mode>

Determines the source of the control signal.

Parameters:

<Mode> TPC | MANual | EXTernal
***RST:** EXTernal

Example: see [example "Configuring the Dynamic Power Control Settings"](#) on page 525

Manual operation: See ["Mode"](#) on page 168

[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:
CONNECTor <Connector>

Determines the input connector at that the instrument expects the external control signal.

Parameters:

<Connector> LOCal | GLOBal
***RST:** LOCal

Example: External control signal at the local TM3 connector of Baseband A.

```
SOURce1:INPut:TM3:DIRection INPut
SOURce1:INPut:TM3:SIGNAL FEEDback
SOURce1:BB:W3GPp:MSTation[:ENHanced:DPDCh]:
DPControl:CONNECTor LOCal
```

Example: External control signal at the global USER6 connector.

```
SOURce:INPut:USER6:DIRection INPut
SOURce:INPut:USER6:SIGNAL FEEDback
SOURce1:BB:W3GPp:MSTation[:ENHanced:DPDCh]:
DPControl:CONNECTor GLOBal
```

Manual operation: See ["Connector"](#) on page 168

[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl[:POWER]?

The command queries the deviation of the channel power (delta POW) from the set power start value of the DPDCH.

Return values:

<Power> float
Range: -60 to 60
Increment: 0.01
***RST:** 0

Example: see [example "Configuring the Dynamic Power Control Settings"](#) on page 525

Usage: Query only

Manual operation: See ["Power Control Graph"](#) on page 169

**[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:RANGE:
DOWN <Down>**

**[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:RANGE:
UP <Up>**

The command selects the dynamic range for ranging up the channel power.

Parameters:

<Up> float
Range: 0 to 60
Increment: 0.01
*RST: 10
Default unit: dB

Example: BB:W3GP:MST:ENH:DPDC:DPC:RANG:UP 20dB
selects a dynamic range of 20 dB for ranging up the channel power.

Manual operation: See ["Up Range/Down Range"](#) on page 169

**[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:STATE
<State>**

The command activates/deactivates Dynamic Power Control.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: see [example "Configuring the Dynamic Power Control Settings"](#) on page 525

Manual operation: See ["Dynamic Power Control State"](#) on page 168

**[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:STEP:
MANual <Manual>**

This command provides the control signal for manual mode of Dynamic Power Control.

Parameters:

<Manual> MAN0 | MAN1
*RST: MAN0

Example: BB:W3GP:MST:ENH:DPDC:DPC:MODE MAN
selects manual power control.
BB:W3GP:MST:ENH:DPDC:DPC:STAT ON
activates Dynamic Power Control for the enhanced channels of UE1.
BB:W3GP:MST:ENH:DPDC:DPC:STEP:MAN MAN0
decreases the level by 0.5 dB.

Manual operation: See ["Mode"](#) on page 168

[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPCControl:STEP[:EXTernal] <External>

This command sets step width by which – with Dynamic Power Control being switched on - the channel power of the enhanced channels is increased or decreased.

Parameters:

<External> float
Range: 0.5 to 6
Increment: 0.01
*RST: 1
Default unit: dB

Example: see [example "Configuring the Dynamic Power Control Settings"](#) on page 525

Manual operation: See ["Power Step"](#) on page 169

[:SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPCControl:AOUE <State>

Enables power control of the enhanced channels of all active UEs with the settings of UE1.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: see [example "Configuring the Dynamic Power Control Settings"](#) on page 525

Manual operation: See ["Also Control Other UEs"](#) on page 171

8.10 Enhanced Channels of the User Equipment

The `SOURCE:BB:W3GPp:MSTation:ENHanced` subsystem contains the commands for setting the enhanced channels of user equipment 1 (UE1).

The commands of this system only take effect when the 3GPP FDD standard is activated, the uplink transmission direction is selected and user equipment 1 is enabled:

- SOURce:BB:W3GPp:STATe ON
- SOURce:BB:W3GPp:LINK UP
- SOURce:BB:W3GPp:MSTation1:STATe ON

TCHannel<di>

The transport channel designations for remote control are TCHannel0 for DCCH, TCHannel1 to TCHannel6 for DTCH1 to DTCH6.

[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:BPFRame?	530
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:STATe	531
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:TYPE	531
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:CATalog?	532
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:DELeTe	533
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:LOAD	533
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:STORe	533
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BIT:LAYer	534
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BIT:RATE	534
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BIT:STATe	535
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BLOCK:RATE	535
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:[BLOCK]:STATe	535
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:INTerleaver2	536
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:ORATe	536
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:STATe	536
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:RMATtribute	537
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:STATe	537
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:TBCount	537
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:TBSize	538
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:TTINterval	538
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:CRCSize	538
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:DATA:	538
DSElect	539
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:DATA:	
PATTeRn	540
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:EPRotection	540
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:INTerleaver	540
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:PCPCh:CCODing:STATe	541
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:PCPCh:CCODing:TYPE	541
[SOURce<hw>]:BB:W3GPp:MSTation<st>:ENHanced:PRACH:CCODing:STATe	541
[SOURce<hw>]:BB:W3GPp:MSTation<st>:ENHanced:PRACH:CCODing:TYPE	542

[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:BPFRame?

The command queries the number of data bits in the DPDCH component of the frame at the physical layer. The number of data bits depends on the overall symbol rate.

Return values:

<BpFrame> integer
Range: 150 to 9600

Example:

BB:W3GP:MST:ENH:DPDC:BPFR?
queries the number of data bits.
Response: 300
the number of data bits is 300.

Usage:

Query only

Manual operation: See ["Bits per Frame \(DPDCH\)"](#) on page 230

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:STATe
<State>

The command activates or deactivates channel coding for the enhanced channels.

When channel coding is activated, the overall symbol rate ([\[:SOURce<hw>\]:BB:W3GPp:MSTation:ENHanced:DPDCh:ORATe](#)) is set to the value predetermined by the selected channel coding type ([\[:SOURce<hw>\]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:TYPE](#)).

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example:

BB:W3GP:MST:ENH:DPDC:CCOD:TYPE M12K2
selects channel coding type RMC 12.2 kbps.
BB:W3GP:MST:ENH:DPDC:CCOD:STAT ON
activates channel coding.

Manual operation: See ["Channel Coding State"](#) on page 229

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:TYPE
<Type>

The command selects the channel coding scheme in accordance with the 3GPP specification. The channel coding scheme selected predetermines the overall symbol rate.

When channel coding is activated ([\[:SOURce<hw>\]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:STATe](#)) the overall symbol rate ([\[:SOURce<hw>\]:BB:W3GPp:MSTation:ENHanced:DPDCh:ORATe](#)) is set to the value predetermined by the selected channel coding type.

Parameters:

<Type>

M12K2 | M64K | M144k | M384k | AMR

M12K2

Measurement channel with an input data bit rate of 12.2 kbps.

M64K

Measurement channel with an input data bit rate of 64 kbps.

M144K

Measurement channel with an input data bit rate of 144 kbps.

M384K

Measurement channel with an input data bit rate of 384 kbps.

AMR

Channel coding for the AMR Coder (coding a voice channel).

USER

This parameter cannot be set. USER is returned whenever a user-defined channel coding is active, that is to say, after a channel coding parameter has been changed or a user coding file has been loaded. The file is loaded by the command `[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:LOAD`.

*RST: M12K2

Example:

```
BB:W3GP:MST:ENH:DPDC:CCOD:TYPE M144K
selects channel coding scheme RMC 144 kbps.
```

Manual operation: See "Coding Type" on page 229

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:CATalog?

The command queries existing files with stored user channel codings.

The files are stored with the fixed file extensions `*.3g_ccod_u1` in a directory of the user's choice. The directory applicable to the commands is defined with the command `MMEMory:CDIR`.

Return values:

<Catalog>

string

Example:

```
MMEM:CDIR '/var/user/temp/CcodDpchUser'
selects the directory for the user channel coding files.
BB:W3GP:MST:ENH:DPDC:CCOD:USER:CAT?
queries the existing files with user coding.
Response: 'user_cc1'
there is one file with user coding.
```

Usage:

Query only

Manual operation: See "User Coding ..." on page 230

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:DELeTe <Filename>

The command deletes the specified files with stored user channel codings.

The files are stored with the fixed file extensions *.3g_ccod_ul in a directory of the user's choice. The directory applicable to the commands is defined with the command `MMEMory:CDIR`. To access the files in this directory, you only have to give the file name, without the path and the file extension.

The command triggers an event and therefore has no query form and no *RST value.

Setting parameters:

<Filename> string

Example: `MMEM:CDIR '/var/user/temp/CcodDpchUser'`
 selects the directory for the user channel coding files.
 `BB:W3GP:MST:ENH:DPDC:CCOD:USER:DEL 'user_cc1'`
 deletes the specified file with user coding.

Usage: Setting only

Manual operation: See ["User Coding ..."](#) on page 230

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:LOAD <Filename>

The command loads the specified files with stored user channel codings.

The files are stored with the fixed file extensions *.3g_ccod_ul in a directory of the user's choice. The directory applicable to the commands is defined with the command `MMEMory:CDIR`. To access the files in this directory, you only have to give the file name, without the path and the file extension.

Setting parameters:

<Filename> string

Example: `MMEM:CDIR '/var/user/temp/CcodDpchUser'`
 selects the directory for the user channel coding files.
 `BB:W3GP:MST:ENH:DPDC:CCOD:USER:LOAD 'user_cc1'`
 loads the specified file with user coding.

Usage: Setting only

Manual operation: See ["User Coding ..."](#) on page 230

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:STORe <Filename>

The command saves the current settings for channel coding as user channel coding in the specified file.

The files are stored with the fixed file extensions `*.3g_ccod_ul` in a directory of the user's choice. The directory in which the file is stored is defined with the command `MMEMory:CDIR`. To store the files in this directory, you only have to give the file name, without the path and the file extension.

Setting parameters:

<Filename> string

Example: `MMEM:CDIR '/var/user/temp/CcodDpchUser'`
selects the directory for the user channel coding files.
`BB:W3GP:MST:ENH:DPDC:CCOD:USER:STOR 'user_cc1'`
saves the current channel coding setting in file `user_cc1` in directory `/var/user/temp/CcodDpchUser`.

Usage: Setting only

Manual operation: See ["User Coding ..."](#) on page 230

[[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BIT:LAYer
<Layer>

The command selects the layer at which bit errors are inserted.

Parameters:

<Layer> TRANsport | PHYSical

TRANsport

Transport Layer (Layer 2). This layer is only available when channel coding is active.

PHYSical

Physical layer (Layer 1)

*RST: PHYSical

Example: `BB:W3GP:MST:ENH:DPDC:DERR:BIT:LAY PHYS`
selects layer 1 for entering bit errors.

Manual operation: See ["Insert Errors On"](#) on page 234

[[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BIT:RATE
<Rate>

Sets the bit error rate.

Parameters:

<Rate> float

Range: 1E-7 to 0.5

Increment: 1E-7

*RST: 0.001

Example: `BB:W3GP:MST:ENH:DPDC:DERR:BIT:RATE 1E-2`
sets a bit error rate of 0.01.

Manual operation: See ["Bit Error Rate TCH1"](#) on page 234

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BIT:STATe
<State>

The command activates or deactivates bit error generation.

Bit errors are inserted into the data fields of the enhanced channels. When channel coding is active, it is possible to select the layer in which the errors are inserted (physical or transport layer). When the data source is read out, individual bits are deliberately inverted at random points in the data bit stream at the specified error rate in order to simulate an invalid signal.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

BB:W3GP:MST:ENH:DPDC:DERR:BIT:RATE 1E-2
 sets a bit error rate of 0.01.
 BB:W3GP:MST:ENH:DPDC:DERR:BIT:LAY PHYS
 selects layer 1 for entering bit errors.
 BB:W3GP:MST:ENH:DPDC:DERR:BIT:STAT ON
 activates bit error generation.

Manual operation: See ["Bit Error State"](#) on page 234

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BLOCK:RATE
<Rate>

Sets the block error rate.

Parameters:

<Rate> float
 Range: 1E-4 to 0.5
 Increment: 1E-4
 *RST: 0.1

Example:

BB:W3GP:MST:ENH:DPDC:DERR:BLOC:RATE 1E-2
 sets the block error rate to 0.01.

Manual operation: See ["Block Error Rate"](#) on page 235

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor[:BLOCK]:
STATe <State>

The command activates or deactivates block error generation. Block error generation is only possible when channel coding is activated.

During block error generation, the CRC checksum is determined and then the last bit is inverted at the specified error probability in order to simulate a defective signal.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: `BB:W3GP:MST:ENH:DPDC:CCOD:STAT ON`
 activates channel coding.
`BB:W3GP:MST:ENH:DPDC:DERR:BLOC:RATE 10E-2`
 sets the block error rate to 0.1.
`BB:W3GP:MST:ENH:DPDC:DERR:BLOC:STAT ON`
 activates block error generation.

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:INTerleaver2
<Interleaver2>

The command activates or deactivates channel coding interleaver state 2 for all the transport channels.

Interleaver state 1 can be activated and deactivated for each channel individually (`[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:INTerleaver`).

Note: The interleaver states do not cause the symbol rate to change

Parameters:

<Interleaver2> 0 | 1 | OFF | ON
***RST:** 1

Example: `BB:W3GP:MST:ENH:DPDC:INT2 OFF`
 deactivates channel coding interleaver state 2 for all the transport channels.

Manual operation: See ["Interleaver 2 State"](#) on page 233

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:ORATe <ORate>

The command queries the overall symbol rate (Overall Symbol Rate) of the enhanced channels. The value is set with the command `[:SOURce<hw>]:BB:W3GPp:MSTation<st>:DPDCh:ORATe`. This setting also defines the number of active channels, their symbol rates and channelization codes.

Parameters:

<ORate> D15K | D30K | D60K | D120k | D240k | D480k | D960k |
 D1920k | D2880k | D3840k | D4800k | D5760k
***RST:** D60K

Example: `BB:W3GP:MST:ENH:DPDC:ORAT?`
 queries the overall symbol rate of the DPDCH of user equipment 1.

Manual operation: See ["Overall Symbol Rate"](#) on page 230

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:STATe <State>

Queries the enhanced state of the station.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example:

BB:W3GP:MST1:ENH:DPDC:STAT?

Manual operation: See ["Enhanced Channels State"](#) on page 227

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:RMAtribute <RmAttribute>

Sets data rate matching.

Parameters:

<RmAttribute> integer
 Range: 1 to 1024
 *RST: 1

Example:

BB:W3GP:MST:ENH:DPDC:TCH:RMAT 1024
 sets rate matching to 1024 for DTCH1.

Manual operation: See ["Rate Matching Attribute"](#) on page 233

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:STATe <State>

The command activates/deactivates the selected transport channel.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

BB:W3GP:MST:ENH:DPDC:TCH1:STAT
 activates DTCH1.

Manual operation: See ["Transport Channel State"](#) on page 231

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:TBCount <TbCount>

The command sets the transport block count.

Parameters:

<TbCount> integer
 Range: 1 to 16
 *RST: 1

Example:

BB:W3GP:MST:ENH:DPDC:TCH2:TBC 4
 activates 4 transport blocks for DTCH1.

Manual operation: See ["Number of Transport Blocks"](#) on page 232

```
[ :SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:TBSize
<TbSize>
```

Sets the size of the data blocks.

Parameters:

<TbSize> integer

Example: BB:W3GP:MST:ENH:DPDC:TCH2:TBS 1024
sets the length of the transport blocks for DTCH2 to 1024.

Manual operation: See ["Transport Block Size"](#) on page 232

```
[ :SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:
TTInterval <TtInterval>
```

Sets the number of frames into which a TCH is divided. This setting also defines the interleaver depth.

Parameters:

<TtInterval> 10MS | 20MS | 40MS

Example: BB:W3GP:MST:ENH:DPDC:TCH2:TTIN 20ms
sets that the transport channel is divided into 2 frames.

Manual operation: See ["Transport Time Interval"](#) on page 232

```
[ :SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:
CRCSize <CrcSize>
```

The command defines the CRC length for the selected transport channel. It is also possible to deactivate checksum determination.

Parameters:

<CrcSize> NONE | 8 | 12 | 16 | 24

*RST: 12

Example: BB:W3GP:MST:ENH:DPDC:TCH:CRCs NONE
deactivates checksum determination for DTCH1.

Manual operation: See ["Size of CRC"](#) on page 232

```
[ :SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:DATA
<Data>
```

Selects the data source for the transport channel.

Parameters:

<Data> ZERO | ONE | PATtErn | PN9 | PN11 | PN15 | PN16 | PN20 | PN21 | PN23 | DLISt

PNxx

The pseudo-random sequence generator is used as the data source. Different random sequence lengths can be selected.

DLISt

A data list is used. The data list is selected with the command `[:SOURce<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:DATA:DSElect`.

ZERO | ONE

Internal 0 and 1 data is used.

PATtErn

Internal data is used. The bit pattern for the data is defined by the command `[:SOURce<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:DATA:PATtErn`.

*RST: PN9

Example:

BB:W3GP:MST:ENH:DPDC:TCH2:DATA PATT
selects as the data source for the data fields of DTCH2 of user equipment 1, the bit pattern defined with the following command.
BB:W3GP:MST:ENH:DPDC:TCH2:DATA:PATT #H3F, 8
defines the bit pattern.

Manual operation: See "Data Source" on page 231

[:SOURce<hw>] :BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:DATA:DSElect <DSelect>

The command selects the data list for the enhanced channels for the DLISt selection.

The files are stored with the fixed file extensions `*.dm_iqd` in a directory of the user's choice. The directory applicable to the commands is defined with the command `MMEMory:CDIR`. To access the files in this directory, you only have to give the file name, without the path and the file extension.

Parameters:

<DSelect> string

Example:

BB:W3GP:MST:ENH:DPDC:TCH1:DATA DLIS
selects the Data Lists data source.
MMEM:CDIR '/var/user/temp/IQData'
selects the directory for the data lists.
BB:W3GP:MST:ENH:DPDC:TCH1:DATA:DSEL 'TCH1'
selects the file `tch1` as the data source.

Manual operation: See "Data Source" on page 231

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:DATA: PATtern <Pattern>

The command determines the bit pattern for the PATtern data source selection for transport channels.

Parameters:

<Pattern> 64 bits
*RST: #H0,1

Example: BB:W3GP:MST:ENH:DPDC:TCH0:DATA:PATT #H3F, 8
defines the bit pattern for DCCH.

Manual operation: See ["Data Source"](#) on page 231

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>: EPRotectio n <EProtection>

The command determines the error protection.

Parameters:

<EProtection> NONE | CON2 | CON3 | TURBo3
NONE
No error protection.
TURBo3
Turbo Coder of rate 1/3 in accordance with the 3GPP specifications.
CON2 | CON3
Convolution Coder of rate 1/2 or 1/3 with generator polynomials defined by 3GPP.
*RST: CON1/3

Example: BB:W3GP:MST:ENH:DPDC:TCH1:EPR NONE
error protection is deactivated.

Manual operation: See ["Error Protection"](#) on page 233

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>: INTerleaver <Interleaver>

The command activates or deactivates channel coding interleaver state 1 for the selected channel. Interleaver state 1 can be activated and deactivated for each channel individually. The channel is selected via the suffix at TCHannel.

Interleaver state 2 can only be activated or deactivated for all the channels together ([:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:INTerleaver2).

Parameters:

<Interleaver> 0 | 1 | OFF | ON
*RST: 1

Example: `BB:W3GP:MST:ENH:DPDC:TCH5:INT1 OFF`
deactivates channel coding interleaver state 1 for TCH 5.

Manual operation: See ["Interleaver 1 State"](#) on page 233

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:PCPCh:CCODing:STATe
<State>

The command activates or deactivates channel coding for the PCPCH.

When channel coding is active, the symbol rate is limited to the range between 15 and 120 kbps. Values above this limit are automatically set to 120 kbps.

Parameters:

<State> ON | OFF
***RST:** 0

Example: `BB:W3GP:MST:ENH:PCPC:CCOD:TYPE TB168`
selects channel coding type CPCH RMC (TB size 168 bits).
`BB:W3GP:MST:ENH:PCPC:CCOD:STAT ON`
activates channel coding.

Manual operation: See ["Channel Coding State"](#) on page 256

[:SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:PCPCh:CCODing:TYPE <Type>

The command selects the channel coding scheme in accordance with the 3GPP specification.

Parameters:

<Type> TB168 | TB360
TB168
CPCH RMC (TB size 168 bits)
TB360
CPCH RMC (TB size 360 bits)
***RST:** TB168

Example: `BB:W3GP:MST:ENH:PCPC:CCOD:TYPE TB168`
selects channel coding scheme RMC 168 bits.

Manual operation: See ["Channel Coding Type"](#) on page 256

[:SOURce<hw>]:BB:W3GPp:MSTation<st>:ENHanced:PRACH:CCODing:STATe
<State>

The command activates or deactivates channel coding for the PRACH.

Parameters:

<State> ON | OFF
***RST:** 0

Example: BB:W3GP:MST:ENH:PRAC:CCOD:TYPE TB168
selects channel coding type RACH RMC (TB size 168 bits).
BB:W3GP:MST:ENH:PRAC:CCOD:STAT ON
activates channel coding.

Manual operation: See ["Channel Coding State"](#) on page 244

**[:SOURce<hw>]:BB:W3GPp:MSTation<st>:ENHanced:PRACH:CCODing:TYPE
<Type>**

The command selects the channel coding scheme in accordance with the 3GPP specification.

Parameters:

<Type> TB168 | TB360 | TU168 | TU360

TB168

RACH RMC (TB size 168 bits)

TB360

RACH RMC (TB size 360 bits)

*RST: TB168

Example: BB:W3GP:MST:ENH:PRAC:CCOD:TYPE TB168
selects channel coding scheme RMC 168 bits.

Manual operation: See ["Channel Coding Type"](#) on page 244

8.11 Setting up Test Cases according to TS 25.141

The signal generator gives you the opportunity to generate predefined settings which enable tests on base stations in conformance with the 3G standard 3GPP FDD. It offers a selection of predefined settings according to Test Cases in TS 25.141. The settings take effect only after execution of command [\[:SOURce\]:BB:W3GPp:TS25141:TCASe:EXECute](#). For most test cases, the parameters of one or more of the subsystems SOURce:AWGN, SOURce:W3GPp, SOURce:DM and SOURce:FSIM are adjusted.

The test setups and equipment requirements for each Test Case are described in [chapter 7.1, "Introduction"](#), on page 275.

Unlike most of the other commands of the SOURce:BB:W3GPp subsystem, key word SOURce is without suffix. Signal routing is possible only for Test Cases that do not use diversity and is performed via command [\[:SOURce\]:BB:W3GPp:TS25141:ROUTe](#).

Most of the commands are setting commands in mode "User definable" and respectively are query only in mode "According to Standard", see the description of the command [\[:SOURce\]:BB:W3GPp:TS25141:EMODE](#). The edit mode "According to Standard" puts the required limits in the value ranges of the related commands.

[SOURce]:BB:W3GPp:TS25141:AWGN:CNRatio.....	544
[SOURce]:BB:W3GPp:TS25141:AWGN:ENRatio.....	544
[SOURce]:BB:W3GPp:TS25141:AWGN:POWer:NOISe.....	545
[SOURce]:BB:W3GPp:TS25141:AWGN:RBLock:RATE.....	545
[SOURce]:BB:W3GPp:TS25141:AWGN:RPDection:RATE.....	545
[SOURce]:BB:W3GPp:TS25141:AWGN:STATe.....	546
[SOURce]:BB:W3GPp:TS25141:BSPClass.....	546
[SOURce]:BB:W3GPp:TS25141:BSSignal:FREQuency.....	546
[SOURce]:BB:W3GPp:TS25141:BSSignal:POWer.....	546
[SOURce]:BB:W3GPp:TS25141:EMODE.....	547
[SOURce]:BB:W3GPp:TS25141:FSIMulator:STATe.....	547
[SOURce]:BB:W3GPp:TS25141:IFSignal:BWIDth.....	547
[SOURce]:BB:W3GPp:TS25141:IFSignal:CNRatio.....	548
[SOURce]:BB:W3GPp:TS25141:IFSignal:CW:FOFFset.....	548
[SOURce]:BB:W3GPp:TS25141:IFSignal:CW:POWer.....	549
[SOURce]:BB:W3GPp:TS25141:IFSignal:CW:STATe.....	549
[SOURce]:BB:W3GPp:TS25141:IFSignal:FOFFset.....	550
[SOURce]:BB:W3GPp:TS25141:IFSignal:MODulated:FOFFset.....	550
[SOURce]:BB:W3GPp:TS25141:IFSignal:MODulated:POWer.....	550
[SOURce]:BB:W3GPp:TS25141:IFSignal:MODulated:STATe.....	551
[SOURce]:BB:W3GPp:TS25141:IFSignal:MODulated:TYPE.....	551
[SOURce]:BB:W3GPp:TS25141:IFSignal:POWer.....	552
[SOURce]:BB:W3GPp:TS25141:IFSignal:SETTing:TMODEL:BSTation.....	552
[SOURce]:BB:W3GPp:TS25141:IFSignal:STATe.....	552
[SOURce]:BB:W3GPp:TS25141:IFSignal:TYPE.....	553
[SOURce]:BB:W3GPp:TS25141:ROUTe.....	553
[SOURce]:BB:W3GPp:TS25141:RXDiversity.....	553
[SOURce]:BB:W3GPp:TS25141:SCODE.....	554
[SOURce]:BB:W3GPp:TS25141:SCODE:MODE.....	554
[SOURce]:BB:W3GPp:TS25141:TCASe.....	554
[SOURce]:BB:W3GPp:TS25141:TCASe:EXECute.....	555
[SOURce]:BB:W3GPp:TS25141:TRIGger.....	555
[SOURce]:BB:W3GPp:TS25141:TRIGger:OUTPut.....	555
[SOURce]:BB:W3GPp:TS25141:WSIGnal:BTYPe.....	556
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DCRatio.....	556
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:SFORMAT.....	556
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:RDATa.....	557
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:RDATa:DSElect.....	557
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:RDATa:PATtern.....	558
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:SDATa.....	558
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:SDATa:DSElect.....	559
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:SDATa:PDSTeps.....	559
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:SDATa:PUSTeps.....	559
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPDCh:CCODing:TYPE.....	559
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPDCh:DERRor:BIT:RATE.....	560
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPDCh:DERRor:BLOCK:RATE.....	560
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPDCh:ORATe.....	560
[SOURce]:BB:W3GPp:TS25141:WSIGnal:FREQuency.....	561
[SOURce]:BB:W3GPp:TS25141:WSIGnal:OBAND.....	561
[SOURce]:BB:W3GPp:TS25141:WSIGnal:PCPCh:CCODing:TYPE.....	561

[:SOURce]:BB:W3GPp:TS25141:WSIGnal:POWER.....	562
[:SOURce]:BB:W3GPp:TS25141:WSIGnal:PRACH:CCODing:TYPE.....	562
[:SOURce]:BB:W3GPp:TS25141:WSIGnal:STAt.....	562
[:SOURce]:BB:W3GPp:TS25141:WSIGnal:TRIGger[:EXTeRnal]:DELay.....	563

[:SOURce]:BB:W3GPp:TS25141:AWGN:CNRatio <CnRatio>

Sets/queries the carrier/noise ratio.

Parameters:

<CnRatio> float
 Range: -50 to 45
 Increment: 0.01
 *RST: -16.8

Example:

BB:W3GP:TS25141:TCAS TC73
 selects test case 7.3.
 BB:W3GP:TS25141:EMOD STAN
 selects mode "According to Standard". Only settings in compli-
 ance with the standard can be made.
 BB:W3GP:TS25141:AWGN:POW:NOIS?
 queries the noise level of the interfering signal.
 Response: -73
 the noise level of the interfering signal is -73 dB.
 BB:W3GP:TS25141:AWGN:CNR?
 queries the signal/noise ratio of the interfering signal.
 Response: -16.80
 the signal/noise ratio of the interfering signal is -16.8 dB.

Manual operation: See "C/N - Test Case 7.3" on page 292

[:SOURce]:BB:W3GPp:TS25141:AWGN:ENRatio <EnRatio>

Sets/queries the ratio of bit energy to noise power density.

Parameters:

<EnRatio> float
 Range: -80 dB to 80 dB
 Increment: 0.01 dB
 *RST: 8.7 dB

Example:

BB:W3GP:TS25141:TCAS TC821
 selects test case 8.2.1.
 BB:W3GP:TS25141:EMOD STAN
 selects mode "According to Standard". Only settings in compli-
 ance with the standard can be made.
 BB:W3GP:TS25141:AWGN:ENR?
 queries the ratio of bit energy to noise power density of the inter-
 fering signal.
 Response: 8.70
 the E/N ratio of the interfering signal is 8.7 dB.

Manual operation: See "[E_b to N₀ - Test Case 8.x](#)" on page 313

[:SOURce]:BB:W3GPp:TS25141:AWGN:POWer:NOISe <Noise>

Sets/queries the noise level.

Parameters:

<Noise> float
 Increment: 0.01

Example: see [\[:SOURce\]:BB:W3GPp:TS25141:AWGN:CNRatio](#)
 on page 544

Manual operation: See "[Power Level - Test Case 7.3](#)" on page 292

[:SOURce]:BB:W3GPp:TS25141:AWGN:RBLock:RATE <Rate>

Sets the required block error rate. The possible selection depends on the selected fading configuration.

Parameters:

<Rate> B0 | B01 | B001 | B0001
 *RST: B001

Example: BB:W3GP:TS25141:TCAS TC893
 selects test case 8.9.3.
 BB:W3GP:TS25141:EMOD STAN
 selects mode "According to Standard". Only settings in compliance with the standard can be made.
 BB:W3GP:TS25141:AWGN:RBL:RATE B01
 sets the required block error rate to < 0.01.

Manual operation: See "[Required BLER - Test Case 8.x](#)" on page 312

[:SOURce]:BB:W3GPp:TS25141:AWGN:RPDection:RATE <Rate>

Sets the required probability of detection of preamble (Pd). The selection determines the ratio E_b/N₀.

Parameters:

<Rate> PD099 | PD0999
 *RST: PD099

Example: BB:W3GP:TS25141:TCAS TC892
 selects test case 8.9.2.
 BB:W3GP:TS25141:EMOD STAN
 selects mode "According to Standard". Only settings in compliance with the standard can be made.
 BB:W3GP:TS25141:AWGN:RPD:RATE PD099
 sets the required probability of detection of preamble to > 0.99.
 The E/N ratio of the interfering signal is -8.8 dB.

Manual operation: See ["Required Pd - Test Case 8.x"](#) on page 325

[:SOURce]:BB:W3GPp:TS25141:AWGN:STATe <State>

Enables/disables the generation of the AWGN signal.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example:

BB:W3GP:TS25141:TCAS TC892
 selects test case 8.9.2.
 BB:W3GP:TS25141:EMOD USER
 selects mode "User definable". Also settings that are not in compliance with the standard can be made.
 BB:W3GP:TS25141:AWGN:STAT OFF
 disables the generation of the AWGN signal.

Manual operation: See ["AWGN State - Test Case 8.x"](#) on page 312

[:SOURce]:BB:W3GPp:TS25141:BSPClass <BspClass>

Selects the base station power class.

Parameters:

<BspClass> WIDE | MEDium | LOCal
 *RST: WIDE

Example:

BB:W3GP:TS25141:BSPC WIDE
 the base station under test is a wide area base station.

Manual operation: See ["Power Class"](#) on page 283

[:SOURce]:BB:W3GPp:TS25141:BSSignal:FREQuency <Frequency>

Sets the RF frequency of the base station.

Parameters:

<Frequency> float
 Range: 100 kHz to 6 GHz
 *RST: 1.0 GHz

Example:

BB:W3GP:TS25141:BSS:FREQ 1GHz
 the frequency of the base station under test is 1 GHz.

Manual operation: See ["BS Frequency - Test Case 6.6"](#) on page 344

[:SOURce]:BB:W3GPp:TS25141:BSSignal:POWer <Power>

Sets the RF power of the base station.

Parameters:

<Power> float
 Increment: 0.01
 *RST: -30 dBm

Example:

BB:W3GP:TS25141:TCAS TC66
 selects test case 6.6.
 BB:W3GP:TS25141:BSS:POW -30
 the power of the base station under test is -30 dBm.

Manual operation: See ["BS RF Power - Test Case 6.6"](#) on page 344

[:SOURce]:BB:W3GPp:TS25141:EMODE <EMode>

Selects the edit mode for the configuration of the test cases.

Parameters:

<EMode> STANdard | USER
STANdard
 Edit mode "According to Standard". Only settings in compliance with TS 25.141 are possible. All other parameters are preset.
USER
 Edit mode "User definable". A wider range of settings is possible
 *RST: STANdard

Example:

BB:W3GP:TS25141:EMOD USER
 selects edit mode "User definable".

Manual operation: See ["Edit Mode"](#) on page 281

[:SOURce]:BB:W3GPp:TS25141:FSIMulator:STATE <State>

Queries the state of the Fading Simulator.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

BB:W3GP:TS25141:TCAS TC892
 selects test case 8.9.2.
 BB:W3GP:TS25141:FSIM:STAT?
 queries the state of the fading simulator.
 Response: 0
 the fading simulator is disabled.

Manual operation: See ["Fading State - Test Case 8.2.1"](#) on page 313

[:SOURce]:BB:W3GPp:TS25141:IFSignal:BWIDth <BWidth>

Selects the interferer scenario.

Parameters:

<BWidth> WIDE | NARRow
 *RST: WIDE

Example:

BB:W3GP:TS25141:TCAS TC76
 selects test case 7.6.
 BB:W3GP:TS25141:IFS:BWID WIDE
 selects a 3GPP FDD uplink interfering signal 1

Manual operation: See ["Interferer Bandwidth Type - Test Case 7.6"](#) on page 306

[:SOURce]:BB:W3GPp:TS25141:IFSignal:CNRatio <CnRatio>

In test case 7.4, sets the power ratio of wanted signal to interfering signal.

In test case 6.6, sets the power ratio of interfering signal to wanted signal.

Parameters:

<CnRatio> float
 Range: -80 dB to 80 dB
 Increment: 0.01 dB
 *RST: -63 dB

Example:

BB:W3GP:TS25141:TCAS TC74
 selects test case 7.4.
 BB:W3GP:TS25141:EMOD STAN
 selects mode "According to Standard". Only settings in compliance with the standard can be made.
 BB:W3GP:TS25141:IFS:CNR?
 queries the power ratio.
 Response: -63.0
 the signal/noise ratio of the interfering signal is -63 dB.

Manual operation: See ["C to I - Test Case 7.4"](#) on page 294

[:SOURce]:BB:W3GPp:TS25141:IFSignal:CW:FOFFset <FOffset>

Sets frequency offset of the CW interfering signal versus the wanted signal RF frequency.

Parameters:

<FOffset> float
 Increment: 0.01
 *RST: 10 MHz

Example:

see [\[:SOURce\]:BB:W3GPp:TS25141:IFSignal:CW:STATe](#) on page 549

Manual operation: See ["Interferer 1 and 2 Frequency Offset - Test Case 7.6"](#) on page 306

[:SOURce]:BB:W3GPp:TS25141:IFSignal:CW:POWer <Power>

Sets the RF level of the CW interfering signal.

Parameters:

<Power> float
*RST: -48 dBm

Example: see [\[:SOURce\]:BB:W3GPp:TS25141:IFSignal:CW:STATe](#) on page 549

Manual operation: See ["Interferer 1 and 2 Power Level - Test Case 7.6"](#) on page 307

[:SOURce]:BB:W3GPp:TS25141:IFSignal:CW:STATe <State>

This command enable/disables the CW interfering signal. In mode "According to Standard" (:SOURce:BB:W3GPp:TS25141:EMODE STANDard) the value is fixed to ON.

Sets commands :SOURce2:AWGN:CNRatio and :SOURce2:AWGN:POWer:NOISe after execution of :SOURce:BB:W3GP:TS25141:TCAS:EXEC

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 1

Example: BB:W3GP:TS25141:TCAS TC76
selects test case 7.6.
BB:W3GP:TS25141:EMOD STAN
selects mode According to Standard. Only settings in compliance with the standard can be made.
BB:W3GP:TS25141:IFS:IFS:BWID WIDE
selects interferer scenario wideband.
BB:W3GP:TS25141:IFS:CW:FOFF?
queries the frequency offset of the CW interferer.
Response: 10000000
the frequency offset is 10 MHz.
BB:W3GP:TS25141:IFS:BWID NARR
BB:W3GP:TS25141:IFS:CW:POW?
queries the RF level of the CW interferer.
Response: -47
the RF level is -47.00 dBm.
BB:W3GP:TS25141:IFS:CW:STAT?
queries the state of the CW interferer.
Response: 1
the CW interferer is enabled.

Manual operation: See ["Interferer 1 and 2 State - Test Case 7.6"](#) on page 306

[[:SOURce]:BB:W3GP:TS25141:IFS:Signal:FOFFset <FOffset>

Sets frequency offset of the interfering signal versus the wanted signal RF frequency.).

Parameters:

<FOffset> float
 Range: -40 MHz to 40 MHz
 Increment: 0.01 Hz
 *RST: 1 MHz

Example:

BB:W3GP:TS25141:TCAS TC74
 selects test case 7.4.
 BB:W3GP:TS25141:EMOD STAN
 selects mode "According to Standard". Only settings in compliance with the standard can be made.
 BB:W3GP:TS25141:IFS:FOFF 0.5 MHz
 sets the frequency offset of the interferer to 5 MHz.

Manual operation: See ["Frequency Offset - Test Case 7.4"](#) on page 294

[[:SOURce]:BB:W3GP:TS25141:IFS:Signal:MODulated:FOFFset <FOffset>

Sets frequency offset of the modulated interfering signal versus the wanted signal RF frequency.

Parameters:

<FOffset> float
 Range: -40 MHz to 40 MHz
 Increment: 0.01 Hz
 *RST: 20 MHz

Example:

BB:W3GP:TS25141:TCAS TC76
 selects test case 7.6.
 BB:W3GP:TS25141:EMOD STAN
 selects mode According to Standard. Only settings in compliance with the standard can be made.
 BB:W3GP:TS25141:IFS:BWID WIDE
 selects interferer scenario wideband.
 BB:W3GP:TS25141:IFS:MOD:FOFF?
 queries the frequency offset of the modulated interferer.
 Response: 20000000
 the frequency offset is 20 MHz.

Manual operation: See ["Interferer 1 and 2 Frequency Offset - Test Case 7.6"](#) on page 306

[[:SOURce]:BB:W3GP:TS25141:IFS:Signal:MODulated:POWER <Power>

Sets the RF level of the modulated interfering signal.

Parameters:

<Power> float
 *RST: -48 dBm

Example:

BB:W3GP:TS25141:TCAS TC76
 selects test case 7.6.
 BB:W3GP:TS25141:EMOD STAN
 selects mode "According to Standard". Only settings in compliance with the standard can be made.
 BB:W3GP:TS25141:IFS:BWID NARR
 selects interferer scenario narrowband.
 BB:W3GP:TS25141:IFS:MOD:POW?
 queries the RF level of the modulated interferer.
 Response: -47
 the RF level is 47.00 dBm.
 BB:W3GP:TS25141:IFS:MOD:TYPE?
 queries the type of the modulated interferer.
 Response: GMSK
 the modulation type is GMSK.
 BB:W3GP:TS25141:IFS:MOD:STAT?
 queries the state of the modulated interferer.
 Response: 1
 the modulated interferer is enabled.

Manual operation: See ["Interferer 1 and 2 Power Level - Test Case 7.6"](#) on page 307

[[:SOURce]:BB:W3GPp:TS25141:IFSignal:MODulated:STATe <State>

Enable/disables the modulated interfering signal.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example: see [\[:SOURce\]:BB:W3GPp:TS25141:IFSignal:MODulated:POWer](#) on page 550

Manual operation: See ["Interferer 1 and 2 State - Test Case 7.6"](#) on page 306

[[:SOURce]:BB:W3GPp:TS25141:IFSignal:MODulated:TYPE <Type>

Selects the type of modulation for the interfering uplink signal in the second path.

Parameters:

<Type> WCDMa | CW | GMSK | QPSK
 *RST: WCDMa

Example: see [\[:SOURce\]:BB:W3GPp:TS25141:IFSignal:MODulated:POWer](#) on page 550

Manual operation: See ["Interferer 2 Modulation - Test Case 7.6"](#) on page 307

[[:SOURce]:BB:W3GP:TS25141:IFSIGNAL:POWer <Power>

Sets the RF level of the interfering signal.

Parameters:

<Power> float

Example:

BB:W3GP:TS25141:TCAS TC75

selects test case 7.6.

BB:W3GP:TS25141:EMOD STAN

selects mode "According to Standard". Only settings in compliance with the standard can be made.

BB:W3GP:TS25141:WSIG:BTYP NARR

selects blocking scenario narrowband.

BB:W3GP:TS25141:IFS:POW?

queries the RF level of the CW interferer.

Response: -47

the RF level is -47.00 dBm.

Manual operation: See ["Power Level - Test Case 7.5"](#) on page 298

[[:SOURce]:BB:W3GP:TS25141:IFSIGNAL:SETTING:TMODEL:BSTation <BStation>

Selects the interfering signal from a list of test models in accordance with TS 25.141. All test models refer to the predefined downlink configurations.

Parameters:

<BStation> TM164 | TM116 | TM132 | TM2 | TM316 | TM332 | TM4 |
TM538 | TM528 | TM58

Example:

BB:W3GP:TS25141:TCAS TC66

selects test case 6.6.

BB:W3GP:TS25141:EMOD USER

selects mode "User Definable".

BB:W3GP:TS25141:IFS:SETT:TMOD:BST TM116

the interfering signal is generated according to test model Test Model 1; 16 Channels.

Manual operation: See ["Interferer Mode - Test Case 6.6"](#) on page 345

[[:SOURce]:BB:W3GP:TS25141:IFSIGNAL:STATe <State>

Enable/disables the modulated interfering signal.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 1

Example: BB:W3GP:TS25141:TCAS TC75
selects test case 7.5.
BB:W3GP:TS25141:EMOD STAN
selects mode "According to Standard". Only settings in compliance with the standard can be made.
BB:W3GP:TS25141:IFS:STAT?
queries the state of the interferer.
Response: 1
the interferer is enabled.

Manual operation: See ["Interferer State - Test Case 7.4"](#) on page 294

[:SOURce]:BB:W3GPp:TS25141:IFSignal:TYPE <Type>

Selects the type of modulation for the interfering signal.

Parameters:

<Type> WCDMa | CW | GMSK | QPSK
*RST: WCDMa

Example: BB:W3GP:TS25141:TCAS TC75
selects test case 7.5.
BB:W3GP:TS25141:EMOD STAN
BB:W3GP:TS25141:IFS:TYPE?
queries the type of the interferer.
Response: CW
the modulation type is CW interferer.

Manual operation: See ["Interferer Modulation - Test Case 7.4"](#) on page 294

[:SOURce]:BB:W3GPp:TS25141:ROUTE <Route>

Selects the signal routing for baseband A signal which in most test cases represents the wanted signal (exception test case 6.6). The command is only available for two-path-instruments and only for test cases that do not use both paths anyway.

Parameters:

<Route> A | B
*RST: A

Example: BB:W3GP:TS25141:ROUT B
the baseband signal of path A is introduced into path B.

Manual operation: See ["Baseband A Signal Routing"](#) on page 282

[:SOURce]:BB:W3GPp:TS25141:RXDiversity <RxDiversity>

Sets the signal generator according to the base station diversity processing capability. The command is only available for two-path-instruments and only for test cases that do not use both paths anyway.

Parameters:

<RxDiversity> 0 | 1 | OFF | ON
 *RST: 0

Example:

BB:W3GP:TS25141:RXD ON
 the baseband signal of path A is introduced into both paths.

Manual operation: See ["Diversity"](#) on page 282

[SOURce]:BB:W3GP:TS25141:SCODE <SCode>

Sets the scrambling code. The value range depends on whether the generator is used in uplink or downlink direction (test case 6.6) according to the selected test case.

Parameters:

<SCode> integer
 *RST: #H0

Example:

BB:W3GP:TS25141:SCOD #H5FFF
 sets scrambling code #H5FFF.

Manual operation: See ["Scrambling Code \(hex\)"](#) on page 283

[SOURce]:BB:W3GP:TS25141:SCODE:MODE <Mode>

Sets the type for the scrambling code for the uplink direction. In downlink direction (test case 6.6), the scrambling generator can be switched on and off.

Parameters:

<Mode> OFF | ON | LONG | SHORT

Example:

BB:W3GP:TS25141:SCOD:MODE OFF
 deactivates the scrambling code generator.

Manual operation: See ["Scrambling Mode"](#) on page 283

[SOURce]:BB:W3GP:TS25141:TCASe <TCCase>

Selects a test case defined by the standard. The signal generator is preset according to the selected standard.

Depending on the selected test case the parameters of the TS25141 commands are preset. For most test cases also the parameters of one or more of the subsystems SOURce:AWGN, SOURce:W3GP, SOURce:DM and SOURce:FSIM are preset. The preset parameters are activated with command :BB:W3GP:TS25141:TCAS:EXEC

Parameters:

<TCCase> TC642 | TC66 | TC72 | TC73 | TC74 | TC75 | TC76 | TC78 |
 TC821 | TC831 | TC832 | TC833 | TC834 | TC84 | TC85 | TC86 |
 TC881 | TC882 | TC883 | TC884 | TC891 | TC892 | TC893 |
 TC894
 *RST: TC642

Example: BB:W3GP:TS25141:TCAS TC73
selects the test case 7.3, Dynamic Range.

Manual operation: See ["Test Case"](#) on page 279

[SOURce]:BB:W3GPp:TS25141:TCASe:EXECute

The command activates the current settings of the test case wizard. Signal generation is started at the first trigger received by the generator. The RF output is not activated / deactivated by this command, so care has to be taken that "RF State" is "On" (OUTPut:STATe ON) at the beginning of the measurement.

The command activates the preset parameters of the TS25141 commands and - for most test cases - also the parameters of one or more of the subsystems

SOURce:AWGN, SOURce:W3GPp, SOURce:DM and SOURce:FSIM.

Example: BB:W3GP:TS25141:TCAS TC73
selects the settings for test case 7.3, Dynamic Range.
BB:W3GP:TS25141:BSPC MED
sets the base station power class Medium Range BS.
BB:W3GP:TS25141:SCOD #H000FFF
sets the uplink scrambling code 'H000FFF'.
BB:W3GP:TS25141:WSIG:FREQ 1710MHz
sets the wanted signal frequency.
BB:W3GP:TS25141:TCAS:EXEC
activates the settings for test case 7.3, Dynamic Range. For all other parameters the preset values are used.
OUTP ON
activates RF output A.

Usage: Event

Manual operation: See ["Apply Settings"](#) on page 284

[SOURce]:BB:W3GPp:TS25141:TRIGger <Trigger>

Selects the trigger mode. The trigger is used to synchronize the signal generator to the other equipment.

Parameters:

<Trigger> AUTO | PRESet | SINGLE
*RST: AUTO

Example: BB:W3GP:TS25141:TRIG AUTO
selects customization of trigger mode for the selected test case

Manual operation: See ["Trigger Configuration"](#) on page 282

[SOURce]:BB:W3GPp:TS25141:TRIGger:OUTPut <Output>

Defines the signal for the selected marker output.

Parameters:

<Output> AUTO | PRESet
 *RST: AUTO

Example:

BB:W3GP:TS25141:TRIG:OUTP PRES
 selects that the current marker setting are kept independently of the selected test case.

Manual operation: See ["Marker Configuration"](#) on page 282

[[:SOURce]:BB:W3GPp:TS25141:WSIGnal:BTYPe <BType>

Selects the type of blocking scenario and determines the type of interfering signal and its level.

Parameters:

<BType> WIDE | COLocated | NARRow
 *RST: WIDE

Example:

BB:W3GP:TS25141:TCAS TC75
 selects the settings for test case 7.5, Blocking Characteristics.
 BB:W3GP:TS25141:WSIG:BTYP NARR
 selects the GMSK (270.833 kHz) interfering signal

Manual operation: See ["Blocking Scenario - Test Case 7.5"](#) on page 297

[[:SOURce]:BB:W3GPp:TS25141:WSIGnal:DCRatio <DcRatio>

Sets channel power ratio of DPCCH to DPDCH.

Parameters:

<DcRatio> float
 Range: -80 to 80
 Increment: 0.01
 *RST: 0

Example:

BB:W3GP:TS25141:TCAS TC642
 selects the settings for test case 6.4.2, Power Control Steps.
 BB:W3GP:TS25141:WSIG:DCR -3 dB
 sets a ratio of -3 dB for DPCCH power/DPDCH power

Manual operation: See ["Power Ratio DPCCH to DPDCH - Test Case 6.4.2"](#) on page 339

[[:SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:SFormat <SFormat>

Sets the slot format for the DPCCH. The slot format defines the FBI mode and the TFCI status.

Parameters:

<SFormat> float
 Range: 0 to 5
 *RST: 0

Example:

BB:W3GP:TS25141:TCAS TC642
 selects the settings for test case 6.4.2, Power Control Steps.
 BB:W3GP:TS25141:WSIG:DPCC:SFOR 3
 selects slot format 3 for the DPCCH

Manual operation: See ["Slot Format DPCCH - Test Case 6.4.2"](#) on page 338

[:SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:RDATa <RData>

Sets the TPC repeat pattern for verification of the base stations power control steps.

Parameters:

<RData> SINGLE | AGGRegated | ONE | ZERO | PATtern | DLISt
 *RST: SINGLE

Example:

BB:W3GP:TS25141:TCAS TC642
 selects the settings for test case 6.4.2, Power Control Steps.
 BB:W3GP:TS25141:WSIG:DPCC:TPC:RDAT SING
 selects the 01 pattern

Manual operation: See ["TPC Repeat Pattern - Test Case 6.4.2"](#) on page 340

**[:SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:RDATa:DSElect
 <DSelect>**

Selects the data list when the DLISt data source is selected for the TPC repeat pattern of the DPCCH.

The files are stored with the fixed file extensions *.dm_iqd in a directory of the user's choice. The directory applicable to the commands is defined with the command MMEMemory:CDIR. To access the files in this directory, only the file name has to be given, without the path and the file extension.

Parameters:

<DSelect> <data_list_name>

Example:

BB:W3GP:TS25141:TCAS TC642
 BB:W3GP:TS25141:WSIG:DPCC:TPC:RDAT DLIS
 selects the data source DLIS
 MMEMemory:CDIR '/var/user/temp/IQData'
 selects the directory for the data lists.
 BB:W3GP:TS25141:WSIG:DPCC:TPC:RDAT:DSEL
 'dpcch_tpc_1'
 selects the data list dpcch_tpc1.

Manual operation: See ["TPC Repeat Pattern - Test Case 6.4.2"](#) on page 340

[[:SOURce]:BB:W3GP:TS25141:WSIGnal:DPCCCh:TPC:RDATa:PATtern <Pattern>

Determines the bit pattern for the PATtern data source selection.

Parameters:

<Pattern> 64 bits
 *RST: #H0,1

Example:

```
BB:W3GP:TS25141:TCAS TC642
BB:W3GP:TS25141:WSIG:DPCC:TPC:RDAT PATT
selects the data source pattern
BB:W3GP:TS25141:WSIG:DPCC:TPC:RDAT:PATT
#HF0C20,19
defines the TPC pattern
```

Manual operation: See ["TPC Repeat Pattern - Test Case 6.4.2"](#) on page 340

[[:SOURce]:BB:W3GP:TS25141:WSIGnal:DPCCCh:TPC:SDATa <SData>

Sets the TPC pattern for initialization of the base stations power level.

Parameters:

<SData> PMAX | DLIS
 PMAX
 Maximum Power Less n Steps
 DLIS
 The TPC start pattern is taken from a data list.
 *RST: PMAX

Example:

```
BB:W3GP:TS25141:TCAS TC642
selects the settings for test case 6.4.2, Power Control Steps.
BB:W3GP:TS25141:WSIG:DPCC:TPC:SDAT DLIS
selects the data source data list for TPC start pattern.
MMEM:CDIR '/var/user/temp/IQData'
selects the directory for the data lists.
BB:W3GP:TS25141:WSIG:DPCC:TPC:SDAT:DSEL
'dpcch_tpc_s'
selects the data list dpcch_tpcs.
BB:W3GP:TS25141:WSIG:DPCC:TPC:SDAT PMAX
selects the pattern "Max. Pow. Less N Steps"
BB:W3GP:TS25141:WSIG:DPCC:TPC:SDAT:PUST 100
defines 100 power up bits. The base station is (presumably) set
to maximum transmit power.
BB:W3GP:TS25141:WSIG:DPCC:TPC:SDAT:PDST 10
defines 10 power down bits. The base station is set to two power
steps below its maximum transmit power. The TPC start patten
is 110 bits long.
```

Manual operation: See ["TPC Start Pattern - Test Case 6.4.2"](#) on page 339

[:SOURce]:BB:W3GPP:TS25141:WSIGnal:DPCCh:TPC:SDATa:DSElect
<DSelect>

Selects the data list when the `DList` data source is selected for the TPC start pattern of the DPCCH.

The files are stored with the fixed file extensions `*.dm_iqd` in a directory of the user's choice. The directory applicable to the commands is defined with the command `MMEMory:CDIR`. To access the files in this directory, only the file name has to be given, without the path and the file extension.

Parameters:

<DSelect> **<data_list_name>**

Example: see `[:SOURce]:BB:W3GPP:TS25141:WSIGnal:DPCCh:TPC:SDATa` on page 558

Manual operation: See "TPC Start Pattern - Test Case 6.4.2" on page 339

[:SOURce]:BB:W3GPP:TS25141:WSIGnal:DPCCh:TPC:SDATa:PDSteps
<PdSteps>

Sets the number of power down bits in the TPC start pattern.

Parameters:

<PdSteps> integer
 Range: 0 to 1000
 *RST: 1

Example: see `[:SOURce]:BB:W3GPP:TS25141:WSIGnal:DPCCh:TPC:SDATa` on page 558

Manual operation: See "TPC Power Down Steps - Test Case 6.4.2" on page 340

[:SOURce]:BB:W3GPP:TS25141:WSIGnal:DPCCh:TPC:SDATa:PUSSteps
<PuSteps>

Sets the number of power up bits in the TPC start pattern.

Parameters:

<PuSteps> integer
 Range: 0 to 1000
 *RST: 1

Example: see `[:SOURce]:BB:W3GPP:TS25141:WSIGnal:DPCCh:TPC:SDATa` on page 558

Manual operation: See "TPC Power Up Steps - Test Case 6.4.2" on page 340

[:SOURce]:BB:W3GPP:TS25141:WSIGnal:DPDCh:CCODing:TYPE <Type>

Selects the channel coding scheme in accordance with the 3GPP specification.

Parameters:

<Type>

M12K2 | M64K | M144k | M384k | AMR

M12K2 | M64K | M144K | M384K

Measurement channel with an input data bit rate of respectively 12.2 ksps, 64 ksps, 144 ksps and 384 ksps

AMR

Channel coding for the AMR Coder (coding a voice channel)

*RST: M12K2

Example:BB:W3GP:TS25141:WSIG:DPDC:CCOD:TYPE M144K
selects channel coding scheme RMC 144 kbps.**Manual operation:** See ["RMC - Receiver Tests"](#) on page 288**[[:SOURce]:BB:W3GPp:TS25141:WSIGnal:DPDCh:DERRor:BIT:RATE <Rate>**

Sets the bit error rate.

Parameters:

<Rate>

float

*RST: 0.0

Example:BB:W3GP:TS25141:WSIG:DPDC:DERR:BIT:RATE 1E-2
sets a bit error rate of 0.01.**Manual operation:** See ["Bit Error Rate - Test Case 7.8"](#) on page 309**[[:SOURce]:BB:W3GPp:TS25141:WSIGnal:DPDCh:DERRor:BLOCK:RATE <Rate>**

Sets the block error rate.

Parameters:

<Rate>

float

Range: 0 to 0.1

Increment: 0.001

*RST: 0.0

Example:BB:W3GP:TS25141:WSIG:DPDC:DERR:BLOC:RATE 1E-2
sets a bit error rate of 0.01.**Manual operation:** See ["Block Error Rate - Test Case 7.8"](#) on page 310**[[:SOURce]:BB:W3GPp:TS25141:WSIGnal:DPDCh:ORATe <ORate>**

Sets the overall symbol rate.

Parameters:

<ORate>

D15K | D30K | D60K | D120k | D240k | D480k | D960k |
D1920k | D2880k | D3840k | D4800k | D5760k

15 ksps ... 6 x 960 ksps

*RST: D60K

Example: BB:W3GP:TS25141:TCAS TC642
selects the settings for test case 6.4.2, Power Control Steps.
BB:W3GP:TS25141:WSIG:DPDC:ORAT D15K
sets the overall symbol rate to 15 ksps. Only DPDCH1 is active,
the symbol rate is 15 ksps and the channelization code is 64.

Manual operation: See ["Overall Symbol Rate - Test Case 6.4.2"](#) on page 339

[:SOURce]:BB:W3GPp:TS25141:WSIGnal:FREQuency <Frequency>

The command sets the RF frequency of the wanted signal.

Parameters:

<Frequency> float
Range: 100E3 to 6E9
Increment: 0.01
*RST: 1.95E9

Example: BB:W3GP:TS25141:WSIG:FREQ 2.5GHz
sets a frequency of 2.5 GHz for the wanted signal.

Manual operation: See ["Wanted Signal Frequency - Receiver Tests"](#) on page 288

[:SOURce]:BB:W3GPp:TS25141:WSIGnal:OBANd <OBand>

Selects the operating band of the base station for "Wideband Blocking". The operating band is required for calculation of power levels and interferer modulation.

Parameters:

<OBand> I | II | III | IV | V | VI
*RST: I

Example: BB:W3GP:TS25141:TCAS TC75
selects the settings for test case 7.5, Blocking Characteristics.
BB:W3GP:TS25141:EMOD STAN
BB:W3GP:TS25141:WSIG:BTYP WIDE
selects blocking scenario wideband.
BB:W3GP:TS25141:WSIG:OBAN III
selects operating band III.

Manual operation: See ["Operating Band - Test Case 7.5"](#) on page 298

[:SOURce]:BB:W3GPp:TS25141:WSIGnal:PCPCh:CCODing:TYPE <Type>

Selects the Transport Block Size, 168 bits or 360 bits.

Parameters:

<Type> TB168 | TB360
*RST: TB168

Example: BB:W3GP:TS25141:TCAS TC893
selects the settings for test case 8.9.3, Demodulation of CPCH Message in Static Propagation Conditions.
BB:W3GP:TS25141:WSIG:PCPC:CCOD:TYPE TB168
selects transport block size 168 bits.

Manual operation: See ["Transport Block Size \(TB\) - Test Case 8.9.3"](#) on page 335

[:SOURce]:BB:W3GPp:TS25141:WSIGnal:POWer <Power>

Sets the RF level of the wanted signal.

Parameters:

<Power> float
Increment: 0.01
*RST: -110.3

Example: BB:W3GP:TS25141:WSIG:POW?
queries the RF level of the wanted signal.
Response: -103.1
the RF level is -103.1 dBm

Manual operation: See ["Wanted Signal Level - Receiver Tests"](#) on page 288

[:SOURce]:BB:W3GPp:TS25141:WSIGnal:PRACH:CCODing:TYPE <Type>

Selects the Transport Block Size to 168 bits or to 360 bits.

Parameters:

<Type> TB168 | TB360
*RST: TB168

Example: BB:W3GP:TS25141:TCAS TC883
selects the settings for test case 8.8.3, Demodulation of RACH Message in Static Propagation Conditions.
BB:W3GP:TS25141:WSIG:PRAC:CCOD:TYPE TB168
selects transport block size 168 bits.

Manual operation: See ["Transport Block Size - Test Case 8.8.x"](#) on page 331

[:SOURce]:BB:W3GPp:TS25141:WSIGnal:STATe <State>

Enables/disables the generation of the wanted signal.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 1

Example:

```
BB:W3GP:TS25141:TCAS TC892
```

selects test case 8.9.2, CPCH Access Preamble and Collision Detection in Multipath Fading Case 3.

```
BB:W3GP:TS25141:EMOD USER
```

selects mode "User definable". Also settings that are not in compliance with the standard can be made.

```
BB:W3GP:TS25141:WSIG:STAT OFF
```

disables the generation of the wanted signal.

Manual operation: See ["Wanted Signal State - Receiver Tests"](#) on page 287

```
[[:SOURce]:BB:W3GPp:TS25141:WSIGnal:TRIGger[:EXTernal]:DELay <Delay>
```

Sets an additional propagation delay besides the fixed DL-UL timing offset of 1024 chip periods.

The additional propagation delay is obtained by charging the start trigger impulse with the respective delay.

Parameters:

<Delay>

float

Range: 0 chips to 65535 chips

*RST: 0 chips

Example:

```
BB:W3GP:TS25141:TCAS TC642
```

selects the settings for test case 6.4.2, Power Control Steps.

```
BB:W3GP:TS25141:WSIG:TRIG:EXT:DEL 14
```

sets a additional propagation delay of 14 chips.

Manual operation: See ["Propagation Delay - Test Case 6.4.2"](#) on page 339

A Reference

Supported channel types

Table 1-1: List of supported channel types and their sequence in the 3GPP FDD channel table

Index	Shortform	Name	Function	Optional Enhanced in BS1
0	P-CPICH	Primary Common Pilot Channel	<ul style="list-style-type: none"> Specifies the scrambling code in the scrambling code group (2nd stage of scrambling code detection) Phase reference for additional downlink channels Reference for the signal strength 	no
1	S-CPICH	Secondary Common Pilot Channel		no
2	P-SCH	Primary Sync Channel	Slot synchronization	no
3	S-SCH	Secondary Sync Channel	<ul style="list-style-type: none"> Frame synchronization Specifies the scrambling code group 	no
4	P-CCPCH	Primary Common Control Phys. Channel	<ul style="list-style-type: none"> Transfers the system frame number (SFN) Timing reference for additional downlink channels Contains the BCH transport channel 	yes
5	S-CCPCH	Secondary Common Control Phys. Channel		no
6	PICH	Page Indication Channel	Transfers the paging indicator	no
7	AICH	Acquisition Indication Channel		no
8	AP-AICH	Access Preamble Acquisition Indication Channel		no
9 / 10	PDSCH	Phys. Downlink Shared Channel		no
	DL-DPCCH	Dedicated Physical Control Channel		
	HS-SCCH	High Speed Shared Control Channel		
	E-AGCH	E-DCH Absolute Grant Channel		
	E-RGCH	E-DCH Relative Grant Channel		
	E-HICH	E-DCH Hybrid ARQ Indicator Channel		
11 - 13	DPCH	Dedicated Phys. Channel	Transfers the user data and the control information	yes
	HS-SCCH	High Speed Shared Control Channel		no
	HS-PDSCH (QPSK)	High Speed Physical Downlink Shared Channel (QPSK)		no

Index	Shortform	Name	Function	Optional Enhanced in BS1
	HS-PDSCH (16 QAM)	High Speed Physical Downlink Shared Channel (16 QAM)		no
	HS-PDSCH (64 QAM)	High Speed Physical Downlink Shared Channel (64 QAM)		no
	HS-PDSCH (MIMO)	High Speed Physical Downlink Shared Channel (MIMO)		no
	E-AGCH	E-DCH Absolute Grant Channel		no
	E-RGCH	E-DCH Relative Grant Channel		no
	E-HICH	E-DCH Hybrid ARQ Indicator Channel		no
	F-DPCH	Fractional Dedicated Phys. Channel		no
14 - 138	DPCH	Dedicated Phys. Channel	Transfers the user data and the control information	no
	HS-SCCH	High Speed Shared Control Channel		
	HS-PDSCH (QPSK)	High Speed Physical Downlink Shared Channel (QPSK)		
	HS-PDSCH (16 QAM)	High Speed Physical Downlink Shared Channel (16 QAM)		
	HS-PDSCH (64 QAM)	High Speed Physical Downlink Shared Channel (64 QAM)		
	HS-PDSCH (MIMO)	High Speed Physical Downlink Shared Channel (MIMO)		
	E-AGCH	E-DCH Absolute Grant Channel		
	E-RGCH	E-DCH Relative Grant Channel		
	E-HICH	E-DCH Hybrid ARQ Indicator Channel		
	F-DPCH	Fractional Dedicated Phys. Channel		

Channel tables of the DPDCH and E-DPDCH

Table 1-2: Structure of the DPDCH channel table in conjunction with the overall symbol rate

Overall Symbol Rate	DPDCH 1	DPDCH 2	DPDCH 3	DPDCH 4	DPDCH 5	DPDCH 6
I or Q branch	I	Q	I	Q	I	Q
15 ksps	State: ON S-Rate: 15k Ch. Code: 64	State: OFF	State: OFF	State: OFF	State: OFF	State: OFF

Overall Symbol Rate	DPDCH 1	DPDCH 2	DPDCH 3	DPDCH 4	DPDCH 5	DPDCH 6
30 ksps	State: ON S-Rate: 30k Ch. Code: 32	State: OFF	State: OFF	State: OFF	State: OFF	State: OFF
60 ksps	State: ON S-Rate: 60k Ch. Code: 16	State: OFF	State: OFF	State: OFF	State: OFF	State: OFF
120 ksps	State: ON S-Rate: 120k Ch. Code: 8	State: OFF	State: OFF	State: OFF	State: OFF	State: OFF
240 ksps	State: ON S-Rate: 240k Ch. Code: 4	State: OFF	State: OFF	State: OFF	State: OFF	State: OFF
480 ksps	State: ON S-Rate: 480k Ch. Code: 2	State: OFF	State: OFF	State: OFF	State: OFF	State: OFF
960 ksps	State: ON S-Rate: 960k Ch. Code: 1	State: OFF	State: OFF	State: OFF	State: OFF	State: OFF
2 x 960 ksps	State: ON S-Rate: 960k Ch. Code: 1	State: ON S-Rate: 960k Ch. Code: 1	State: OFF	State: OFF	State: OFF	State: OFF
3 x 960 ksps	State: ON S-Rate: 960k Ch. Code: 1	State: ON S-Rate: 960k Ch. Code: 1	State: ON S-Rate: 960k Ch. Code: 3	State: OFF	State: OFF	State: OFF
4 x 960 ksps	State: ON S-Rate: 960k Ch. Code: 1	State: ON S-Rate: 960k Ch. Code: 1	State: ON S-Rate: 960k Ch. Code: 3	State: ON S-Rate: 960k Ch. Code: 3	State: OFF	State: OFF

Overall Symbol Rate	DPDCH 1	DPDCH 2	DPDCH 3	DPDCH 4	DPDCH 5	DPDCH 6
5 x 960 kbps	State: ON S-Rate: 960k Ch. Code: 1	State: ON S-Rate: 960k Ch. Code: 1	State: ON S-Rate: 960k Ch. Code: 3	State: ON S-Rate: 960k Ch. Code: 3	State: ON S-Rate: 960k Ch. Code: 2	State: OFF
6 x 960 kbps	State: ON S-Rate: 960k Ch. Code: 1	State: ON S-Rate: 960k Ch. Code: 1	State: ON S-Rate: 960k Ch. Code: 3	State: ON S-Rate: 960k Ch. Code: 3	State: ON S-Rate: 960k Ch. Code: 2	State: ON S-Rate: 960k Ch. Code: 2

Table 1-3: Structure of the E-DPDCH channel table in conjunction with the overall symbol rate and no DPDCH active

Overall Symbol Rate	E-DPDCH 1	E-DPDCH 2	E-DPDCH 3	E-DPDCH 4
I or Q branch	I	Q	I	Q
15 Kbps	State: ON S-Rate: 15 k Ch. Code: 64	State: OFF	State: OFF	State: OFF
30 kbps	State: ON S-Rate: 30 k Ch. Code: 32	State: OFF	State: OFF	State: OFF
60 kbps	State: ON S-Rate: 60 k Ch. Code: 16	State: OFF	State: OFF	State: OFF
120 kbps	State: ON S-Rate: 120 k Ch. Code: 8	State: OFF	State: OFF	State: OFF
240 kbps	State: ON S-Rate: 240 k Ch. Code: 4	State: OFF	State: OFF	State: OFF
480 kbps	State: ON S-Rate: 480 k Ch. Code: 2	State: OFF	State: OFF	State: OFF
960 kbps	State: ON S-Rate: 960 k Ch. Code: 1	State: OFF	State: OFF	State: OFF
2 x 960 kbps	State: ON S-Rate: 960 k Ch. Code: 1	State: ON S-Rate: 960 k Ch. Code: 1	State: OFF	State: OFF

Overall Symbol Rate	E-DPDCH 1	E-DPDCH 2	E-DPDCH 3	E-DPDCH 4
I or Q branch	I	Q	I	Q
2 x 1920 ksps	State: ON S-Rate: 1920 k Ch. Code: 1	State: ON S-Rate: 1920 k Ch. Code: 1	State: OFF	State: OFF
2 x 960 ksps + 2 x 1920 ksps	State: ON S-Rate: 1920 k Ch. Code: 1	State: ON S-Rate: 1920 k Ch. Code: 1	State: ON S-Rate: 960 k Ch. Code: 1	State: ON S-Rate: 960 k Ch. Code: 1
2 x 960 ksps, I only	State: ON S-Rate: 960 k Ch. Code: 1	State: OFF	State: OFF	State: OFF
2 x 960 ksps, Q only	State: OFF	State: ON S-Rate: 960 k Ch. Code: 1	State: OFF	State: OFF
2 x 1920 ksps, I only	State: ON S-Rate: 1920 k Ch. Code: 1	State: OFF	State: OFF	State: OFF
2 x 1920 ksps, Q only	State: OFF	State: ON S-Rate: 1920 k Ch. Code: 1	State: OFF	State: OFF
2 x 960 ksps + 2 x 1920 ksps, I only	State: ON S-Rate: 1920 k Ch. Code: 1	State: OFF	State: ON S-Rate: 960 k Ch. Code: 1	State: OFF
2 x 960 ksps + 2 x 1920 ksps, Q only	State: OFF	State: ON S-Rate: 1920 k Ch. Code: 1	State: OFF	State: ON S-Rate: 960 k Ch. Code: 1

Table 1-4: Structure of the E-DPDCH channel table in conjunction with the overall symbol rate and one DPDCH active

Overall Symbol Rate	E-DPDCH 1	E-DPDCH 2	E-DPDCH 3	E-DPDCH 4
Active HS-DPCCH? I or Q branch	No Q	No I	Yes I	Yes Q
15 ksps	State: ON S-Rate: 15 k Ch. Code: 128	State: OFF	State: ON S-Rate: 15 k Ch. Code: 128	State: OFF
30 ksps	State: ON S-Rate: 30 k Ch. Code: 64	State: OFF	State: ON S-Rate: 30 k Ch. Code: 64	State: OFF

Overall Symbol Rate	E-DPDCH 1	E-DPDCH 2	E-DPDCH 3	E-DPDCH 4
Active HS-DPCCH? I or Q branch	No Q	No I	Yes I	Yes Q
60 ksps	State: ON S-Rate: 60 k Ch. Code: 32	State: OFF	State: ON S-Rate: 60 k Ch. Code: 32	State: OFF
120 ksps	State: ON S-Rate: 120 k Ch. Code: 16	State: OFF	State: ON S-Rate: 120 k Ch. Code: 16	State: OFF
240 ksps	State: ON S-Rate: 240 k Ch. Code: 8	State: OFF	State: ON S-Rate: 240 k Ch. Code: 8	State: OFF
480 ksps	State: ON S-Rate: 480 k Ch. Code: 4	State: OFF	State: ON S-Rate: 480 k Ch. Code: 4	State: OFF
960 ksps	State: ON S-Rate: 960 k Ch. Code: 2	State: OFF	State: ON S-Rate: 960 k Ch. Code: 2	State: OFF
2 x 960 ksps	State: ON S-Rate: 960 k Ch. Code: 2	State: ON S-Rate: 960 k Ch. Code: 2	State: ON S-Rate: 960 k Ch. Code: 2	State: ON S-Rate: 960 k Ch. Code: 2
2 x 1920 ksps	State: ON S-Rate: 1920 k Ch. Code: 1	State: ON S-Rate: 1920 k Ch. Code: 1	State: ON S-Rate: 1920 k Ch. Code: 1	State: ON S-Rate: 1920 k Ch. Code: 1
2 x 960 ksps, I only	State: OFF	State: ON S-Rate: 960 k Ch. Code: 2	State: ON S-Rate: 960 k Ch. Code: 2	State: OFF
2 x 960 ksps, Q only	State: ON S-Rate: 960 k Ch. Code: 2	State: OFF	State: OFF	State: ON S-Rate: 960 k Ch. Code: 2
2 x 1920 ksps, I only	State: OFF	State: ON S-Rate: 1920 k Ch. Code: 1	State: ON S-Rate: 1920 k Ch. Code: 1	State: OFF
2 x 1920 ksps, Q only	State: ON S-Rate: 1920 k Ch. Code: 1	State: OFF	State: OFF	State: ON S-Rate: 1920 k Ch. Code: 1

List of Commands

[SOURce]:BB:W3GPp:GPP3:VERSion?	352
[SOURce]:BB:W3GPp:TS25141:AWGN:CNRatio	544
[SOURce]:BB:W3GPp:TS25141:AWGN:ENRatio	544
[SOURce]:BB:W3GPp:TS25141:AWGN:POWer:NOISe	545
[SOURce]:BB:W3GPp:TS25141:AWGN:RBLoCk:RATE	545
[SOURce]:BB:W3GPp:TS25141:AWGN:RPDeTeCtion:RATE	545
[SOURce]:BB:W3GPp:TS25141:AWGN:STATe	546
[SOURce]:BB:W3GPp:TS25141:BSPClass	546
[SOURce]:BB:W3GPp:TS25141:BSSignal:FREQuency	546
[SOURce]:BB:W3GPp:TS25141:BSSignal:POWer	546
[SOURce]:BB:W3GPp:TS25141:EMODE	547
[SOURce]:BB:W3GPp:TS25141:FSIMulator:STATe	547
[SOURce]:BB:W3GPp:TS25141:IFSignal:BWIDth	547
[SOURce]:BB:W3GPp:TS25141:IFSignal:CNRatio	548
[SOURce]:BB:W3GPp:TS25141:IFSignal:CW:FOFFset	548
[SOURce]:BB:W3GPp:TS25141:IFSignal:CW:POWer	549
[SOURce]:BB:W3GPp:TS25141:IFSignal:CW:STATe	549
[SOURce]:BB:W3GPp:TS25141:IFSignal:FOFFset	550
[SOURce]:BB:W3GPp:TS25141:IFSignal:MODulated:FOFFset	550
[SOURce]:BB:W3GPp:TS25141:IFSignal:MODulated:POWer	550
[SOURce]:BB:W3GPp:TS25141:IFSignal:MODulated:STATe	551
[SOURce]:BB:W3GPp:TS25141:IFSignal:MODulated:TYPE	551
[SOURce]:BB:W3GPp:TS25141:IFSignal:POWer	552
[SOURce]:BB:W3GPp:TS25141:IFSignal:SETTing:TMODeL:BSTation	552
[SOURce]:BB:W3GPp:TS25141:IFSignal:STATe	552
[SOURce]:BB:W3GPp:TS25141:IFSignal:TYPE	553
[SOURce]:BB:W3GPp:TS25141:ROUTe	553
[SOURce]:BB:W3GPp:TS25141:RXDiversity	553
[SOURce]:BB:W3GPp:TS25141:SCODE	554
[SOURce]:BB:W3GPp:TS25141:SCODE:MODE	554
[SOURce]:BB:W3GPp:TS25141:TCASe	554
[SOURce]:BB:W3GPp:TS25141:TCASe:EXECute	555
[SOURce]:BB:W3GPp:TS25141:TRIGger	555
[SOURce]:BB:W3GPp:TS25141:TRIGger:OUTPut	555
[SOURce]:BB:W3GPp:TS25141:WSIGnal:BTYPe	556
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DCRatIo	556
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:SFOrmat	556
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:RDATa	557
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:RDATa:DSELeCt	557
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:RDATa:PATTeRn	558
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:SDATa	558
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:SDATa:DSELeCt	559
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:SDATa:PDSTeps	559
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPCCh:TPC:SDATa:PUSTeps	559
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPDCh:CCODing:TYPE	559
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPDCh:DERRor:BIT:RATE	560
[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPDCh:DERRor:BLock:RATE	560

[SOURce]:BB:W3GPp:TS25141:WSIGnal:DPDCh:ORATe.....	560
[SOURce]:BB:W3GPp:TS25141:WSIGnal:FREQuency.....	561
[SOURce]:BB:W3GPp:TS25141:WSIGnal:OBANd.....	561
[SOURce]:BB:W3GPp:TS25141:WSIGnal:PCPCh:CCODing:TYPE.....	561
[SOURce]:BB:W3GPp:TS25141:WSIGnal:POWer.....	562
[SOURce]:BB:W3GPp:TS25141:WSIGnal:PRACH:CCODing:TYPE.....	562
[SOURce]:BB:W3GPp:TS25141:WSIGnal:STATe.....	562
[SOURce]:BB:W3GPp:TS25141:WSIGnal:TRIGger[:EXTernal]:DELay.....	563
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel:DPCH:CCODing:USER:CATalog?.....	429
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel:DPCH:CCODing:USER:DELeTe.....	425
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:BPFRame?.....	425
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:SFOrmAt.....	426
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:SRATe?.....	426
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:STATe.....	427
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:TYPE.....	427
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:USER:LOAD.....	429
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:CCODing:USER:STORe.....	429
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:BIT:LAYer.....	440
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:BIT:RATE.....	440
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:BIT:STATe.....	441
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:BLOCk:RATE.....	441
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DERRor:BLOCk:STATe.....	442
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DPControl:CONNeCtor.....	437
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DPControl:DIReCtion.....	437
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DPControl:MODE.....	438
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DPControl:RANGe:DOWN.....	438
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DPControl:STATe.....	438
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DPControl:STEP:MANual.....	439
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DPControl:STEP[:EXTernal].....	439
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:DPControl[:POWer]?.....	439
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:INTerleaver2.....	430
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:STATe.....	423
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:CRCSize.....	430
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:DATA.....	431
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:DATA: DSElect.....	431
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:DATA: PATtern.....	432
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:DTX.....	432
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:EPROtection.....	432
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:INTerleaver.....	433
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:RMATtribute.....	433
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:STATe.....	434
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:TBCount.....	434
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:TBSize.....	434
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:CHANnel<ch0>:DPCH:TCHannel<di0>:TTINterval.....	435
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:PCCPch:CCODing:INTerleaver<di>.....	435
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:PCCPch:CCODing:STATe.....	435
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:PCCPch:CCODing:TYPE?.....	435
[SOURce<hw>]:BB:W3GPp:BSTation:ENHanced:PCCPch:STATe.....	424

[SOURce<hw>]:BB:W3GPp:BSTation:OCNS:MODE.....	376
[SOURce<hw>]:BB:W3GPp:BSTation:OCNS:SEED.....	376
[SOURce<hw>]:BB:W3GPp:BSTation:OCNS:STATE.....	375
[SOURce<hw>]:BB:W3GPp:BSTation:PRESet.....	352
[SOURce<hw>]:BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:DERRor:BIT:LAYer.....	442
[SOURce<hw>]:BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:DERRor:BIT:RATE.....	442
[SOURce<hw>]:BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:DERRor:BIT:STATE.....	443
[SOURce<hw>]:BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:DERRor:BLOCK:RATE.....	443
[SOURce<hw>]:BB:W3GPp:BSTation[:ENHanced]:CHANnel<ch0>:HSDPa:DERRor:BLOCK:STATE.....	443
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel:HSDPa:HSET:PRESet.....	376
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel:PRESet.....	377
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:AICH:ASLOt.....	377
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:AICH:SAPattern.....	377
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:APAIch:ASLOt.....	378
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:APAIch:SAPattern.....	378
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:CCODE.....	378
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DATA.....	379
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DATA:DSElect.....	380
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DATA:PATtern.....	380
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:MCODE.....	380
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:PLENgtH.....	381
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:POFFset:PILot.....	381
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:POFFset:TFCl.....	382
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:POFFset:TPC.....	382
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TFCl.....	382
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TFCl:STATE.....	383
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:DATA.....	383
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:DATA:DSElect.....	384
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:DATA:PATtern.....	384
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:MISuse.....	384
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:PSTep.....	385
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:DPCCh:TPC:READ.....	385
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCCh:TPC:DATA.....	386
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCCh:TPC:DATA:DSElect.....	387
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCCh:TPC:DATA:PATtern.....	387
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCCh:TPC:MISuse.....	388
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCCh:TPC:PSTep.....	388
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:FDPCh:DPCCh:TPC:READ.....	388
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:BMODE[:STATE].....	389
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:CVPB.....	389
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:ACLength.....	390
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:ALTModulation.....	391
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:AMODE.....	390
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:BCBTti<di>?.....	391
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:BPAYload<di>?.....	391
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:CLENgtH.....	392
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:CRATE<di>?.....	392
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:DATA.....	393
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:DATA:DSElect.....	393
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:DATA:PATtern.....	394

[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:HARQ:LENGth.....	394
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:HARQ:MODE.....	395
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:HSCCode.....	395
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:MODulation<di>.....	395
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:NAIBitrate?.....	396
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:PREDeFined.....	396
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:PWPatterN.....	397
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:RVParameter<di>.....	397
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:RVPSequenCe<di>.....	397
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:RVSTate.....	398
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:S64Qam.....	399
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:SCCode.....	399
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:SEED.....	399
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:SENGth:ADJust.....	400
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:SENGth?.....	400
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:SPATtern<di>?.....	401
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:STAPatterN.....	401
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:TBS:INDeX<di>.....	402
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:TBS:REFeRence.....	403
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:TBS:TABLe<di>.....	403
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:TPOWer.....	402
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:TYPE.....	404
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:UECategory?.....	404
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:UEID.....	405
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:HSET:VIBSize<di>.....	405
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:MIMO:CVPB<di>.....	405
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:MIMO:MODulation<di>.....	406
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:MIMO:PWPatterN.....	406
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:MIMO:STAPatterN.....	406
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:MODE.....	407
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:HSDPa:TTIDistance.....	407
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:POWer.....	408
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:SFORmat.....	408
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:SRATe.....	408
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:STATe.....	409
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:TOFFset.....	409
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>:TYPE.....	409
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EAGCh:IFCoding.....	410
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EAGCh:TTI<di0>:AGSCope.....	411
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EAGCh:TTI<di0>:AGVIndex.....	411
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EAGCh:TTI<di0>:UEID.....	411
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EAGCh:TTICount.....	411
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EAGCh:TTIEdch.....	412
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:CTYPE.....	412
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:DTAU.....	413
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:ETAU?.....	413
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:RGPAterN.....	413
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:SSIndex.....	414
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:EHICH:TTIEdch.....	414
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:CTYPE.....	414

[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:DTAU.....	415
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:ETAU?.....	415
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:RGPattern.....	415
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:SSIndex.....	415
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CHANnel<ch0>[:HSUPa]:ERGCh:TTIEdch.....	416
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CMODE:DLFStructure.....	416
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CMODE:METHod.....	416
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CMODE:PATtern<ch>:TGD.....	417
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CMODE:PATtern<ch>:TGL<di>.....	417
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CMODE:PATtern<ch>:TGPL.....	417
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CMODE:PATtern<ch>:TGSN.....	418
[SOURce<hw>]:BB:W3GPp:BSTation<st>:CMODE:STATe.....	419
[SOURce<hw>]:BB:W3GPp:BSTation<st>:DCONflict:RESolve.....	419
[SOURce<hw>]:BB:W3GPp:BSTation<st>:DCONflict[:STATe]?.....	420
[SOURce<hw>]:BB:W3GPp:BSTation<st>:ENHanced:CHANnel<ch0>:DPCH:DPControl:RANGe:UP.....	438
[SOURce<hw>]:BB:W3GPp:BSTation<st>:ENHanced:PCPich:PATtern.....	424
[SOURce<hw>]:BB:W3GPp:BSTation<st>:OLT Diversity.....	420
[SOURce<hw>]:BB:W3GPp:BSTation<st>:PINdicator:COUNT.....	420
[SOURce<hw>]:BB:W3GPp:BSTation<st>:SCODE.....	421
[SOURce<hw>]:BB:W3GPp:BSTation<st>:SCODE:STATe.....	421
[SOURce<hw>]:BB:W3GPp:BSTation<st>:SCPich:PREference[:STATe].....	421
[SOURce<hw>]:BB:W3GPp:BSTation<st>:SSCG?.....	421
[SOURce<hw>]:BB:W3GPp:BSTation<st>:STATe.....	422
[SOURce<hw>]:BB:W3GPp:BSTation<st>:TDElay.....	422
[SOURce<hw>]:BB:W3GPp:BSTation<st>:TDiversity.....	422
[SOURce<hw>]:BB:W3GPp:BSTation<st> MSTation<st>:CMODE:POFFset.....	418
[SOURce<hw>]:BB:W3GPp:BSTation<st> MSTation<st>:CMODE:POMode.....	418
[SOURce<hw>]:BB:W3GPp:CLIPping:LEVel.....	355
[SOURce<hw>]:BB:W3GPp:CLIPping:MODE.....	356
[SOURce<hw>]:BB:W3GPp:CLIPping:STATe.....	356
[SOURce<hw>]:BB:W3GPp:CLOCK:MODE.....	369
[SOURce<hw>]:BB:W3GPp:CLOCK:MULTIplier.....	369
[SOURce<hw>]:BB:W3GPp:CLOCK:SOURce.....	370
[SOURce<hw>]:BB:W3GPp:COPY:COFFset.....	352
[SOURce<hw>]:BB:W3GPp:COPY:DESTination.....	353
[SOURce<hw>]:BB:W3GPp:COPY:EXECute.....	353
[SOURce<hw>]:BB:W3GPp:COPY:SOURce.....	354
[SOURce<hw>]:BB:W3GPp:CRATe:VARiation.....	357
[SOURce<hw>]:BB:W3GPp:CRATe?.....	356
[SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:APCO25.....	357
[SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:COSSine.....	357
[SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:GAUSSs.....	358
[SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:LPASSs.....	358
[SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:LPASSEVM.....	358
[SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:RCOSine.....	358
[SOURce<hw>]:BB:W3GPp:FILTer:PARAmeter:SPHase.....	359
[SOURce<hw>]:BB:W3GPp:FILTer:TYPE.....	359
[SOURce<hw>]:BB:W3GPp:LINK.....	354
[SOURce<hw>]:BB:W3GPp:LREFerence.....	449
[SOURce<hw>]:BB:W3GPp:MSTation:ADDITIONal:COUNT.....	444

[SOURce<hw>]:BB:W3GPp:MSTation:ADDITIONal:POWer:OFFSet.....	445
[SOURce<hw>]:BB:W3GPp:MSTation:ADDITIONal:SCODE:STEP.....	445
[SOURce<hw>]:BB:W3GPp:MSTation:ADDITIONal:STATE.....	446
[SOURce<hw>]:BB:W3GPp:MSTation:ADDITIONal:TDElay:STEP.....	446
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:BPFRame?.....	530
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:STATE.....	531
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:TYPE.....	531
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:CATalog?.....	532
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:DElete.....	533
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:LOAD.....	533
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:CCODing:USER:STORE.....	533
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BIT:LAYer.....	534
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BIT:RATE.....	534
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BIT:STATE.....	535
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor:BLOCK:RATE.....	535
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:DERRor[BLOCK]:STATE.....	535
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:INTERleaver2.....	536
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:ORATe.....	536
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:STATE.....	536
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:CRCSize.....	538
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:DATA.....	538
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:DATA:DSElect.....	539
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:DATA:PATTern.....	540
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:EPRotection.....	540
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:INTERleaver.....	540
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:RMATtribute.....	537
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:STATE.....	537
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:TBCount.....	537
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:TBSize.....	538
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:DPDCh:TCHannel<di0>:TTInterval.....	538
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:PCPCh:CCODing:STATE.....	541
[SOURce<hw>]:BB:W3GPp:MSTation:ENHanced:PCPCh:CCODing:TYPE.....	541
[SOURce<hw>]:BB:W3GPp:MSTation:PRESet.....	446
[SOURce<hw>]:BB:W3GPp:MSTation:UDTX:BURST<ch>.....	523
[SOURce<hw>]:BB:W3GPp:MSTation:UDTX:CYCLE<ch>.....	523
[SOURce<hw>]:BB:W3GPp:MSTation:UDTX:ITHReshold.....	522
[SOURce<hw>]:BB:W3GPp:MSTation:UDTX:LPLength.....	522
[SOURce<hw>]:BB:W3GPp:MSTation:UDTX:MODE.....	521
[SOURce<hw>]:BB:W3GPp:MSTation:UDTX:OFFSet.....	522
[SOURce<hw>]:BB:W3GPp:MSTation:UDTX:POSTamble<ch>?.....	524
[SOURce<hw>]:BB:W3GPp:MSTation:UDTX:PREamble<ch>?.....	523
[SOURce<hw>]:BB:W3GPp:MSTation:UDTX:STATE.....	521
[SOURce<hw>]:BB:W3GPp:MSTation:UDTX:TTIEdch.....	521
[SOURce<hw>]:BB:W3GPp:MSTation:UDTX:USCH:CATalog?.....	524
[SOURce<hw>]:BB:W3GPp:MSTation:UDTX:USCH:DElete.....	524
[SOURce<hw>]:BB:W3GPp:MSTation:UDTX:USCH:FSElect.....	525
[SOURce<hw>]:BB:W3GPp:MSTation[ENHanced:DPDCh]:DPCControl:AOUe.....	529
[SOURce<hw>]:BB:W3GPp:MSTation[ENHanced:DPDCh]:DPCControl:ASSignment.....	526
[SOURce<hw>]:BB:W3GPp:MSTation[ENHanced:DPDCh]:DPCControl:CONNector.....	527
[SOURce<hw>]:BB:W3GPp:MSTation[ENHanced:DPDCh]:DPCControl:DIRection.....	526

[SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:MODE.....	527
[SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:RANGe:DOWN.....	528
[SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:RANGe:UP.....	528
[SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:STATe.....	528
[SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:STEP:MANual.....	528
[SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl:STEP[:EXTernal].....	529
[SOURce<hw>]:BB:W3GPp:MSTation[:ENHanced:DPDCh]:DPControl[:POWER]?	527
[SOURce<hw>]:BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:CCODE?	476
[SOURce<hw>]:BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:DATA.....	476
[SOURce<hw>]:BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:DATA:DSElect.....	477
[SOURce<hw>]:BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:DATA:PATtern.....	477
[SOURce<hw>]:BB:W3GPp:MSTation<st>:CHANnel<ch>:DPDCh:SRATe?	478
[SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:METHod.....	449
[SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:PATtern<ch>:TGD.....	449
[SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:PATtern<ch>:TGL<di>.....	450
[SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:PATtern<ch>:TGPL.....	450
[SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:PATtern<ch>:TGSN.....	450
[SOURce<hw>]:BB:W3GPp:MSTation<st>:CMODE:STATe.....	451
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:CCODE?	451
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:FBI:MODE.....	452
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:FBI:PATtern.....	452
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:CCODE?	459
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:COMPAtibility.....	458
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:CQI:PLENgtH.....	461
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:CQI<ch>[:VALues].....	462
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:HACK:REPeat.....	475
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:HACK:ROWS.....	470
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:HAPATtern.....	461
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:POAAck.....	462
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:POANack.....	463
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:POCA.....	465
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:PONAck.....	464
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:PONNack.....	464
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:TTI<ch0>:CQI<di>.....	467
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:TTI<ch0>:CQIType.....	466
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:TTI<ch0>:HACK.....	466
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:TTI<ch0>:PCI.....	466
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO:TTICount.....	465
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MIMO[:MODE].....	462
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:MMODE.....	469
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:PCQI:REPeat.....	475
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:PCQI:ROWS.....	470
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:POAck.....	460
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:PONAck.....	460
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:POWER.....	458
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:HACK:FROM.....	471
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:HACK:TO.....	471
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:HACK<di>.....	471
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI:FROM.....	473
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI:TO.....	473

[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI<di>:CQI<us>.....	474
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI<di>:PCI.....	474
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:PCQI<di>:TYPE.....	473
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:POHAck.....	472
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:ROW<ch0>:POPCqi.....	474
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SC:ACTive.....	470
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SC:ENABled.....	470
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SDElay.....	459
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SFORMat?.....	469
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SLENgth:ADJust.....	476
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:SLENgth?.....	475
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:STATe.....	458
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:HS:TTIDistance.....	459
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:POWEr.....	452
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:SFORMat.....	453
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TFCI.....	453
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TFCI:STATe.....	453
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TOFFset.....	454
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:DATA.....	454
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:DATA:DSElect.....	455
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:DATA:PATtern.....	455
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:MISuse.....	455
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:MODE.....	456
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:PSTep.....	456
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPCCh:TPC:READ.....	457
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPDCh:FCIO.....	478
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPDCh:ORAtE.....	478
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPDCh:POWEr.....	479
[SOURce<hw>]:BB:W3GPp:MSTation<st>:DPDCh:STATe.....	479
[SOURce<hw>]:BB:W3GPp:MSTation<st>:ENHanced:PRACH:CCODing:STATe.....	541
[SOURce<hw>]:BB:W3GPp:MSTation<st>:ENHanced:PRACH:CCODing:TYPE.....	542
[SOURce<hw>]:BB:W3GPp:MSTation<st>:MODE.....	446
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:CPOWEr.....	480
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:CPSFormat.....	480
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:DATA.....	481
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:DATA:DSElect.....	481
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:DATA:PATtern.....	482
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:DPOWEr.....	482
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:FBI:MODE.....	482
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:FBI:PATtern.....	483
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:MLENgth.....	483
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:PLENgth.....	483
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:PPOWEr.....	484
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:PPOWEr:STEP.....	484
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:PREPetition.....	484
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:RAFTer.....	485
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:RARb.....	485
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:SIGNature.....	486
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:SRATe.....	486
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TFCI.....	486

[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:DPOWer:MPARt?	486
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:DPOWer:PREamble?	487
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:SOFFset	487
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:SPERiod?	488
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:TIME:PREMp	488
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TIMing:TIME:PREPre	488
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TPC:DATA	489
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TPC:DATA:DSElect	489
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TPC:DATA:PATtern	490
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PCPCh:TPC:READ	490
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:ATTiming	491
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:CPOWer	491
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:DATA	492
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:DATA:DSElect	492
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:DATA:PATtern	493
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:DPOWer	493
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:MLENgt	493
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:PPOWer	493
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:PPOWer:STEP	494
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:PREPetition	494
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:RAFTer	494
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:RARb	495
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:SFORMat	495
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:SIGNature	496
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:SRATe	496
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TFCI	496
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:DPOWer:MPARt:CONTRol?	497
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:DPOWer:MPARt:DATA?	497
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:DPOWer:MPARt?	497
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:DPOWer:PREamble?	498
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:SOFFset	498
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:SPERiod?	498
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:TIME:PREMp	499
[SOURce<hw>]:BB:W3GPp:MSTation<st>:PRACH:TIMing:TIME:PREPre	499
[SOURce<hw>]:BB:W3GPp:MSTation<st>:SCODE	447
[SOURce<hw>]:BB:W3GPp:MSTation<st>:SCODE:MODE	448
[SOURce<hw>]:BB:W3GPp:MSTation<st>:STATE	448
[SOURce<hw>]:BB:W3GPp:MSTation<st>:TDELay	448
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:CCODE?	501
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:DATA	501
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:DATA:DSElect	502
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:DATA:PATtern	503
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:POWer	503
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:CHANnel<ch>:DPDCh:E:SRATe?	503
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:CCODE?	515
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:CHANnel	504
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:CRATe?	504
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DATA	504
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DATA:DSElect	505
[SOURce<hw>]:BB:W3GPp:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DATA:PATtern	506

[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DERRor:BIT:LAYer.....	506
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DERRor:BIT:RATE.....	506
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DERRor:BIT:STATe.....	506
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DERRor:BLOCK:RATE.....	507
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DERRor:BLOCK:STATe.....	507
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DTX:PATtern.....	507
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:DTX:STATe.....	508
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:SIMulation:ADEFinition.....	508
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:SIMulation:CONNector.....	508
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:SIMulation:DELAy:AUSer.....	509
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:SIMulation:DELAy: FEEDback?.....	509
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:SIMulation:MODE.....	509
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:SIMulation: MRETranmissions.....	510
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:SIMulation:RVZero.....	510
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ:SIMulation[:STATe].....	511
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HARQ[:SIMulation]:PATtern<ch>...	511
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:HPROcesses?.....	511
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:MIBRate?.....	511
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:MODulation.....	512
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:ORATe.....	512
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:PAYBits?.....	512
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:STATe.....	513
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:TBS:INDex.....	513
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:TBS:TABLE.....	513
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:TTIBits?.....	514
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:TTIEdch.....	515
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:FRC:UECategory?.....	515
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:HBIT.....	515
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:POWer.....	516
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:RSNumber.....	516
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:STATe.....	516
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPCCh:E:TFCI.....	516
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPDCh:E:FCIO.....	517
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPDCh:E:MODulation.....	517
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPDCh:E:ORATe.....	517
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPDCh:E:STATe.....	518
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:DPDCh:E:TTIEdch.....	518
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:EDCH:REPeat.....	519
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:EDCH:ROW<ch0>:FROM.....	519
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:EDCH:ROW<ch0>:TO.....	519
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:EDCH:ROWCount.....	519
[SOURce<hw>]:BB:W3GPP:MSTation<st>[:HSUPa]:EDCH:TTIEdch.....	518
[SOURce<hw>]:BB:W3GPP:POWer:ADJust.....	354
[SOURce<hw>]:BB:W3GPP:POWer[:TOTAl]?.....	355
[SOURce<hw>]:BB:W3GPP:PPARameter:CRESt.....	371
[SOURce<hw>]:BB:W3GPP:PPARameter:DPCH:COUNt.....	372
[SOURce<hw>]:BB:W3GPP:PPARameter:DPCH:SRATe.....	372
[SOURce<hw>]:BB:W3GPP:PPARameter:EXECute.....	372

[SOURce<hw>]:BB:W3GPp:PPARameter:SCCPch:SRATe.....	372
[SOURce<hw>]:BB:W3GPp:PPARameter:SCCPch:STATe.....	373
[SOURce<hw>]:BB:W3GPp:PPARameter:SCHannels.....	373
[SOURce<hw>]:BB:W3GPp:PRESet.....	349
[SOURce<hw>]:BB:W3GPp:SETTing:CATalog?.....	350
[SOURce<hw>]:BB:W3GPp:SETTing:DELeTe.....	350
[SOURce<hw>]:BB:W3GPp:SETTing:LOAD.....	350
[SOURce<hw>]:BB:W3GPp:SETTing:STORe.....	351
[SOURce<hw>]:BB:W3GPp:SETTing:TMODeL:BSTation.....	373
[SOURce<hw>]:BB:W3GPp:SETTing:TMODeL:BSTation:CATalog?.....	374
[SOURce<hw>]:BB:W3GPp:SETTing:TMODeL:MSTation.....	374
[SOURce<hw>]:BB:W3GPp:SETTing:TMODeL:MSTation:CATalog?.....	375
[SOURce<hw>]:BB:W3GPp:SLENgth.....	351
[SOURce<hw>]:BB:W3GPp:STATe.....	351
[SOURce<hw>]:BB:W3GPp:TRIGger:ARM:EXECute.....	360
[SOURce<hw>]:BB:W3GPp:TRIGger:EXECute.....	360
[SOURce<hw>]:BB:W3GPp:TRIGger:EXTeRnal:SYNChronize:OUTPut.....	360
[SOURce<hw>]:BB:W3GPp:TRIGger:OBASeband:DELay.....	361
[SOURce<hw>]:BB:W3GPp:TRIGger:OBASeband:INHibit.....	361
[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut:DELay:FIXed.....	366
[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:DELay.....	366
[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:DELay:MAXimum?.....	367
[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:DELay:MINimum?.....	367
[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:MODE.....	368
[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:OFFTime.....	368
[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:ONTime.....	368
[SOURce<hw>]:BB:W3GPp:TRIGger:OUTPut<ch>:PERiod.....	369
[SOURce<hw>]:BB:W3GPp:TRIGger:RMODE?.....	362
[SOURce<hw>]:BB:W3GPp:TRIGger:SLENgth.....	362
[SOURce<hw>]:BB:W3GPp:TRIGger:SLUNit.....	363
[SOURce<hw>]:BB:W3GPp:TRIGger:SOURce.....	363
[SOURce<hw>]:BB:W3GPp:TRIGger[:EXTeRnal]:DELay.....	364
[SOURce<hw>]:BB:W3GPp:TRIGger[:EXTeRnal]:INHibit.....	365
[SOURce<hw>]:BB:W3GPp:WAVeform:CREate.....	352
[SOURce<hw>]:BB:W3GPp[:TRIGger]:SEQuence.....	365

Index

Symbols

(Mis-) use TPC for output power control

DPCCH	143, 178, 384, 455
F-DPCCH	388
2nd Search Code Group	80, 421
3GPP Version	56, 352
3i OCNS mode	30
4C-HSDPA Mode	193
4C-HSPDA	
Reference Measurement Channel	269
8C-HSDPA Mode	193

A

Absolute Grant Scope	147
Absolute Grant Value Index	147
Accept	
Multi channel assistant	157
Predefined Settings	77
Accept copy	353
Access Slot	139
ACK Definition (HARQ)	
HSUPA FRC	217, 508
ACK Pattern	
AICH/AP-AICH	138
AP-AICH	378
HSUPA	149
Add OCNS	375
Additional UE	78
Additional User Delay	
HSUPA FRC	218, 509
Adjust	
HSDPA	105
Adjust ARB Sequence Length	
HS-DPCCH	198, 200
Adjust total power to 0 dB	69
Adjust Total Power to 0 dB	354
Advanced Mode	
HSDPA	104, 390
AICH Settings	138
AICH Transmission Timing	
PCPCH	249, 488
PRACH	491, 499
Alternate HS-PDSCH Modulation	119
Alternate Number of HS-PDSCH Channelization Codes	119
Always Use Redundancy Version 0 (HARQ)	
HSUPA FRC	216, 217, 510
AP-AICH Settings	138
Apply	284
ARB Sequence Length	
PCPCH	250
PRACH	240
Repeat structure after	240, 250
ARB Settings	56
Arm Trigger	59, 360
Armed_Auto	58, 365
Armed_Retrigger	58, 365
Assignment Mode for UL-DTX	169
At Slot	96
Auto	58, 365
AWGN C/N	292, 325, 332
AWGN E/N	313

AWGN Power Level	292, 312, 325, 331
AWGN State	292, 312, 325

B

Base station default values	67, 352
Base station identification	80
Baseband A Signal Routing	282
Baseband C/D	
Disabled realtime functions	53
Baseband filter	258
Binary Channel Bits per TTI	112, 391
Binary Channel Bits/TTI (Nbin)	
HSUPA FRC	514
Bit Error Rate	309, 322
Enhanced DPCHs	131
Enhanced DPDCH UE1	234
HSDPA H-Set	117
HSUPA FRC	219
Bit Error State	218
Enhanced DPCHs	131, 441
Enhanced DPDCH	535
Enhanced DPDCH UE1	234
HSDPA H-Set	116, 443
HSUPA FRC	506
Bits per Frame	
DPDCH	127, 230, 530
Block Error Rate	310, 322
Enhanced DPCHs	132
Enhanced DPDCH UE1	235
HSDPA H-Set	117, 443
HSUPA FRC	219
Block Error State	
Enhanced DPCHs	132, 442
Enhanced DPDCH	535
Enhanced DPDCH UE1	234
HSDPA H-Set	117, 443
HSUPA FRC	219, 507
Blocking Scenario	297
BS frequency	344
BS power	344
Burst Mode	99, 103
HSDPA	389
BxT	258, 357

C

Channel Coding	
UE1	229
Channel Coding State	
Enhanced P-CCPCH	435
UE1	531
Channel Coding Type	
Enhanced P-CCPCH	122
P-CCPCH	435
Channel Graph	89
Channel Number	84
DPDCH	182
E-DPDCH	222
Channel P-CCPCH	121
Channel power	
Multi channel assistant	155

Channel Power	86	Control Power	
DPDCH	180, 479	PCPCH	253, 480
HS-DPCCH	458	PRACH	242, 491
Channel state		Conventions	
Multi channel assistant	157	SCPI commands	348
Channel State	88	Convolution Coder	
BS	409	BS1	130
Channel table		UE1	233, 540
DPCCH	173	Convolution Coder - BS1	432
DPDCH	179, 182, 565	Copy	
E-DCH	223	Base Station	68, 353
E-DPDCH	219	from Source	68
Channel Table		User Equipment	68, 353
E-DPDCH	221, 567, 568	Copy from Source	354
Channel type		Copying the data of a base or user equipment	353
Multi channel assistant	155	Coupled trigger settings	57
Channel Type	84	CQI	
DPDCH	182	HS-DPCCH	198, 205
E-DPDCH	222	CQI Length	
Channelization code		HS-DPCCH	201
Multi channel assistant	155	CQI Type	466
Channelization Code	86	HS-DPCCH	197, 205
DPCCH	174	CQI Values	
DPDCH	182, 476	HS-DPCCH	201
E-DPCCH	207	CQI1	
E-DPDCH	222	HS-DPCCH	198, 205
HS-DPCCH	189	CQI2	
Channelization code HS-SCCH (SF128)	109	HS-DPCCH	198, 205
Channelization Code Offset	68	CQIs	
Channelization code step		HS-DPCCH	198, 205
Multi channel assistant	155	Crest factor	77
Chip Clock Multiplier	65	Clipping	355
Chip Rate	56, 356	Crest factor - timing offset	87
Chip Rate Variation	258	Crest factor - Clipping	259
Clipping Level	260, 355	Current ARB Sequence Length	105, 475
Clipping Mode	260, 356	HS-DPCCH	198
Clipping Settings	56	Current Range without Recalculation	63, 367
Clock Mode	65	Cut Off Frequency Factor	258
Clock Source	65	CW Frequency Offset	306
Code Domain Conflict	88, 89, 161	CW Interferer Level	307
Code Domain Graph		CW Interferer State	306
UE	161		
Code Domain ideal display	89, 161	D	
Code tree of channelization codes	89	Data	
Coding Rate	112, 392	BS	86, 379
Coding Rate (Nin/Nbin)		Data Config	87
HSUPA FRC	213	Data Power	
Coding Rate (Nint/Nbin)		PCPCH	252, 482
HSUPA FRC	504	PRACH	242, 493
Coding State		Data rate matching	
PCPCH	256, 541	BS1	129
PRACH	244, 541	UE1	233
Coding Type	126, 427	Data source	25
Enhanced DPDCH UE1	229	DPCCH	142, 177
PCPCH	256, 541	DPDCH	183
PRACH	244, 542	E-DPDCH	222
Coding Type Enhanced		F-DPCCH	151
DPDCH	531	HSUPA FRC	210
Common trigger settings	57	Multi channel assistant	156
Compatibility Mode		PCPCH	254
HS-DPCCH	188, 458	PRACH	243
Composite CQI		Transport channel	128, 231
HS-DPCCH	198	Data Source	
Compressed Mode		DPDCH	476
BS	419	E-DCH	504
Constellation Version Parameter b	100, 101, 405	E-DPDCH	501

HS-PDSCH	108
PCPCH	481
PRACH	492
Transport Channel	431
DC-HSDPA Mode	193
DCCH Dedicated Control Channel	124
DCCH On	
Enhanced DPCH	434
DCCH On Enhanced DPCH	128
DCCH-Dedicated Control Channel	227
Default settings	55, 67, 352
All channels	84
BS	377
Channel label	84
HSDPA H-Set	84
Default Values User Equipment	67
Delay	
Marker	63
Trigger	61
Delay Between HARQ And Feedback (HARQ)	
HSUPA FRC	217, 509
Direction	437
Dynamic Power Control	135, 168
Distance	96
Diversity	80, 282
BS	422
DL Frame Structure	94, 416
DL-UL Timing Offset	
DPCCH	175
Do Conf	
see Domain Conflict	88
Documentation overview	14
Down Range	169
Dynamic Power Control	136
Downlink	56
DPCCH + DPDCH	159, 446
DPCCH Burst Length	166
DPCCH Settings	139
DTCH Dedicated Traffic Channel	124
DTCH On	
Enhanced DPCH	434
DTCH On Enhanced DPCH	128
DTCH-Dedicated Traffic Channel	227
DTX Cycle	
UL-DTX	166
DTX Indication Bits	432
BS1	130
Dynamic Power Control	160, 168
DL	134
Down Range	438, 528
Manual Step	439, 528
Power Step	439
Step	529
UE1	528
Up Range	438, 528
Dynamic Power Control Direction	135, 168, 526
BS1	437
Dynamic Power Control Mode	135, 168
Dynamic range	
Dynamic Power Control	136, 169, 528

E

E-AGCH Information Filed Coding	146
E-AGCH Settings	146
E-DCH TTI	146, 148, 225, 416
HSUPA FRC	211, 515

E-HICH Settings	148
E-RGCH Settings	148
Edit Mode	281
Enhanced Channels Coding	427
Enhanced DPCHs	423
Enhanced P-CPICH Pattern	120, 424
Enhanced Settings	
BS	85
P-CCPCH	120
P-CPICH	119
Error Protection	
BS1	130
UE1	233, 540
Error Protection - BS1	432
Execute Trigger	360
External control signal	
Connector	135, 168
External Power Control	168, 528
BS1	134
External Trigger Delay	61

F

F-DPCH Settings	150
Fading State	314, 316, 328
FBI Mode	
DPCCH	177, 452
PCPCH	253, 482
FBI Pattern	
DPCCH	177
PCPCH	253
Filter Parameter	258, 357
Filter Type	258
Filtering Settings	56
Filtering, Clipping, ARB Settings	257
Fix marker delay to current range	63, 366
Fixed Marker Delay Maximum	367
Fixed Reference Channel	209, 504
Fixed Reference Channel (FRC)	
HSUPA	504
HSUPA FRC	209
Force Channelization Code to I/Q	478
E-DPDCH	517
Force Channelization Code to I/Q	181
E-DPDCH	220
FRC	209, 504
Frequency Offset	294, 298, 345

G

Gap Distance	
BS	96
Gap Length	96
Generate Waveform	55
Getting started	14

H

H-Set	103
Happy Bit	
E-DPCCH	207, 515
HARQ feedback	
connectors	217
HARQ Simulation Pattern	
HSUPA FRC	511
HARQ-ACK	
HS-DPCCH	194, 205, 466

HARQ-ACK Pattern	
HS-DPCCH	201, 461
HSUPA FRC	216
Higher layer scheduling	94, 416
UE	449
HS-DPCCH Power	186
HS-PDSCH Modulation	111
HS-SCCH Type	105, 404
HSDPA H-Set settings	102
HSDPA Mode	99, 102
BS	407
HSDPA Settings	
BS	98
HSUPA FRC	207
HSUPA settings	146, 148

I

Inactivity Threshold	165
Information Bit Payload	112, 391
Information Bit Payload (Ninf)	
HSUPA FRC	213, 512
Insert Errors On	117
Enhanced DPCHs	131, 440
Enhanced DPDCH	534
Enhanced DPDCH UE1	234
HSDPA H-Set	442
HSUPA FRC	219, 506
Installation	19
Inter TTI Distance	99, 113
HS-DPCCH	189
HSDPA	407
Interferer Bandwidth Type	306
Interferer Frequency Offset	294, 298, 345
Interferer Level	298
Interferer Level / Wanted Signal Level	345
Interferer Modulation	294, 298, 307
Interferer Signal State	294, 298, 345
Interleaver	
P-CCPCH	435
Interleaver P-CCPCH	122

L

Layer	
Bit error insertion	131, 234
Layer - Bit error insertion	117
Level reference	
see Power reference	70
Link Direction	56, 354
Long Preamble Length	166
Long Scrambling Code	160
UE	448

M

Manual Trigger	360
Marker Configuration	282
Marker Delay	63
Maximum Information Bitrate/kbps	
HSUPA FRC	209
Maximum Number Of Retransmissions (HARQ)	
HSUPA FRC	217, 510
Measured external clock	65
Message Length	
PCPCH	253, 483
PRACH	243, 493

Method for compressed mode	94
BS	94, 416
UE	449
MIMO	80
BS	422
MIMO Mode	
HS-DPCCH	192, 202, 462, 469
Rel 8	469
Mod Frequency Offset	306
Mod Interferer Level	307
Mod Interferer State	306
Mode	
Dynamic Power Control	135, 168
HARQ Simulation	395
UE	159, 446
Mode (HARQ Simulation)	115
Mode (HARQ)	
HSUPA FRC	216, 509
Modulation	
BS	101, 395, 406
E-DPDCH	221, 517
HSUPA FRC	211, 512
Modulation data	
BS	86, 379
Multi Channel Assistant	154
Multicode State	
DPCCH	141, 380
Multiplier	65

N

Nominal Average Information Bitrate	105
Number of additional UE	78, 444
Number of configurable TTIs	147
Number of DPCH	
Predefined Settings	76
Number of H-PDSCH Channel Codes	109, 392
Number of HARQ Processes	114
Number Of HARQ Processes	
HSUPA FRC	212, 511
Number of intervals	
HARQ-ACK	193
PCI / CQI	196
Number of PI per Frame	80, 420
Number of TTIs	
HS-DPCCH	465
Number of TTIs	
HS-DPCCH	204
Nyquist filter	258

O

OCNS	82
OCNS Mode	82, 376
Offset	
UL-DTX	165
Online help	14
Open Loop Transmit Diversity	81, 420
Operating Band	298
Overall Symbol Rate	
DPDCH	181, 478
E-DPDCH	220, 517
HSUPA FRC	512
UE1	230, 536
Overall Symbol Rate DPDCH	339
Overall Symbol Rate RFC	
HSUPA FRC	211

P

Pattern	
BS	86, 379
Pattern Length	
BS	97
PCI	
HS-DPCCH	198, 205, 466
PCPCH only	159, 245, 446
PCPCH settings	245
Channel coding	255
Graphical display	247
Message part	252
Preamble settings	250
PCPCH structure	247
Pilot Length	
DPCCH	138, 141
S-CCPCH	138, 141
Postamble Length	
UL-DTX	167
Power	
BS	86
DPCCH	452
E-DPCCH	206, 516
E-DPDCH	222, 503
HS-DPCCH	187
Multi channel assistant	155
Power class	283
Power Control	168, 528
BS1	134
Power Control Grap	527
Power Control Graph	
Ext. Power Control	169
Power Control Preamble Length	
PCPCH	251, 483
Power Down Steps	340
Power DPCCH	
DPCCH	174
Power Level	288, 338
Power Offset	
Additional UE	78
BS	95
Pilot DPCCH	145
TFCI DPCCH	145
TPC DPCCH	145
UE	95
Power Offset ACK	460
HS-DPCCH	200
Power Offset ACK/ACK	462
HS-DPCCH	203
Power Offset ACK/NACK	463
HS-DPCCH	203
Power Offset CQI	
HS-DPCCH	197
Power Offset CQI Type A	465
HS-DPCCH	204
Power Offset HARQ-ACK	
HS-DPCCH	195
Power Offset Mode	
BS	95, 418
UE	95, 418
Power Offset NACK	460
HS-DPCCH	201
Power Offset NACK/ACK	464
HS-DPCCH	204
Power Offset NACK/NACK	464
HS-DPCCH	204
Power Offset PCI	
HS-DPCCH	197
Power Ratio DPCCH/DPDCH	339
Power reference	70
Power step	
Multi channel assistant	156
Power Step	135, 169
DPCCH	179
TPC DPCCH	456
Power Step TPC	
DPCCH	385
F-DPCCH	153
F-DPCH	388
Power Step TPC - DPCCH	
DPCCH	144
Power Up Steps	340
PowMp	
PCPCH	248
PowMP	238
PowMpControl	238
PowMpData	238
PowPre	238
PCPCH	248
PRACH	
PowMP	238
PowMpControl	238
PowMpData	238
PowPre	238
PRACH only	159, 446
PRACH settings	235
Channel coding	244
Graphical display	237
Message part	242
Preamble settings	241
Preamble Length	
UL-DTX	167
Preamble Power	
PCPCH	251, 484
PRACH	241, 493
Preamble Power Step	
PCPCH	251, 484
PRACH	241, 494
Preamble Repetition	
PCPCH	251, 484
PRACH	241, 494
Precoding Weight Pattern (w2)	101, 107, 397, 406
Predefined H-Set	396
Predefined Settings	
Accept	372
Symbol Rate DPCH	372
Propagation Delay	339
Puncturing	94, 416
UE	449

R

Random Seed	119
Randomly Varying Modulation	119
Randomly Varying Number Of Codes	119
Rate Matching Attribute	
BS1	129
UE1	233
Read Out Mode	
DPCCH	143, 178, 385, 457
F-DPCCH	152
F-DPCH	388
PCPCH	255

Read Out Mode PCPCH	
PCPCH	490
Realtime functions	
Disabled in Baseband C/D	53
Recall	
3GPP FDD settings	55
Redundancy Version Parameter	115, 397
Redundancy Version Parameter Sequence	116, 397
Reference Measurement Channel	288
Reference measurement channel coding types	126, 427
Relative Grant Pattern	149
Relative Grant Pattern HSUPA	415
Release notes	15
Repeat PCPCH structure	250
Repeat PRACH structure	240
Required BLER	312, 331
Required Pd	325
Reset all base stations	67
Reset All Base Stations	352
Reset All User Equipment	67
Retransmission Sequence Number	
E-DPCCH	207, 516
Retrigger	58, 365
RF Frequency	338
RF Power	288, 338
RMSpPower	70
Roll Off	258, 357

S

S-CCPCH Settings	137
Save	
3GPP FDD settings	55
Scrambling code	
BS	80
Scrambling Code	
UE	159, 447
Scrambling Code (hex)	283
Scrambling Code Step	78
Scrambling Mode	283
UE	160, 448
Secondary cell	
Active	193
Enabled	193
Select Base Station	69
Select User Equipment	69
Sequence Length	
ARB	261
PCPCH	249
Service manual	15
Set to default	55
BS	377
Channel tabel	84
HSDPA H-Set	84
SF2	94, 416
SFN	121
SFN restart	121
Short Scrambling Code	160
UE	448
Show Coding	
PCPCH	256
PRACH	245
Signal Duration Unit	58
Signal generation status	58
Signaling Pattern	114
Signalling Pattern	
BS	401
Signature	
PCPCH	252, 486
PRACH	242, 496
Signature Hopping Pattern Index	149
Signature Sequence Index	415
Single	58
Size of CRC	430
BS1	129
UE1	232, 538
Slot format	
4C-HSDPA	191
F-DPCCH	150
Multi channel assistant	155
Slot Format	85
DPCCH	175
Enhanced DPCH	127
PCPCH	253
PRACH	243
Slot Format DPCCH	338
Slot Structure	
DPCCH	139
F-DPCCH	150
S-CCPCH	137
Spreading code generator (search code)	25
Spreading Code Number	86
Standard settings	55
All channels	84
BS	377
HSDPA H-Set	84
Start channel No	
Multi channel assistant	154
Start Channelization Code HS-PDSCH (SF16)	109
Start Delay m	
HS-DPCCH	188
Start Offset	
PCPCH	487
PRACH	239, 498
Start Offset PCPCH - UE	248
State	54, 423
Bit Error	131
Block Error	132
BS	80
Channel Coding	427
Channel Coding Enhanced DPCHs	125
Channel Coding Enhanced P-CCPCH	122
Clipping	259
Compressed Mode	451
DPDCH	180, 479
Dynamic Power Control	134, 438, 528
E-DPCCH	206, 516
E-DPDCH	220, 518
Enhanced DPCH Channels	123
Enhanced P-CCPCH	121
HARQ	511
HS-DPCCH	187, 458
HSUPA FRC	208, 513
Interleaver 1	130, 233, 433, 540
Interleaver 2	130, 233, 430, 536
Multicode	141
Transport Channel	434, 537
Transport Channel Enhanced DPCH	128
UE	158, 448
UL-DTX	521
State - Clipping	356
State (HARQ)	
HSUPA FRC	216

Step width power	
Multi channel assistant	156
Stop channel No	
Multi channel assistant	154
Store	
3GPP FDD settings	55
Stream 2 Active Pattern	101, 107, 401, 406
Structure Length	
PRACH	239
Suggested ARB Sequence Length	104, 475
HS-DPCCH	198
Symbol rate	
Multi channel assistant	155
Symbol Rate	
BS	86
DPDCH	182, 478
E-DPDCH	222, 503
Enhanced DPCH	127, 426
PCPCH	253, 486
PRACH	243, 496
Symbol Rate DPCH	372
Predefined Settings	77
Sync. Output to External Trigger	59
System frame number	121
System information BCH	121

T

Tau	
DPCH	149, 415
E-HICH	149, 415
E-RGCH	149
Test Case	279
Test Model	72, 373
Test Models (not standardized)	374
TFCI	
DPCCH	138, 141, 177
PCPCH	254
PRACH	243
S-CCPCH	138, 141
Time	
Preamble - Message Part	239
Preamble - Preamble	239
Time Delay	
BS	80, 422
UE	160
Time Delay Step	79
Additional UE	446
Time Pre - MP	488, 491, 499
Time Pre - Pre	488, 499
Time Pre->MP	249
Time Pre->Pre	249
Timing offset	
Multi channel assistant	157
Timing Offset	87
DL-UL DPCCH	175
To Destination	68, 353
Total HS-PDSCH Power	110
Total power	69
Total Power	355
TPC data source	
DPCCH	142, 177
PCPCH	254
TPC Data Source	
DPCCH	454
F-DPCH	386
PCPCH	489

TPC For Output Power Control (Mis-) Use	
F-DPCCH	152
TPC Mode	
DPCCH	177, 456
TPC Read Out Mode	143
DPCCH	178, 385, 457
F-DPCCH	152
F-DPCH	388
PCPCH	255, 490
TPC Repeat Pattern	340
TPC Start Pattern	339
Transmission direction	56, 354
Transmission Time Interval	
E-DPCCH	225
E-DPDCH	225
Transmit Diversity	81, 420
Transport Block Size	331, 335
BS1	129
UE1	232
Transport Block Size Index	112, 402
HSUPA FRC	212, 513
Transport Block Size Reference	112, 403
Transport Block Size Table	112, 403
HSUPA FRC	212, 513
Transport Blocks	
BS1	129
UE1	537
Transport Channel	
Enhanced DPCH	128
Transport Time Interval	
BS1	129
UE1	232
Trigger Configuration	282
Trigger Delay	61
Trigger Mode	58, 365
Trigger Signal Duration	58
Trigger source	59
Turbo Coder	
BS1	130
UE1	233, 540
Turbo Coder - BS1	432
Tutorials	15
Two HARQ feedback lines	
enabling	217
Type of Cell	
HSUPA	148, 414

U

UE category	
BS	404
UE Category	
HSDPA	105
HSUPA FRC	209
UE Supports 64QAM	111, 399
UE_DTX_DRX_Offset	165
UEID	
A-EGCH	147
BS	109, 405
UL DTX	160, 164
Up Range	169
Dynamic Power Control	136
Uplink	56
Use	
UL-DTX	521
User scheduling	521
Use Channels needed for Sync of Mobile (UE)	76, 373

Use Compressed Mode	
BS	419
UE	451
Use E-TFCI	
E-DPCCH	207
Use S-CCPCH	76
Use S-CPICH as Phase Reference	81, 421
Use scrambling code	
BS	80
Use Scrambling Code	
BS	421
Use TFCI	
DPCCH	137, 141, 176, 383, 453
S-CCPCH	137, 141
Use UL-DTX	160, 164
User Coding	126, 532
UE1	230
User Data (DTX Pattern)	
HSUPA FRC	213, 507
User Equipment default values	67
User filter	258
User manual	14

V

Version	56, 352
Virtual IR Buffer Size (per HARQ Process)	113
Visualizing data bits of DPDCH with an oscilloscope	181

W

Wanted Signal / Interferer Level	294
Wanted Signal State	287, 338
Web Help	15